





S30

(Gas/LPG)

(SN/ 006501 -)

Sweeper Parts Manual

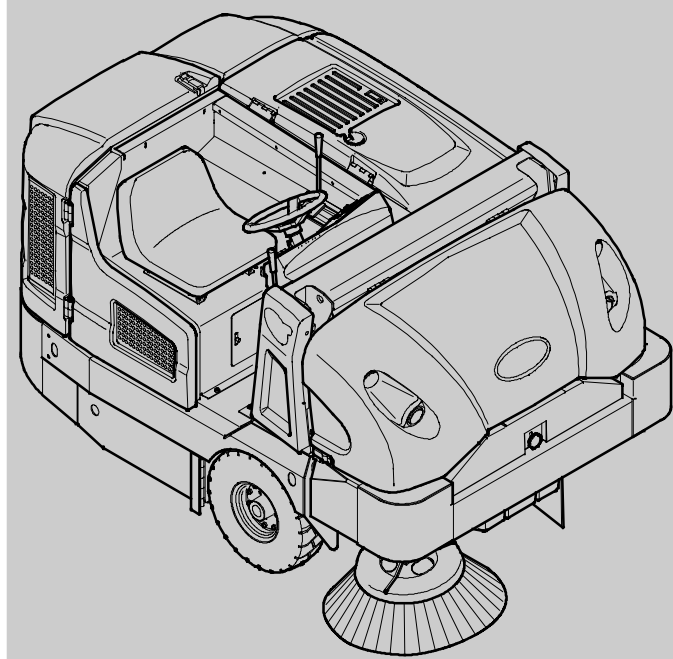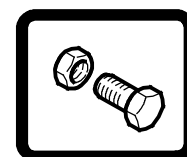

SweepMax[®] Plus System
TennantTrue[®] Parts
IRIS[®] a Tennant Technology

Global



For the latest Parts manuals and other
language Operator manuals, visit:

www.tennantco.com/manuals

9013316
Rev. 07 (1-2021)



A line drawing showing a close-up of a mechanical assembly. A bracket is mounted on a cylindrical component, which is part of a larger tank. A circular callout labeled 'A' highlights the bracket and its mounting.

A line drawing showing a close-up of a data plate on a machine. The plate is rectangular with a black border and contains the following text: 'POWER EQUIPMENT', 'SER. NO. 000000', 'G.W. LBS. R.G.', 'MADE IN U.S.A.', 'TERRACE COMPANY', and 'NEW HAVEN, CONNECTICUT 06460'. A circular callout labeled 'B' highlights the plate.

Ref	Part No.	Serial Number	Description	Qty.
	82681	(000000 -)	Bracket W/dt, Lpg Mount	1
2	63810	(000000 -)	Latch Assy, Lpg Tank Mtg, W/Nut	4
3	51839	(000000 -)	Nut Adjustable, Lpg Tank Mtg	2
4	49263	(000000 -)	Tie, Cable	3
	82556	(000000 - 001039)	Bracket, Vaporizer	1
6	54930	(000000 -)	Vaporizer, LPG	1

EN	HOW TO ORDER PARTS - See diagram above Only use TENNANT Company supplied or equivalent parts. Parts and supplies may be ordered online, by phone, by fax or by mail. Follow the steps below to ensure prompt delivery.	
	1. (A) Identify the machine model.	Please fill out at time of installation for future reference. Model No. - _____ Serial No. - _____ Machine Options - _____ Sales Rep. - _____ Sales Rep. phone no. - _____ Customer ID Number - _____ Installation Date - _____
	2. (B) Identify the machine serial number from the data plate.	
	3. (C) Ensure the proper serial number is used from the parts list.	
	4. Identify the part number and quantity. Do not order by page or reference numbers.	
	5. Provide your name, company name, customer ID number, billing and shipping address, phone number and purchase order number.	
6. Provide detail shipping instructions.		
	(D) ▽ - Identifies an assembly ▲ - Identifies parts included in assembly	

Tennant Company
 10400 Clean Street
 Eden Prairie, MN
 55377-2650
 Phone: (800) 553-8033

www.tennantco.com

Tennant N.V.
 Industrielaan 6 5405 AB
 P.O. Box 6 5400 AA Uden -
 The Netherlands
 europe@tennantco.com
 www.tennantco.com

テナントカンパニー日本支店
 〒210-0916神奈川県川崎市幸区南幸町2-9サンカビル5F
 TEL:044-556-1201 FAX:044-556-1202
 www.tennant.co.jp

Thermo- Sentry, 1-STEP, EasyOpen, MaxPro², InstantAccess, II-Speed, Perma- Filter, Duramer, Lower Total Cost of Ownership, Touch- N-Go, Watershield Dust Control, and Cab Forward ErgoSpace are trademarks of Tennant Company.

Specifications and parts are subject to change without notice.

Copyright © 2014, 2015, 2016, 2017, 2018, 2019, 2021 TENNANT Company, Printed in U.S.A.

BG	КАК ДА ПОРЪЧВАМЕ ЧАСТИ - Вижте схемата по-горе Използвайте само части, доставени от TENNANT или техни еквиваленти. Частите и доставките могат да се поръчат онлайн, по телефон, факс или по пощата. Следвайте долупосочените стъпки, за да си осигурите бърза и точна доставка. 1. (A) Посочете модела на машината. 2. (B) Посочете серийния номер на машината от табелката с техническите данни. 3. (C) Уверете се, че сте използвали точния сериен номер от списъка с части. 4. Посочва номера на частта и количеството. Не поръчвайте части според страницата или референтните номера. 5. Посочете своето име, наименованието на фирмата, клиентския номер, адреса за получаване на сметката и доставката, тел.номер и номера на поръчката. 6. Посочете подробни инструкции за доставката.	Моля, попълнете по време на монтажа за бъдеща справка. Модел Э - _____ Сериен Э - _____ Опции на машината - _____ Търговски представител - _____ Тел. Э на търг. представител - _____ Клиентски Э - _____ Дата на монтаж - _____
	(D) ▽ - посочва начин на монтаж ▲ - посочва частите, включени в монтажа	

CN	如何订购部件 - 参见下表 仅使用 TENNANT 公司提供的或同等部件。部件和供应可以在线订购，通过电话、传真或邮件订购。 请遵循下面的步骤确保及时交付。 1. (A) 确定机器型号。 2. (B) 从数据标签确定机器序列号。 3. (C) 确保使用部件列表中的正确序列号。 4. 确定部件号和数量。 不要按页面或参考编号订购。 5. 提供您的姓名、公司名称、客户 ID 号、付帐和送货地址、电话号码和采购单编号。 6. 提供详细的送货说明。	请在安装时填写供未来参考。 型号 - _____ 序列号 - _____ 机器选项 - _____ 销售代表 - _____ 销售代表电话号码 - _____ 客户 ID 编号 - _____ 安装日期 - _____
	(D) ▽ - 确定组件 ▲ - 确定组件中包含的组件	

CZ	OBJEDNÁVÁNÍ DÍLŮ - Viz schéma výše. Používejte pouze díly dodané společností TENNANT Company nebo jim odpovídající. Díly a materiál lze objednat online, telefonem, faxem nebo poštou. Aby bylo zajištěno rychlé dodání, postupujte podle kroků uvedených níže. 1. (A) Zjistěte model stroje. 2. (B) Zjistěte sériové číslo stroje z výrobního štítku. 3. (C) Použijte správné sériové číslo ze seznamu dílů. 4. Určete číslo a množství dílů. Neobjednávejte podle stran nebo referenčních čísel. 5. Uveďte jméno, název společnosti, číslo ID zákazníka, fakturační a dodací adresu, telefonní číslo a číslo objednávky. 6. Uveďte podrobné pokyny pro dodání.	Vypíšte během sestavování pro budoucí potřebu. Číslo modelu - _____ Sériové číslo - _____ Doplňky zařízení - _____ Obchodní zástupce - _____ Tel. č. obchodního zástupce - _____ Číslo ID zákazníka - _____ Datum instalace - _____
	(D) ▽ - označuje sestavu ▲ - označuje díly v sestavě	

DE	BESTELLEN VON ERSATZTEILEN - Siehe oben stehendes Diagramm. Verwenden Sie nur von TENNANT gelieferte oder gleichwertige Ersatzteile. Ersatz- und Verschleißteile können online, telefonisch, per Fax oder per E-Mail bestellt werden. Befolgen Sie für eine umgehende Lieferung die folgenden Schritte. 1. (A) Geben Sie das Modell der Maschine an. 2. (B) Geben Sie die Seriennummer der Maschine an (auf dem Datenaufkleber). 3. (C) Achten Sie darauf, dass die richtigen Seriennummer aus der Ersatzteilliste verwendet wird. 4. Geben Sie die Ersatzteilnummer und die Menge an. Bestellen Sie nicht nach Seitenzahl oder Referenznummern. 5. Geben Sie Ihren Namen, den Firmennamen, die Kundennummer, die Rechnungs- und Lieferadresse, die Telefonnummer und die Einkaufsauftragsnummer an. 6. Erteilen Sie genaue Versandanweisungen.	Bitte bei der Inbetriebnahme als Referenzangabe ausfüllen. Modellnr. - _____ Seriennr. - _____ Maschinenoptionen - _____ Verkäufer - _____ Telefonnummer des Verkäufers - _____ Kundennummer - _____ Installationsdatum - _____
	(D) ▽ - steht für eine Einheit ▲ - steht für Einzelteile einer Einheit	

DK	BESTILLING AF RESERVEDELE - Se ovenstående tabel. Brug kun reservedele, der er fremstillet af TENNANT, eller dele af tilsvarende kvalitet. Reservedele og tilbehør kan bestilles online, pr. telefon, pr. fax eller pr. brev. Følg nedenstående trin for at sikre hurtig levering.	Udfyld venligst på installationstidspunktet til fremtidig brug. Modelnr. - _____ Serienr. - _____ Maskineksktraudstyr - _____ Salgskonsulent. - _____ Salgskonsulentens tlf. - _____ Kunde-id-nr. - _____ Installationsdato - _____
	1. (A) Identificér maskinmodellen. 2. (B) Identificér maskinens serienummer på datamærkaten. 3. (C) Kontrollér, at det rigtige serienummer bruges i reservedelslisten. 4. Identificér reservedelsnummeret og antallet. Bestil ikke efter side- eller referencenumre. 5. Angiv dit navn, firmanavn, kunde-id-nummer, faktureringsadresse og leveringsadresse, telefonnummer og indkøbsordrenummer. 6. Angiv detaljerede instruktioner til forsendelse.	

(D) ▽ - identificerer en enhed
 ▲ - identificerer reservedele i en enhed

EE	KUIDAS VARUOSI TELLIDA – vaadake alltoodud joonist Kasutage ainult TENNANT Company poolt tamitud või samaväärseid varuosi. Varuosi ja tarvikuid saab tellida Interneti, telefoni, faksi või posti teel. Kiire kohaletoimetamise tagamiseks järgige alltoodud juhiseid.	Palun täitke paigaldamise ajal edaspidiseks viitamiseks. Mudeli number - _____ Seerianumber - _____ Masina lisavarustus - _____ Müügiesindus - _____ Müügiesinduse telefoninumber - _____ Kliendinumber - _____ Paigaldamise kuupäev - _____
	1. (A) Märkige masina mudel. 2. (B) Märkige andmesildil olev masina seerianumber. 3. (C) Veenduge, et olete valinud varuosade loendist õige seerianumbri. 4. Märkige varuosa number ja kogus. Ärge tellige lehekülje- või viitenumbri alusel. 5. Märkige oma nimi, ettevõtte nimi, kliendinumber, arveldus- ja saatmisaadress, telefoninumber ja ostutellimuse number. 6. Lisage täpsed saatmisjuhised.	

(D) ▽ - tähistab komplekti
 ▲ - tähistab komplektis olevaid osi

ES	CÓMO SOLICITAR PIEZAS - Consulte el diagrama anterior. Utilice sólo las piezas suministradas por TENNANT Company o piezas equivalentes. Puede solicitar las piezas a través de internet, por teléfono, por fax o por correo. Siga los siguientes pasos para que la entrega sea rápida.	Rellene estos datos cuando realice la instalación para utilizarlos como referencia en el futuro. Nº modelo - _____ Nº serie - _____ Opciones de la máquina - _____ Vendedor - _____ Nº teléfono vendedor - _____ Nº cliente - _____ Fecha de instalación - _____
	1. (A) Indique el modelo de máquina. 2. (B) Indique el número de serie de la etiqueta de datos. 3. (C) Asegúrese de que indica el número de serie correcto de la lista de piezas. 4. Indique la cantidad y el número de la pieza. No realice el pedido indicando el número de página o el de referencia. 5. Incluya su nombre, el nombre de la empresa, el ID de cliente, las direcciones de envío y facturación, el número de teléfono y el número del pedido de compra. 6. Facilite instrucciones de envío.	

(D) ▽ - identifica un conjunto
 ▲ - identifica piezas de un conjunto

FI	KUINKA VARAOSIA TILATAAN - katso kuvaa yllä. Käytä ainoastaan TENNANTIN toimittamia tai niitä vastaavia varaosia. Voit tilata varaosia ja tarvikkeita internetistä, puhelimitse, faksilla tai sähköpostilla. Noudata seuraavia ohjeita täsmällisen toimituksen varmistamiseksi.	Ole hyvä ja täytä ottaessasi koneen käyttöön myöhempiä tarpeita varten. Mallinnumero - _____ Sarjanumero - _____ Koneen lisävarusteet - _____ Myyntiedustaja - _____ Myyntiedustajan puhelinnumero - _____ Asiakasnumero - _____ Asennuspäivä - _____
	1. (A) Katso koneen malli. 2. (B) I Katso koneen sarjanumero sen tunnustarrasta. 3. (C) Varmista, että osaluettelosta, että käytät oikeaa sarjanumeroa. 4. Katso osanumero ja kappalemäärä. Älä tilaa ilmoittamalla sivu- tai viitenumeroita. 5. Ilmoita nimesi, yrityksesi nimi, asiakasnumero, laskutus- ja toimitusosoite, puhelinnumero ja ostotilauksen numero. 6. Ilmoita yksityiskohtaiset toimitusosoitteet.	

(D) ▽ - tarkoittaa kokoonpanoa
 ▲ - tarkoittaa kokoonpanoon sisältyviä osia

FR	COMMENT COMMANDER DES PIÈCES DÉTACHÉES - Voir le schéma ci-dessus.	
	Utilisez uniquement des pièces fournies par la société TENNANT ou équivalentes. Les pièces et fournitures peuvent être commandées en ligne, par téléphone, fax, ou par courrier. Suivez les étapes ci-dessous pour assurer une livraison rapide. 1. (A) Identifiez le modèle de la machine. 2. (B) Identifiez le numéro de série de la machine, à partir de l'étiquette signalétique. 3. (C) Assurez-vous que le numéro de série correct est utilisé à partir de la liste de pièces détachées. 4. Identifiez le numéro de pièce et la quantité. Ne commandez pas par page ou numéros de référence. 5. Fournissez votre nom, le nom de votre société, votre numéro d'identification de client, l'adresse de facturation et d'expédition, le numéro de téléphone et le numéro du bon de commande. 6. Fournissez des instructions d'expédition détaillées.	
	(D) ▽ - identifie un assemblage ▲ - identifie les pièces composant l'assemblage	A remplir au moment de l'installation à titre de référence. N° du modèle - _____ N° de série - _____ Options de la machine - _____ Agent commercial - _____ N° tél. de l'agent commercial - _____ Numéro d'identification client - _____ Date d'installation - _____

GR	ΤΡΟΠΟΣ ΠΑΡΑΓΓΕΛΙΑΣ ΑΝΤΑΛΛΑΚΤΙΚΩΝ - Βλ. παραπάνω διάγραμμα.	
	Χρησιμοποιήστε μόνο ανταλλακτικά παρεχόμενα από την TENNANT Company ή ισοδύναμα. Τα ανταλλακτικά και αναλώσιμα μπορούν να παραγγελθούν online, τηλεφωνικά, με fax ή ταχυδρομικά. Ακολουθήστε τα παρακάτω βήματα για να εξασφαλίσετε την έγκαιρη αποστολή τους. 1. (A) Βρείτε το μοντέλο μηχανήματος. 2. (B) Βρείτε τον αριθμό σειράς του μηχανήματος από την ετικέτα στοιχείων. 3. (C) Βεβαιωθείτε ότι χρησιμοποιείται ο σωστός αριθμός σειράς από τον κατάλογο ανταλλακτικών. 4. Βρείτε κωδικό ανταλλακτικού και ποσότητα. Μην παραγγέλνετε βάσει σελίδας ή αριθμών αναφοράς. 5. Δώστε το όνομα σας, όνομα εταιρείας, ID (κωδικό) πελάτη, διεύθυνση τιμολόγησης και αποστολής, αριθμό τηλεφώνου και αριθμό εντολής προμήθειας. 6. Δώστε λεπτομερείς πληροφορίες αποστολής.	
	(D) ▽ - υποδηλώνει υποσύστημα ▲ - υποδηλώνει τα μέρη που περιλαμβάνονται στο υποσύστημα	Παρακαλούμε συμπληρώστε κατά την ώρα της εγκατάστασης για μελλοντική αναφορά. Αρ. Μοντέλου - _____ Αρ. σειράς - _____ Επιλογές Μηχανήματος - _____ Εκπ. πωλήσεων - _____ Τηλ. εκπροσώπου πωλήσεων - _____ Αριθμός πελάτη - _____ Ημερομηνία εγκατάστασης - _____

HU	HOGYAN RENDELJÜNK ALKATRÉSZEKET - Lásd: fenti diagramm.	
	Kizárólag TENNANT vagy azzal egyenértékű cserealkatrészeket használjon. Az alkatrészeket és anyagokat meg lehet rendelni az Interneten keresztül, vagy telefonon, faxon és e-mailben. A pontos szállítás érdekében kövesse az alábbi lépéseket. 1. (A) Adja meg a gép típusát. 2. (B) Az adatcímké alapján adja meg a gép gyártási számát. 3. (C) Ügyeljen arra, hogy a megfelelő gyártási számot válassza ki az alkatrészlistáról. 4. Adja meg a rendelési számot és a mennyiséget. A rendeléshez ne az oldalszámot vagy a hivatkozási számot használja. 5. Adja meg a nevét, a cége nevét, az ügyfélazonosító számát, a számlázási és szállítási címét, a telefonszámát és a rendelési számot. 6. Adjön részletes szállítási utasításokat.	
	(D) ▽ - a jel csomagra utal ▲ - a jel a csomagban található alkatrészekre utal	A későbbi visszakeresések érdekében kérjük, hogy a rovatokat az első üzembehelyezéskor töltsse ki. Típuszám - _____ Gyártási szám - _____ A gép felszereltsége - _____ Kereskedelmi képviselő - _____ Kereskedelmi képviselő telefonszáma - _____ Ügyfél azonosító száma - _____ Üzembehelyezés dátuma - _____

HR	NARUIVANJE DIJELOVA - Pogledajte dijagram iznad	
	Koristite isključivo dijelove tvrtke TENNANT ili jednakovrijedne dijelove. Dijelove i potrošni materijal možete naručiti preko interneta, telefonom, faksom ili poštom. Slijedite sljedeće korake kako biste osigurali brzu isporuku. 1. (A) Ustanovite model stroja. 2. (B) Ustanovite serijski broj stroja s pločice s podacima. 3. (C) Provjerite da koristite odgovarajući serijski broj sa spiska dijelova. 4. Odredite broj dijela i količinu. Ne naručujte na osnovu brojeva stranice ili referentnih brojeva. 5. Navedite vaše ime, ime tvrtke, korisnički identifikacijski broj, adresu za naplatu i dostavu, broj telefona i broj kupovine. 6. Navedite detaljne upute za dostavu.	
	(D) ▽ - Odredite sklop ▲ - Odredite dijelove uključene u sklop	Molimo ispuniti prilikom montaže za buduće potrebe. Broj modela - _____ Serijski broj - _____ Mogućnosti stroja - _____ Prodajni predstavnik - _____ Br. telefona prod. predst. - _____ Korisnički identifikacijski broj - _____ Datum montaže - _____

IT	COME ORDINARE LE PARTI - Vedere schema precedente. Utilizzare solo ricambi forniti da TENNANT o equivalenti. Ricambi e forniture possono essere ordinati online, per telefono, via fax o per posta elettronica. Per ottenere una consegna rapida, seguire i passaggi indicati di seguito. 1. (A) Identificare il modello della macchina. 2. (B) Identificare il numero di serie della macchina dall'etichetta dei dati. 3. (C) Utilizzare il numero di serie corretto presente nell'elenco delle parti di ricambio. 4. Identificare numero di parte e quantità. Non ordinare per numero di pagina o di riferimento. 5. Fornire nome del contatto, nome della società, numero di ID cliente, indirizzo di fatturazione e di spedizione, numero di telefono e numero di ordine di acquisto. 6. Fornire istruzioni dettagliate per la spedizione. _____ (D) ▽ - identifica un gruppo ▲ - identifica parti comprese in un gruppo	Compilare il modulo al momento dell'installazione per poterlo consultare in futuro in caso di necessità. N. Modello - _____ N. Serie - _____ Opzioni della macchina - _____ Venditore - _____ Tel. venditore - _____ Numero ID cliente - _____ Data di installazione - _____
----	--	--

JP	パーツの免注方法 ? 上記の図を参照してください TENNANT社製のパーツまたは同等品のみをお使いください。 パーツやサブライ品のご注文は、オンライン、電話、FAX、または手紙でお願いいたします。 確実にお届けできるように、以下の情報お知らせください。 1. (A) 製品のモデル名をお知らせください。 2. (B) 製品のデータラベルに印刷されているシリアル番号をお知らせください。 3. (C) パーツリストを参照して、シリアル番号が正しいかご確認ください。 4. パーツ番号と数量をお知らせください。マニュアル/カタログのページ番号や参照番号でのご注文はご遠慮ください。 5. お客様のお名前、会社名、顧客ID番号、請求/発送先住所、電話番号、注文書番号をお知らせください。 6. 発送に関するご希望があれば、明記してください。 _____ (D) ▽ - アセンブリを示します ▲ - アセンブリに含まれるパーツを示します	後日確認できるように、設置時に記入してください。 モデルNo. - _____ シリアルNo. - _____ 製品のオプション - _____ 販売代理店 - _____ 販売代理店の電話番号 - _____ 顧客ID番号 - _____ 設置日 - _____
----	---	--

LT	KAIP UŽSISAKYTI DALIS - žr. diagramą viršuje Naudokite tik "Tennant" kompanijos tiekiamas arba lygiavertes joms dalis. Dalis galite užsisakyti internetu, telefonu, faksu bei elektroniniu paštu. Kad užsakymas būtų greitai įvykdytas, laikykitės išvardytų taisyklių. 1. (A) Nurodykite mašinos modelį. 2. (B) Norodykite mašinos serijos numerį, kurį rasite ant duomenų žymės. 3. (C) Įsitinkite, kad nurodomas tikslus serijos numeris iš dalių sąrašo. 4. Nurodykite dalies numerį ir reikiamą kiekį. Neužsakinėkite pagal puslapius ar nuorodos numerius. 5. Nurodykite savo vardą, kompanijos pavadinimą, kliento ID numerį, sąskaitos išrašymo ir vežimo adresą, telefono numerį ir pirkimo užsakymo numerį. 6. Nurodykite išsamias gabenimo instrukcijas. _____ (D) ▽ - žymi sistemą ▲ - nurodo sistemos dalis	Prašome užpildyti montavimo metu, siekiant gauti informaciją ateityje. Modelio nr. - _____ Serijos nr. - _____ Mašinos parinktis - _____ Prekybos atstovas - _____ Komivojažieriaus tel. nr. - _____ Pirkėjo ID numeris - _____ Sumontavimo data - _____
----	--	--

LV	KĀ PASŪTĪT REZERVES DETALĀS - Skat. diagrammu iepriekš izmantojiet tikai TENNANT Company piegādātās vai tām līdzvērtīgas rezerves detaļas. Daļas un piegādi var pasūtīt internetā, pa tālruni, pa faksu vai pastu. Lai nodrošinātu savlaicīgu piegādi, sekojiet zemāk aprakstītajiem soļiem. 1. (A) Nosakiet mašīnas modeli. 2. (B) Nosakiet mašīnas sērijas numuru uz tehnisko datu uzlīmes. 3. (C) Pārīcinieties, ka tiek uzrakstīts attiecīgais sērijas numurs no detaļu saraksta. 4. Nosakiet detaļas numuru un skaitu. Veicot pasūtījumus neatsaucieties uz lapušu vai norādes numuriem. 5. Uzrakstiet savu vārdu, uzņēmuma nosaukumi, klienta identitātes numuru, adresi rēķina piesūtīšanai un piegādei un pirkuma pasūtījuma numuru. 6. Sniedziet detalizētu informāciju par piegādi. _____ (D) ▽ - nosaka ierīci ▲ - nosaka detaļas, kas ir komplektā ar ierīci	Veicot uzstādīšanu, lūdzam pierakstīt attiecīgo informāciju izmantošanai turpmāk. Modeļa Nr. - _____ Sērijas Nr. - _____ Iekārtas papildaprīkojums - _____ Pārdošanas pārst. - _____ Pārdošanas pārst. tālr. Nr. - _____ Klienta identitātes numuru - _____ Uzstādīšanas datums - _____
----	--	---

NL	HOE ONDERDELEN TE BESTELLEN - Zie schema hierboven. Gebruik alleen onderdelen die door TENNANT Company zijn geleverd of soortgelijke onderdelen. Onderdelen en voorraden kunnen online, per telefoon, fax of schriftelijk besteld worden. Volg de stappen hieronder om een juiste levering te garanderen. 1. (A) Bepaal het machinemodel. 2. (B) Lees het serienummer van de machine af van het gegevenslabel. 3. (C) Zorg dat het juiste serienummer wordt gebruikt uit de onderdelenlijst. 4. Bepaal het artikelnummer en het aantal. Bestel niet aan de hand van pagina's of referentienummers 5. Geef uw naam, bedrijfsnaam, klantnummer, factuur- en leveringsadres, telefoonnummer en bestelnummer op. 6. Geef gedetailleerde leveringsinstructies op. (D) ▽ - geeft een eenheid aan ▲ - geeft de onderdelen van de eenheid aan	Vul tijdens installatie de onderstaande gegevens in voor eventueel toekomstig gebruik. Modelnr. - _____ Serienr. - _____ Machine-opties - _____ Verkoopvert. - _____ Telnr. verkoopvert. - _____ Klantnummer - _____ Installatiedatum - _____
-----------	---	--

NO	HVORDAN BESTILLE DELER - Se diagram over. Bruk kun deler levert av TENNANT Company eller ekvivalente deler. Deler og forsyninger kan bestilles online, per telefon, per faks eller per post. Følg trinnene under for å sikre rask levering. 1. (A) Angi maskinmodellen. 2. (B) Angi maskinens serienummer fra typeskiltet. 3. (C) Forsikre deg om at korrekt serienummer brukes fra delelisten. 4. Angi delennummer og antall. Bestill ikke ut fra side- eller referansenumre. 5. Angi ditt navn, firmanavn, kunde- ID- nummer, fakturerings- og forsendelsesadresse, telefonnummer og innkjøpsordrenummer. 6. Angi detaljerte forsendelsesinstruksjoner. (D) ▽ - angir en delegruppe ▲ - angir deler inkludert i en delegruppe	Fyll ut ved installasjonstidspunkt for fremtidig bruk. Modellnr. - _____ Serienr.. - _____ Maskinens tillegg - _____ Salgsrep. - _____ Salgsrep. telefonnr. - _____ Kunde- ID- nummer - _____ Installasjonsdato - _____
-----------	---	--

PL	JAK ZAMAWIAĆ CZĘŚCI - patrz schemat powyżej. Należy używać wyłącznie części dostarczanych przez firmę TENNANT Company lub równoważnych. Części i dostawy mogą być zamawiane online, przez telefon, faksem lub pocztą. Aby zapewnić szybką dostawę, należy przestrzegać następujących wskazówek. 1. (A) Określić model maszyny. 2. (B) Określić numer seryjny maszyny znajdujący się na tabliczce znamionowej. 3. (C) Odszukać ten numer seryjny w wykazie części. 4. Określić numer części i ilość. Nie zamawiać na podstawie numeru strony lub liczby porządkowej wykazu. 5. Podać swoje nazwisko, nazwę firmy, numer identyfikacyjny klienta, adres dostawy i dostarczenia rachunku, numer telefonu i numer zamówienia zakupu. 6. Podać dokładne instrukcje dotyczące dostawy. (D) ▽ - oznacza zespół ▲ - oznacza część w zespole	Prosimy wpisać datę instalacji do późniejszego wykorzystania. Nr modelu- _____ Nr seryjny - _____ Opcje maszyny - _____ Przedst. sprzedaży - _____ Nr tel. przedst. sprzed. - _____ Nr ident. klienta - _____ Data instalacji - _____
-----------	---	--

PT G	COMO ENCOMENDAR PEÇAS - Consulte o diagrama acima. Utilize apenas peças fornecidas pela TENNANT Company ou equivalentes. As peças e consumíveis podem ser encomendados online, por telefone, fax ou correio. Siga os passos abaixo para garantir uma entrega rápida. 1. (A) Identifique o modelo da máquina. 2. (B) Identifique o número de série da máquina que se encontra na etiqueta de dados. 3. (C) Certifique-se de que usa o número de série correcto da lista de peças. 4. Identifique o número de produto e a quantidade. Não encomende através de números de página ou de referência. 5. Forneça o seu nome, o nome da empresa, o número de ID do cliente, os endereços de facturação e entrega, o número de telefone e o número da nota de encomenda. 6. Forneça instruções de entrega detalhadas. (D) ▽ - identifica uma unidade ▲ - identifica peças incluídas numa unidade	Preencha na altura da instalação para futura referência. Modelo nº - _____ Nº de série - _____ Opções da máquina - _____ Vendedor - _____ Telefone do vendedor - _____ Número de ID do cliente - _____ Data de instalação - _____
-------------	---	--

RU	КАК ЗАКАЗАТЬ ЗАПЧАСТИ - См. схему ниже. Используйте только запчасти, поставляемые компанией TENNANT или их аналоги. Запасные части и расходные материалы можно заказать в режиме онлайн, телефоном, факсом или электронной почтой. Для своевременной доставки следуйте описанным ниже инструкциям. 1. (A) Укажите модель машины. 2. (B) Укажите серийный номер машины, обозначенный на табличке технических данных. 3. (C) Удостоверьтесь, что надлежащий серийный номер перечислен в списке запчастей. 4. Укажите номер детали и нужное количество. Не используйте номера страниц или ссылок. 5. Укажите свое имя, название компании, идентификационный номер покупателя, расчетный адрес и адрес доставки, телефонный номер и номер заказа на покупку. 6. Укажите подробные сведения о доставке. (D) ▽ - означает узел ▲ - обозначает деталь узла	Во время установки заполните, пожалуйста, эти сведения для того, чтобы ссылаться в дальнейшем. Модель Э - _____ Серийный Э - _____ Опции машины - _____ Торговый представитель - _____ Телефон торгового представителя - _____ Идент. номер покупателя - _____ Дата установки - _____
----	---	--

SE	BESTÄLLNING AV RESERVDELAR - Se ovanstående schema. Använd endast delar från Tennant Company eller likvärdiga. Delar och material kan beställas online, telefoniskt, per fax eller post. Följ nedanstående steg för en snabb leverans. 1. (A) Identifiera maskinens modell. 2. (B) Identifiera maskinens serienummer på typskylten. 3. (C) Kontrollera att rätt serienummer används från dellistan. 4. Identifiera artikelnumret och mängden. Beställ inte med hjälp av sido- eller referensnummer. 5. Uppge ditt namn, företagets namn, kundens ID-nummer, faktura- och leveransadress, telefonnummer och ordernummer vid inköp. 6. Ge detaljerade transportanvisningar. (D) ▽ - identifierar en modul ▲ - identifierar delar som ingår i en modul	Fyll i vid installation och spar för framtida bruk. Modellnr. - _____ Serienr. - _____ Tilvalsutrustning - _____ Försäljare - _____ Försäljarens tel.nr. - _____ Kundnummer - _____ Installationsdatum - _____
----	---	---

SK	POSTUP PRI OBJEDNÁVANÍ ČASTÍ - Pozri vyššie uvedený diagram. Využívajte výhradne dielce dodané spoločnosťou TENNANT, alebo ich ekvivalenty. Dielce a položky je možné objednať online, telefonicky, faxom, alebo poštou. Na zabezpečenie promptného doručenia sa riadte nasledovnými krokmi. 1. (A) Identifikujte model stroja. 2. (B) Z etikety s údajmi identifikujte sériové číslo stroja. 3. (C) Ubezpečte sa, že ste zadali správne sériové číslo zo zoznamu dielcov. 4. Identifikujte číslo dielu a množstvo. Neobjednávajte pomocou čísel strán, alebo referenčných čísel. 5. Zadať Vaše meno, meno spoločnosti, ID číslo zákazníka, fakturačnú a prepravnú adresu, telefónne číslo a objednávacie číslo dielu. 6. Uveďte podrobné prepravné pokyny. (D) ▽ - identifikuje sadu ▲ - identifikuje časti sady	Vypíšte prosím pri inštalácii pre prípad potreby v budúcnosti. č. modelu - _____ Sériové č. - _____ Zvláštné príslušenstvo stroja - _____ Obchodné zastúpenie - _____ Obch. zastúpenie tel. č. - _____ ID č. zákazníka - _____ Dátum inštalácie - _____
----	---	--

SL	NAROČANJE NADOMESTNIH DELOV - glejte zgornjo sliko. Uporabljajte samo originalne nadomestne dele Tennant ali enakovredne dele. Dele in potrošni material lahko naročite prek spleta, po telefonu, faksu ali pošti. Za zagotovitev čimbolj hitre dostave sledite spodnjim navodilom. 1. (A) Ugotovite model stroja. 2. (B) Na ploščici s podatki poiščite serijsko številko stroja. 3. (C) Poskrbite, da na seznamu nadomestnih delov poiščete pravilno serijsko številko. 4. Poiščite številko dela in potrebno količino. Pri naročilih ne navajajte strani ali referenčne številke. 5. Navedite svoje ime, ime podjetja, ID številko stranke, naslova za dostavo in izdajo računa, telefonsko številko in številko naročila. 6. Navedite podrobna navodila za dostavo. (D) ▽ - označuje sklop ▲ - označuje dele sklopa	Prosim, da ob vgradnji izpolnite te podatke, da vam bodo v prihodnje na voljo. Št. modela - _____ Serijska številka - _____ Dodatna oprema stroja - _____ Prodajni predstavnik - _____ Telefonska št. prodajnega predstavnika - _____ Številka stranke - _____ Datum vgradnje - _____
----	---	--

TR	PARÇALARIN S PAR ED LMES - Yukarıdaki emaya bakın. Yalnızca TENNANT Company'den sağlanan veya eğerde parçalar kullanın. Parça veya sarf malzemeleri çevrimiçi olarak, telefonla, faksla veya postayla sipariş edilebilir. Zamanında teslimat sağlamak için aşağıdaki adımları izleyin. 1. (A) Makine modelini belirtin. 2. (B) Veri etiketinden makine seri numarasını belirtin. 3. (C) Parça listesinden uygun seri numarasını kullanıldığınından emin olun. 4. Parça numarasını ve miktarını belirtin. Sayfa veya referans numaralarını kullanarak sipariş vermeyin. 5. Adınızı, şirketinizin adını, müşteri kimlik numaranızı, faturalama ve sevkiyat adreslerini, telefon numarasını ve satınalma siparişi numarasını belirtin. 6. Ayrıntılı sevkiyat talimatlarını belirtin.	İleri tarihlerde başvurmak için lütfen kurulum sırasında doldurun. Model No. - _____ Seri No. - _____ Makine Seçenekleri - _____ SatınTemsilcisi - _____ SatınTemsilcisi telefon no. - _____ Müşteri Kimlik Numarası - _____ Kurulum Tarihi - _____
	(D) ▽ - bir tertibat belirtir ▲ - tertibattaki parçaları belirtir	

GENERAL RECOMMENDED MAINTENANCE

General Recommended Maintenance Items

Ref.	Part No.	Serial Number	Description	Qty.
▽	9004543	(006501-	) Maint Kit, 800hr, Gas [S30]	1
▲	31613	(006501-	) Strainer, Hyd, 025gpm 100mesh 03psi	1
▲	25122	(006501-	) Cap, Breather, Hyd, 2.4 Ds	1
▲	1021579	(006501-	) Filter Assy, Hyd, 10mic	1
▲	372440	(006501-	) Filter, Fuel [Gm 1.6/3.0]	1
▲	398279	(006501-	) Element, Fltr, Air, Safety	1
▲	369746	(006501-	) Element, Fltr, Air [Dn]	1
▽	9007385	(006501-	) Maint Kit, 800hr [S30 Lpg 2010]	1
▲	31613	(006501-	) Strainer, Hyd, 025gpm 100mesh 03psi	1
▲	25122	(006501-	) Cap, Breather, Hyd, 2.4 Ds	1
▲	1021579	(006501-	) Filter Assy, Hyd, 10mic	1
▲	9007380	(006501-	) Filter Kit, Fuelock,Lpg	1
▲	398279	(006501-	) Element, Fltr, Air, Safety	1
▲	369746	(006501-	) Element, Fltr, Air [Dn]	1
	393982	(006501-	) Element, Fltr, Oil, Spin- On	1
	1045900	(006501-	) Filter, Cyl, 11.09d, 13.31l, 6.724 ld	1
	9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
	1071680	(006501-	) Belt, Ribbed, Alternator, 40.25l	1
	1071681	(006501-	) Belt, Ribbed, Alternator, A/C, 51.125l	1
	1045366	(006501-	) Skirt, Door, Brush	1
	1045354	(006501-	) Skirt, Door, Brush	1
	54190	(006501-	) Skirt, Neo, .37, 06.00w 44.65l, 04/ SI Recirculation	1
	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
	1032012	(006501-	) Skirt, Deflector Wheel Pocket Skirt	2
	1061961	(006501-	) Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front Tire	2
	53817	(006501-	) Tire Assy, Solid, 18.0x4.3 4.5bc/5bolt Solid Rear Tire	1
	1032515	(006501-	) Tire Assy, Pneu, 600x9 4.5bc/5bolt, Ce Pneumatic Front	2
	1005229	(006501-	) Tire Assy, Pneu, 5.00 4.5bc/5blt[R8ic70] Pneumatic Rear	1
	9010622	(006501- 007105	) Plug, Spark [Torch K6rf- 11 14mm]	4
	9014160	(007106-	) Plug, Spark [Mitsubishi 2015 12mm]	4

GENERAL RECOMMENDED MAINTENANCE

General Recommended Maintenance Items

Ref.	Part No.	Serial Number	Description	Qty.
▽	9013115	(006501-	) Skirt Kit, Hppr, Maint [S30]	1
▲	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	10
▲	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	10
▲	1212460	(006501-	) Bracket, Sppt, Hppr Seal	1
▲	1212516	(006501-	) Skirt, Lip	1
▲	1212509	(006501-	) Skirt, Lip, Hppr	1
▲	1026798	(006501-	) Strap, Main, Lip	1
▲	32491	(006501-	) Washer, Flat, 0.31, Std	10
▲	1038037	(006501-	) Skirt, Hppr	1
▲	41178	(006501-	) Washer, Flat, 0.25, Fendr	6
▲	11635	(006501-	) Screw, Hex, M6 X 1.00 X 12, NI, Ss	6
▲	1212510	(006501-	) Skirt, Neo, .12, 15.9w, 20.8l, 03/SI	1
▽	9013116	(006501-	) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	1212570	(006501-	) Seal, Wiper, Door	1
▲	1212756	(006501-	) Retainer, Seal	2
▲	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	32490	(006501-	) Washer, Flat, 0.25, Std	34
▲	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	1044950	(006501-	) Strap, Door, Dump, Side	2
▲	1030218	(006501-	) Cord, Sponge	1
▲	1212440	(006501-	) Seal, Door, Dump	1
▲	1044419	(006501-	) Plate, Retainer, Door, Dump	1
▲	06946	(006501-	) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	16411	(006501-	) Paint, Airdry, Off- White, 12oz (NOT EUROPE)	1
	16412	(006501-	) Paint, Airdry, Teal, 12oz, Solid (NOT EUROPE)	1
	377540	(006501-	) Paint, Airdry, Blk, 12oz (NOT EUROPE)	1
	377538	(006501-	) Paint, Airdry, Gray, 12oz (NOT EUROPE)	1
	377537	(006501-	) Paint, Airdry, Iron Gray, 12oz (NOT EUROPE)	1
	1057710	(006501-	) Oil, Hyd [EI, Iso 100, 01gal]	1
	1057711	(006501-	) Oil, Hyd [EI, Iso 100, 05gal]	1
	1069019	(006501-	) Oil, Hyd [EI, Iso 68, 01gal]	1
	1069020	(006501-	) Oil, Hyd [EI, Iso 68, 05gal]	1
	1057707	(006501-	) Oil, Hyd [EI, Iso 32, 01gal]	1
	1057708	(006501-	) Oil, Hyd [EI, Iso 32, 05gal]	1
	99321	(006501-	) Oil, Hydraulic 68 [20] (Europe Only)	1

SECTION 2

Contents	Page
Fig. 1 - Brushes, Replacement	2- 2
Fig. 2 - Main Frame Group	2- 4
Fig. 3 - Brush Door Group, Right	2- 6
Fig. 4 - Brush Door Group, Left	2- 8
Fig. 5 - Operator Station Group	2- 10
Fig. 6 - Seat and Shroud Group	2- 12
Fig. 7 - Engine Cover Group, Rear	2- 14
Fig. 8 - Engine Cover Group, Top	2- 16
Fig. 9 - Engine Cover Group, Side	2- 18
Fig. 10 - Instrument Panel Group, S30	2- 20
Fig. 11 - Instrument Panel Group, S30 XP ..	2- 22
Fig. 12 - Steering Group	2- 24
Fig. 13 - Engine and Mount Group, Gas ...	2- 26
Fig. 14 - Engine and Mount Group, Lpg ...	2- 28
Fig. 15 - Engine EFI Group, Gas	2- 30
Fig. 16 - Engine EFI Group, LPG	2- 32
Fig. 17 - Engine Air Cleaner Group, Gas ..	2- 34
Fig. 18 - Engine Air Cleaner Group, LPG ..	2- 36
Fig. 19 - Engine Alternator Group	2- 38
Fig. 20 - Engine Battery Group	2- 40
Fig. 21 - Engine Muffler Group	2- 42
Fig. 22 - Engine Fuel Tank Group, Gas ...	2- 44
Fig. 23 - Engine Fuel Tank Group, LPG ...	2- 46
Fig. 24 - Engine Radiator Mount and Fan Group	2- 48
Fig. 25 - Engine Radiator Hoses Group, Gas/LPG	2- 50
Fig. 26 - Wheel Group, Rear Drive S30 and XP	2- 52
Fig. 27 - Wheel Assembly, Rear	2- 54
Fig. 28 - Wheel and Brakes Group, Front Solid (Standard)	2- 56
Fig. 29 - Wheel and Brakes Group, Front Pneumatic (Option)	2- 58
Fig. 30 - Brake Pedal and Parking Brake Group	2- 60
Fig. 31 - Directional Pedal Group	2- 62
Fig. 32 - Hydraulic Pump Linkage Group, S30 and XP	2- 64
Fig. 33 - Hopper Group, Plastic	2- 66
Fig. 34 - Hopper Group, Steel	2- 68
Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic	2- 70
Fig. 36 - Hopper Cylinder and Dump Door Group, Steel	2- 72
Fig. 37 - Hopper Cover Group	2- 74
Fig. 38 - Hopper Lift Arms and Bumper Group	2- 76
Fig. 39 - Hopper Counter Weight Group, Steel	2- 78
Fig. 40 - Hopper Pre- Filter Group	2- 80
Fig. 41 - Hopper Vacuum Fan Group	2- 82
Fig. 42 - Hopper Filter Shaker Group	2- 84
Fig. 43 - Side Brush Lift Group, S30	2- 86

Contents	Page
Fig. 44 - Side Brush Motor and Pivot Group, S30	2- 88
Fig. 45 - Side Brush Motor Group, S30 XP ..	2- 90
Fig. 46 - Side Brush Lift and Pivot Group, S30 XP	2- 92
Fig. 47 - Main Brush Lift Group, S30	2- 94
Fig. 48 - Main Brush Lift Group, S30 XP ..	2- 96
Fig. 49 - Main Brush Drive Group	2- 98
Fig. 50 - Hydraulic Schematic	2- 100
Fig. 51 - Hydraulic Hose Group, S30	2- 102
Fig. 52 - Hydraulic Hose Group, S30 XP ..	2- 104
Fig. 53 - Hydraulic Reservoir Group	2- 106
Fig. 54 - Hydraulic Cooler and Tubes Group	2- 108
Fig. 55 - Hydraulic Pumps Group, S30 and XP	2- 110
Fig. 56 - Hydraulic Valve Group, S30	2- 112
Fig. 57 - Hydraulic Valve Group, S30 XP ..	2- 114
Fig. 58 - Electrical Schematic, S30	2- 116
Fig. 59 - Electrical Schematic, S30 XP ...	2- 120
Fig. 60 - Electrical Schematic, Gas Engine Harness (1 of 2)	2- 124
Fig. 61 - Electrical Schematic, LPG Engine Harness (1 of 2)	2- 126
Fig. 62 - Electrical Wire Harnesses Group	2- 128
Fig. 63 - Label Group	2- 136

Fig. 1 - Brushes, Replacement

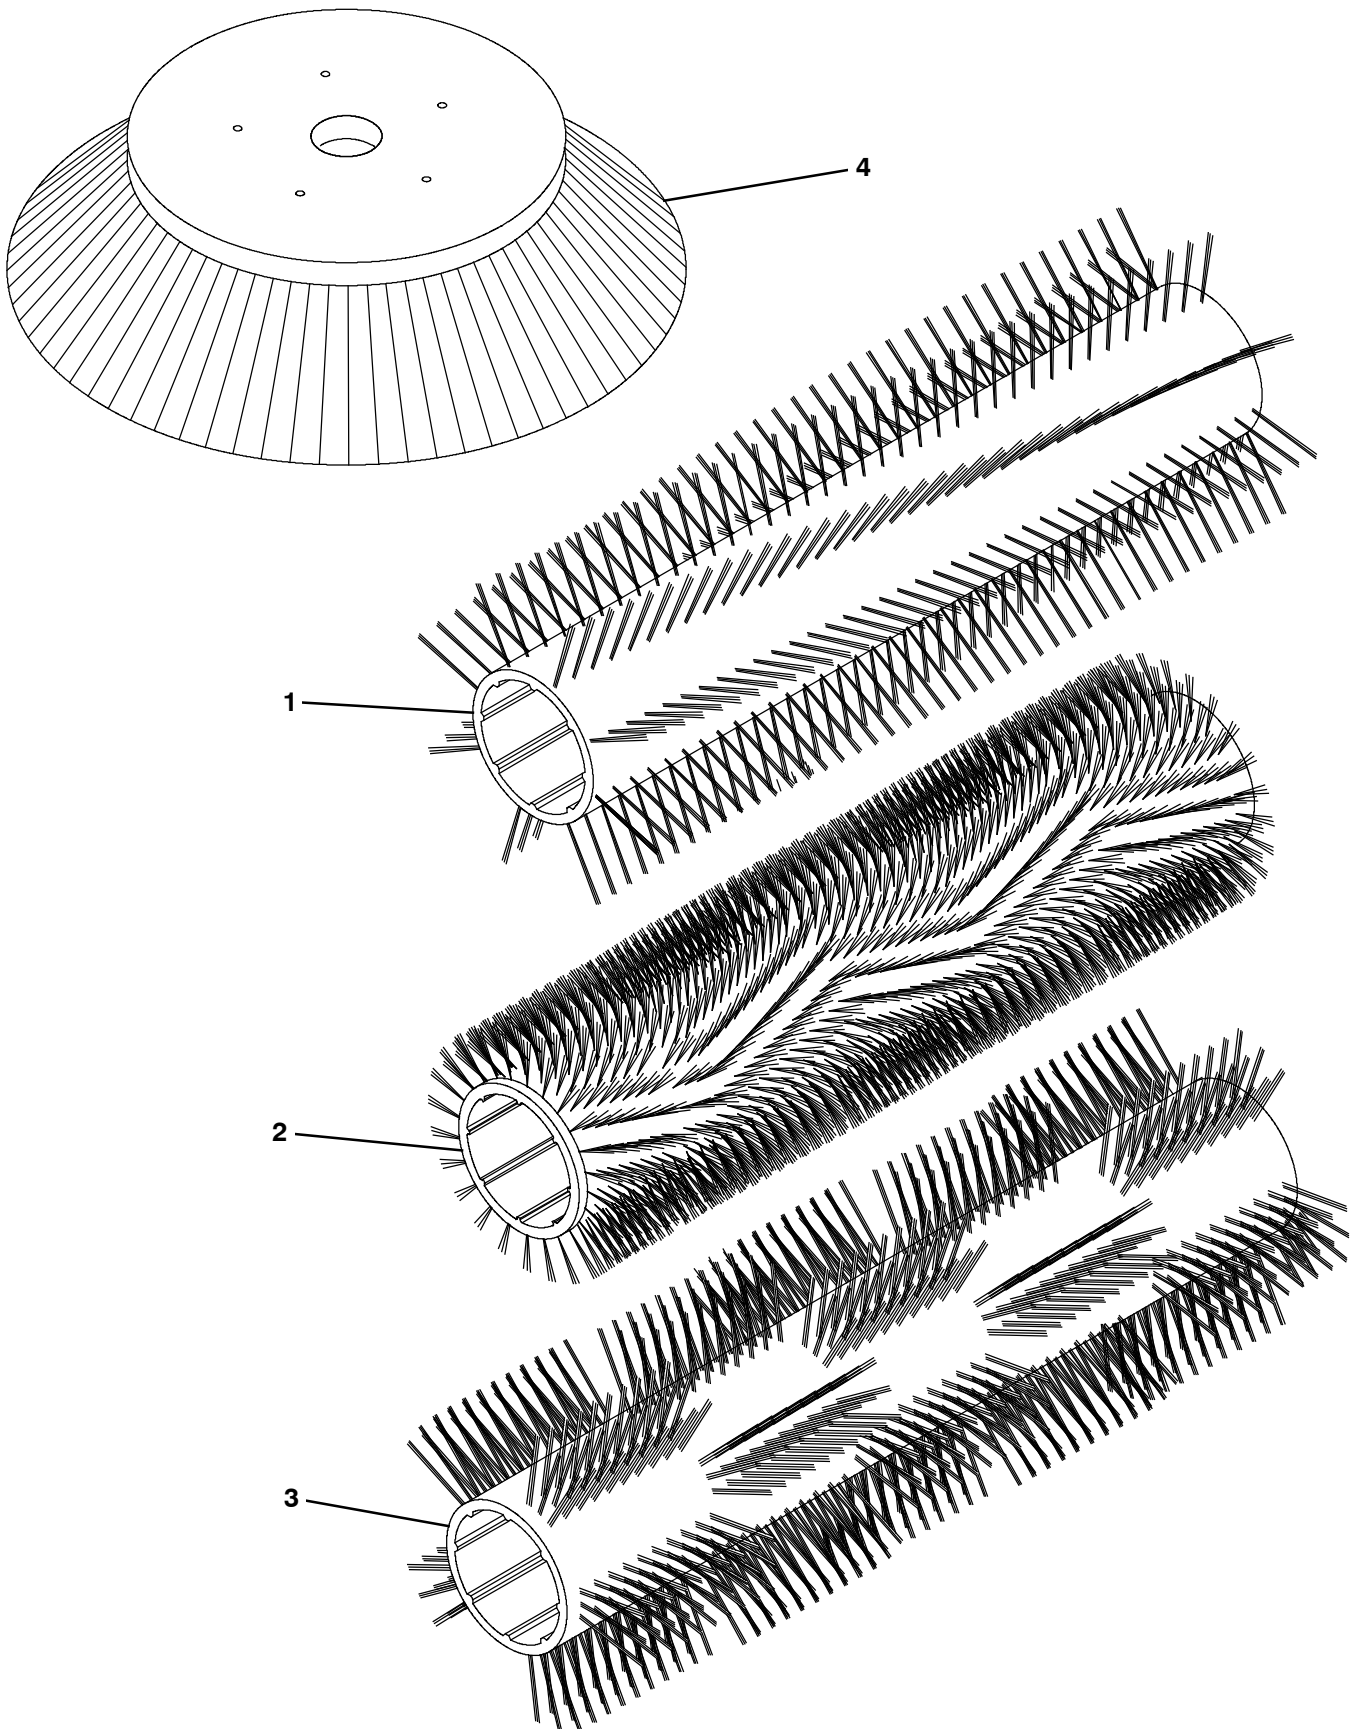


Fig. 1 - Brushes, Replacement

Ref.	Part No.	Serial Number	Description	Qty.
1	54927	(006501-	) Brush, Swp, 45L, 24 Single Row, Natural Fiber & Wire, Spiral	1
1	54922	(006501-	) Brush, Swp, 45L, 24 Single Row, Nylon, Spiral	1
1	54923	(006501-	) Brush, Swp, 45L, 8 Double Row, Nylon, Spiral	1
1	54925	(006501-	) Brush, Swp, 45L, 8 Double Row, Polypropylene & Wire, Spiral	1
1	59440	(006501-	) Brush, Swp, 45L, 8 Double Row, Wire, Spiral	1
1	66019	(006501-	) Brush, Swp, 45L, 8 Double Row, Polypropylene, Spiral	1
1	66018	(006501-	) Brush, Swp, 45L, 5 Double Row Patrol, Nylon, Spiral	1
2	370008	(006501-	) Brush, Swp, 45L, Sand Wedge, Polypropylene, Spiral	1
3	370009	(006501-	) Brush, Swp, 45L, Window , Polypropylene, Spiral	1
4	1027380	(006501-	) Brush, Disk, Swp, 26.0 D, Polypropylene	1
4	1041102	(006501-	) Brush, Disk, Swp, 26.0 D, Nylon	1
4	1042097	(006501-	) Brush, Disk, Swp, 25.4 D, Flat Wire	1

Fig. 2 - Main Frame Group

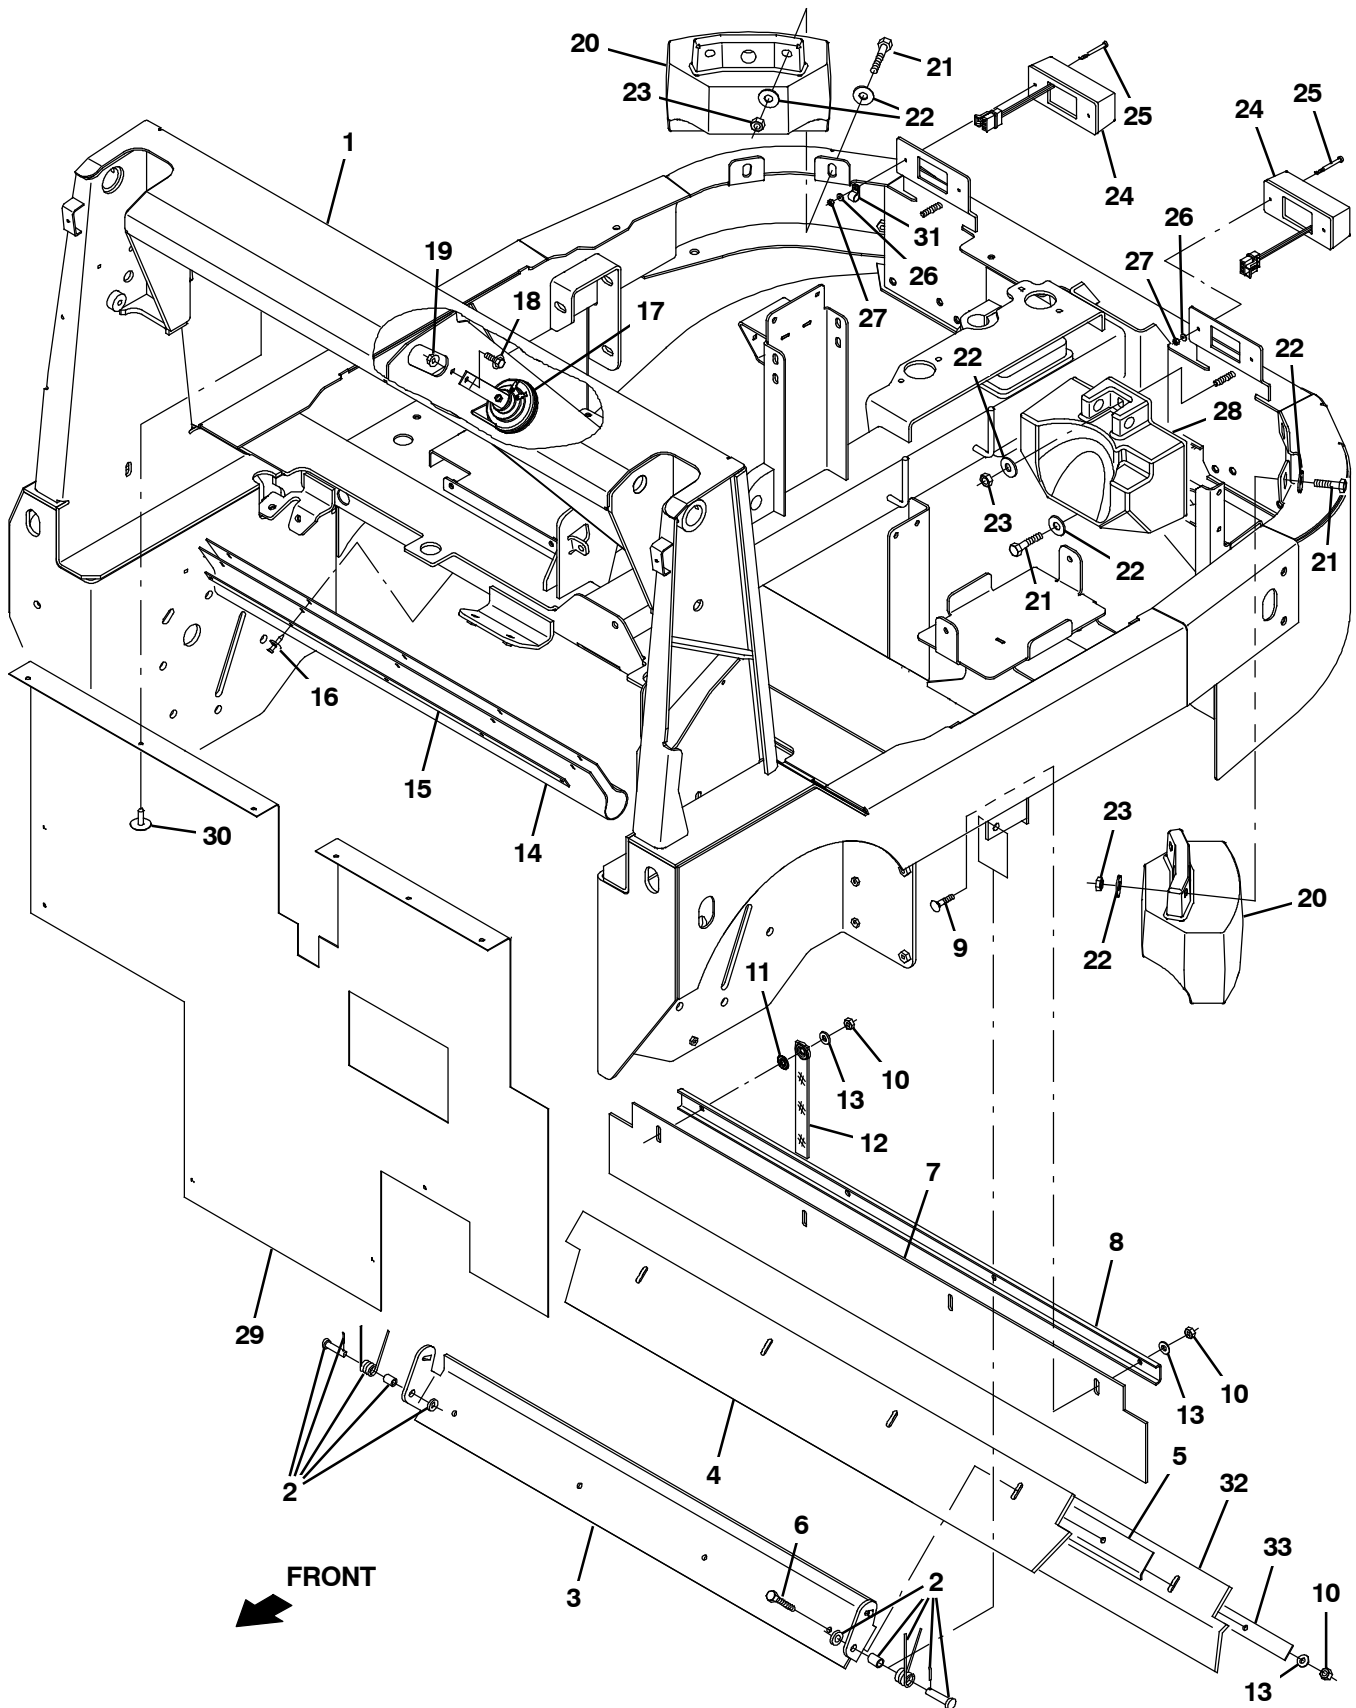


Fig. 2 - Main Frame Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1028252	(006501-	) Frame Wldt, Main [S30]	1
2	69904	(006501-	) Spring Assy Kit	2
3	54182	(006501-	) Bracket, Flap, Recirculation	1
4	1212137	(006501-	) Skirt, Neo, .37, 06.00w 44.65l, 04/SI	1
5	1212908	(006501-	) Retainer, Blade, Deflector	1
6	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	4
7	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
8	383161	(006501-	) Channel, .12, 1.5w 0.5 44.6l, 3/0.4h	1
9	69915	(006501-	) Bolt, Carriage, M8 X 1.25 X 40	4
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	8
11	41142	(006501-	) Washer, Lock, Int- Ext, 0.38	1
12	71579	(006501-	) Strap, Static, W/Grommet, .19 1.1w 25.0l	1
13	32491	(006501-	) Washer, Flat, 0.31, Std	8
14	1036913	(006501-	) Skirt, Rbr, .12, 10.66w 43.00l, 10/ SI	1
15	1040146	(006501-	) Strip, Backing, Hppr	1
16	21246	(006501-	) Rivet, Plstc, .325d X 0.79	5
17	369704	(006501-	) Horn, 12vdc, DbA [Wolo]	1
18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	1
19	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
20	1036819	(006501-	) Weight, Counter, Casting, 79.9 Lb	2
21	16930	(006501-	) Screw, Hex, M10 X 1.50 X 50, 8.8	5
22	32493	(006501-	) Washer, Flat, 0.50, Std	10
23	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	5
▽ 24	1033578	(006501-	) Taillight, 12vdc, 6.3 X 2.5	2
▲	45780	(006501-	) Lamp, 12vdc, 0.5a, 04cp [#1157]	1
25	377165	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 60, 4.8	4
26	19065	(006501-	) Washer, Flat, 08	4
27	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	4
28	1031503	(006501-	) Weight, Counter, Casting, 72.8lb (S30 and S30XP Only)	1
29	1212838	(006501-	) Skirt, Rubber	1
30	72968	(006501-	) Rivet, Plstc, .250d X 0.90	13
31	26395- 2	(006501-	) Clamp, Cable, Stl, 0.38d X 0.38w, 1hole	1
32	1212912	(006501-	) Skirt, Neo, .18, 6.42w X 48.73l, 04/SI	1
33	1212959	(006501-	) Retainer, Blade, Deflector	1

Fig. 3 - Brush Door Group, Right

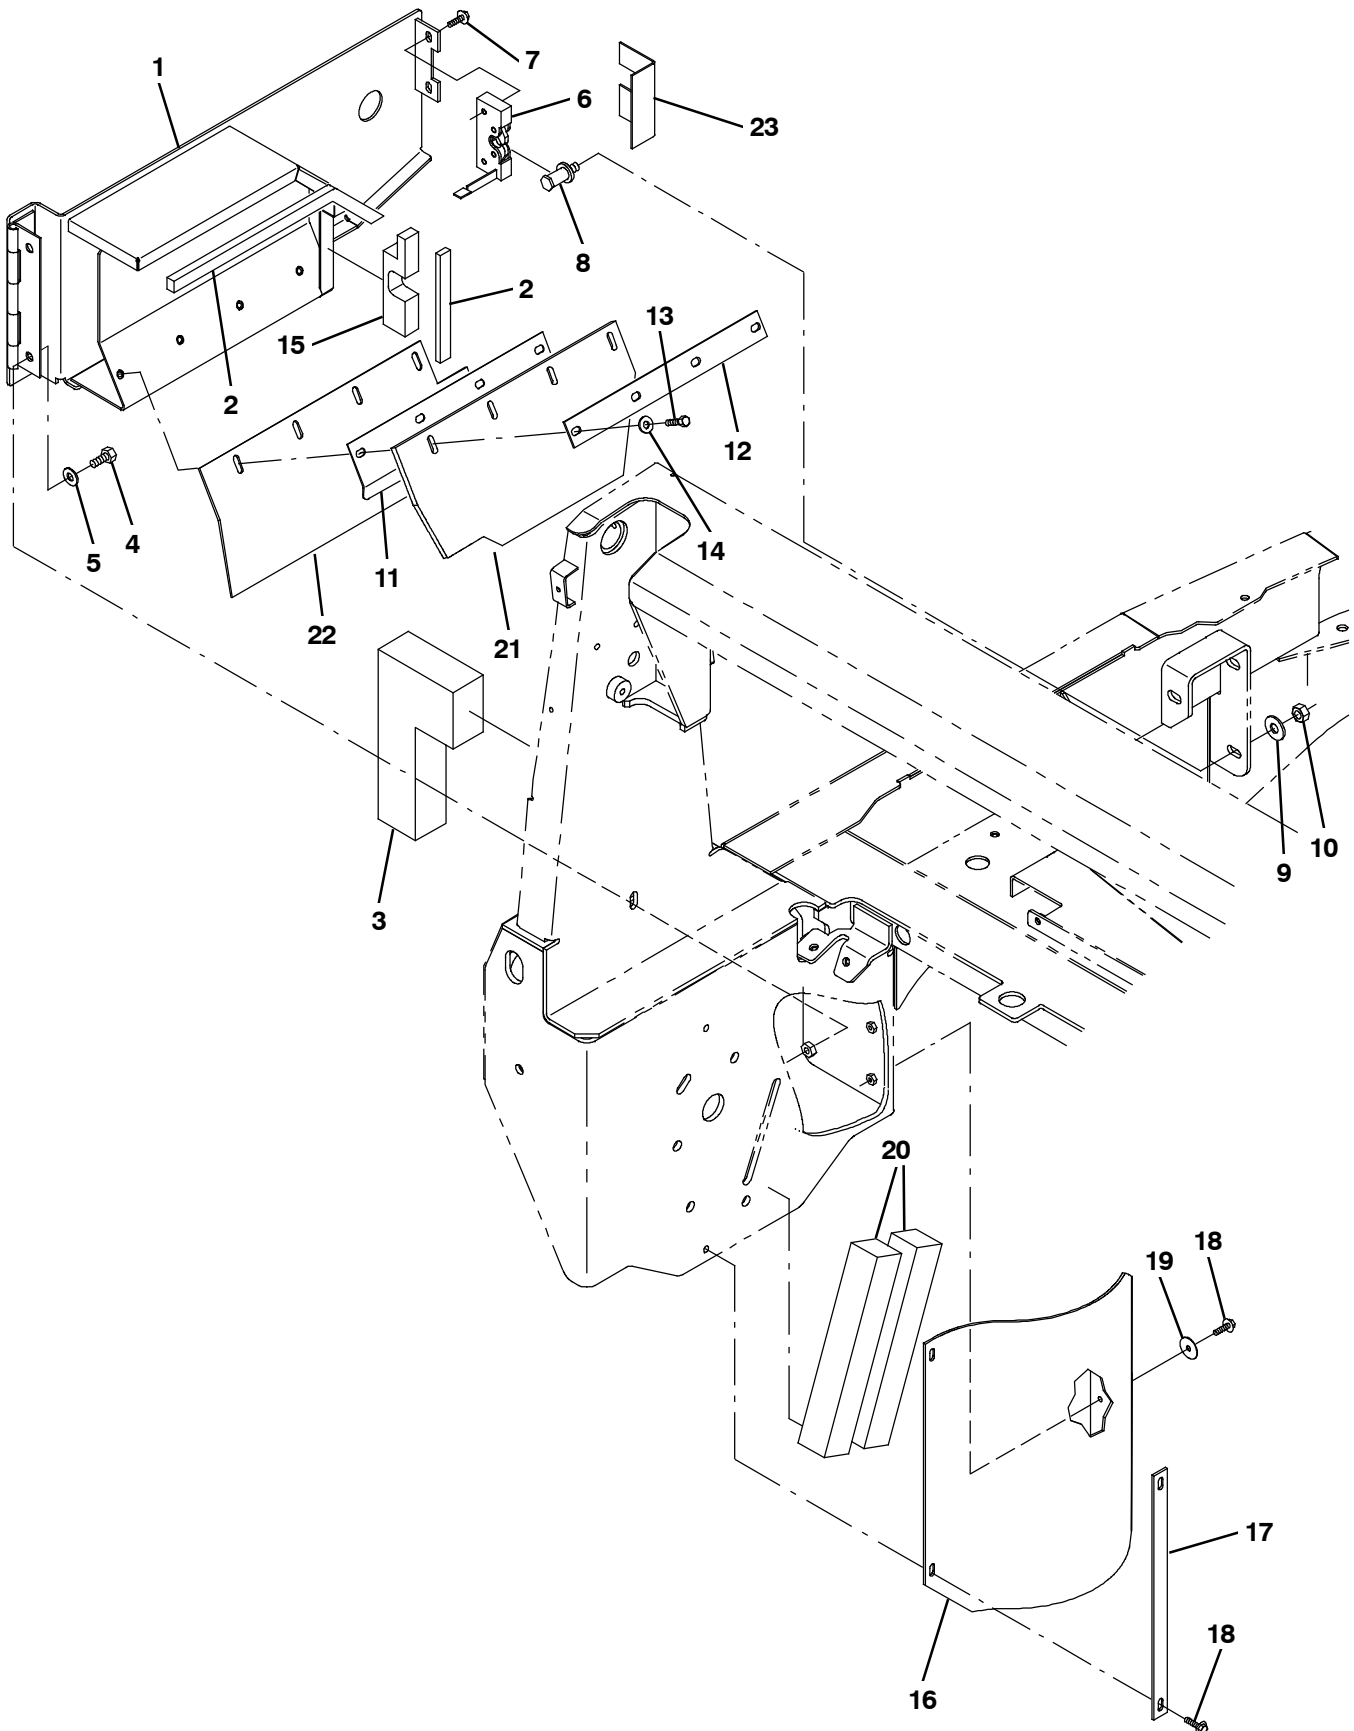


Fig. 3 - Brush Door Group, Right

Ref.	Part No.	Serial Number	Description	Qty.
1	1029580	(006501-	) Door Wldt, Brush, Rh	1
2	1046428	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 02ft	2
3	1042812	(006501-	) Seal, Rbr, Clsd, 2.00w 09.8l Rh	1
4	370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	2
5	32492	(006501-	) Washer, Flat, 0.38, Std	2
6	59195	(006501-	) Latch, Hook	1
7	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	2
8	59192	(006501-	) Latch, Bolt	1
9	41619	(006501-	) Washer, Flat, 0.56b 1.38d .11, Ss	1
10	07788	(006501-	) Nut, Hex, Std, M12 X 1.75, Ss	1
11	1045352	(006501-	) Bracket, Skirt	1
12	1039320	(006501-	) Retainer, Skirt, .12, 1.5w X 14.4l, Blk	1
13	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	4
14	32491	(006501-	) Washer, Flat, 0.31, Std	4
15	1212451	(006501-	) Seal, Rbr, Clsd, 1.50, Door, Brush, Rh	1
16	1214146	(006501-	) Skirt, Deflector	1
17	1033343	(006501-	) Bracket, Retainer, Seal	2
18	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	8
19	41187	(006501-	) Washer, Flat, Belleville, .38	4
20	1042791	(006501-	) Insulation, Acstc, 2.0, 02.0 X 12.0	2
21	1212911	(006501-	) Skirt Assy, Door, Brush, Rh	1
22	1212134	(006501-	) Skirt, Door, Brush	1
23	1213336	(006501-	) Skirt, Brush Arm	1

Fig. 4 - Brush Door Group, Left

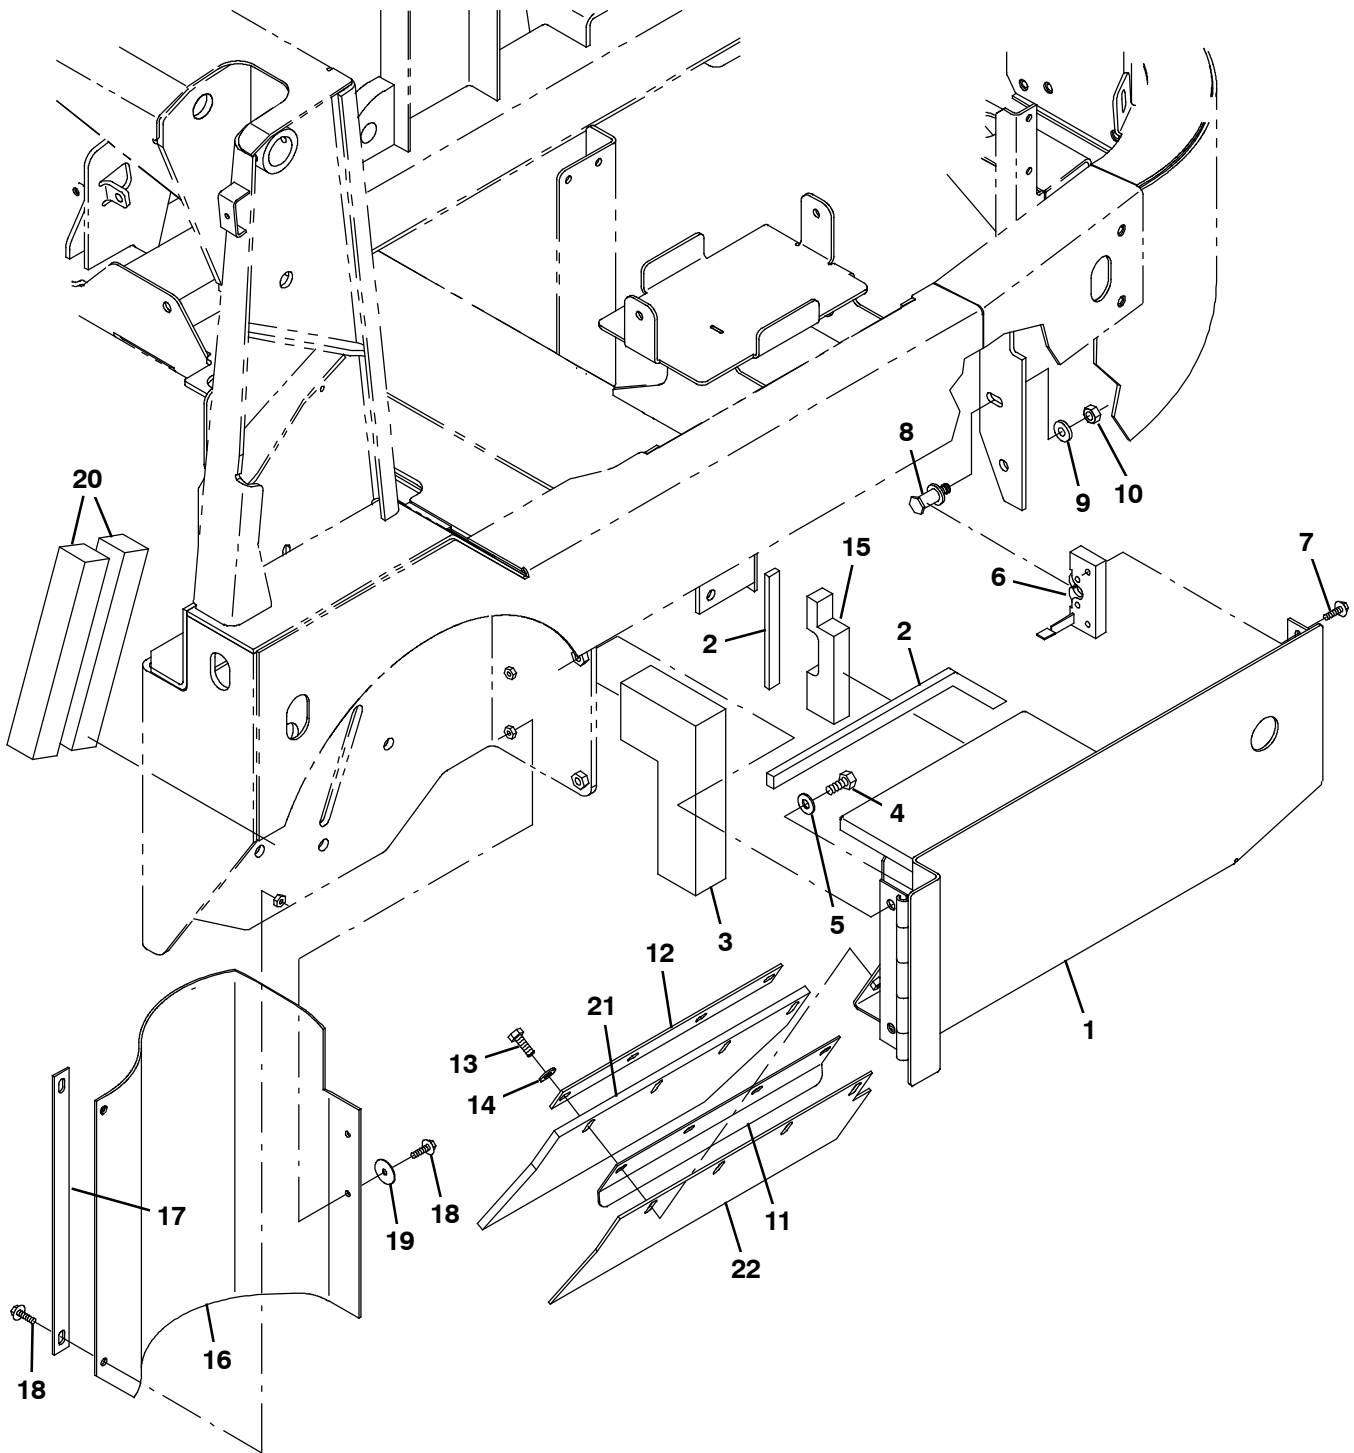


Fig. 4 - Brush Door Group, Left

Ref.	Part No.	Serial Number	Description	Qty.
1	1029801	(006501-	) Door Wldt, Brush, Lh	1
2	1046428	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 02ft	2
3	1042829	(006501-	) Seal, Rbr, Clsd, 2.00w 09.8l Lh	1
4	370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	2
5	32492	(006501-	) Washer, Flat, 0.38, Std	2
6	59194	(006501-	) Latch, Hook	1
7	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	2
8	59192	(006501-	) Latch, Bolt	1
9	41619	(006501-	) Washer, Flat, 0.56b 1.38d .11, Ss	1
10	07788	(006501-	) Nut, Hex, Std, M12 X 1.75, Ss	1
11	1045352	(006501-	) Bracket, Skirt	1
12	1039320	(006501-	) Retainer, Skirt, .12, 1.5w X 14.4l, Blk	1
13	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	4
14	32491	(006501-	) Washer, Flat, 0.31, Std	4
15	1212452	(006501-	) Seal, Rbr, Clsd, 1.00, Door, Brush, Lh	1
16	1214146	(006501-	) Skirt, Deflector	1
17	1033343	(006501-	) Bracket, Retainer, Seal	2
18	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	8
19	41187	(006501-	) Washer, Flat, Belleville, .38	4
20	1042791	(006501-	) Insulation, Acstc, 2.0, 02.0 X 12.0	2
21	1212910	(006501-	) Skirt Assy, Door, Brush, Lh	1
22	1212134	(006501-	) Skirt, Door, Brush	1

Fig. 5 - Operator Station Group

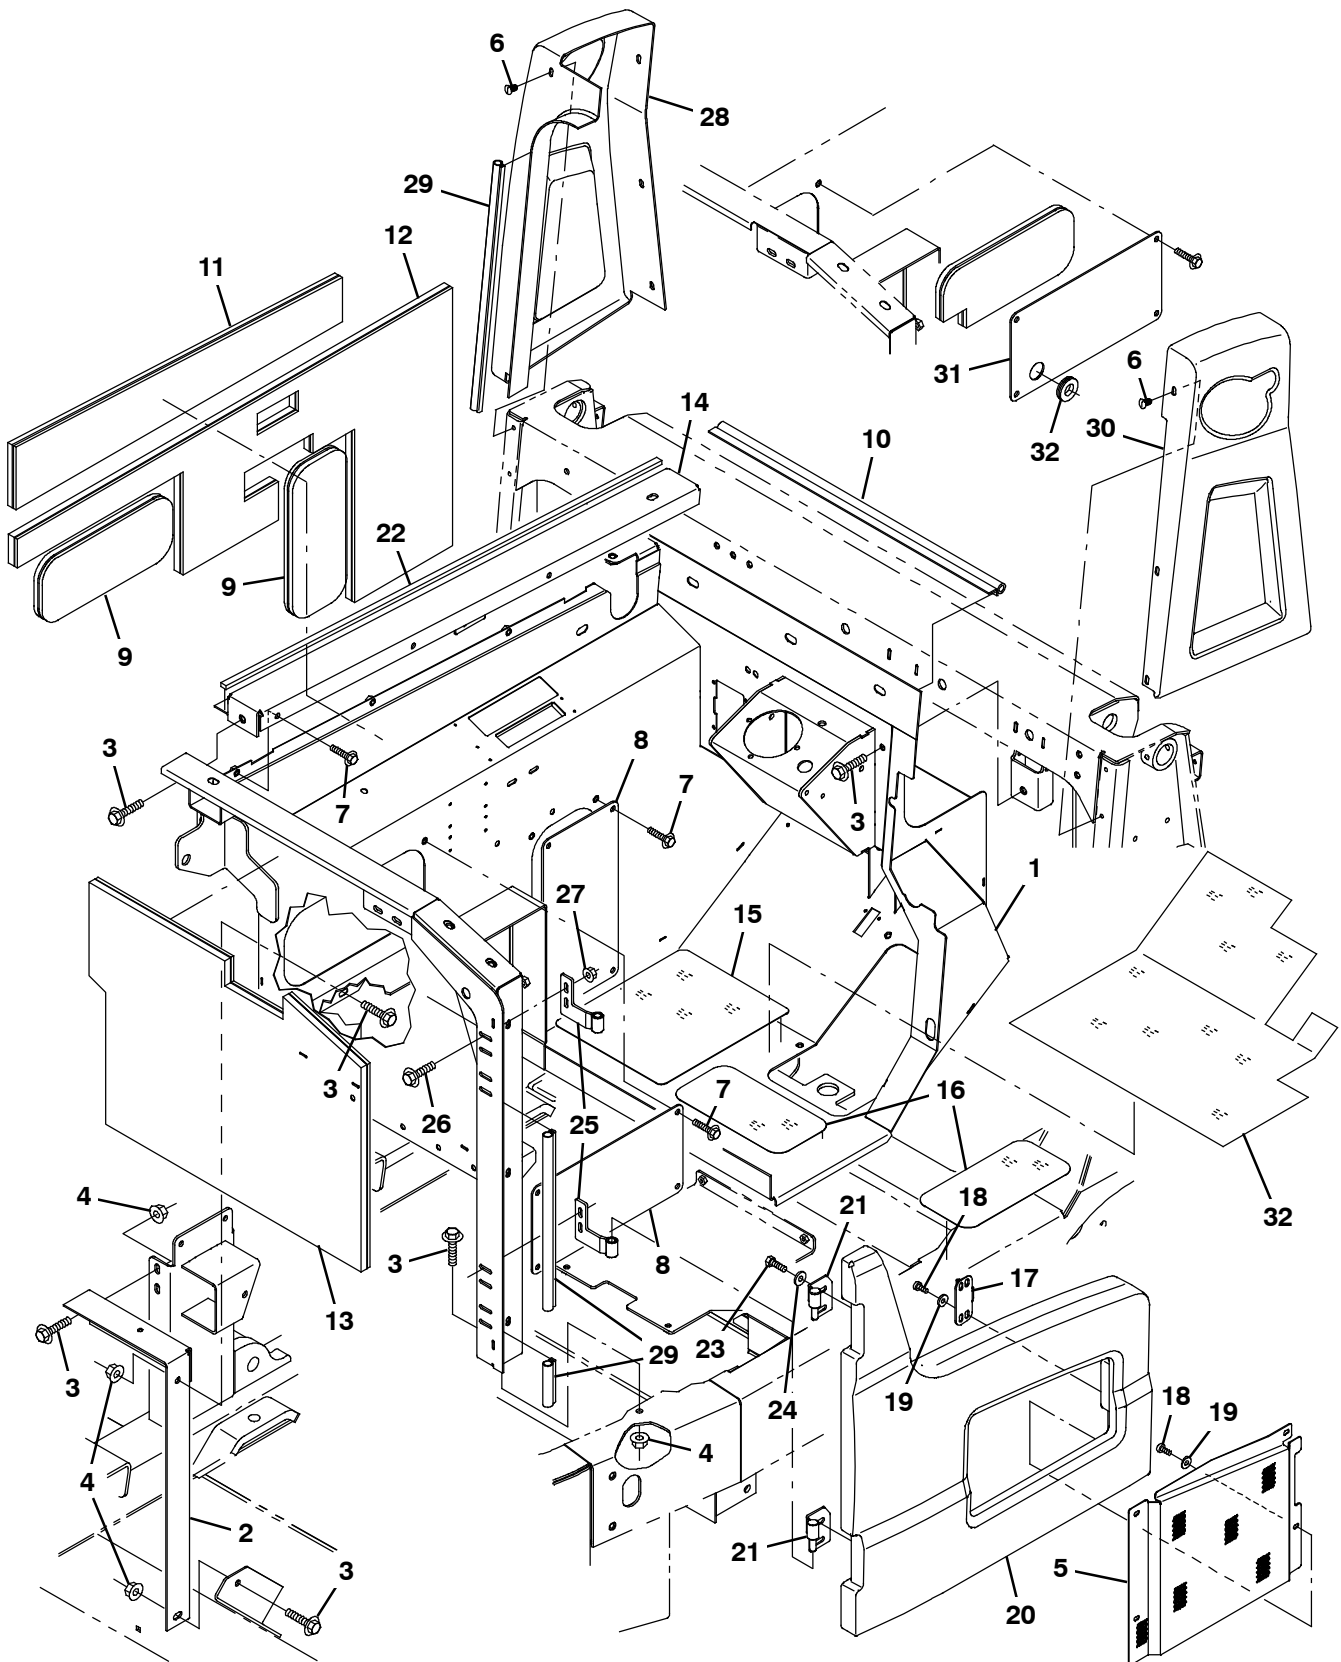


Fig. 5 - Operator Station Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1058273	(006501-	) Shroud Wldt, Station, Oprtr	1
2	1032315	(006501-	) Channel	1
3	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	9
4	07792	(006501-	) Nut, Hex, Flng, M10 X 1.50	5
5	1064528	(006501-	) Panel, Shrd, Seat	1
6	21168	(006501-	) Clip, .250h, Plstc [Pine- Tree]	12
7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	14
8	1028201	(006501-	) Panel, Side, Access	2
9	1038806	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	2
10	1038959	(006501-	) Seal, Trim, Bulb, 90 Degree	1
11	1033288	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
12	1033287	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
13	1033286	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
14	1059307	(006501-	) Lip Wldt, Station, Oprtr	1
15	86799	(006501-	) Tread, Non- Skid, 10.0w 12.0l	1
16	223350	(006501-	) Tread, Non- Skid, 04.5w 10.0l	2
17	1026825	(006501-	) Bracket, Latch, Shrd, Seat	1
18	09200	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 12, Ss	6
19	19066	(006501-	) Washer, Flat, 10	6
20	9007979	(006501-	) Cover, Seat, Rotomold, Afmkt [S30]	1
21	1057880	(006501-	) Hinge Wldt, Shrd, Rh	2
22	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
23	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	4
24	32491	(006501-	) Washer, Flat, 0.31, Std	4
25	1057875	(006501-	) Hinge Wldt, Shrd, Rh	2
26	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	4
27	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	4
28	9007977	(006501-	) Cover, Lntl, Lh, Rotomold, Afmkt [S30]	1
29	1030588	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft	2
30	9007978	(006501-	) Cover, Lntl, Rh, Rotomold, Afmkt [S30]	1
31	1047691	(006501-	) Panel, Side, Access, Ce (Europe Only)	1
32	10632- 8	(006501-	) Grommet, Rbr, 0.75id, F/1.3h, .12 Matl (S30XP Only) (Europe Only)	1

Fig. 6 - Seat and Shroud Group

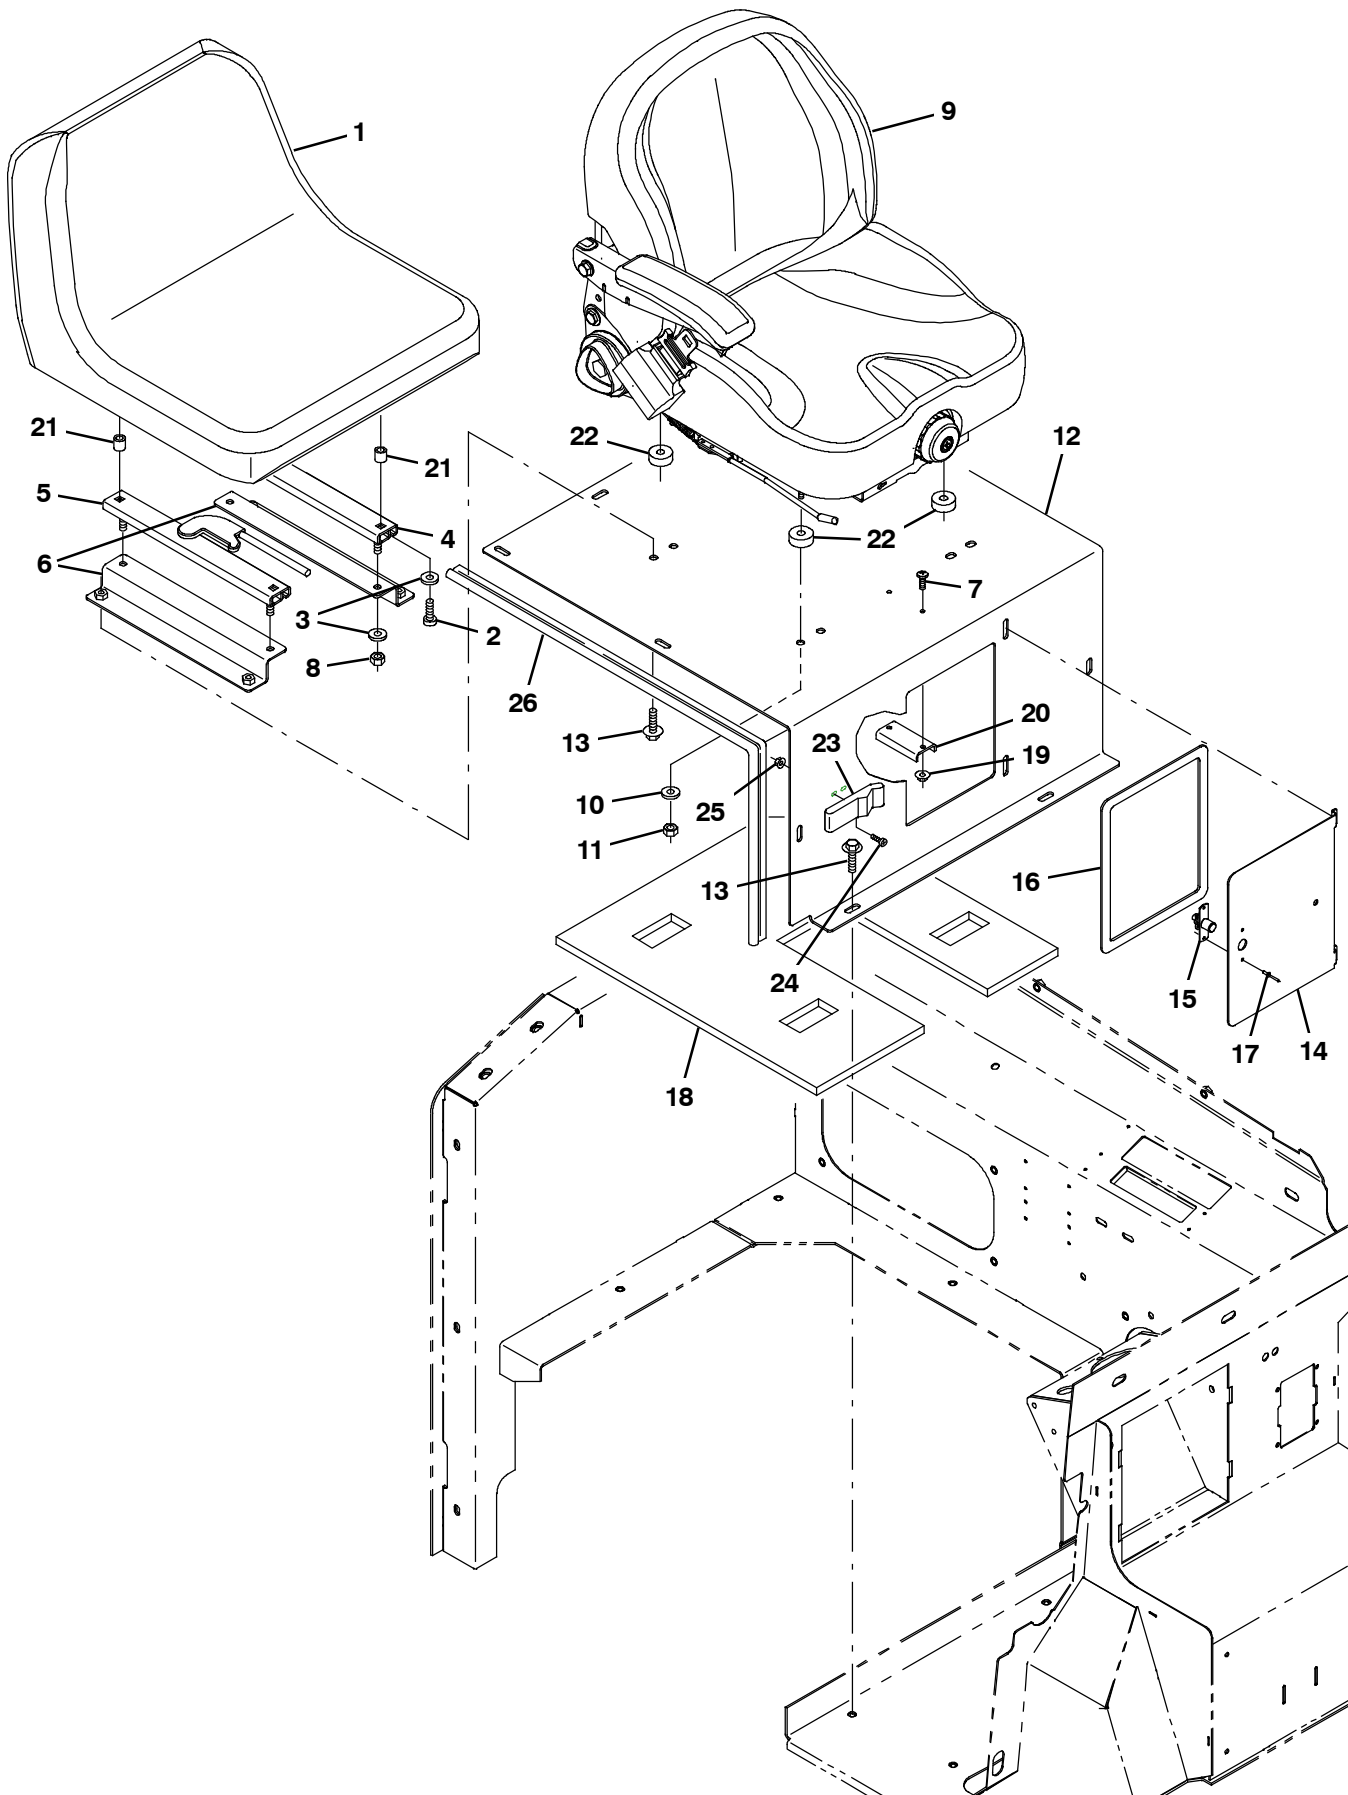


Fig. 6 - Seat and Shroud Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1201894	(006501-	) Seat, Std [Milsco] (S30 Only)	1
2	49177	(006501-	) Screw, Pan, Phl, .31- 18 X 1.00, G2	4
3	69461	(006501-	) Washer, Flat, 0.38b 0.88d .12, Stl, PI	12
4	360369	(006501-	) Track, Slide, Seat Adj, 12.5l	1
5	360370	(006501-	) Track, Slide, Seat Adj, 12.5l, W/Latch	1
6	1040363	(006501-	) Bracket, Angle, Mtg, Seat	2
7	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
8	32983	(006501-	) Nut, Hex, Lock, .31- 18, NI	4
9	9018735	(006501-	) Seat, Deluxe, Replmt (S30XP Only) (See Breakdowns)	1
10	32491	(006501-	) Washer, Flat, 0.31, Std (S30XP Only)	4
11	32983	(006501-	) Nut, Hex, Lock, .31- 18, NI (S30XP Only)	4
12	1036502	(006501-	) Panel, Seat	1
13	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	13
14	1036489	(006501-	) Door, Access	1
15	140962	(006501-	) Latch, Cmpr, Spring, Knurled Knob, PI	1
16	1036500	(006501-	) Gasket, Rbr, .13, 07.87w 09.84l, Adh	1
17	87316	(006501-	) Rivet, Blind, .125d X 0.32 X .25d, Alm	2
18	1033291	(006501-	) Insulation, Flame- Retardant, 1.00	1
19	07789	(006501-	) Nut, Hex, Flng, M5 X 0.80	2
20	63378	(006501-	) Magnet, Drive Brush	1
21	1051052	(006501-	) Spacer, Rnd, .38b .88d .38l	4
22	1048261	(006501-	) Spacer, 0.32d, 1.00d, 0.38l, PI (Europe Only)	4
23	49800	(006501-	) Latch	1
24	06928	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 20, 4.8	2
25	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2
26	1031625	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 03ft	1

Fig. 7 - Engine Cover Group, Rear

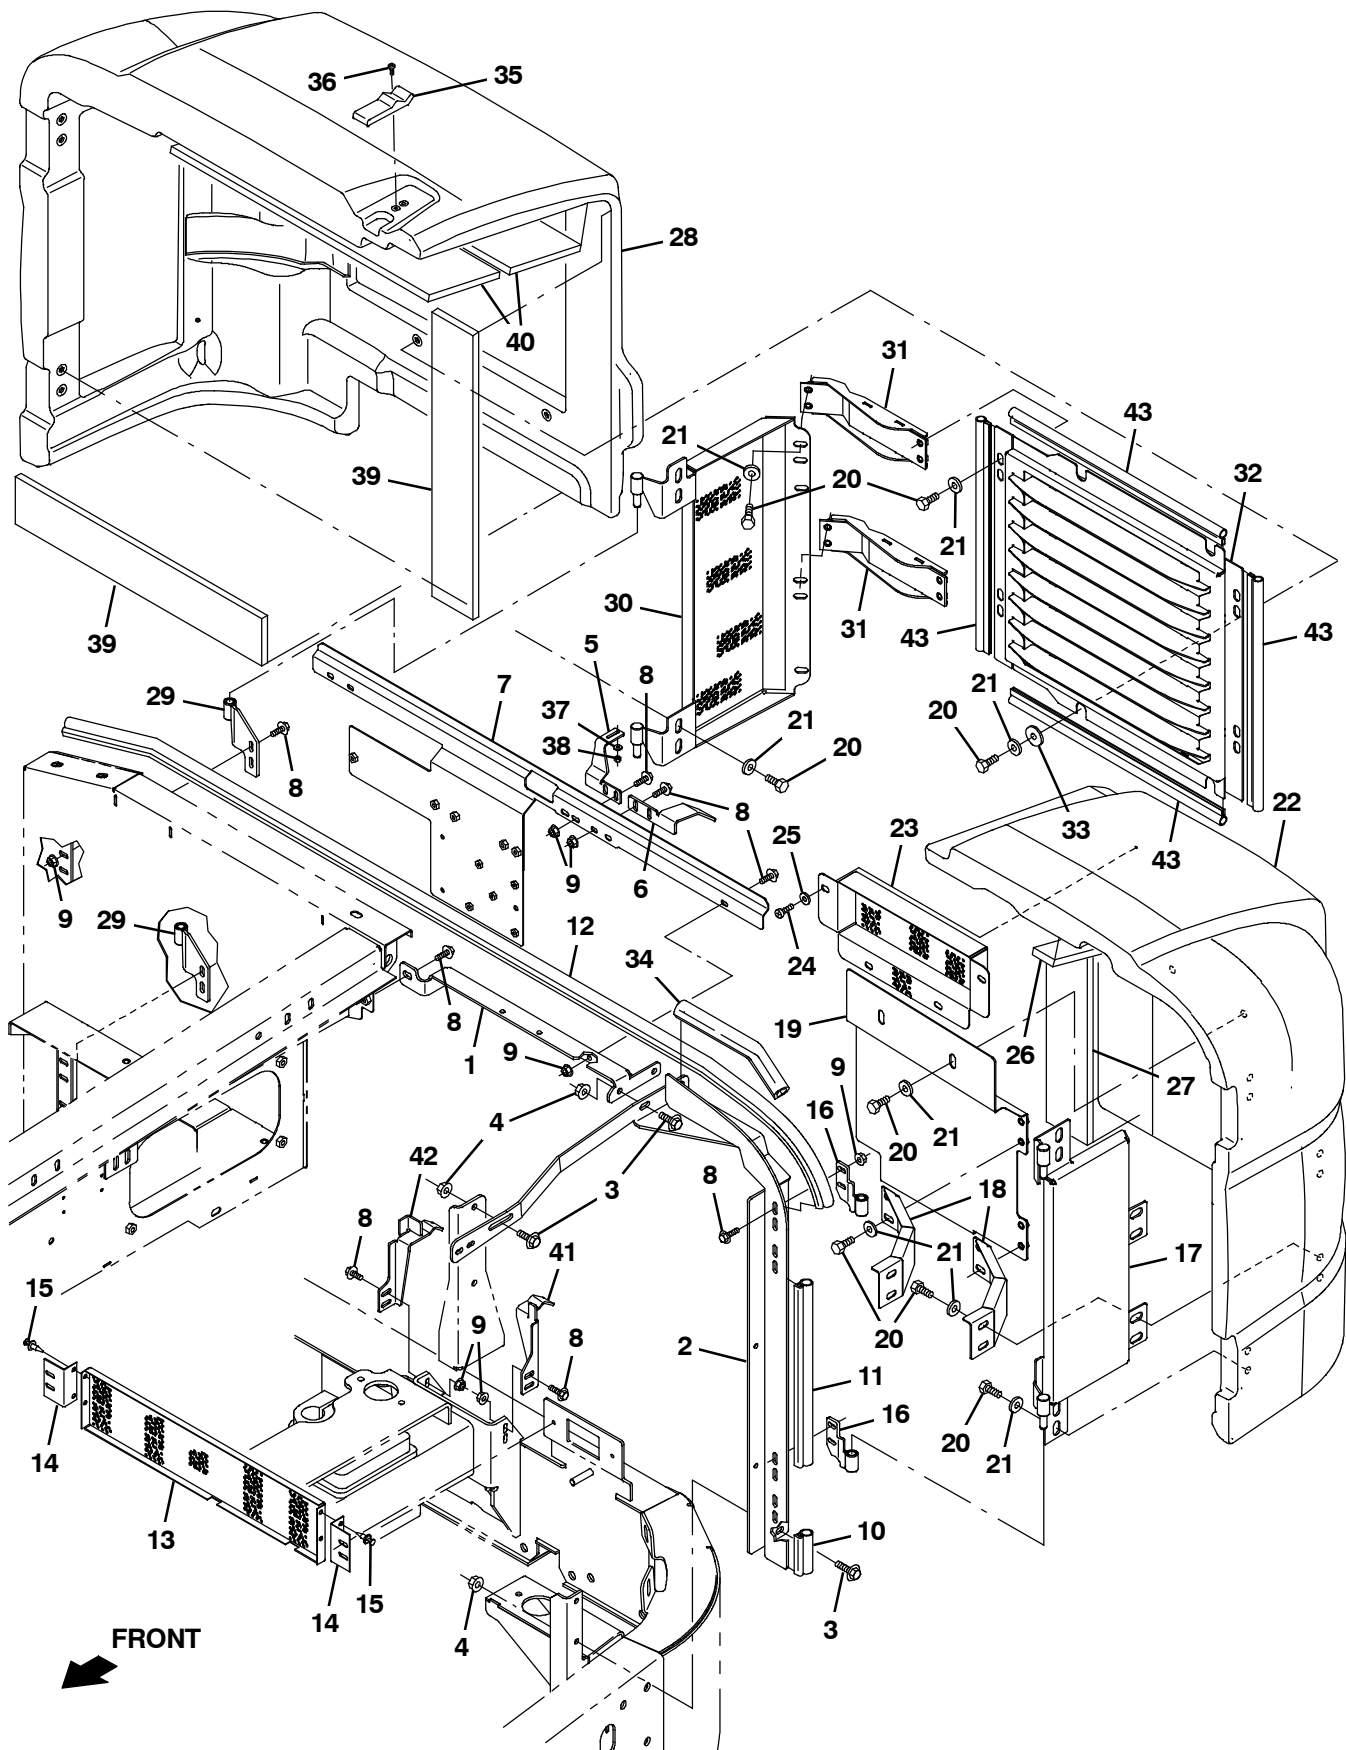


Fig. 7 - Engine Cover Group, Rear

Ref.	Part No.	Serial Number	Description	Qty.
1	1057778	(006501-	) Bracket, Sppt, Cover, Rear, Lh	1
2	1057776	(006501-	) Brace Wldt, Sppt	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	5
4	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	5
5	1060449	(006501-	) Bracket, Latch, Shrd	1
6	1059479	(006501-	) Bracket, Sppt, Shrd, Rear, Upper, Lh	1
7	1057786	(006501-	) Bracket, Sppt, Rear, Shrd	1
8	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	20
9	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	9
10	1030585	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 01ft	1
11	1030588	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft	1
12	1030593	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft	1
13	1032962	(006501-	) Grill	1
14	1034378	(006501-	) Bracket, Grill	2
15	1040816	(006501-	) Rivet, Plstc, .250d X 0.90	4
16	1059874	(006501-	) Hinge Wldt, Shrd, Lh	2
17	1059996	(006501-	) Panel Wldt, Heat, Shield, Lh	1
18	1059211	(006501-	) Bracket, Sppt, Cover, Rear, Lh	2
19	1061000	(006501-	) Panel, Heat, Shield, Rear, Lh	1
20	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	31
21	32491	(006501-	) Washer, Flat, 0.31, Std	21
22	9007974	(006501-	) Cover, Rear, Lh, Rotomold, Afmkt [S30]	1
23	1059440	(006501-	) Panel, Shrd, Eng	1
24	360973	(006501-	) Screw, Pan, 12- 16 X 0.50, F/ Plstc	4
25	19066	(006501-	) Washer, Flat, 10	4
26	1061147	(006501-	) Insulation, Acstc, 0.5, 11.5 X 14.5 Adh	1
27	1061145	(006501-	) Insulation, Acstc, 0.5, 03.0 X 23.0 Adh	1
28	9007975	(006501-	) Cover, Rear, Rh, Rotomold, Afmkt [S30]	1
29	1060639	(006501-	) Hinge Wldt, Shrd, Rh	2
30	1059520	(006501-	) Grill Wldt, Screen, Rear, Rh	1
31	1059516	(006501-	) Bracket Wldt, Sppt, Cover, Rear, Rh	2
32	1059481	(006501-	) Grill Wldt, Rear, Rh	1
33	30013	(006501-	) Washer, Flat, 0.31, Fendr	4
34	1015274	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 01ft	1
35	49800	(006501-	) Latch	1
36	06927	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	4
37	19064	(006501-	) Washer, Flat, 0.16b 0.38d .05, Pl, 06	2
38	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2
39	1061145	(006501-	) Insulation, Acstc, 0.5, 03.0 X 23.0 Adh	2
40	1061146	(006501-	) Insulation, Acstc, 0.5, 05.5 X 23.0 Adh	2
41	1059477	(006501-	) Bracket, Sppt, Shrd, Rear, Lower, Lh	1
42	1059478	(006501-	) Bracket, Sppt, Shrd, Rear, Lower, Rh	1
43	1031623	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft	4

Fig. 8 - Engine Cover Group, Top

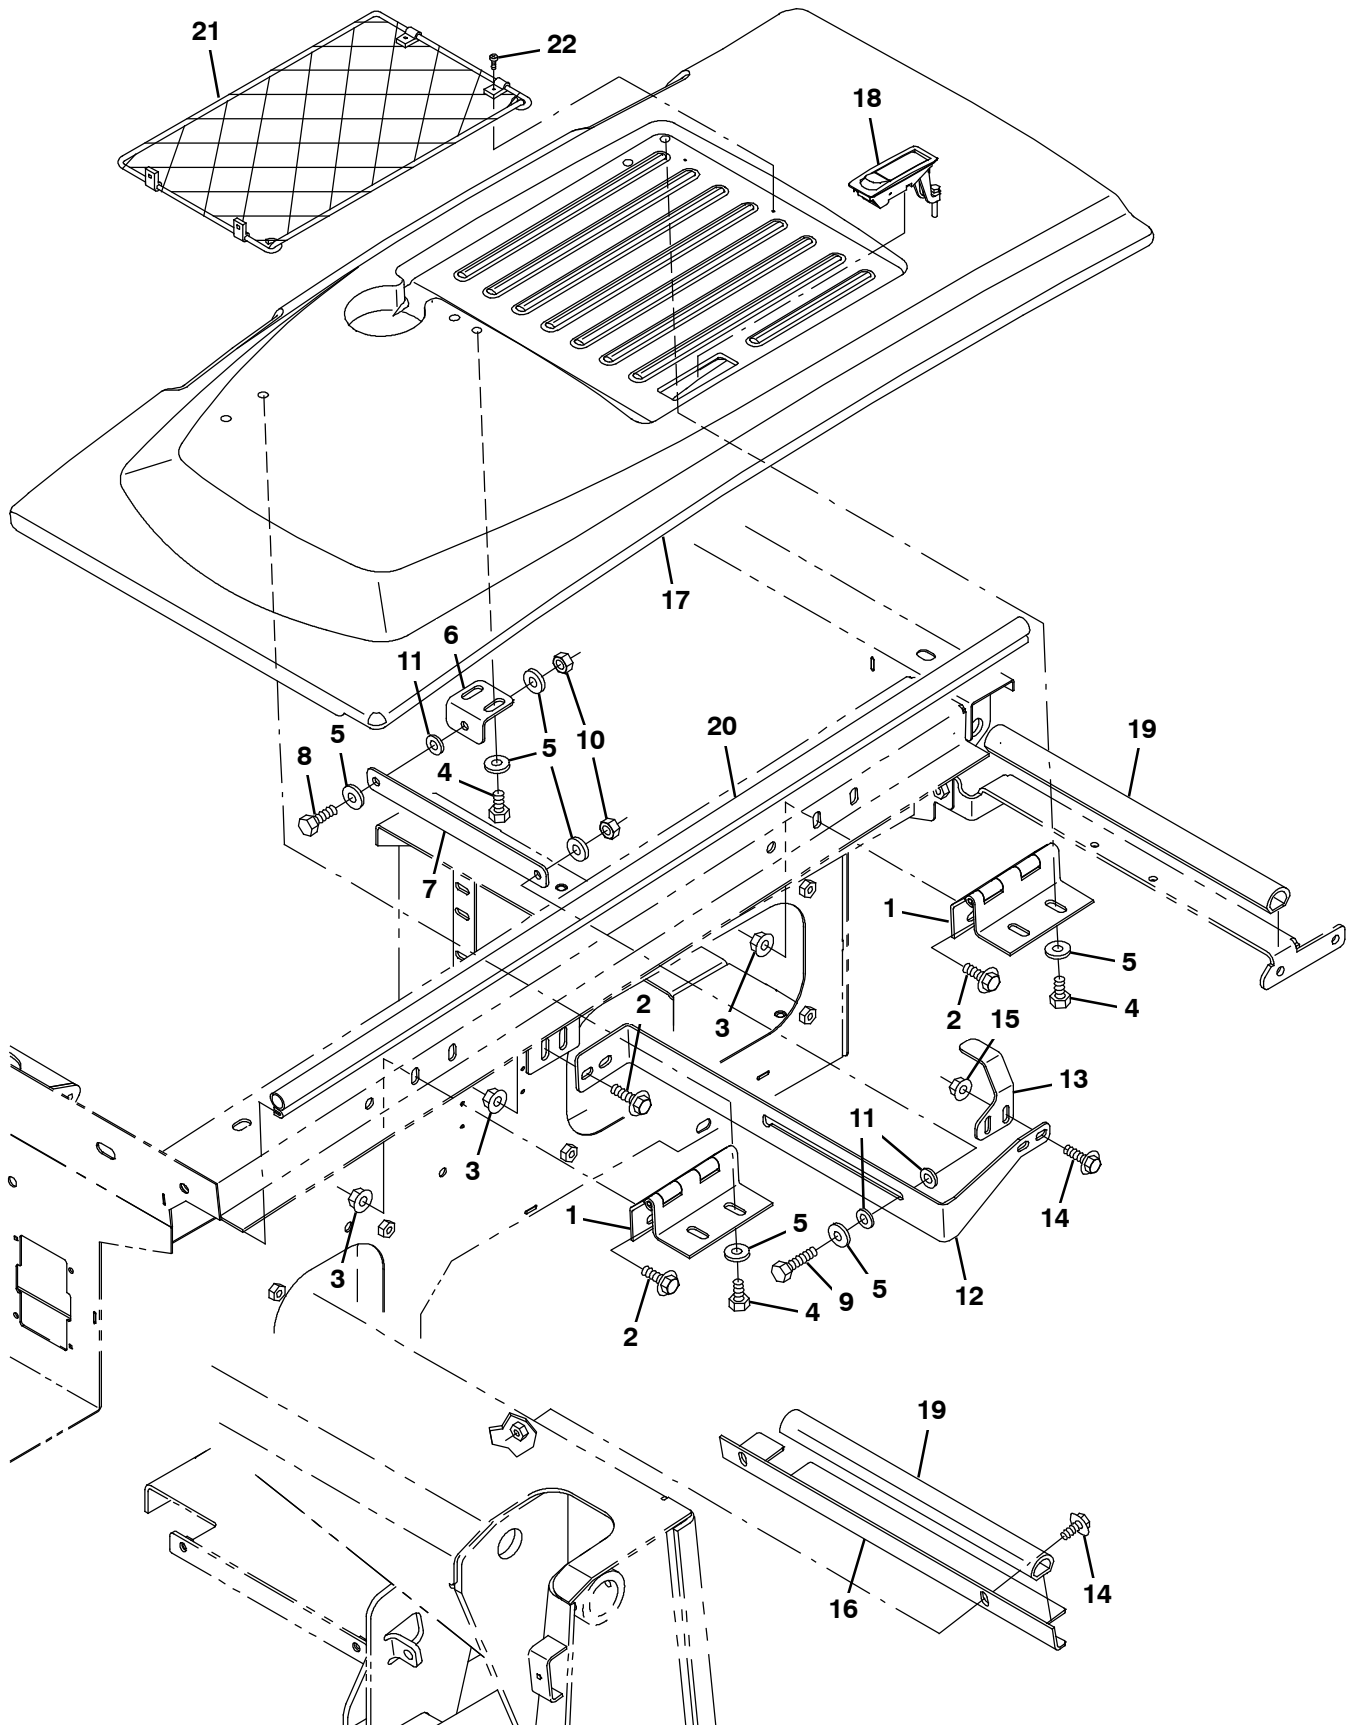


Fig. 8 - Engine Cover Group, Top

Ref.	Part No.	Serial Number	Description	Qty.
1	1057961	(006501-	) Hinge, .25pin .12, Cover, Top	2
2	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
3	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	6
4	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	6
5	32491	(006501-	) Washer, Flat, 0.31, Std	10
6	1059285	(006501-	) Bracket, Prop, Rod, Cover	1
7	1059286	(006501-	) Plate, Prop, Rod	1
8	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
9	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
11	43611	(006501-	) Washer, Flat, 0.39b 0.75d .06, Nyl	3
12	1059276	(006501-	) Bracket, Sppt, Prop, Rod	1
13	1059291	(006501-	) Bracket, Latch, Cover, Top	1
14	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	4
15	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
16	1059269	(006501-	) Bracket, Angle, Lintel	1
17	9007976	(006501-	) Cover, Top, Rotomold, Afmkt [S30]	1
18	398806	(006501-	) Latch	1
19	1015273	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft	2
20	1030593	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft	1
21	CD001	(006501-	) Glovenet- 525 Document Rack/Net 60200104-	1
22	1053318	(006501-	) Screw, Pan, Phl, 08- 16 X 1.00, F/ Plstc	4

Fig. 9 - Engine Cover Group, Side

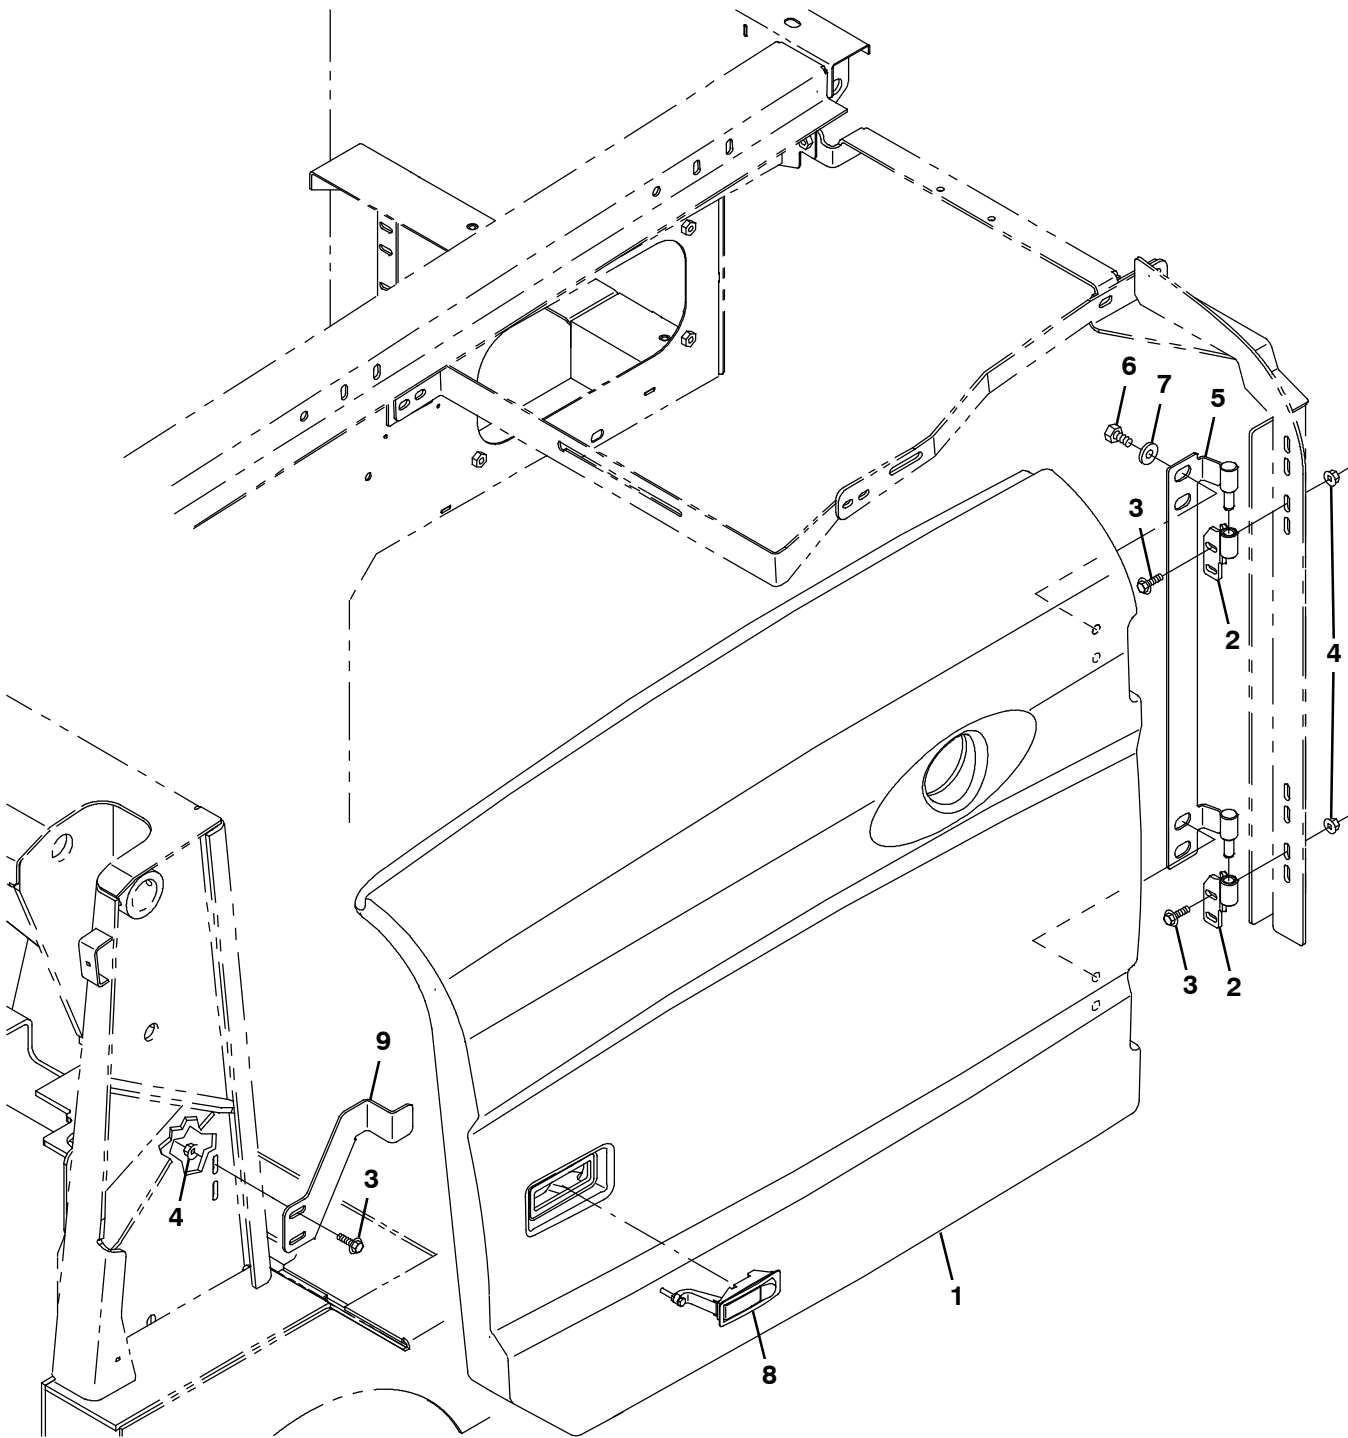


Fig. 9 - Engine Cover Group, Side

Ref.	Part No.	Serial Number	Description	Qty.
1	9007973	(006501-	) Cover, Side, Rotomold, Afmkt [S30]	1
2	1059874	(006501-	) Hinge Wldt, Shrd, Lh	2
3	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	6
4	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	6
5	1059868	(006501-	) Hinge Wldt, Shrd, Side, Lh	1
6	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	4
7	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	4
8	398806	(006501-	) Latch	1
9	1059221	(006501-	) Bracket, Latch, Side, Door	1

Fig. 10 - Instrument Panel Group, S30

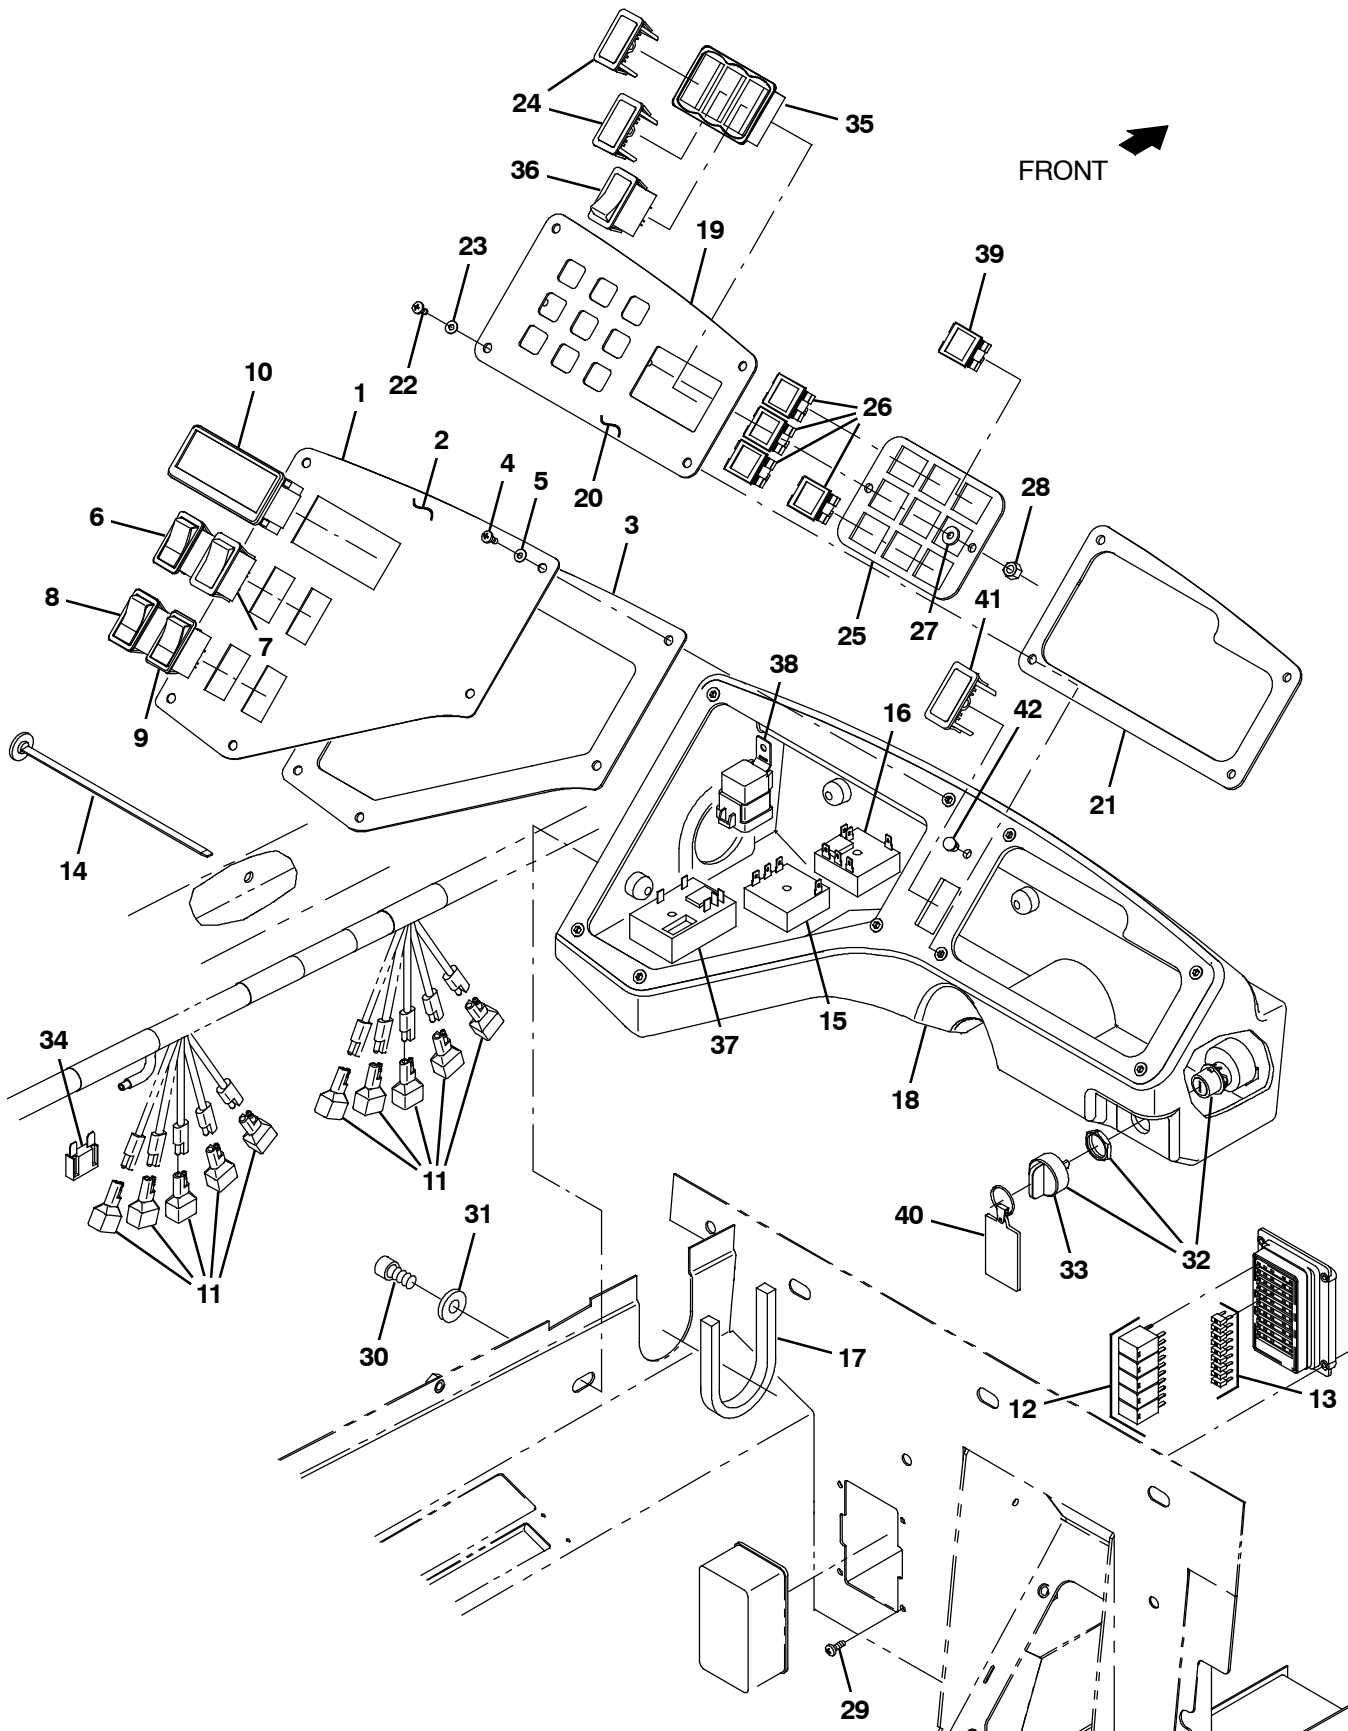


Fig. 10 - Instrument Panel Group, S30

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9004529	(006501-	) Panel Assy, Instmt, Basic, Replmt	1
▲	1	1031683	(006501-	) Panel, Instrument, Basic	1
▲	2	1033884	(006501-	) Label, Panl, Instmt, Basic	1
▲	3	1031211	(006501-	) Gasket, Panel, Instmt	1
▲	4	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	5
▲	5	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	5
	6	377084	(006501-	) Switch, Rocker, Prgrsv	1
	7	398528	(006501-	) Switch, Rocker, Dpdt, On / Off / Mom	1
	8	398508	(006501-	) Switch, Rocker, Dpdt, Mom / Off / Mom	1
	9	397889	(006501-	) Switch, Rocker, Dpst, On / None / On	1
	10	1028750	(006501-	) Indicator, Ele, [Multi- Display]	1
	11	222290	(006501-	) Diode, Ele, Plug	10
	12	1028832	(006501-	) Relay, 12vdc, 35a, Spdt [Micro 280]	5
	13	1030985	(006501-	) Fuse, Blade, 15a, 32v [Mini]	9
	14	1041873	(006501-	) Fastener, Wire, Tie [Button Head]	2
	15	34816	(006501-	) Timer, 12vdc, 30sec On	1
	16	1030813	(006501-	) Timer, 12vdc, 6sec Spcl [Tosr116]	1
	17	1035153	(006501-	) Gasket, Harness	1
	18	1035507	(006501-	) Box, Instrument, li, Trimmed	1
▽		9004528	(006501-	) Panel Assy, Switch, Replmt	1
▲	19	1033771	(006501-	) Panel, Switch li	1
▲	20	1033883	(006501-	) Label, Panl, Instmt, Rh	1
▲	21	1031664	(006501-	) Gasket, Panel, Switch	1
▲	22	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	4
▲	23	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	4
	24	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	2
	25	1033760	(006501-	) Panel, Light	1
	26	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0	4
	27	19066	(006501-	) Washer, Flat, 10	2
	28	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
	29	39239	(006501-	) Screw, Pan, Phl, 10- 32 X 0.50, G2, Blk	4
	30	1056769	(006501-	) Screw, Soc, M10 X 1.50 X 16, 12.9	4
	31	32485	(006501-	) Washer, Flat, 0.38, Sae	4
▽	32	1028790	(006501-	) Switch, Key, 4 Pos [Honeywell]	1
▲	33	9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
	34	394922	(006501-	) Fuse, Blade, 060a [Maxi]	1
	35	1029951	(006501-	) Bezel, Switch [3 Gang]	1
	36	377084	(006501-	) Switch, Rocker, Prgrsv	1
	37	1046893	(006501-	) Timer, 12vdc, 10a [Ce Seat Switch] (Europe Only)	1
	38	56186	(006501-	) Relay, 12vdc, 040a, Spdt No (Europe Only)	1
	39	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0 (Europe Only)	1
	40	1075003	(006501-	) Keychain, Rectangle, Parts & Service (No. Amer. Only)	1
	41	398501	(008141-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	1
	42	80061	(008141-	) Plug, Hole, Rnd, 0.30h 0.3l	1

Fig. 11 - Instrument Panel Group, S30 XP

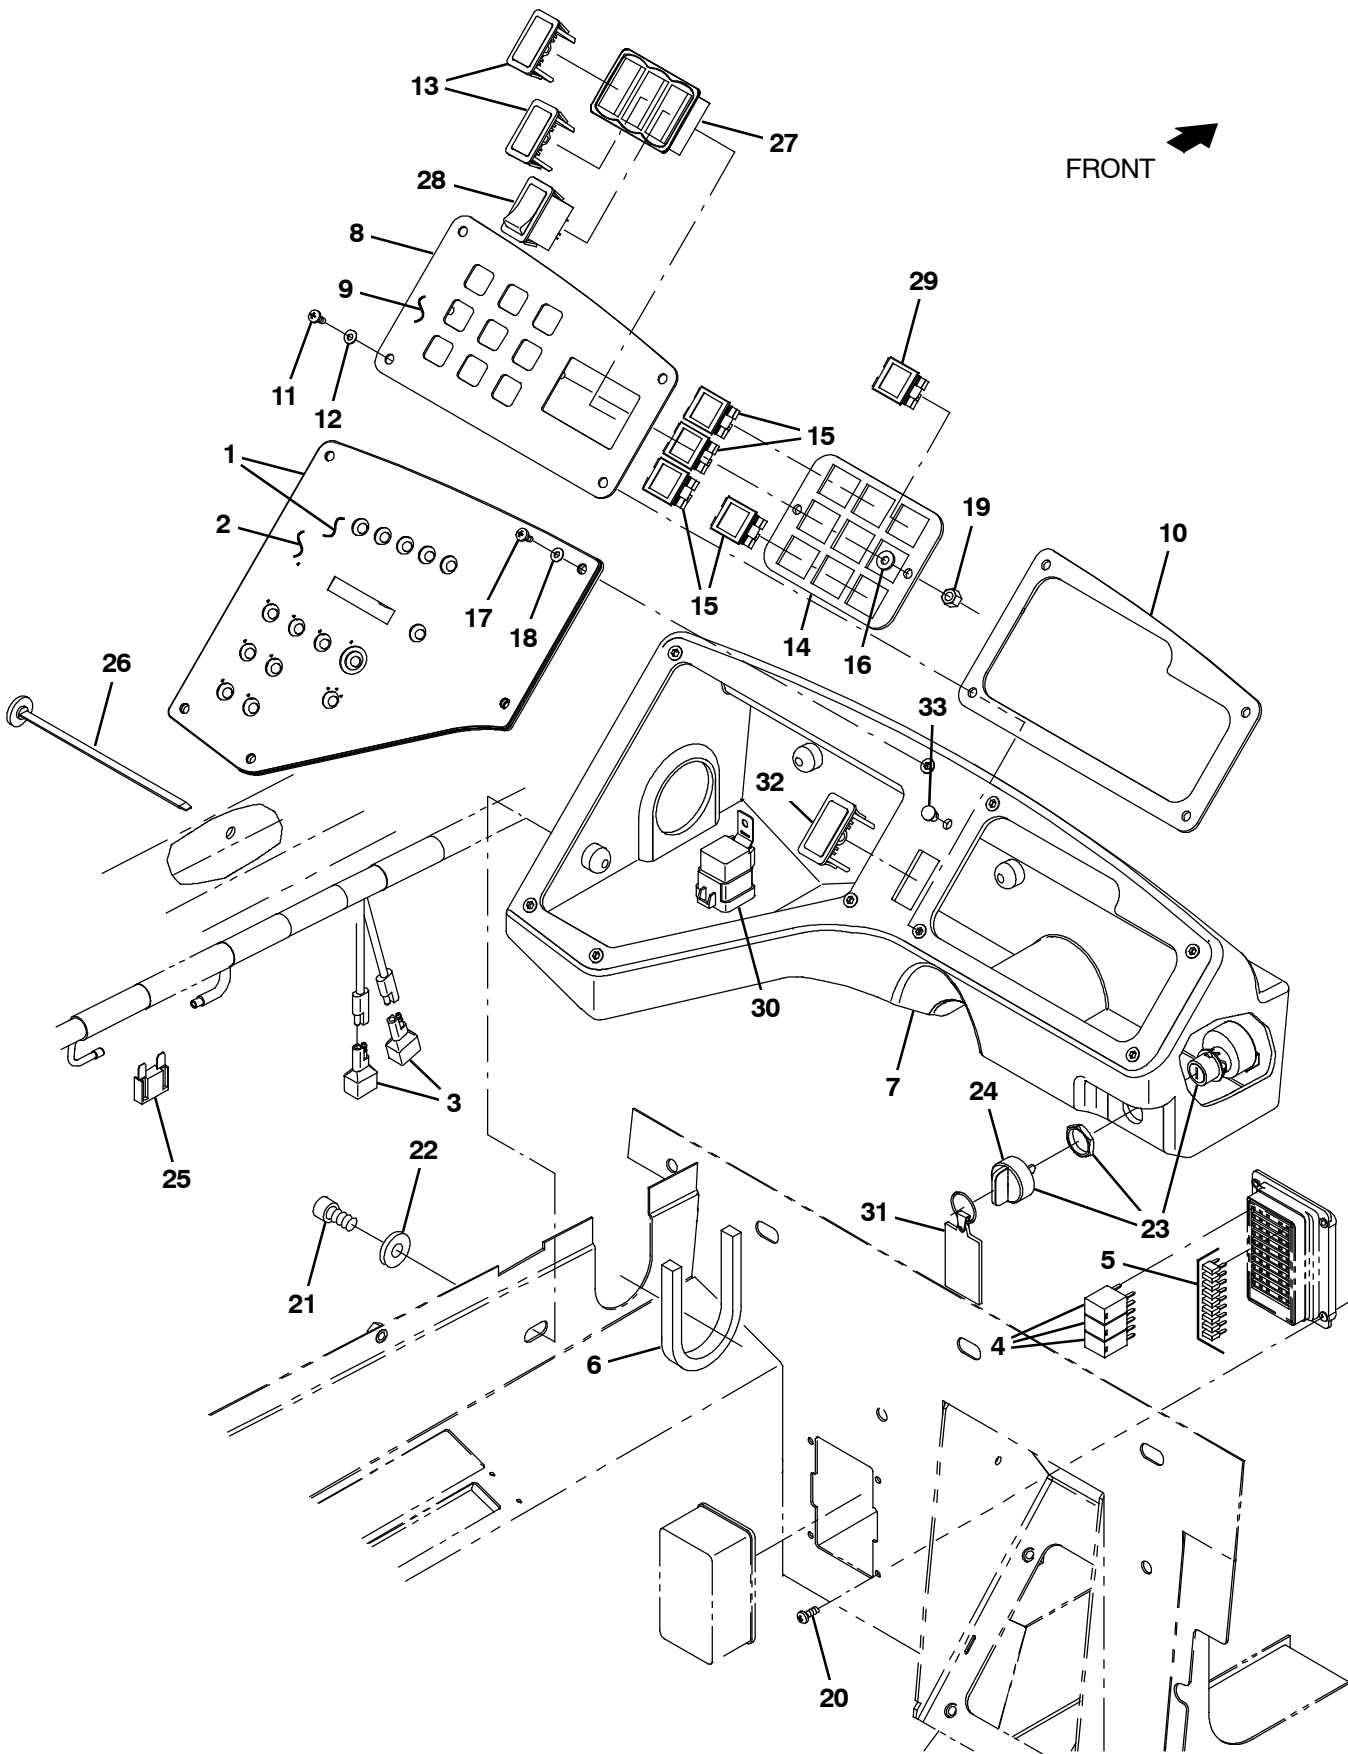


Fig. 11 - Instrument Panel Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	9004513	(006501-	) Panel Kit, Replmt [S30] (Includes Control Board and Label Overlay Panel)	1
2	9004325	(006501-	) Label, Overlay Panel, Replmt [S30]	1
3	222290	(006501-	) Diode, Ele, Plug	2
4	1028832	(006501-	) Relay, 12vdc, 35a, Spdt [Micro 280]	3
5	1030985	(006501-	) Fuse, Blade, 15a, 32v [Mini]	9
6	1035153	(006501-	) Gasket, Harness	1
7	1035507	(006501-	) Box, Instrument, li, Trimmed	1
▽	9004528	(006501-	) Panel Assy, Switch, Replmt	1
▲	8 1033771	(006501-	) Panel, Switch li	1
▲	9 1033883	(006501-	) Label, Panl, Instmt, Rh	1
▲	10 1031664	(006501-	) Gasket, Panel, Switch	1
▲	11 1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	4
▲	12 1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	4
13	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	2
14	1033760	(006501-	) Panel, Light	1
15	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0	4
16	19066	(006501-	) Washer, Flat, 10	2
17	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	5
18	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	5
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
20	39239	(006501-	) Screw, Pan, Phl, 10- 32 X 0.50, G2, Blk	4
21	1056769	(006501-	) Screw, Soc, M10 X 1.50 X 16, 12.9	4
22	32485	(006501-	) Washer, Flat, 0.38, Sae	4
▽	23 1028790	(006501-	) Switch, Key, 4 Pos [Honeywell]	1
▲	24 9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
25	394922	(006501-	) Fuse, Blade, 060a [Maxi]	1
26	1041873	(006501-	) Fastener, Wire, Tie [Button Head]	2
27	1029951	(006501-	) Bezel, Switch [3 Gang]	1
28	377084	(006501-	) Switch, Rocker, Prgrsv	1
29	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0 (Europe Only)	1
30	56186	(006501-	) Relay, 12vdc, 040a, Spdt No (Europe Only)	1
31	1075003	(006501-	) Keychain, Rectangle, Parts & Service (No. Amer. Only)	1
32	398501	(008141-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	1
33	80061	(008141-	) Plug, Hole, Rnd, 0.30h 0.3l	1

Fig. 12 - Steering Group

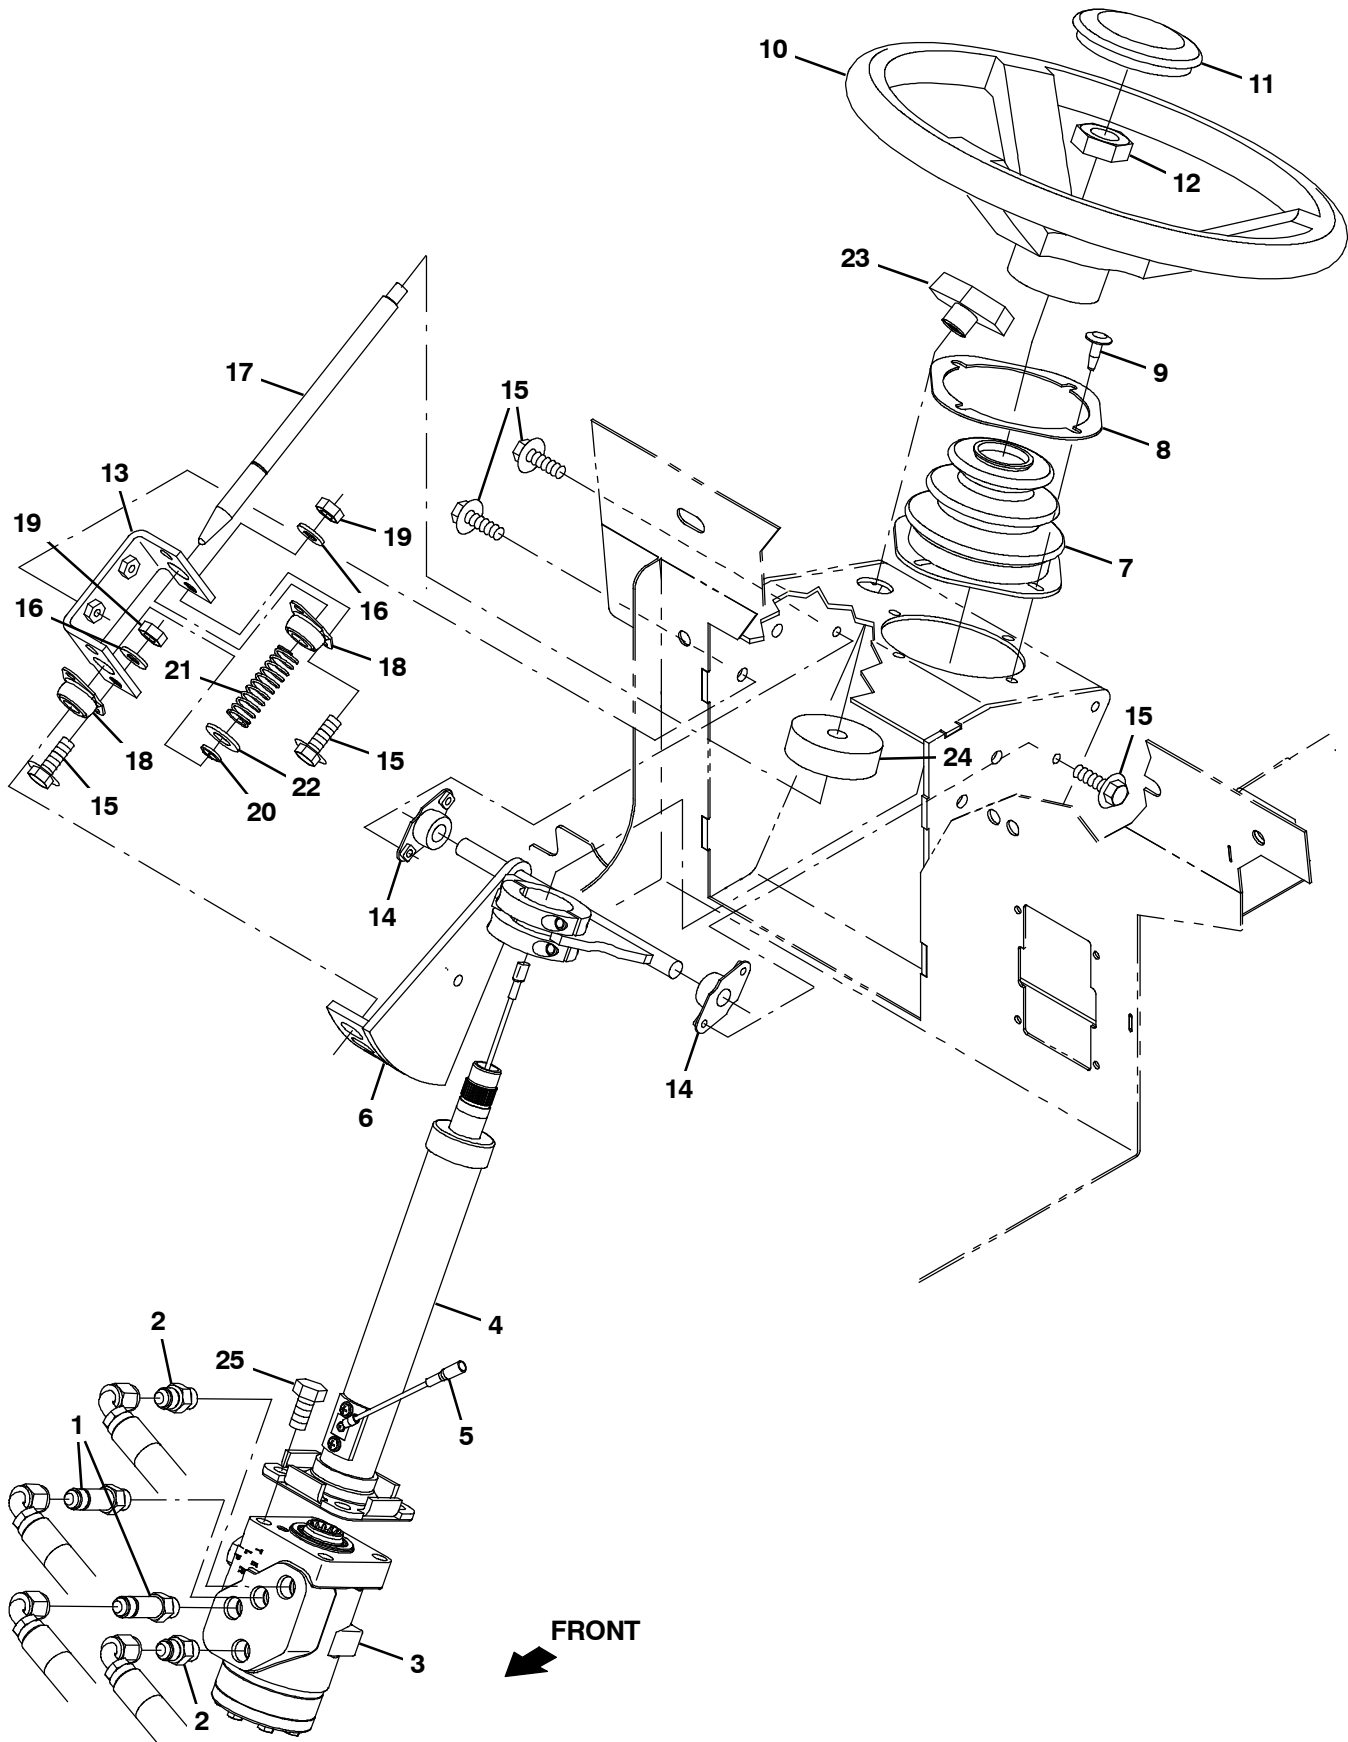


Fig. 12 - Steering Group

Ref.	Part No.	Serial Number	Description	Qty.
1	771090	(006501-	) Fitting, Hyd, Str, Fm06/Om06, Long	1
2	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
3	1024260	(006501-	) Steer- Control, Hyd05, 06.1 2030	1
▽ 4	1021265	(006501-	) Column, Steering, 09.9l 0.86d 36tooth	1
▲ 5	388153	(006501-	) Contact Kit, W/ Brush [En]	1
6	1058784	(006501-	) Bracket Wldt, Steering, Tilt	1
7	70622	(006501-	) Boot, Bellows, 3.1l 4.4w 2.8h 1hole, Neo	1
8	70623	(006501-	) Retainer, Boot, Steering Column	1
9	72970	(006501-	) Rivet, Plstc, .250d X 0.90	4
10	1058996	(006501-	) Wheel, Steering, 14.0d 0.81b 36tooth	1
11	1024478	(006501-	) Button, Cntrl, Horn	1
12	56185	(006501-	) Nut, Hex, Jam, M20 X 1.5	1
13	1058807	(006501-	) Flange, Brg, Mount	1
14	70709	(006501-	) Bearing, Flng, 2hole, 0.50b	2
15	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	8
16	32483	(006501-	) Washer, Flat, 0.25, Sae	4
17	1058785	(006501-	) Pin, Locking, Steering, Tilt [S30]	1
18	47585	(006501-	) Bearing, Flng, 2hole, 0.50b [Nyl]	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	4
20	70717	(006501-	) Ring, Retaining, Ext, 0.50d, Hd	1
21	22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
22	32486	(006501-	) Washer Flat, 0.50, Sae	1
23	04706	(006501-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
24	75968	(006501-	) Insulation, Acstc, Rnd, 0.8, 02.5d 0.5h	1
25	06961	(006501-	) Screw, Hex, M10 X 1.50 X 20, 8.8	4

Fig. 13 - Engine and Mount Group, Gas

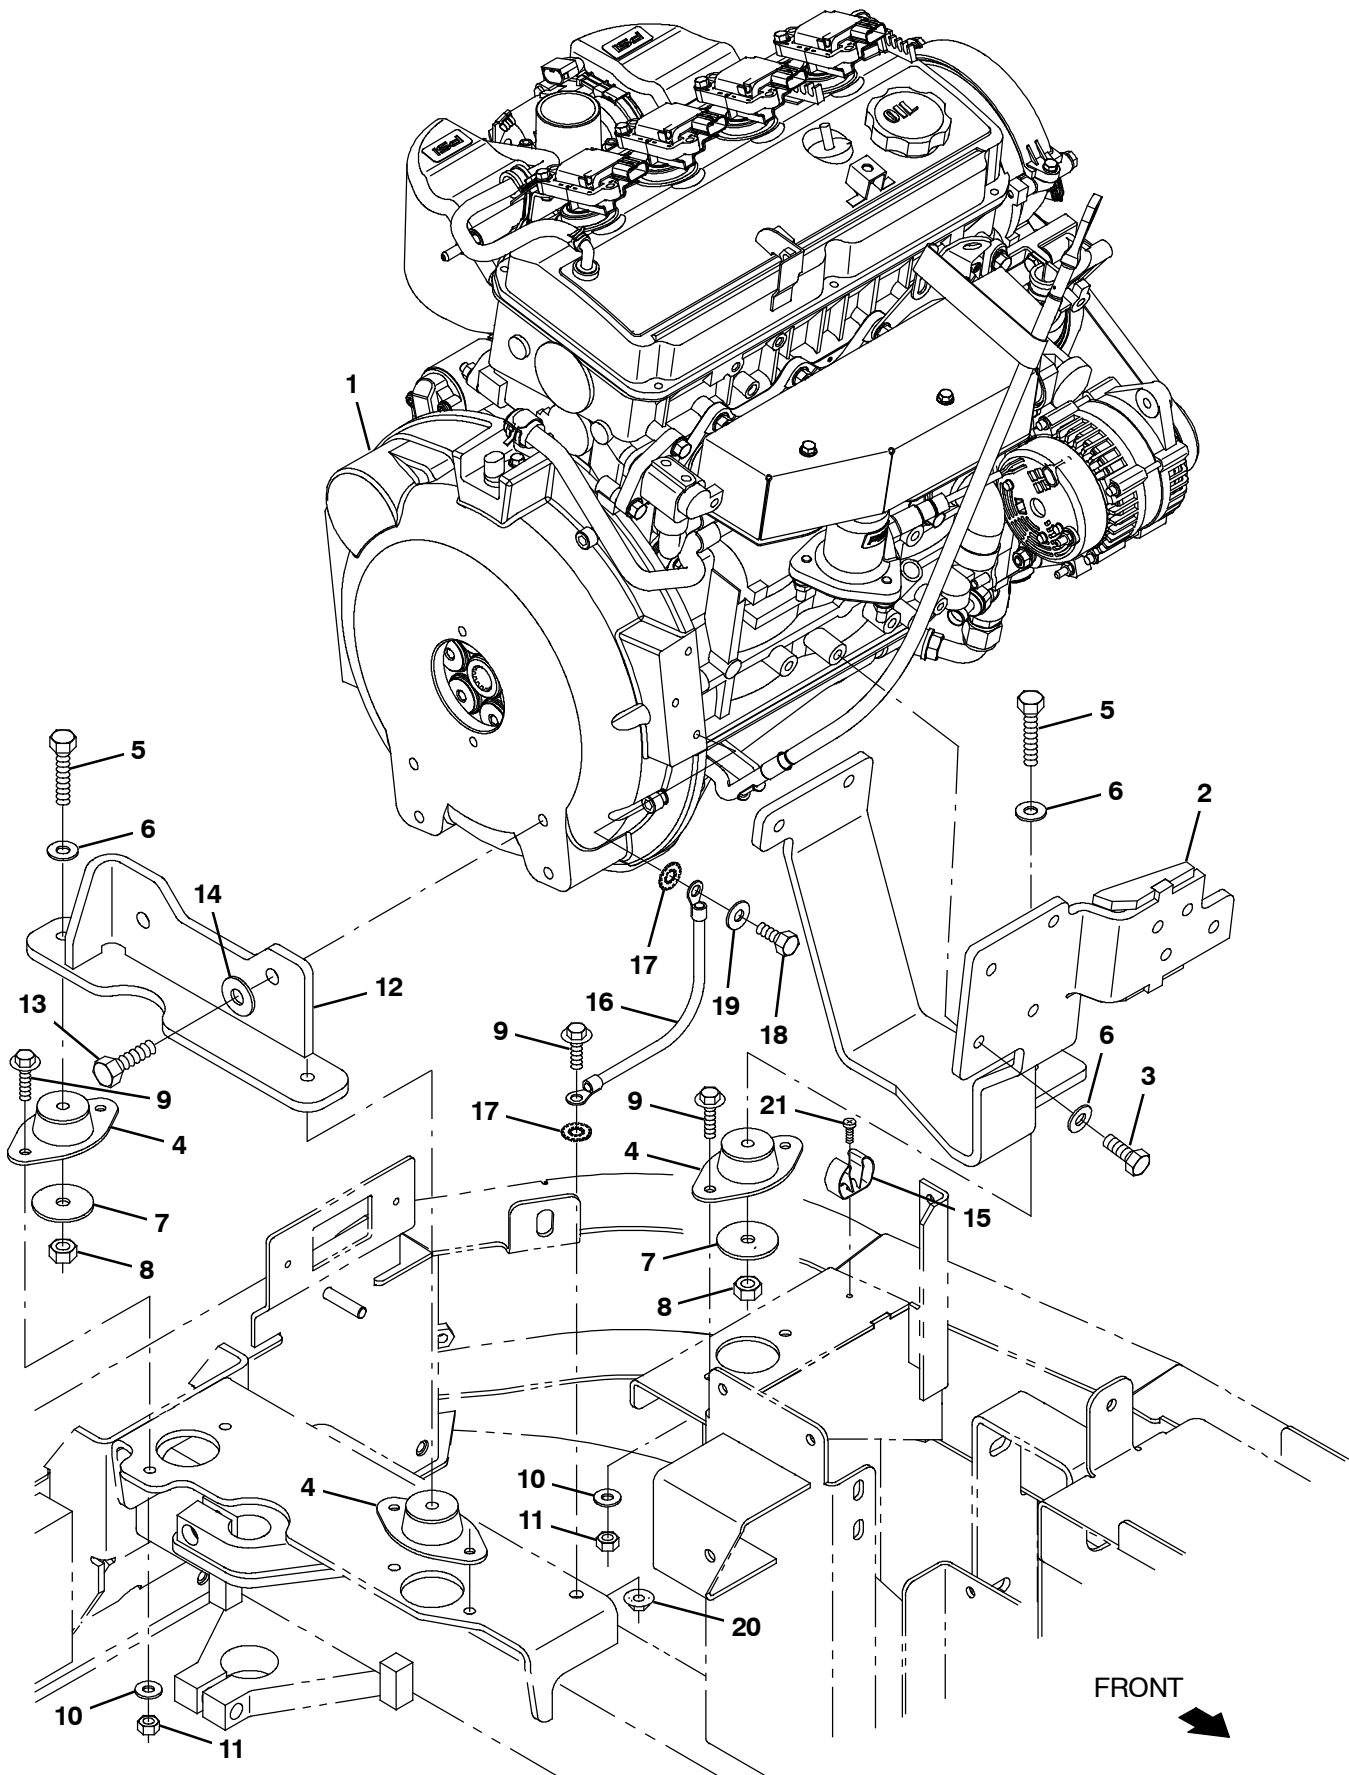


Fig. 13 - Engine and Mount Group, Gas

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9014202	(006501-	Engine, Block, Long [Mits 12mm] (See Engine Breakdown)	1
▲		393982	(006501-	Element, Fltr, Oil, Spin- On	1
	2	1071606	(006501-	Bracket Wldt, Mtg, Eng, Front	1
	3	07299	(006501-	Screw, Hex, M10 X 1.25 X 25, 8.8	6
	4	1029018	(006501-	Isolator, Vib, Fling, 1.3h .4b 2/.34h	3
	5	06963	(006501-	Screw, Hex, M10 X 1.50 X 60, 8.8	3
	6	32492	(006501-	Washer, Flat, 0.38, Std	9
	7	58228	(006501-	Washer, Flat, 0.44b 2.00d .12, Stl, Pl	3
	8	41430	(006501-	Nut, Hex, Lock, M10 X 1.5, NI	3
	9	1037354	(006501-	Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	7
	10	32491	(006501-	Washer, Flat, 0.31, Std	6
	11	08709	(006501-	Nut, Hex, Lock, M8 X 1.25, NI	6
	12	1070999	(006501-	Bracket Wldt, Mtg, Eng, Rear [Mit 2013]	1
	13	41346	(006501-	Screw, Hex, M12 X 1.75 X 30, 8.8	2
	14	32486	(006501-	Washer Flat,0.50,Sae	2
	15	1014295	(006501-	Clip, Grip, Hose, 0.75- 1.12, Stl,Blk Vyl	1
	16	57773	(006501-	Cable, 06ga 13.0l Blk	1
	17	41142	(006501-	Washer, Lock, Int-ext, 0.38	2
	18	21196	(006501-	Screw, Hex, .38- 16 X 0.88, G5	1
	19	32485	(006501-	Washer, Flat, 0.38, Sae	1
	20	07791	(006501-	Nut, Hex, Fling, M8 X 1.25	1
	21	06933	(006501-	Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	1

Fig. 14 - Engine and Mount Group, Lpg

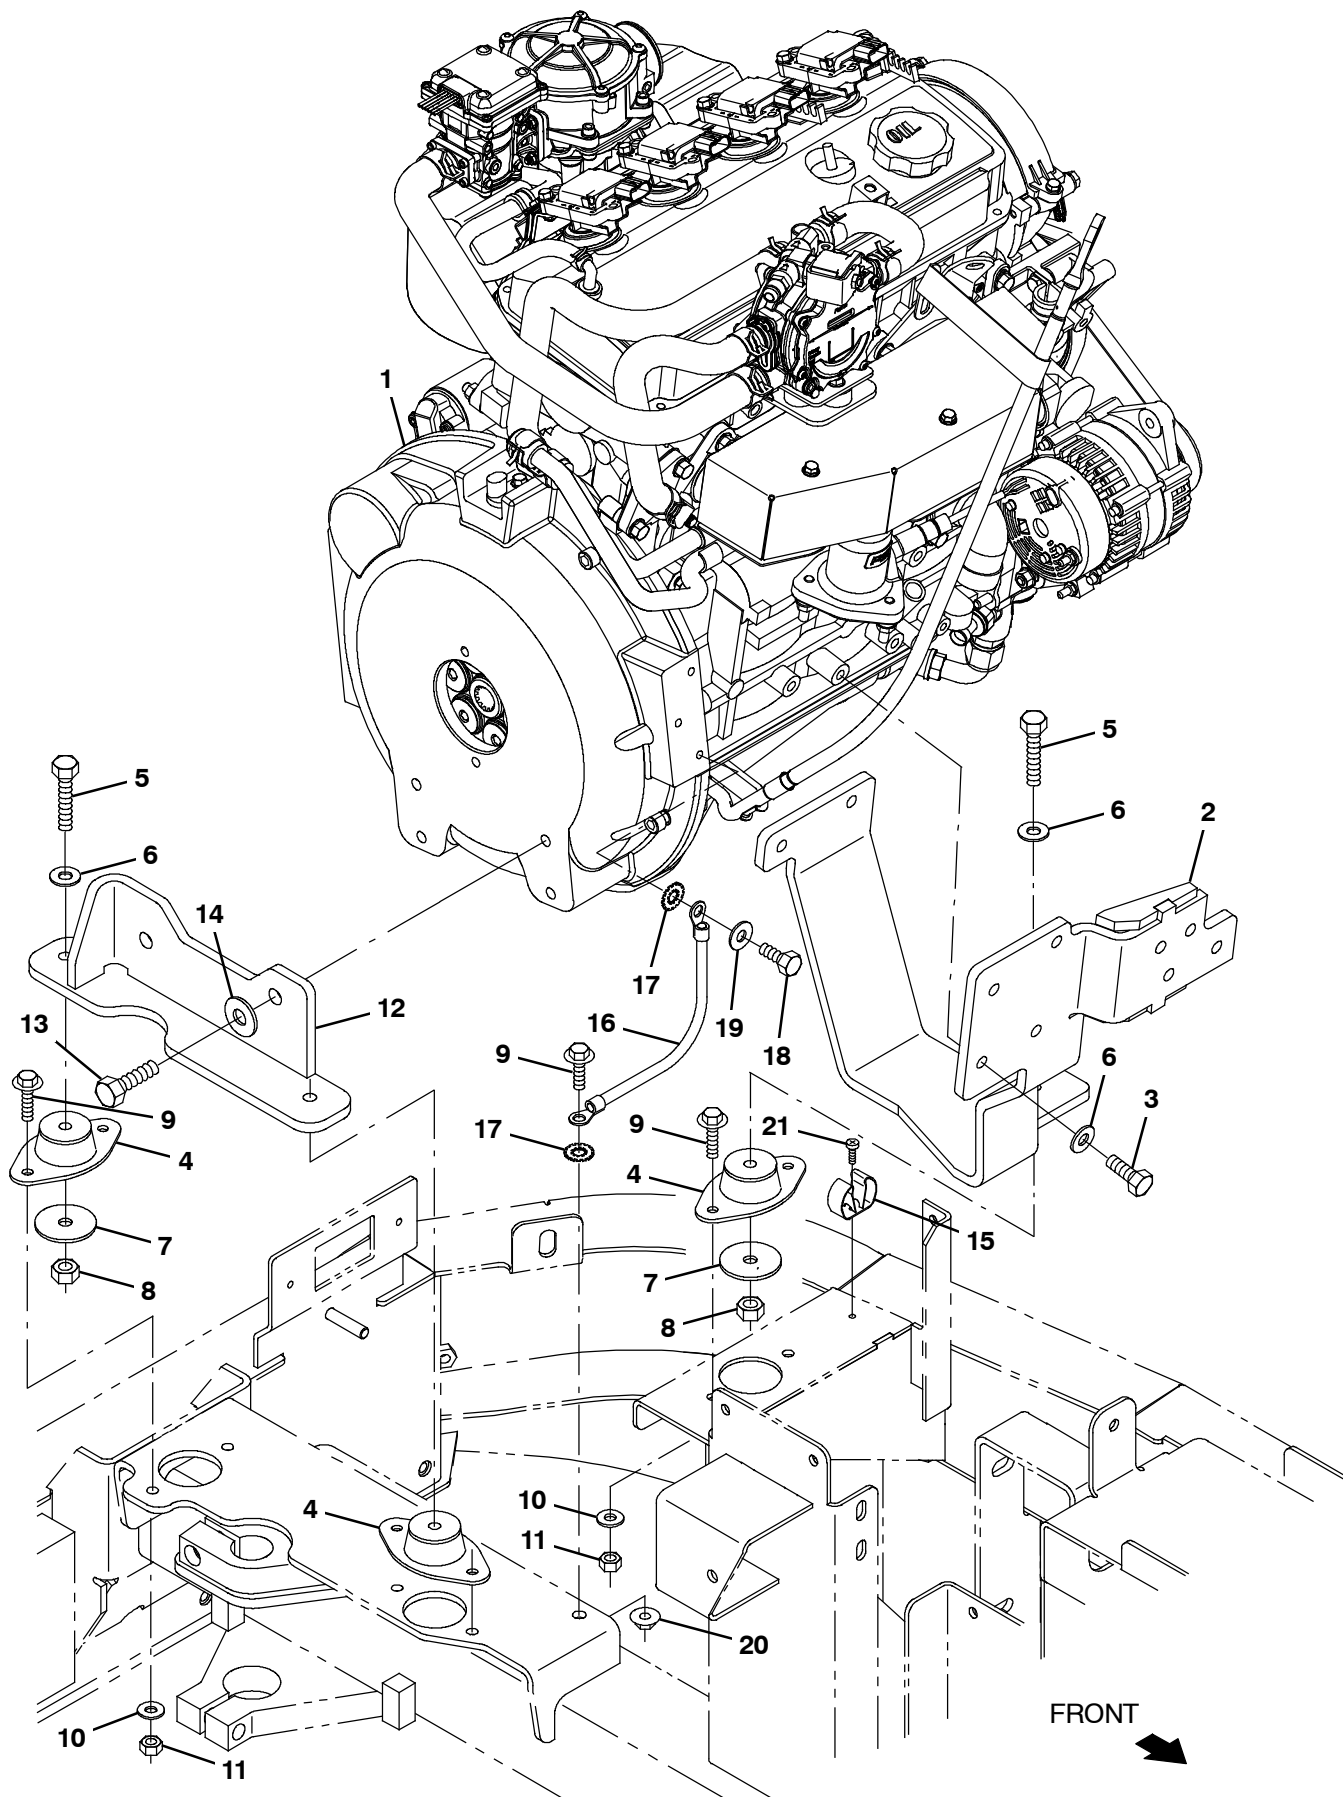


Fig. 14 - Engine and Mount Group, LPG

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9014202	(006501-	Engine, Block, Long [Mits 12mm] (See Engine Breakdown)	1
▲		393982	(006501-	Element, Fltr, Oil, Spin- On	1
	2	1071606	(006501-	Bracket Wldt, Mtg, Eng, Front	1
	3	07299	(006501-	Screw, Hex, M10 X 1.25 X 25, 8.8	6
	4	1029018	(006501-	Isolator, Vib, Fling, 1.3h .4b 2/.34h	3
	5	06963	(006501-	Screw, Hex, M10 X 1.50 X 60, 8.8	3
	6	32492	(006501-	Washer, Flat, 0.38, Std	9
	7	58228	(006501-	Washer, Flat, 0.44b 2.00d .12, Stl, Pl	3
	8	41430	(006501-	Nut, Hex, Lock, M10 X 1.5, NI	3
	9	1037354	(006501-	Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	7
	10	32491	(006501-	Washer, Flat, 0.31, Std	6
	11	08709	(006501-	Nut, Hex, Lock, M8 X 1.25, NI	6
	12	1070999	(006501-	Bracket Wldt, Mtg, Eng, Rear [Mit 2013]	1
	13	41346	(006501-	Screw, Hex, M12 X 1.75 X 30, 8.8	2
	14	32486	(006501-	Washer Flat,0.50,Sae	2
	15	1014295	(006501-	Clip, Grip, Hose, 0.75- 1.12, Stl,Blk Vyl	1
	16	57773	(006501-	Cable, 06ga 13.0l Blk	1
	17	41142	(006501-	Washer, Lock, Int-ext, 0.38	2
	18	21196	(006501-	Screw, Hex, .38- 16 X 0.88, G5	1
	19	32485	(006501-	Washer, Flat, 0.38, Sae	1
	20	07791	(006501-	Nut, Hex, Fling, M8 X 1.25	1
	21	06933	(006501-	Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	1

Fig. 15 - Engine EFI Group, Gas

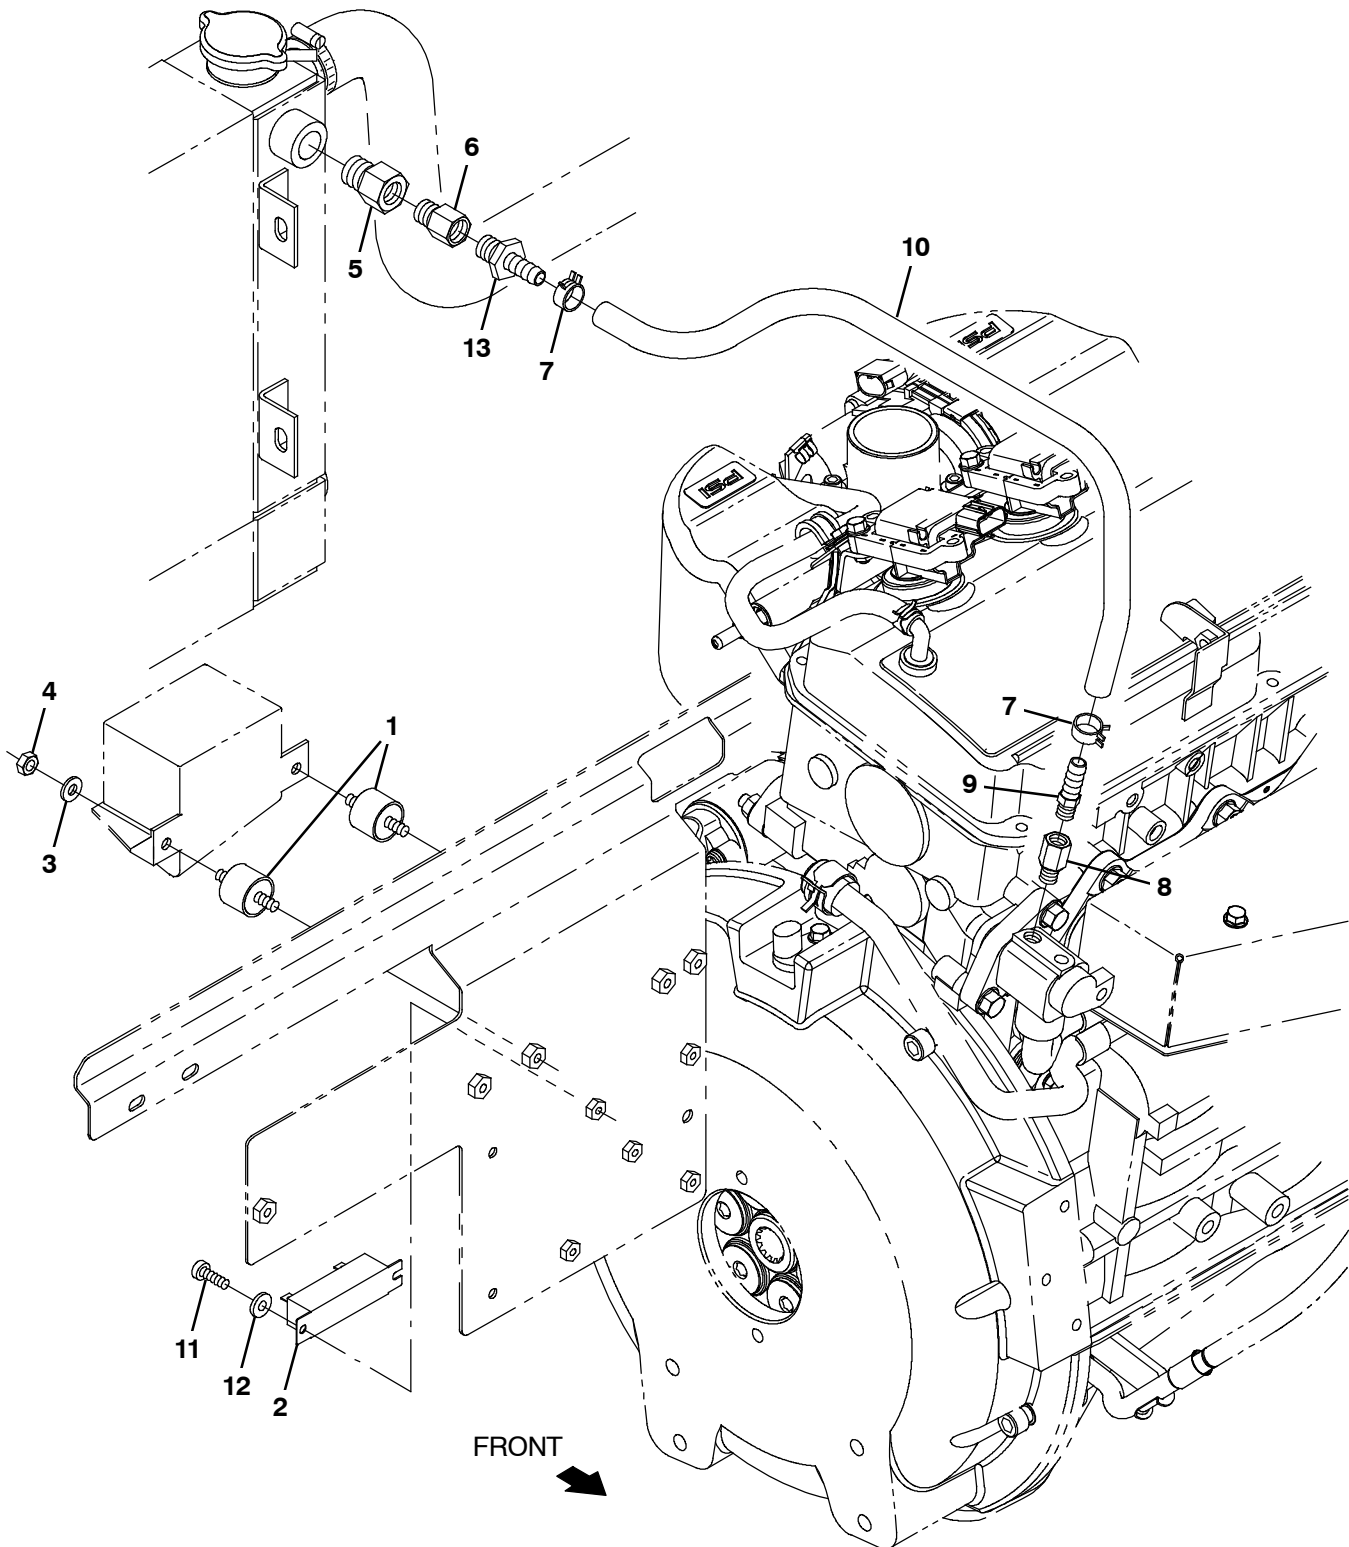


Fig. 15 - Engine EFI Group, Gas

Ref.	Part No.	Serial Number	Description	Qty.
1	1013588	(006501-	) Isolator, Box, Relay	2
2	71539	(006501-	) Resistor, 022.00ohm, 0040watt	1
3	32483	(006501-	) Washer, Flat, 0.25, Sae	2
4	19312	(006501-	) Nut, Hex, Std, .25- 20	2
5	1071440	(006501-	) Fitting, Brs, Str, Pf06/Pm04	1
6	1015547	(006501-	) Fitting, Adapter, Orifice, Pf06/Pm06	1
7	1072559	(006501-	) Clamp, Hose, Spring Stl, 0.58d X 0.31w	2
8	1071502	(006501-	) Fitting, Brs, Str, Pf02/Pm02 [Bspt]	1
9	1055552	(006501-	) Fitting, Brs, Str, Bm06/Pm02	1
10	1072408	(006501-	) Hose, Afmkt, Rbr, Heater, 0.38id, 03ft	1
11	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
12	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
13	36159	(006501-	) Fitting, Brs, Str, Bm06/Pm06	1

Fig. 16 - Engine EFI Group, LPG

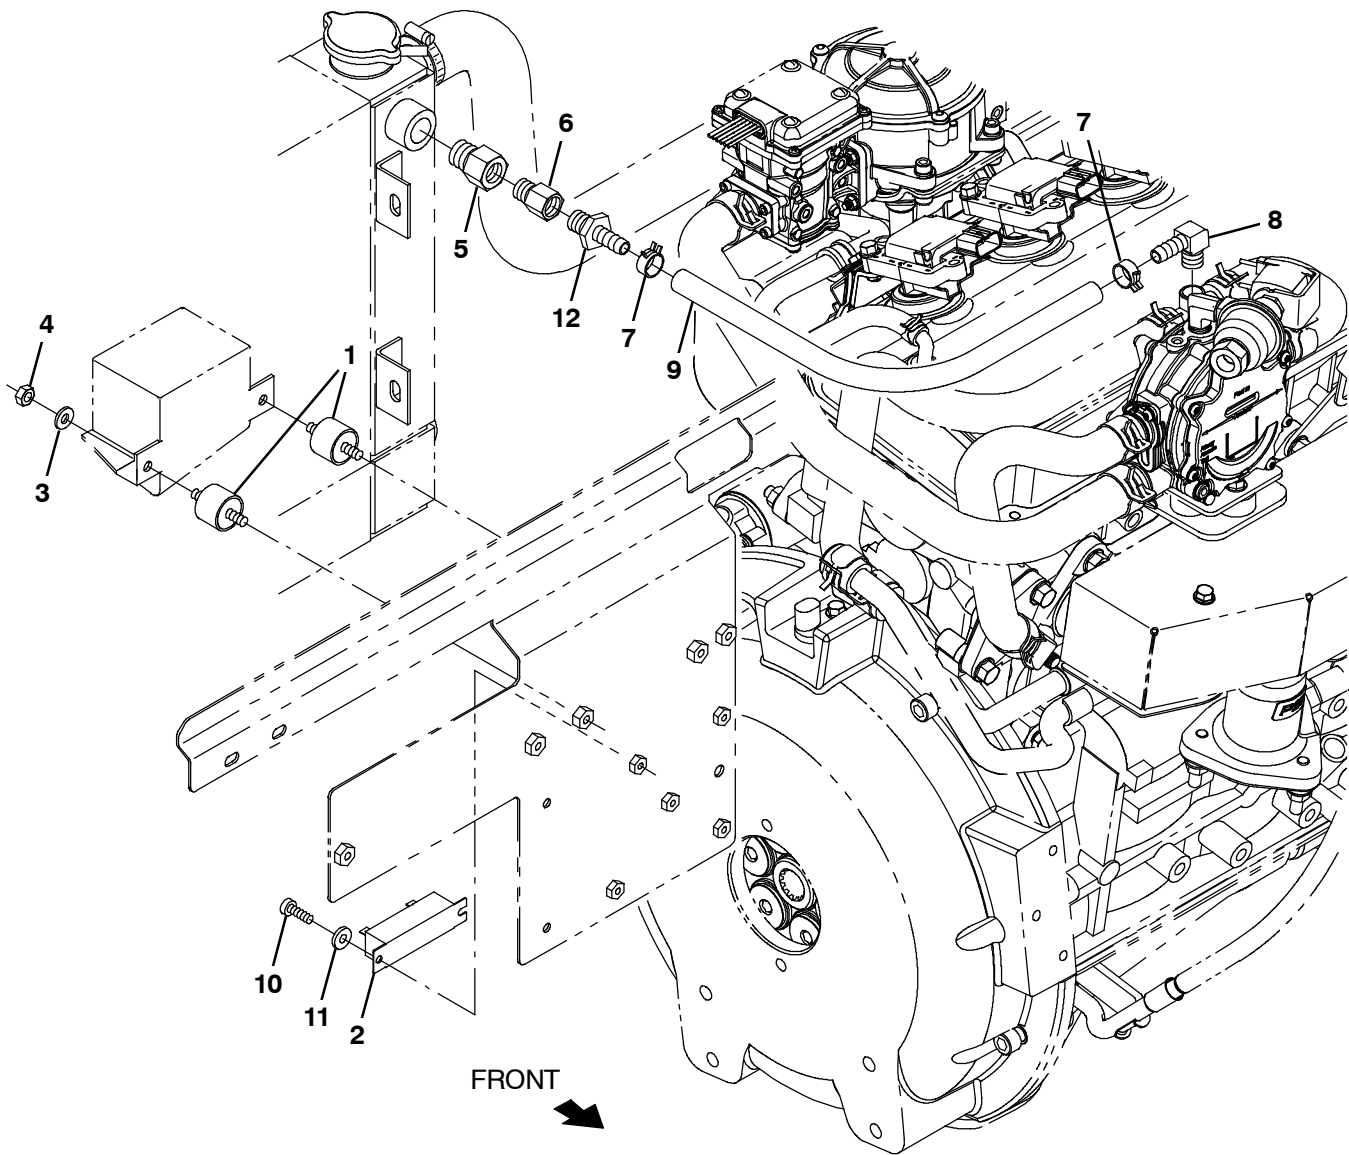


Fig. 16 - Engine EFI Group, LPG

Ref.	Part No.	Serial Number	Description	Qty.
1	1013588	(006501-	) Isolator, Box, Relay	2
2	71539	(006501-	) Resistor, 022.00ohm, 0040watt	1
3	32483	(006501-	) Washer, Flat, 0.25, Sae	2
4	19312	(006501-	) Nut, Hex, Std, .25- 20	2
5	1071440	(006501-	) Fitting, Brs, Str, Pf06/Pm04	1
6	1015547	(006501-	) Fitting, Adapter, Orifice, Pf06/Pm06	1
7	1072559	(006501-	) Clamp, Hose, Spring Stl, 0.58d X 0.31w	2
8	1015815	(006501-	) Fitting, Brs, E90, Bm06/Pm04	1
9	1072408	(006501-	) Hose, Afmkt, Rbr, Heater, 0.38id, 03ft	1
10	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
11	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
12	36159	(006501-	) Fitting, Brs, Str, Bm06/Pm06	1

Fig. 17 - Engine Air Cleaner Group, Gas

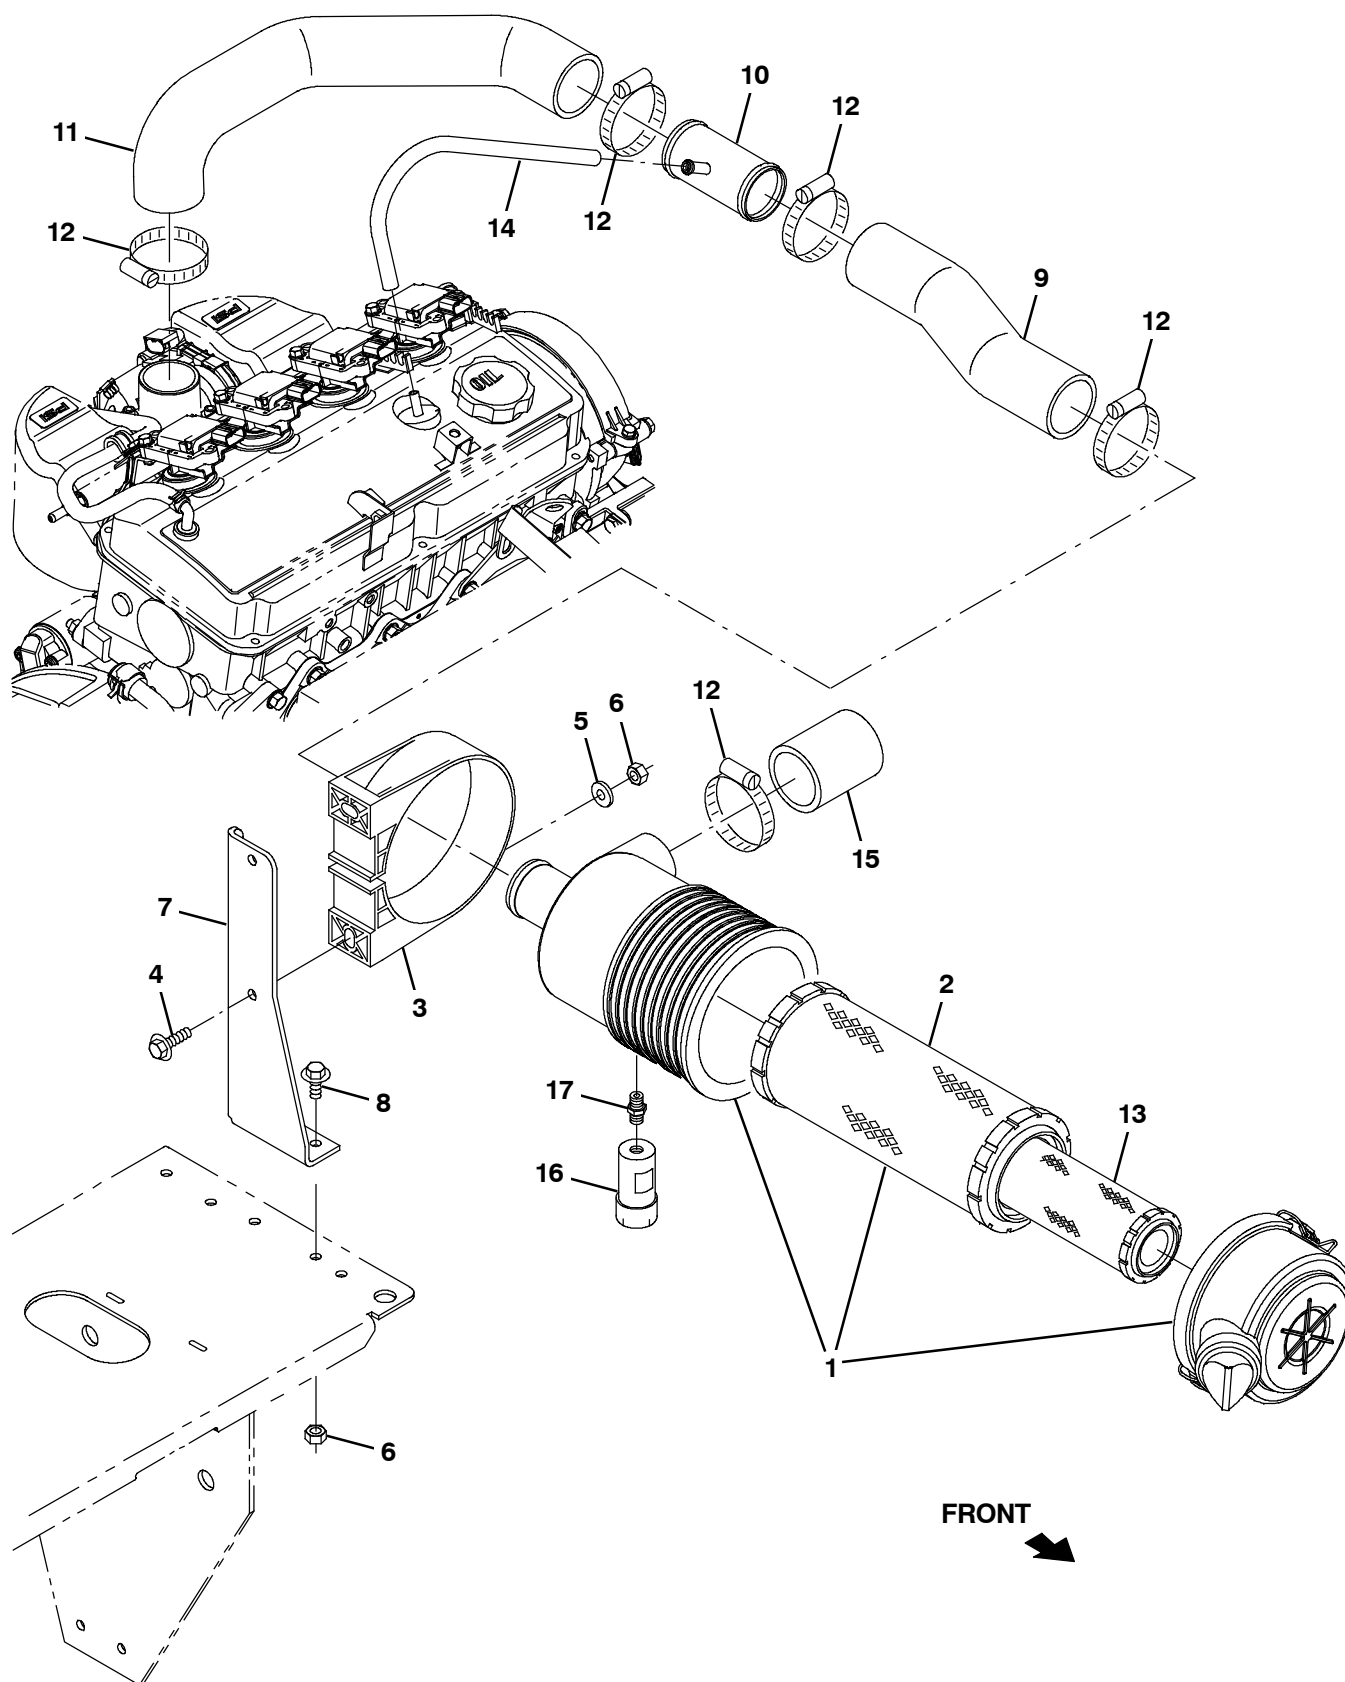


Fig. 17 - Engine Air Cleaner Group, Gas

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	1032119	(006501-	) Filter, Air, 2.0 Inlet, Str	1
▲	2	369746	(006501-	) Element, Fltr, Air [Dn]	1
	3	369747	(006501-	) Clamp, Mtg, Fltr, Air	1
	4	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	5	32491	(006501-	) Washer, Flat, 0.31, Std	2
	6	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
	7	1057890	(006501-	) Bracket, Mtg, Air- Clnr	1
	8	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
	9	1070920	(006501-	) Hose, Rbr, E90, 2.00id [Edpm Mit 2013]	1
	10	1070833	(006501-	) Tube Wldt, Tee [Mit 2013]	1
	11	1071599	(006501-	) Hose, Intake, Mold, Gas [Epdm Mit2013]	1
	12	14432	(006501-	) Clamp, Hose, Wormdrive, 1.81- 2.75d, .50w	4
	13	398279	(006501-	) Element, Fltr, Air, Safety	1
	14	381391	(006501-	) Hose, Drain, Overflow, Radiator[1pick=1ft]	1
	15	1038209	(006501-	) Hose, Rbr, 2.00id 2.50od 02.5l	1
	16	03026	(006501-	) Indicator, Service, Fltr, Air [20h20 Dn]	1
	17	51560- 5	(006501-	) Fitting, Brs, Str, Pm02, Service	1

Fig. 18 - Engine Air Cleaner Group, LPG

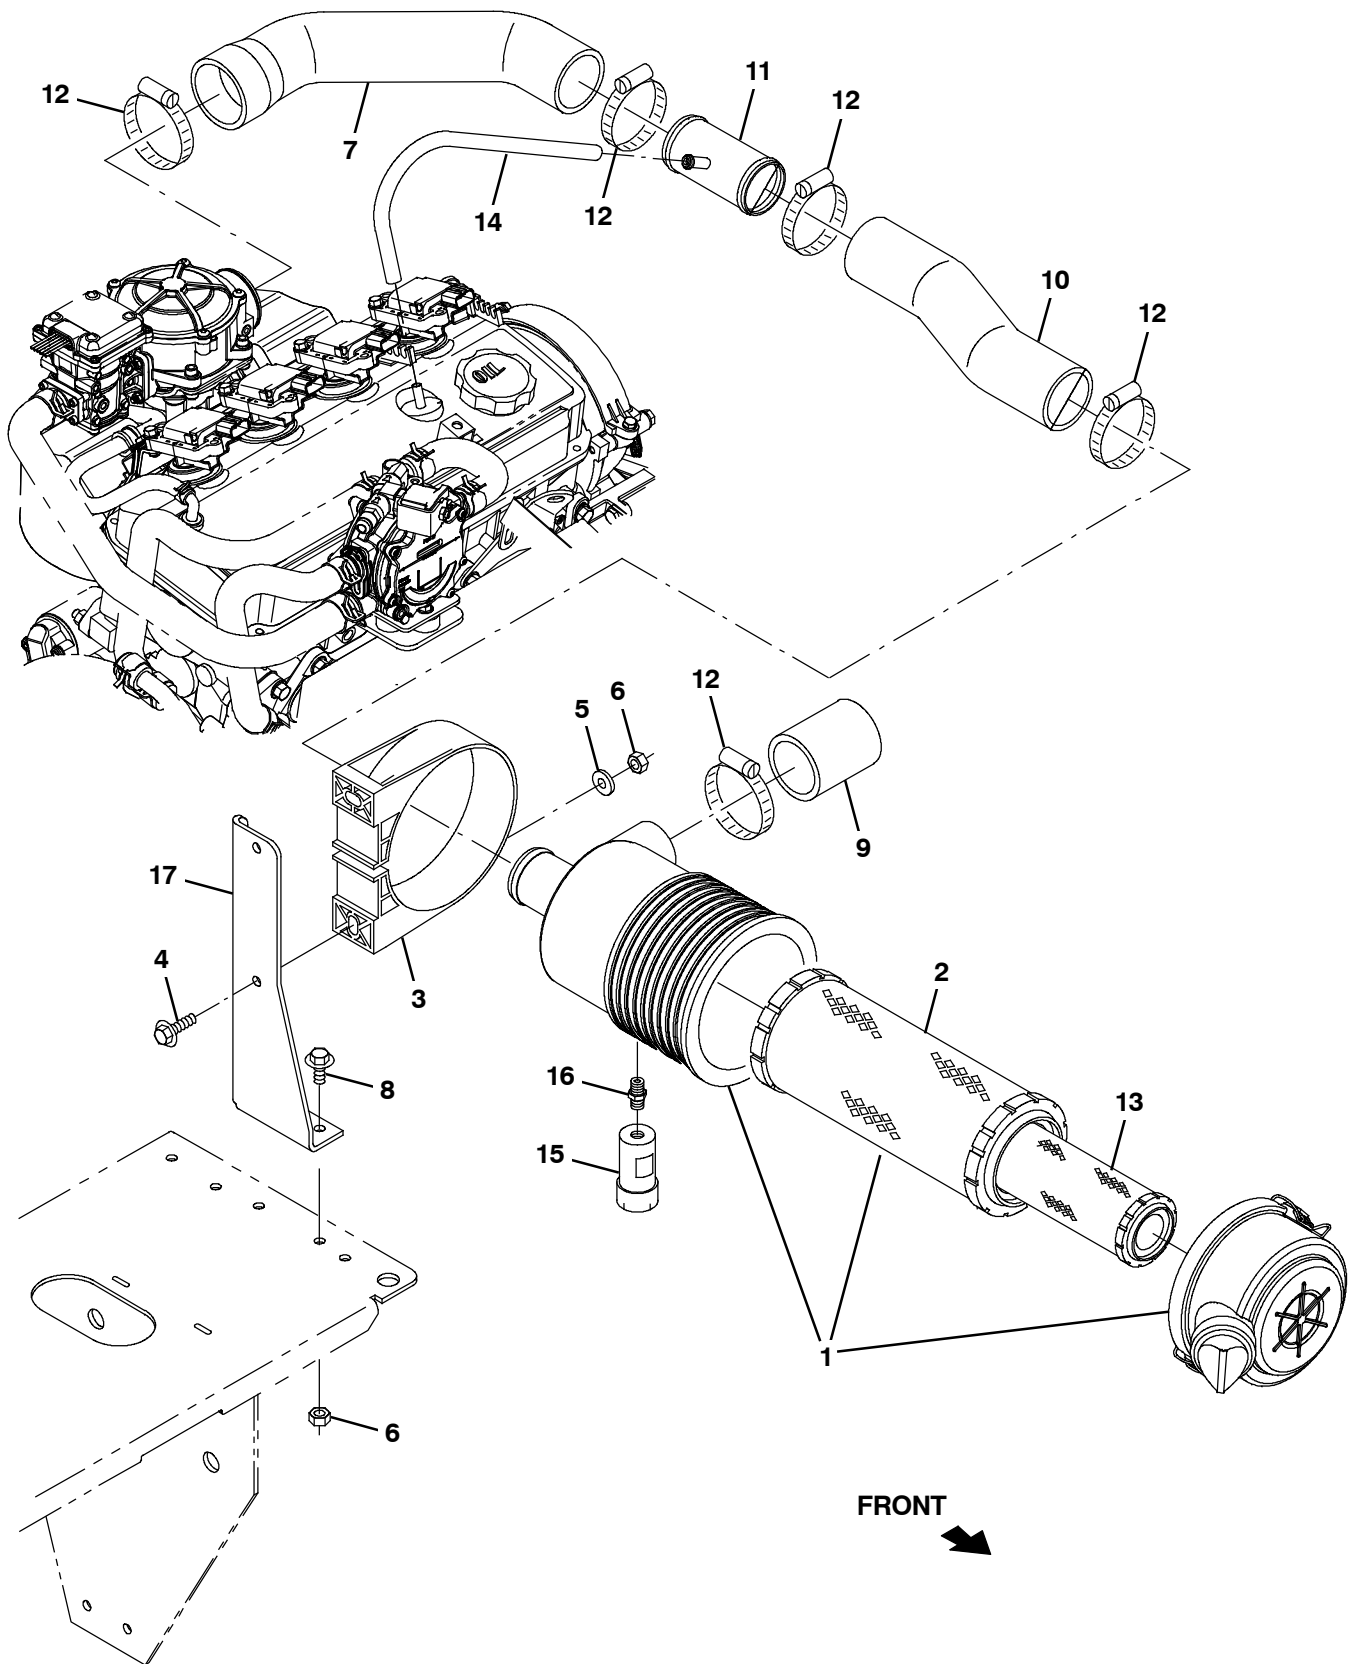


Fig. 18 - Engine Air Cleaner Group, LPG

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	1032119	(006501-	) Filter, Air, 2.0 Inlet, Str	1
▲	2	369746	(006501-	) Element, Fltr, Air [Dn]	1
	3	369747	(006501-	) Clamp, Mtg, Fltr, Air	1
	4	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	5	32491	(006501-	) Washer, Flat, 0.31, Std	2
	6	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
	7	1070926	(006501-	) Hose, Intake, Mold [Epdm Mit2013]	1
	8	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
	9	1038209	(006501-	) Hose, Rbr, 2.00id 2.50od 02.5l	1
	10	1070920	(006501-	) Hose, Rbr, E90, 2.00id [Edpm Mit 2013]	1
	11	1070833	(006501-	) Tube Wldt, Tee [Mit 2013]	1
	12	14432	(006501-	) Clamp, Hose, Wormdrive, 1.81-2.75d, .50w	4
	13	398279	(006501-	) Element, Fltr, Air, Safety	1
	14	381391	(006501-	) Hose, Drain, Overflow, Radiator[1pick=1ft]	1
	15	03026	(006501-	) Indicator, Service, Fltr, Air [20h20 Dn]	1
	16	51560-5	(006501-	) Fitting, Brs, Str, Pm02, Service	1
	17	1057890	(006501-	) Bracket, Mtg, Air- Clnr	1

Fig. 19 - Engine Alternator Group

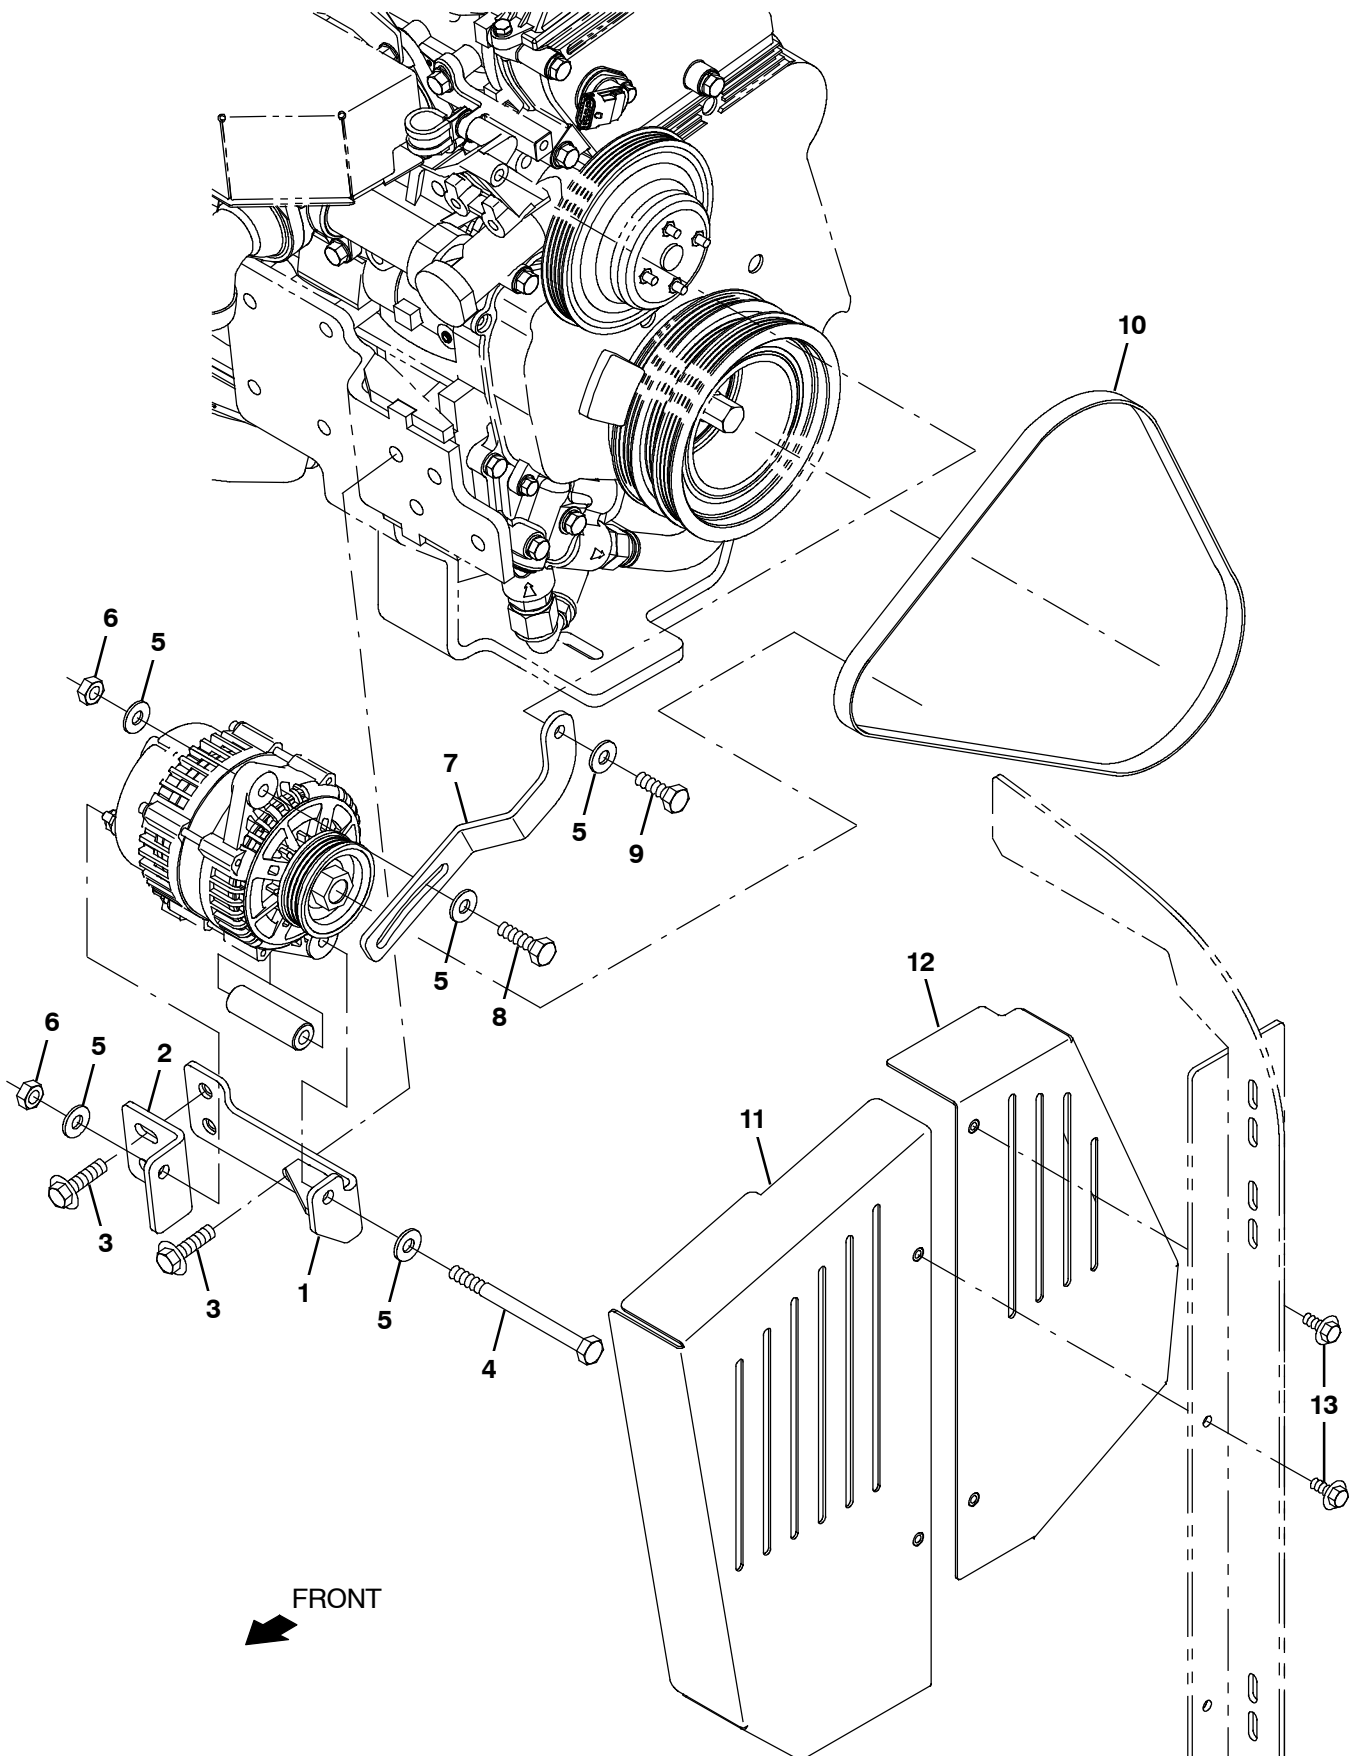


Fig. 19 - Engine Alternator Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1071138	(006501-	) Bracket Wldt, Alternator [S30 Mit2013]	1
2	1071136	(006501-	) Bracket, Mtg, Alternator [S30 Mit 2013]	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
4	49883	(006501-	) Screw, Hex, M8 X 1.25 X 120, 8.8, FI	1
5	32491	(006501-	) Washer, Flat, 0.31, Std	5
6	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
7	1071186	(006501-	) Arm, Alternator, Adj [Mit 2013]	1
8	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
9	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	1
10	1071680	(006501-	) Belt, Ribbed, Alternator, 40.25l	1
11	9010202	(006501-	) Guard, Belt, Lh, G/Lpg, W/ Label, Replmt	1
12	9010203	(006501-	) Guard, Belt, Rh, G/Lpg, W/ Label, Replmt	1
13	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	4

Fig. 20 - Engine Battery Group

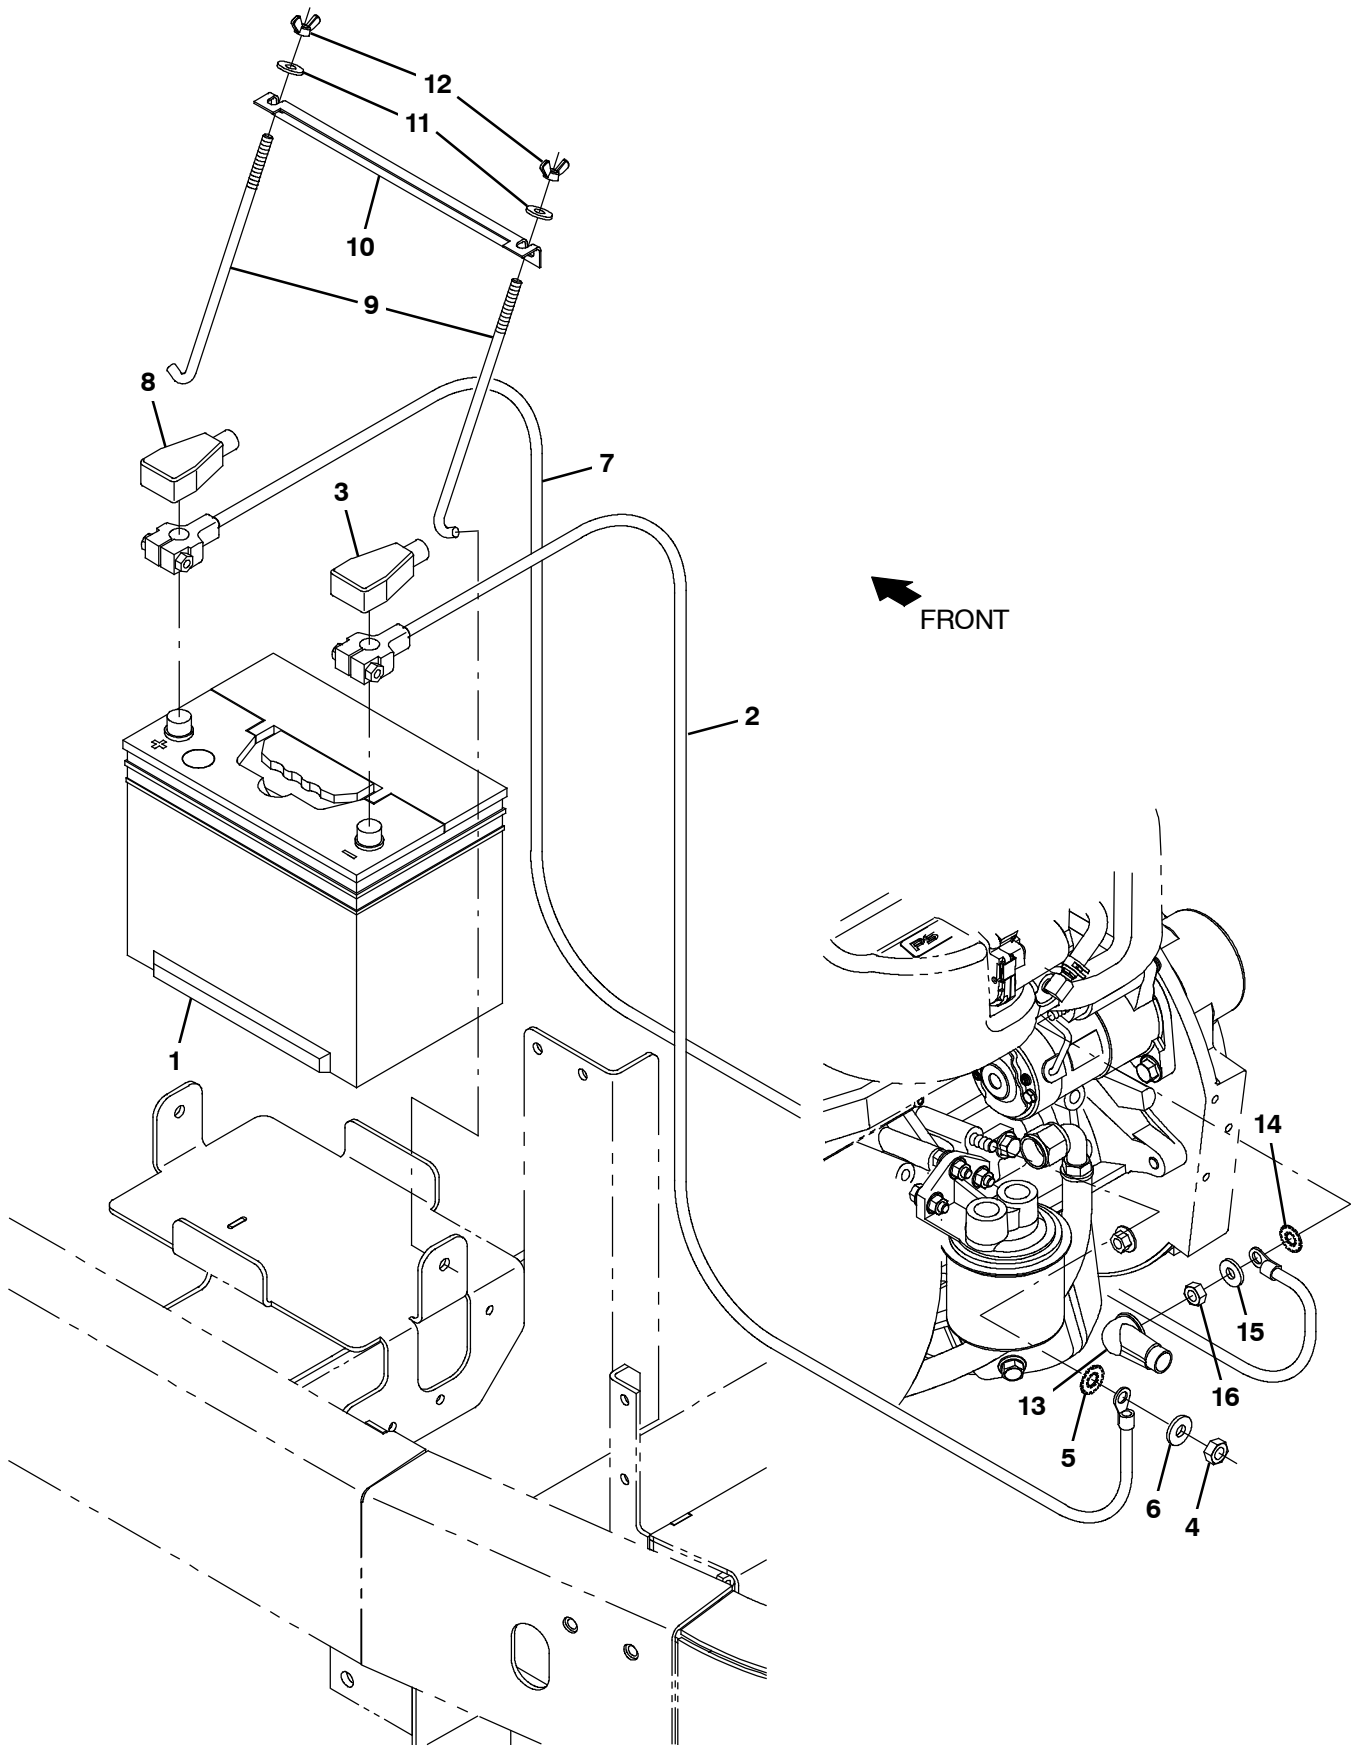


Fig. 20 - Engine Battery Group

Ref.	Part No.	Serial Number	Description	Qty.
1	10137	(006501-	) Battery, Wet, 12vdc 0475cca	1
2	1071854	(006501-	) Cable, Battery, 2ga, 70l, Black	1
3	68872	(006501-	) Boot, Terminal, Battery, 02- 01ga, Blk	1
4	66185	(006501-	) Nut, Hex, Std, M10 X 1.25	1
5	41142	(006501-	) Washer, Lock, Int- Ext, 0.38	1
6	32492	(006501-	) Washer, Flat, 0.38, Std	1
7	1071855	(006501-	) Cable, Battery, 2ga, 70l, Red	1
8	68873	(006501-	) Boot, Terminal, Battery, 02- 01ga, Red	1
9	13015	(006501-	) Bolt, Hold- Down, Battery 08.5l	2
10	72977	(006501-	) Bracket, Angle, Hold- Down, Battery	1
11	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	2
12	39272	(006501-	) Nut, Wing, .31- 18	2
13	1016314	(006501-	) Boot, 90deg .50id 1.00id 2.50l, Red	1
14	32984	(006501-	) Washer, Lock, Int, 0.31	1
15	39349	(006501-	) Washer, Flat, 0.31, Sae	1
16	41361	(006501-	) Nut, Hex, Std, M8 X 1.25, Brs	1

Fig. 21 - Engine Muffler Group

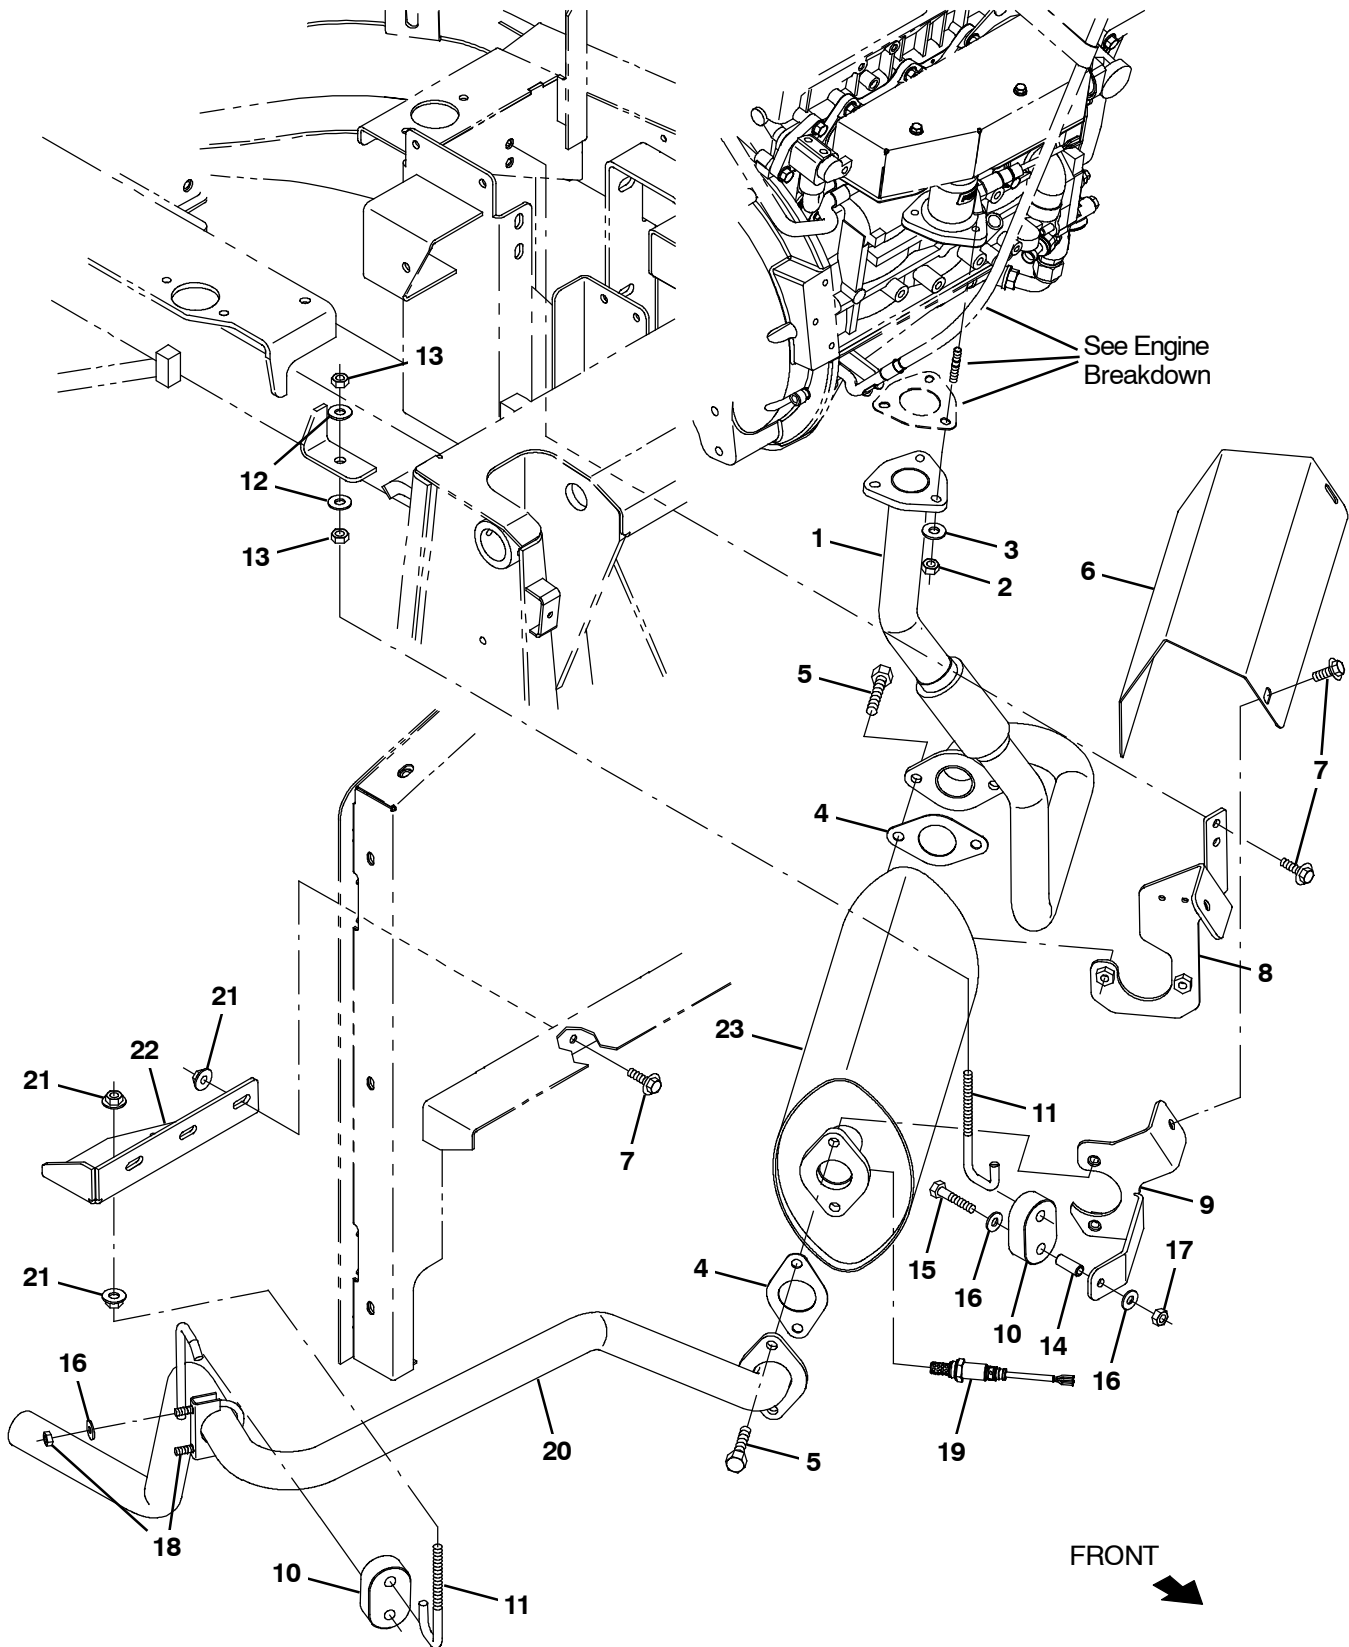


Fig. 21 - Engine Muffler Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1071229	(006501-	) Pipe, Exhaust, Flex [S30 Mit 2013]	1
2	08165	(006501-	) Nut, Hex, Stover, M8	3
3	39349	(006501-	) Washer, Flat, 0.31, Sae	3
4	1011216	(006501-	) Gasket, Exhaust, .07, 1.63id, 2/3.4bc	2
5	39284	(006501-	) Screw, Hex, M10 X 1.50 X 35, 8.8	4
6	1071242	(006501-	) Shield, Heat, G/Lpg [S30 Mit 2013]	1
7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
8	1071656	(006501-	) Bracket Wldt, Mtg, Muffler [Mit 2013]	1
9	1071243	(006501-	) Bracket, Mtg, Shield, Outlet	1
10	1013031	(006501-	) Isolator, Rbr	2
11	1013117	(006501-	) Rod, Hanger, Isolator	2
12	32492	(006501-	) Washer, Flat, 0.38, Std	2
13	25014	(006501-	) Nut, Hex, Std, .38- 16	2
14	222497	(006501-	) Sleeve, P/M, 0.32b 0.50d 1.3l [430ss]	1
15	39278	(006501-	) Screw, Hex, M8 X 1.25 X 50, 8.8	1
16	32491	(006501-	) Washer, Flat, 0.31, Std	4
17	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
18	24012	(006501-	) Clamp, Muffler, 1.62d	1
19	1028558	(006501-	) Sensor, Oxygen, Tailpipe	1
20	1071258	(006501-	) Pipe, Exhaust, G/Lpg [Mit 2013]	1
21	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	4
22	1060745	(006501-	) Bracket, Mtg, Fan Shrd	1
23	1071376	(006501-	) Muffler, Catalytic [Mit 2.0l 2013]	1

Fig. 22 - Engine Fuel Tank Group, Gas

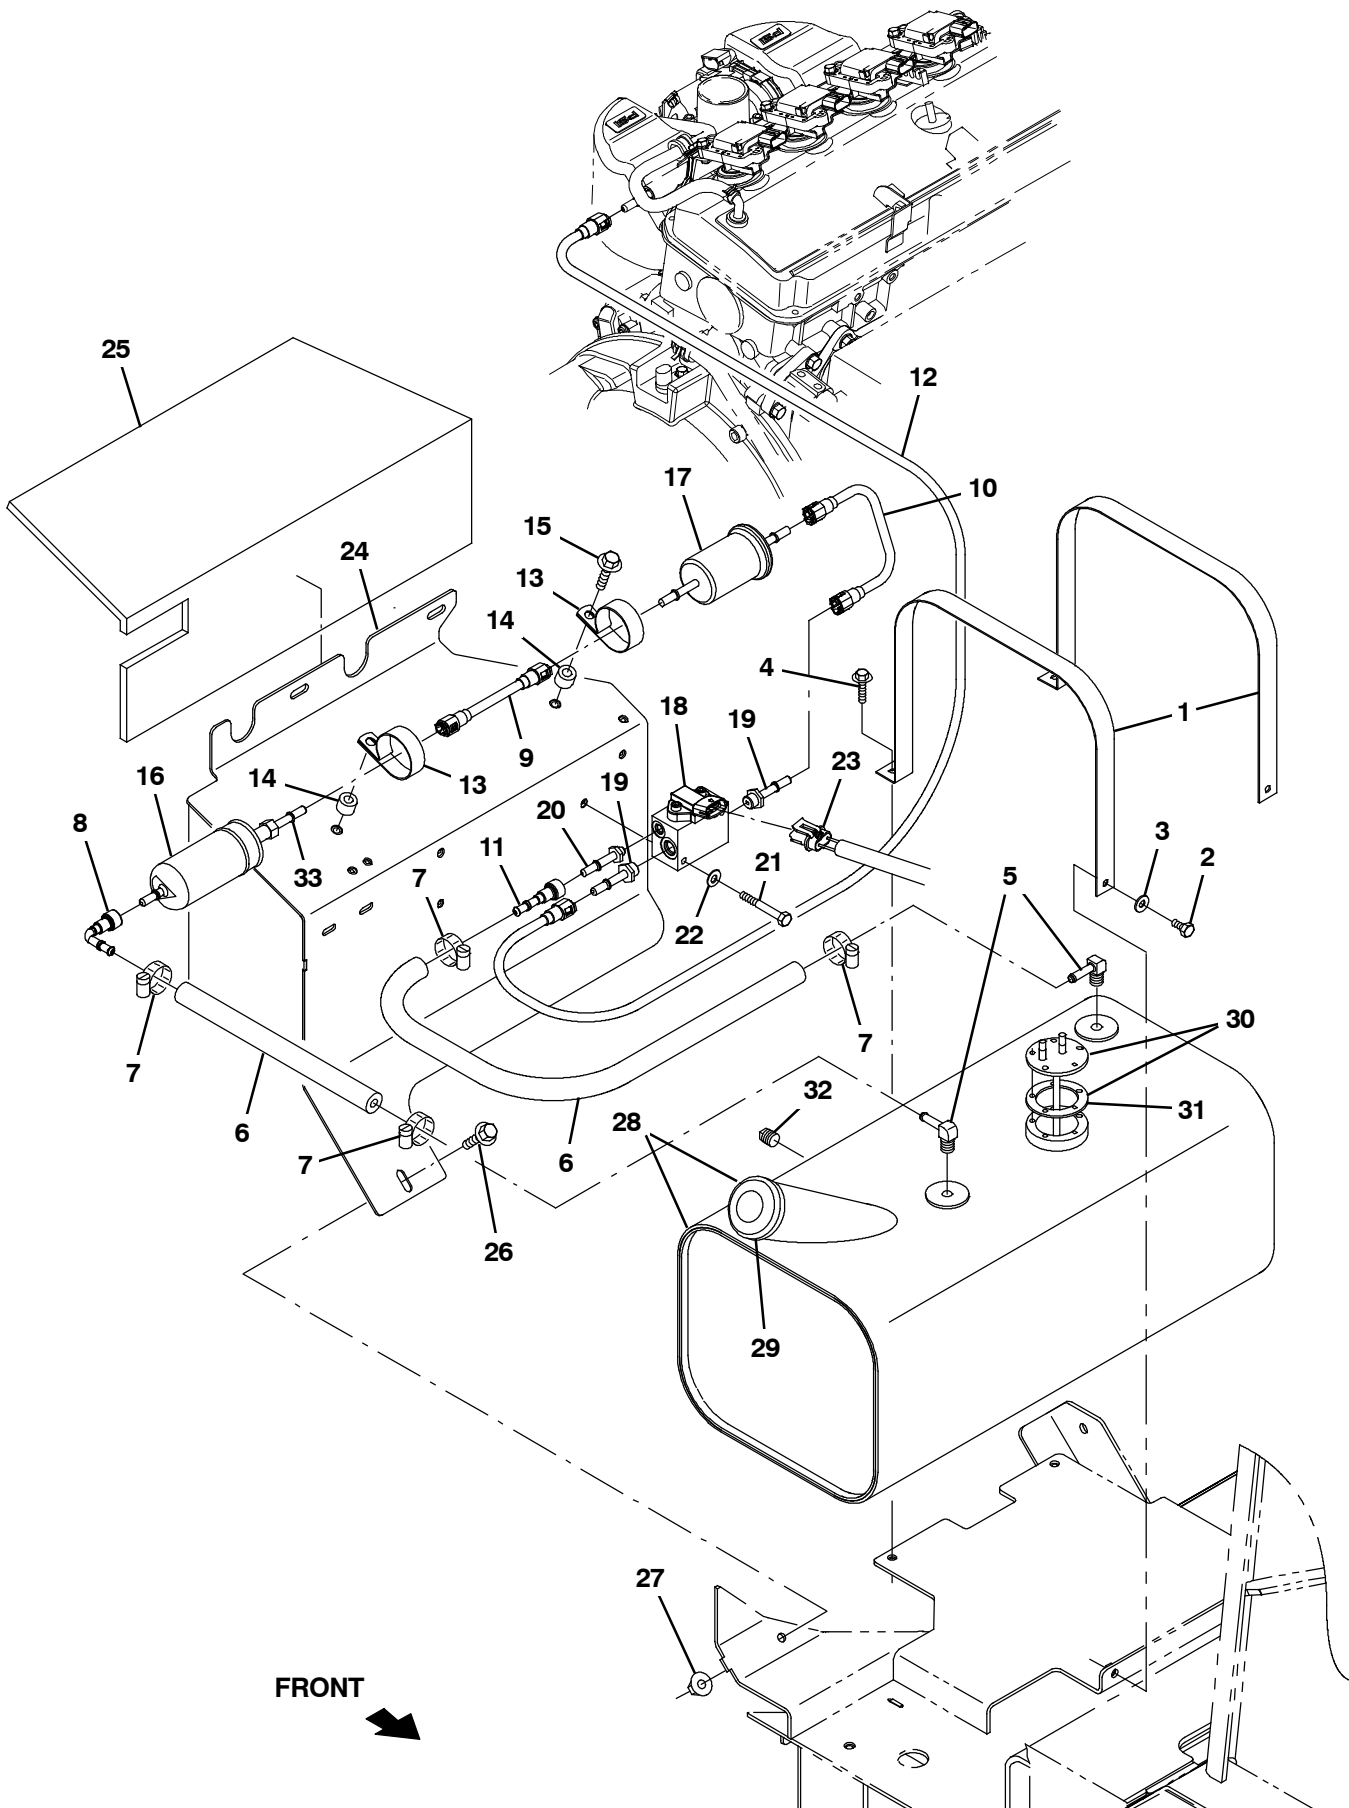


Fig. 22 - Engine Fuel Tank Group, Gas

Ref.	Part No.	Serial Number	Description	Qty.
1	1033630	(006501-	) Strap, Tank, Fuel	2
2	06942	(006501-	) Screw, Hex, M6 X 1.00 X 16, 8.8	2
3	32490	(006501-	) Washer, Flat, 0.25, Std	2
4	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
5	9000355	(006501-	) Fitting, Brs, E90, Em05/Pm04	2
6	1033746	(006501-	) Hose, Fuel, 0.31id [Evap Emission 07]	2
7	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	4
8	1019939	(006501-	) Connector, Fuel, E90, Qf	1
9	1012248	(006501-	) Fuelline, .31d Str/Str, Plstc	1
10	1013509	(006501-	) Fuelline, .31d Str/Str, Plstc [8200]	1
11	1013086	(006501-	) Connector, Fuel, Qf	1
12	1034633	(006501-	) Fuelline, .31d Str/Str, Plstc	1
13	1011895	(006501-	) Clamp, Cable, Stl, 2.00d X 0.75w, 1hole	2
14	383981	(006501-	) Sleeve, P/M, 0.37b 0.75d 0.6l, Stl	2
15	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
16	1011107	(006501-	) Pump, Fuel, Hi Press	1
17	372440	(006501-	) Filter, Fuel	1
18	1028924	(006501-	) Manifold, Gas, Relief, Valve	1
19	1029293	(006501-	) Fitting, Fuel, Str, 0.56- 18 [07 Eng]	2
20	1029295	(006501-	) Fitting, Fuel, Str, 0.38- 24 [07 Eng]	1
21	06548	(006501-	) Screw, Hex, M6 X 1.00 X 60, 8.8	2
22	32490	(006501-	) Washer, Flat, 0.25, Std	2
23	1032112	(006501-	) Harness, Pump, Fuel [Coyote]	1
24	1044992	(006501-	) Panel Wldt, Deflector, Heat	1
25	1035813	(006501-	) Insulation, Flame- Retardant, 0.5	1
26	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
27	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
▽	28	1033575	(006501-) Tank, Fuel	1
▲	29	1032812	(006501-) Cap, Fuel, Tank	1
▲▽	30	1046613	(006501-) Send- Unit, Fuel	1
▲▲	31	1033897	(006501-) Gasket, Sender, Fuel	1
▲	32	02351	(006501-) Fitting, Pipe, Plug, Pm04, Sq Head	1
	33	9019145	(006501-) Fitting, Fuel, Str, M10x1.0	1

Fig. 23 - Engine Fuel Tank Group, LPG

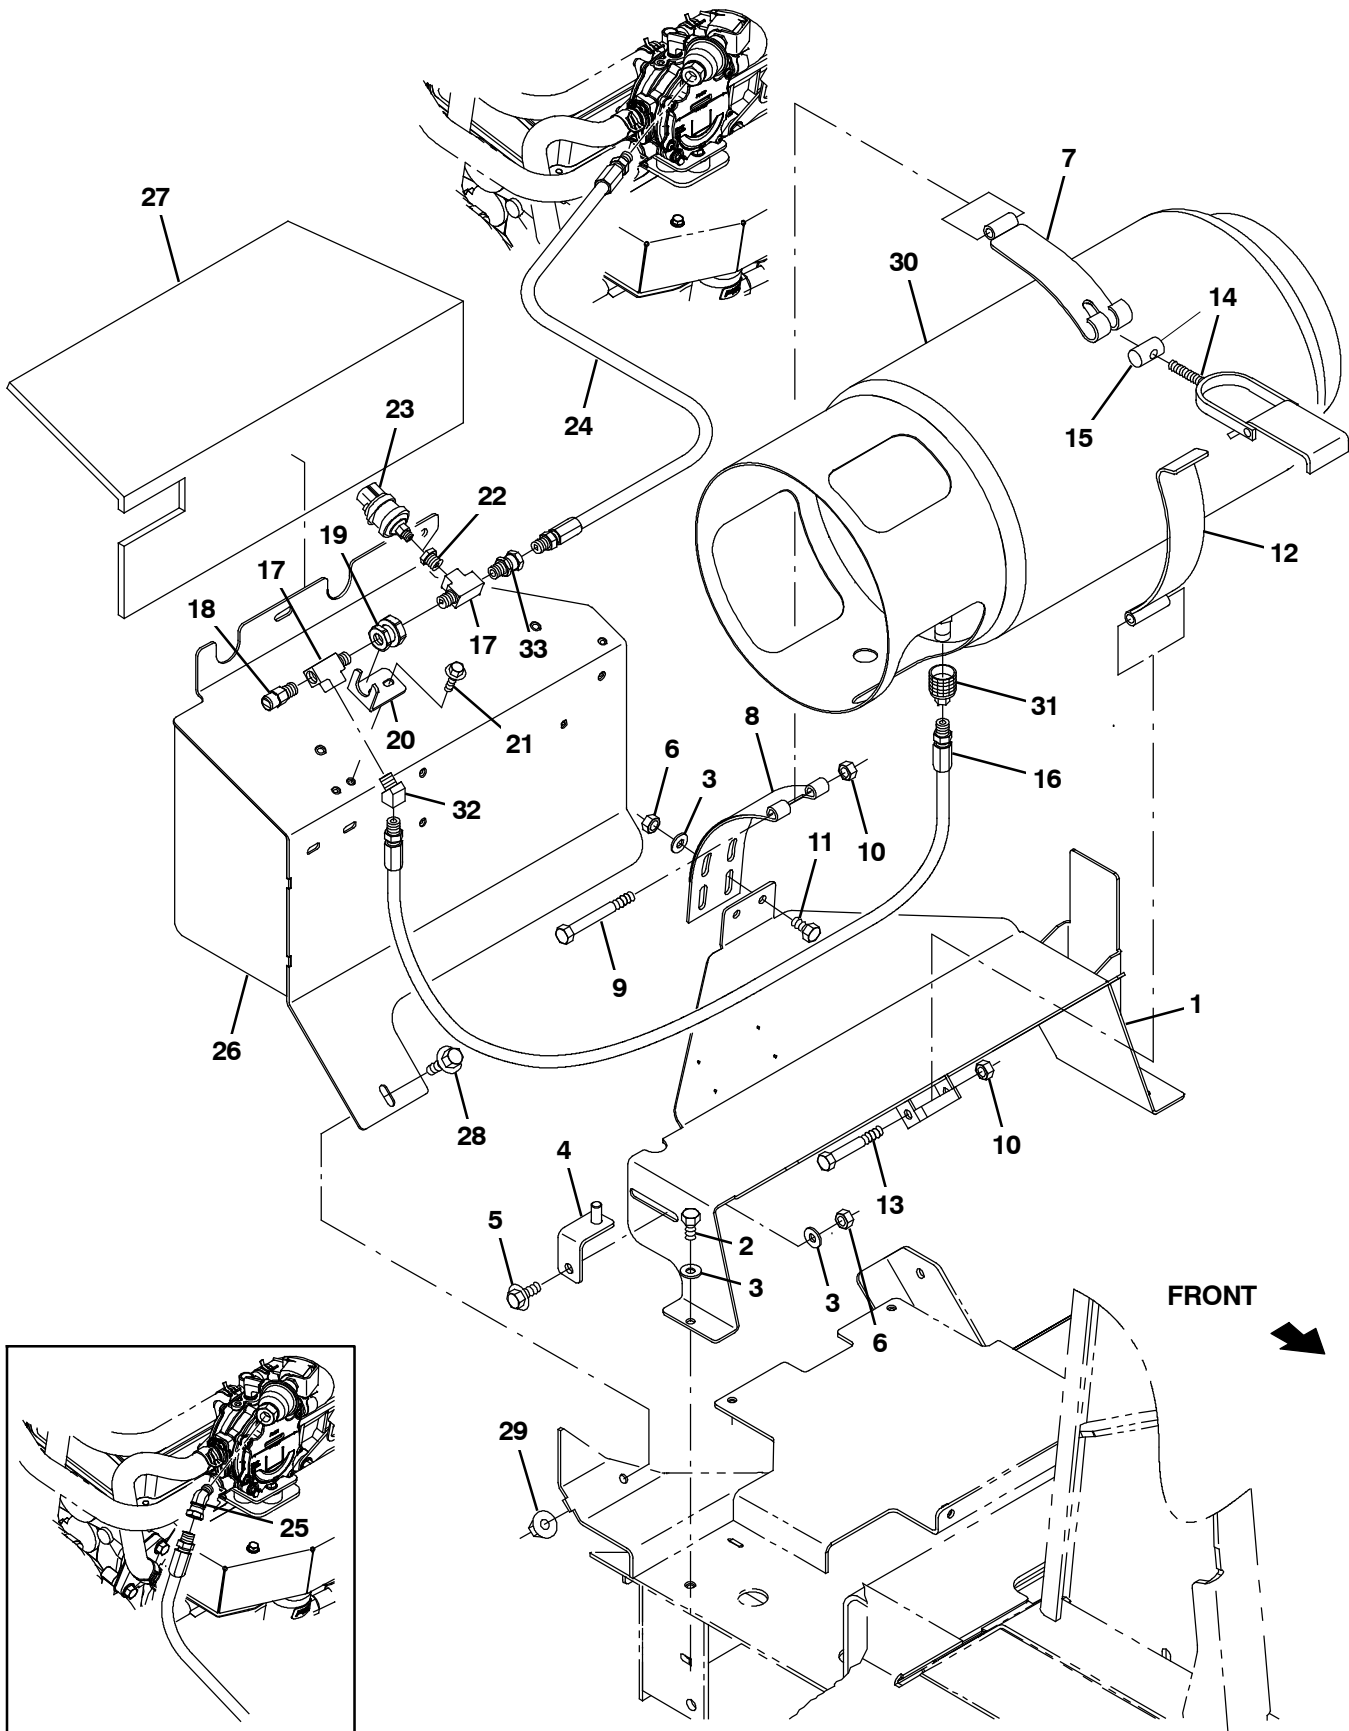


Fig. 23 - Engine Fuel Tank Group, LPG

Ref.	Part No.	Serial Number	Description	Qty.
1	1028129	(006501-	) Tray Wldt, Lpg	1
2	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	3
3	32491	(006501-	) Washer, Flat, 0.31, Std	6
4	1043813	(006501-	) Bracket Wldt, Tank, Lpg	1
5	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	1
6	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
7	1036270	(006501-	) Strap, Mtg, Tank, Lpg	1
8	58589	(006501-	) Strap, Mtg, Tank, Lpg	1
9	35710	(006501-	) Screw, Hex, .38- 16 X 3.75, G5	1
10	50902	(006501-	) Nut, Hex, Lock, .38- 16, NI	2
11	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	2
12	1037998	(006501-	) Retainer, Tank, Lpg	1
13	35707	(006501-	) Screw, Hex, .38- 16 X 3.00, G5	1
▽ 14	53400- 1	(006501-	) Latch Assy, Mtg, Tank, Lpg, W/Nut	1
▲ 15	53400- 4	(006501-	) Nut, Adj, Mtg, Tank, Lpg	1
16	22308- 3	(006501-	) Hose, Lpg, Med05, Pm04str/Sm04str, 035.0	1
17	56976A	(006501-	) Fitting, Hyd, Tee, Pf04/Pf04/Pm04, Run	2
18	24047	(006501-	) Valve, Lpg, Press Relief [Rego]	1
19	78122	(006501-	) Fitting, Brs, Str, Pf04/Pf04, Bh	1
20	1048974	(006501-	) Bracket, Angle, Mtg, Relief Valve	1
21	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
22	17414	(006501-	) Fitting, Hyd, Str, Pf02/Pm04	1
23	23156	(006501-	) Switch, Press, 0070psi Spst Nc 12vdc 08a	1
24	19760	(006501-	) Hose, Lpg, Med05, Pm04str/Sm04str, 055.0	1
25	392645	(006501- 007058	) Fitting, Pipe, E45, Spcl	1
26	1044992	(006501-	) Panel Wldt, Deflector, Heat	1
27	1035813	(006501-	) Insulation, Flame- Retardant, 0.5	1
28	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
29	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
30	24928- 1	(006501-	) Tank, Lpg, 33lb, W/ Gauge [Empty, Liq]	1
31	26496	(006501-	) Fitting, Brs, Qdc, Pf04, Lpg Fem	1
32	47720	(006501-	) Fitting, Hyd, E45, Pf04/Pm04	1
33	11442- 23	(007059-	) Fitting, Pipe, Str, Pm04/Sf04	1

Fig. 24 - Engine Radiator Mount and Fan Group

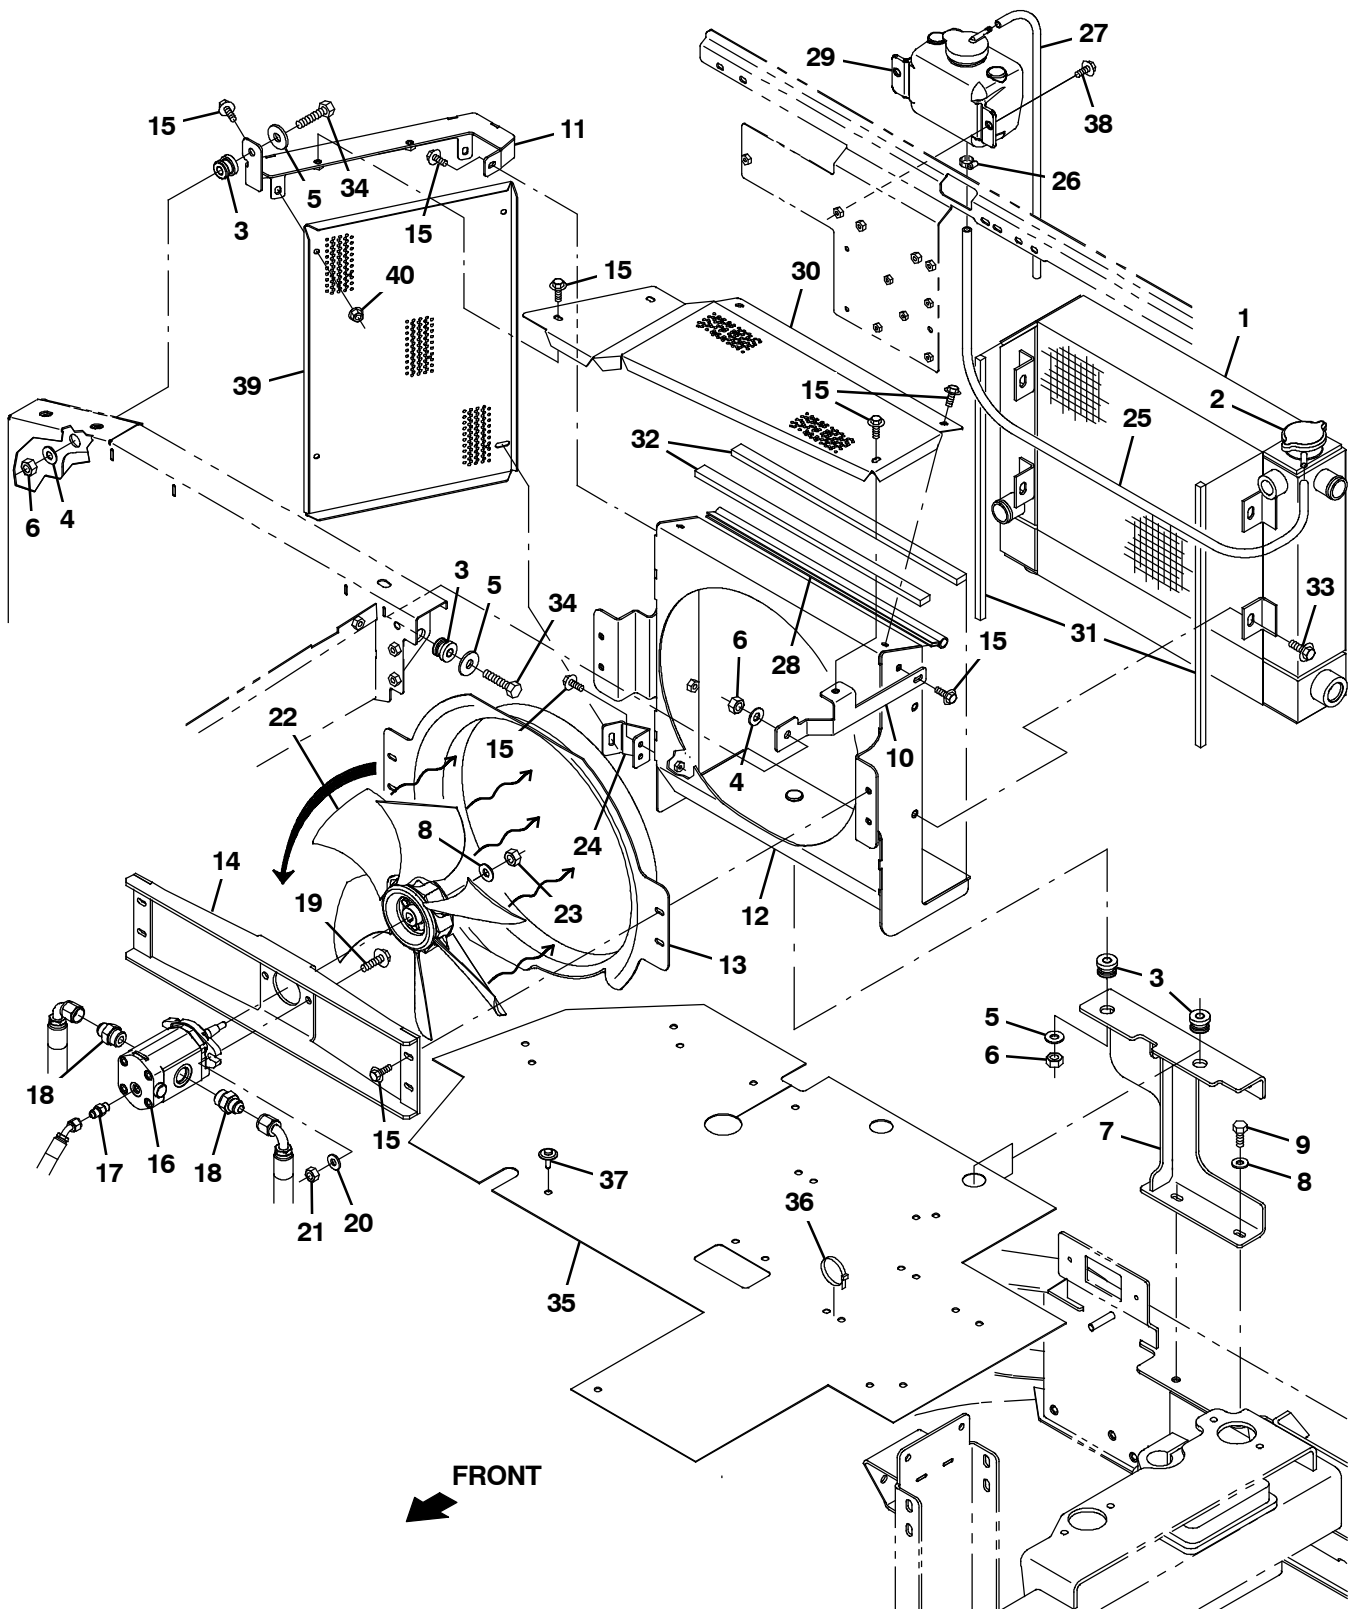


Fig. 24 - Engine Radiator Mount and Fan Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1051863	(006501-	) Radiator, W/ Hyd Cooler [Side X Side]	1
2	1045764	(006501-	) Cap, Radiator, 14psi [Stant Ao- 2516]	1
3	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
4	32492	(006501-	) Washer, Flat, 0.38, Std	2
5	1014563	(006501-	) Washer, Flat, 0.40b 1.12d .12, Ss	3
6	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	4
7	1027589	(006501-	) Bracket Wldt, Mtg, Radiator	1
8	32491	(006501-	) Washer, Flat, 0.31, Std	3
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	2
10	1058670	(006501-	) Bracket, Sppt, Radiator	1
11	1058404	(006501-	) Bracket Wldt, Sppt, Radiator, Rh	1
12	1055564	(006501-	) Bracket Wldt, Radiator	1
13	1054428	(006501-	) Shroud, Fan	1
14	1060343	(006501-	) Bracket Wldt, Mtg, Motor	1
15	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	15
16	1031026	(006501-	) Motor, Hyd, Gear, Ext 0.67 Rh 2500	1
17	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04	1
18	762456	(006501-	) Fitting, Hyd, Str, Fm08/Om10	2
19	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
20	39349	(006501-	) Washer, Flat, 0.31, Sae	2
21	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
22	1031566	(006501-	) Fan, Cooling, 14.1d, 6 Blade, 0.5b Taper	1
23	32960	(006501-	) Nut, Hex, Lock, .31- 24, NI	1
24	1055002	(006501-	) Bracket, Mtg, Condenser	1
25	1014843	(006501-	) Hose, Afmkt, Coolant Recvy, 05ft	1
26	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	1
27	87738	(006501-	) Hose, Fuel, 0.18id, 29.0l	1
28	1031623	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft	1
29	1054382	(006501-	) Tank, Coolant, 03.6w 04.1hi 05.5l, 1liter	1
30	1059052	(006501-	) Guard, Fan	1
31	1015205	(006501-	) Seal, Afmkt, Ure, Adh, 0.38, 0.38w 02ft	2
32	1015314	(006501-	) Seal, Afmkt, Bulb, Adh 0.38, 0.75w 02ft	2
33	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
34	06962	(006501-	) Screw, Hex, M10 X 1.50 X 45, 8.8	1
35	1061498	(006501-	) Skirt, Neo, .06, 30.00w 41.00l [3 Wheel]	1
36	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	8
37	72970	(006501-	) Rivet, Plstc, .250d X 0.90	3
38	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	2
39	1060009	(006501-	) Guard, Fan	1
40	07790	(006501-	) Nut, Hex, FIng, M6 X 1.00	3

Fig. 25 - Engine Radiator Hoses Group, Gas/LPG

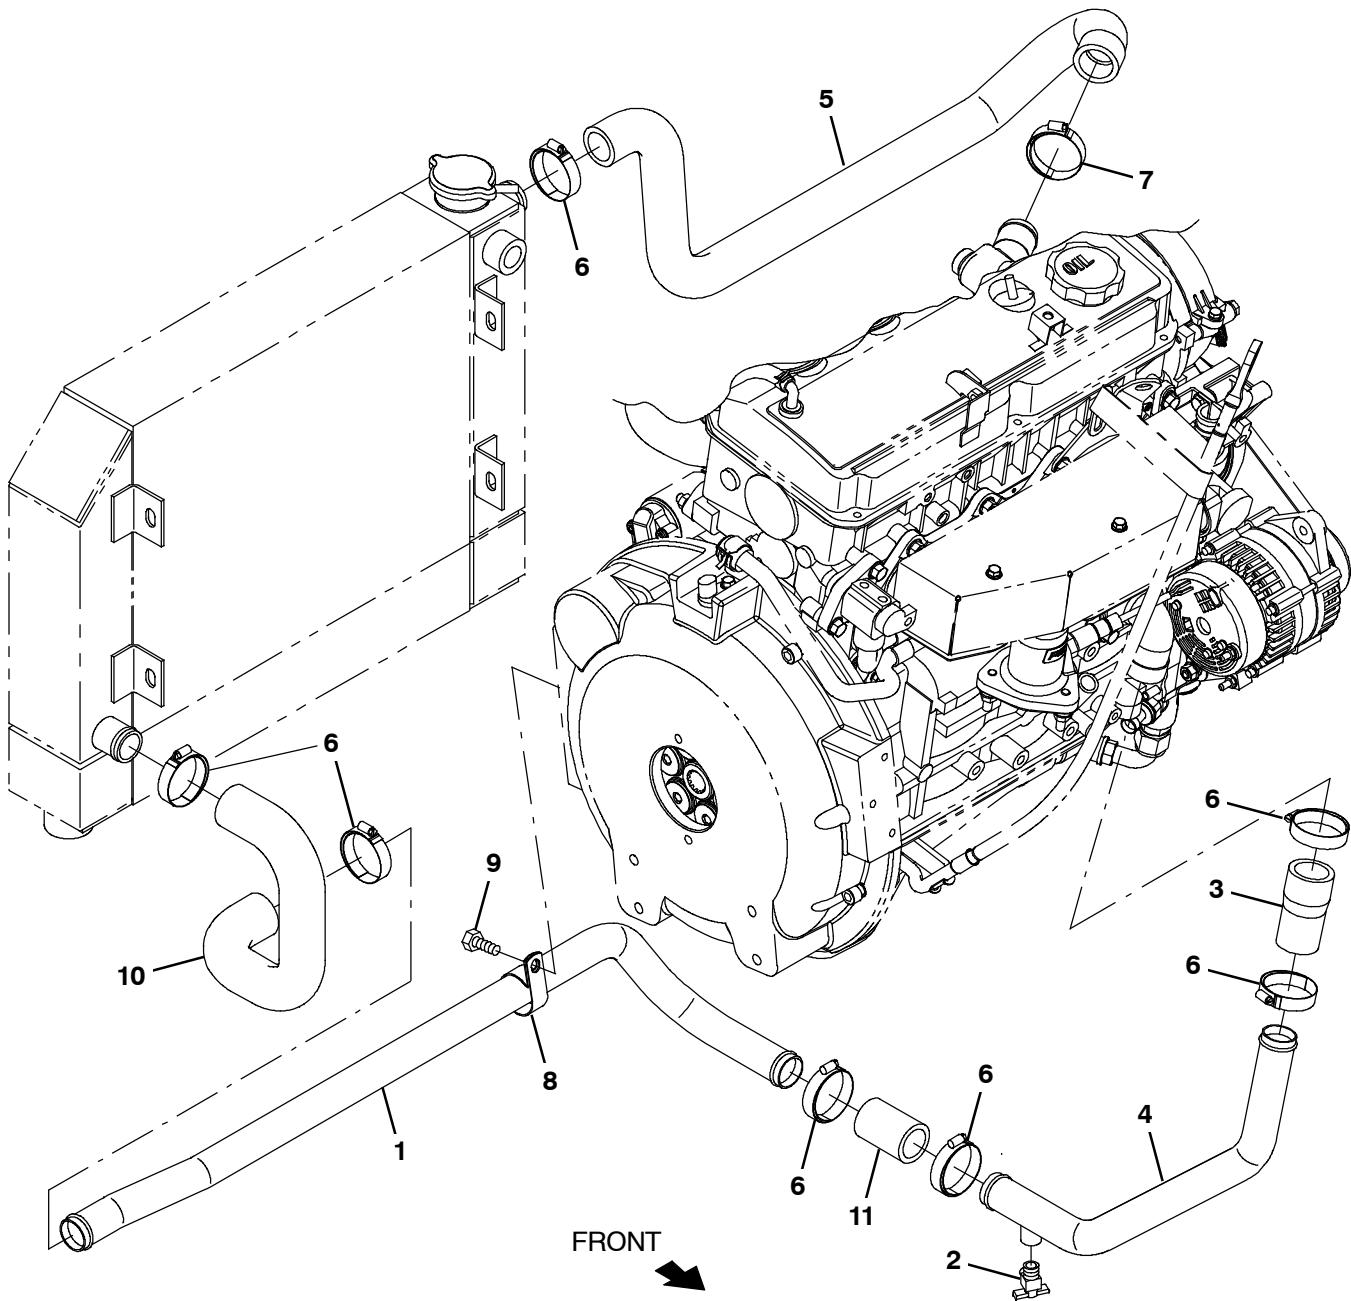


Fig. 25 - Engine Radiator Hoses Group, Gas/LPG

Ref.	Part No.	Serial Number	Description	Qty.
1	1071010	(006501-	) Tube, Coolant, 1.3d, Lower	1
2	54911-32	(006501-	) Fitting, Draincock, .25npt	1
3	1072384	(006501-	) Hose, Rbr, 1.125id X1.25id, 03.00l	1
4	1071014	(006501-	) Tube, Coolant, Lower [Mit 2013 S30]	1
5	1070976	(006501-	) Hose, Coolant, Upper, Mold [Mit 2013]	1
6	79381	(006501-	) Clamp, Hose, Wormdrive, 1.25- 2.00d, .50w	7
7	22297	(006501-	) Clamp, Hose, Wormdrive, 1.56- 2.50d, .50w	1
8	86328	(006501-	) Clamp, Cable, Stl, 1.50d X 0.75w, 1hole	1
9	21194	(006501-	) Screw, Hex, .38- 16 X 0.62, G5	1
10	1055029	(006501-	) Hose, Rbr, 1.25id 1.25id	1
11	1072386	(006501-	) Hose, Rbr, 1.125id, 02.25l	1

Fig. 26 - Wheel Group, Rear Drive S30 and XP

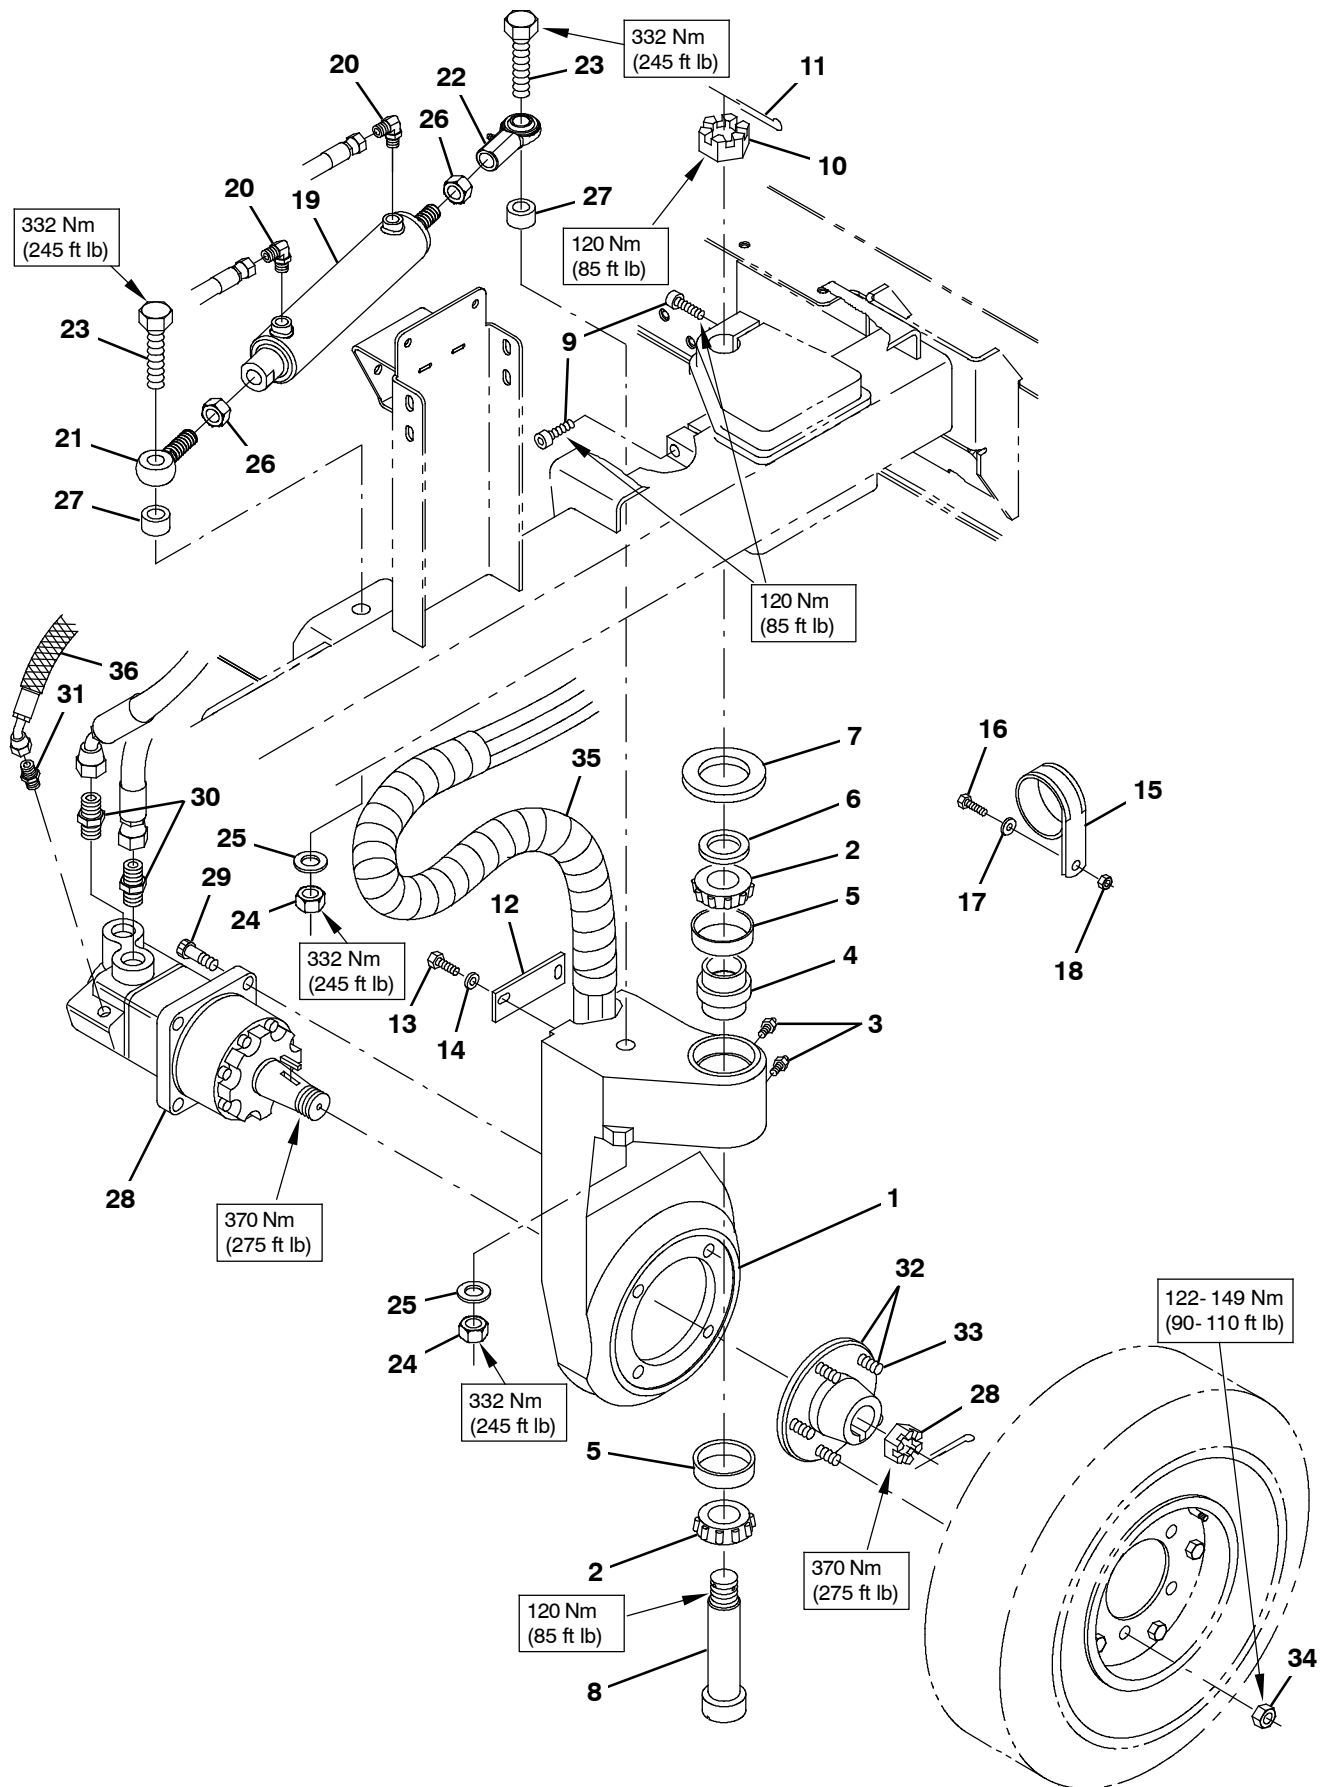


Fig. 26 - Wheel Group, Rear Drive S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1071053	(006501-	) Housing, Sppt, Drive	1
2	51339	(006501-	) Bearing, Cone, 1.38b 0.71w	2
3	47801	(006501-	) Fitting, Grease, Str Pm04 .63l	2
4	374560	(006501-	) Seal, Drive, Rear, Grease Cav	1
5	51338	(006501-	) Bearing, Cup, 2.56d 0.55w	2
6	54051	(006501-	) Washer, Flat, 1.39b 2.12d .13, Stl	1
7	374563	(006501-	) Washer, Flat, 2.16b 3.50d .16, Felt	1
8	73281	(006501-	) Bolt, Shld, 1.37d X 5.13l, 1.1- 18 Drilled	1
9	72926	(006501-	) Screw, Soc, M16 X 2.00 X 50, 12.9	2
10	54052	(006501-	) Nut, Hex, Sltld, 1.12- 18	1
11	08329	(006501-	) Pin, Cotter, .125 X 2.50	1
12	58842	(006501-	) Bar, Flat, Stl 0.19, 01.50 X 04.1l	1
13	09011	(006501-	) Screw, Hex, M8 X 1.25 X 30, Ss	2
14	32491	(006501-	) Washer, Flat, 0.31, Std	2
15	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
16	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	1
17	39349	(006501-	) Washer, Flat, 0.31, Sae	1
18	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
▽ 19	1028492	(006501-	) Cylinder, Hyd, 2.0b 15.0l 08.00strk 1500	1
▲	373698	(006501-	) Seal Kit	1
20	762432	(006501-	) Fitting, Hyd, E90, Fm06/Om06	2
21	64886	(006501-	) Rod- End, 0.75- 16rh Mal 0.75b [Teflon]	1
22	64887	(006501-	) Rod- End, 0.75- 16rh Fem 0.75b	1
23	77345	(006501-	) Screw, Hex, .75- 10 X 3.25, G5	2
24	32987	(006501-	) Nut, Hex, Std, .75- 10	2
25	39350	(006501-	) Washer, Flat, 0.75, Sae	2
26	35886	(006501-	) Nut, Hex, Jam, .75- 16	2
27	1034806	(006501-	) Tube, 0.77id 1.75od 00.7l, Stl, Pntd	2
28	1054901	(006501-	) Motor, Hyd, Gear, Int 17.1 Bi- Dir 3000 (See Breakdowns)	1
29	19583	(006501-	) Screw, Soc, .50- 13 X 1.50, Al	4
30	762468	(006501-	) Fitting, Hyd, Str, Fm10/Om12	2
31	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	1
▽ 32	54087	(006501-	) Hub Assy, Wheel, 5 Bolt 4.50bc Taper B	1
▲ 33	32126	(006501-	) Stud, Wheel, .50- 20 X 1.50l, 0.370th	5
34	24339	(006501-	) Nut, Wheel, .50- 20 X 60 Angle	5
35	1041393	(006501-	) Guard, Hose, Wrap, Plstc, 37.0	1
36	57315	(006501-	) Sleeve, Nyl, 2.38id 05.0l	1

Fig. 27 - Wheel Assembly, Rear

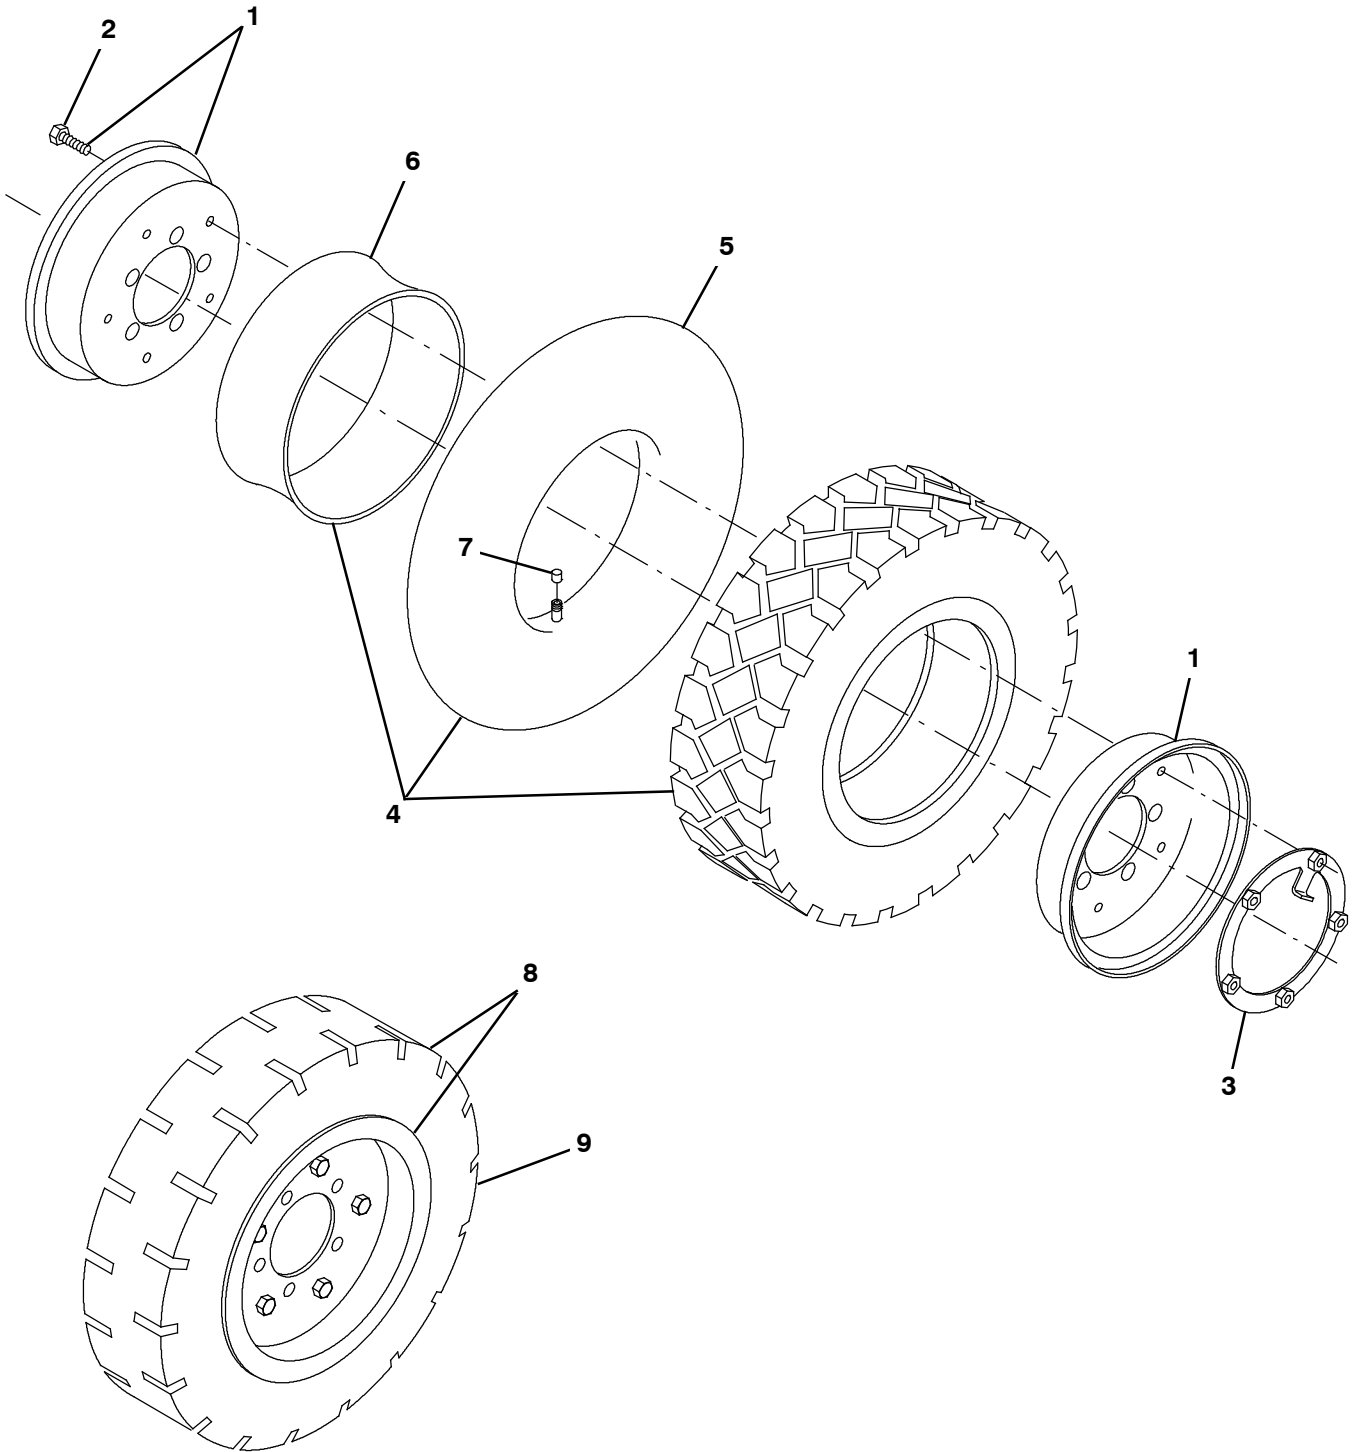


Fig. 27 - Wheel Assembly, Rear

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1005229	(006501-	) Tire Assy, Pneu, 570/500- 08 4.5bc 5bolt (Standard)	1
▲▽	1	53818	(006501-	) Rim Assy, 08.0 X 3.8, 4.5bc /5bolt	1
▲▲	2	370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	5
▲	3	99997	(006501-	) Plate, Lock Plate	1
▲▽	4	53819	(006501-	) Tire, W/ Tube, W/ Flap	1
▲▲	5	70280	(006501-	) Innertube, Valve [5.00r- 8, Js2, 500- 8]	1
▲▲	6	53819- 2	(006501-	) Flap, Tire/Tube, 570/500- 8	1
▲▲	7	45786	(006501-	) Cap, Valve, Tire, Tubeless [Schrader]	1
▽	8	53817	(006501-	) Tire Assy, Solid, 18.0 X 4.3 4.5bc 5bolt (Option)	1
▲	9	53816	(006501-	) Tire, Solid, 18.0 X 7.0 X 8.0[4.33 Sc15]	1

Fig. 28 - Wheel and Brakes Group, Front Solid (Standard)

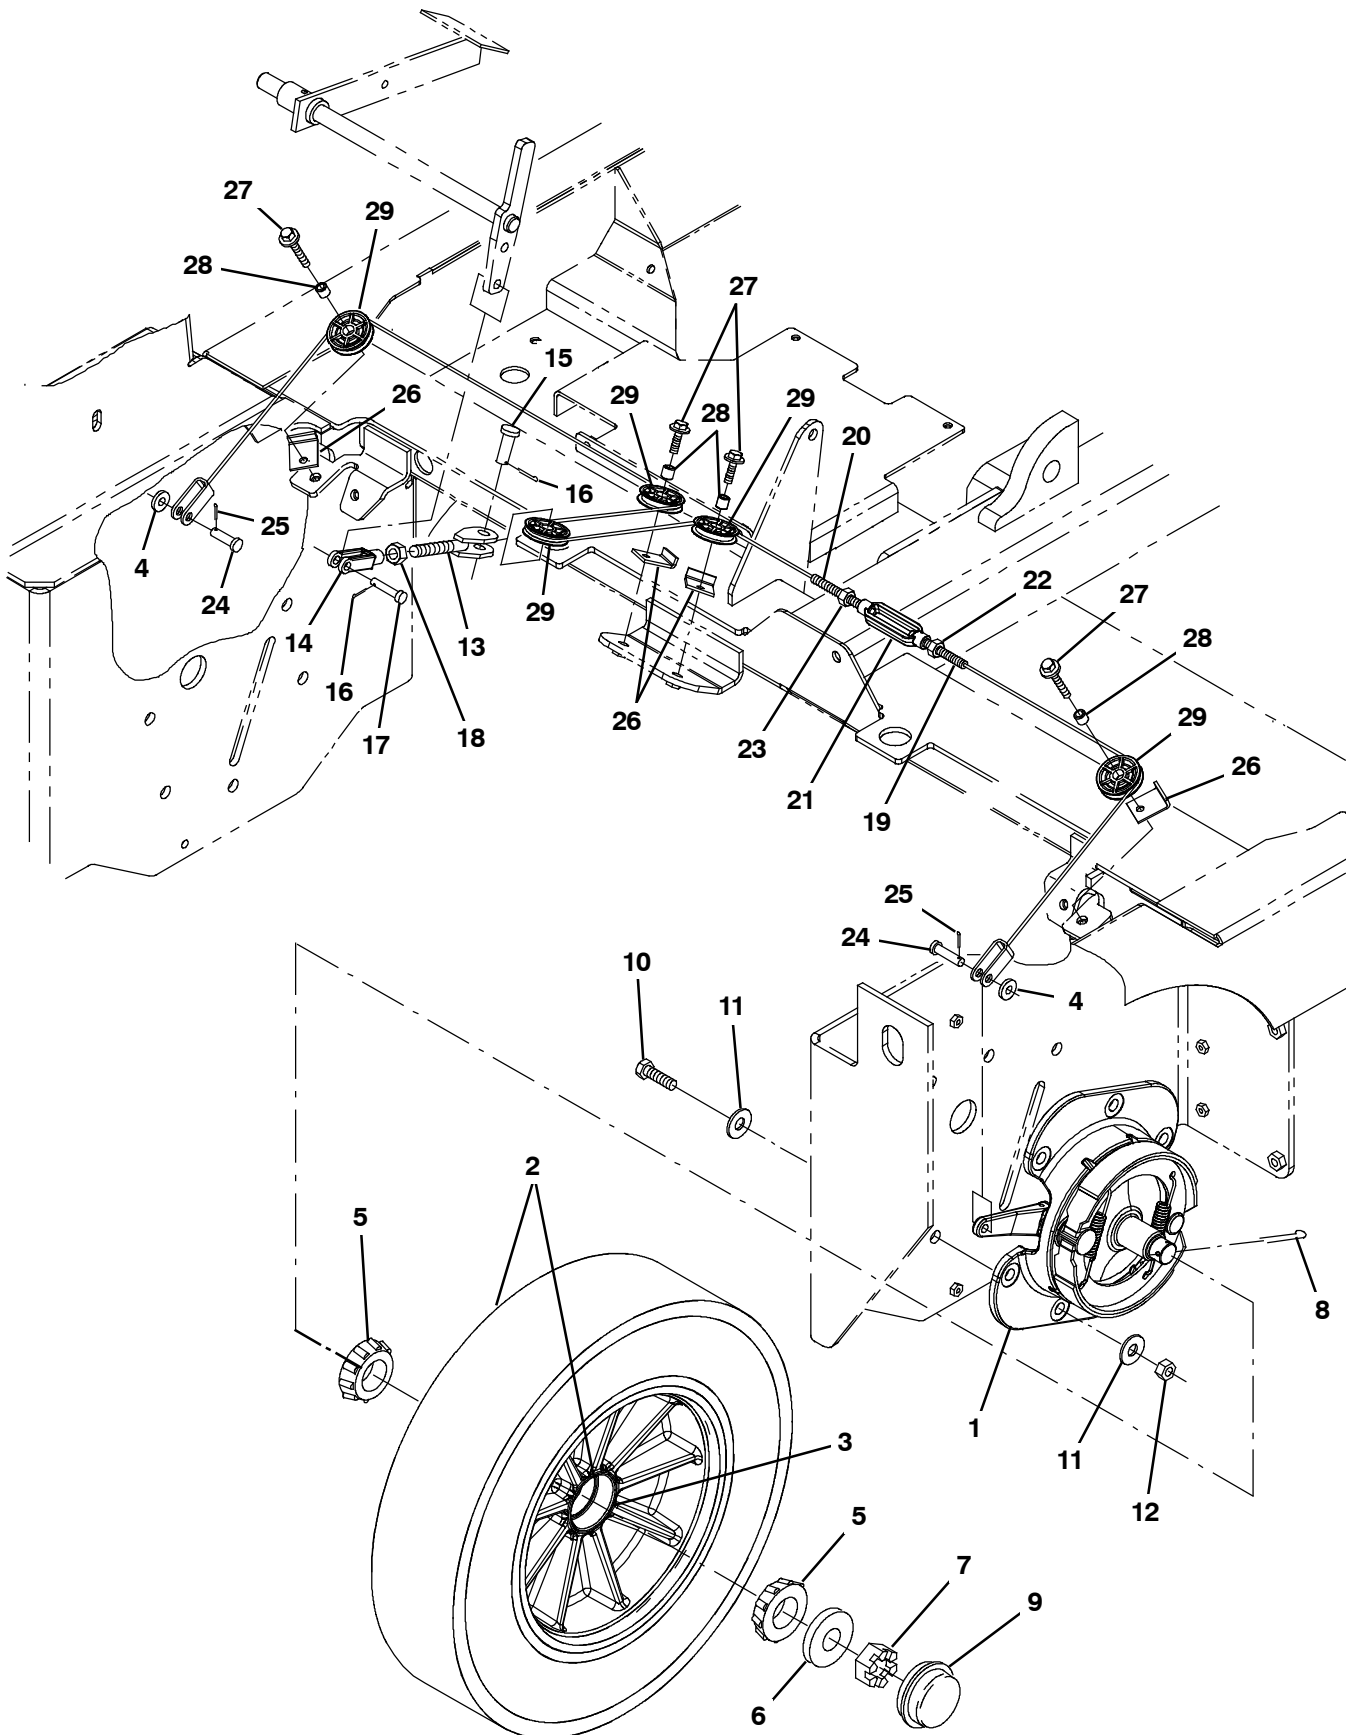


Fig. 28 - Wheel and Brakes Group, Front Solid (Standard)

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	54577	(006501-	) Brake Assy, Drum, Mech, 07.9d [6600]]	2
▲		66211	(006501-	) Shoe Set, Brake [1 Set=1pkg=2 Shoes]	2
▲▽		66213	(006501-	) Brake Kit, Repair	1
▲▲		70161	(006501-	) Shaft	1
▲		70158	(006501-	) Spring	2
▽	2	1061961	(006501-	) Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front Tire	2
▲	3	51338	(006501-	) Bearing, Cup, 2.56d 0.55w	2
	4	32485	(006501-	) Washer, Flat, 0.38, Sae	2
	5	51339	(006501-	) Bearing, Cone, 1.38b 0.71w	4
	6	32598	(006501-	) Washer, Flat, 1.02b 1.75d .12, Stl	2
	7	14242	(006501-	) Nut, Hex, Sltd, 1.00- 20	2
	8	08202	(006501-	) Pin, Cotter, .125 X 1.75	2
	9	54390	(006501-	) Cap, Hub, Dust, 2.57d 0.77l	2
	10	06969	(006501-	) Screw, Hex, M12 X 1.75 X 40, 8.8	12
	11	32486	(006501-	) Washer, Flat, 0.50, Sae	24
	12	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	12
	13	71373	(006501-	) Clevis Wldt, Adj, .50pin 0.50- 20, PI	1
	14	374710	(006501-	) Clevis, Adj, 0.38pin, 0.50- 20thd	1
	15	58078	(006501-	) Pin, Clevis, 0.50d X 1.25l	1
	16	08182	(006501-	) Pin, Cotter, .125 X 1.00	2
	17	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
	18	48985	(006501-	) Nut, Hex, Jam, .50- 20	1
	19	1034462	(006501-	) Cable, Brake	1
	20	1034455	(006501-	) Cable, Brake	1
	21	40352	(006501-	) Turnbuckle, Body, .38thread, 03.9l	1
	22	32522	(006501-	) Nut, Hex, Jam, .38- 16	1
	23	39562	(006501-	) Nut, Hex, Jam, .38- 16, Lh	1
	24	09088	(006501-	) Pin, Clevis, 0.37d X 1.00l	2
	25	39005	(006501-	) Pin, Cotter, .094 X 0.75	2
	26	54400	(006501-	) Bracket, Angle, Keeper, Cable	4
	27	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	4
	28	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	4
	29	369781	(006501-	) Pulley, Cable, 1.5d Nyl	5

Fig. 29 - Wheel and Brakes Group, Front Pneumatic (Option)

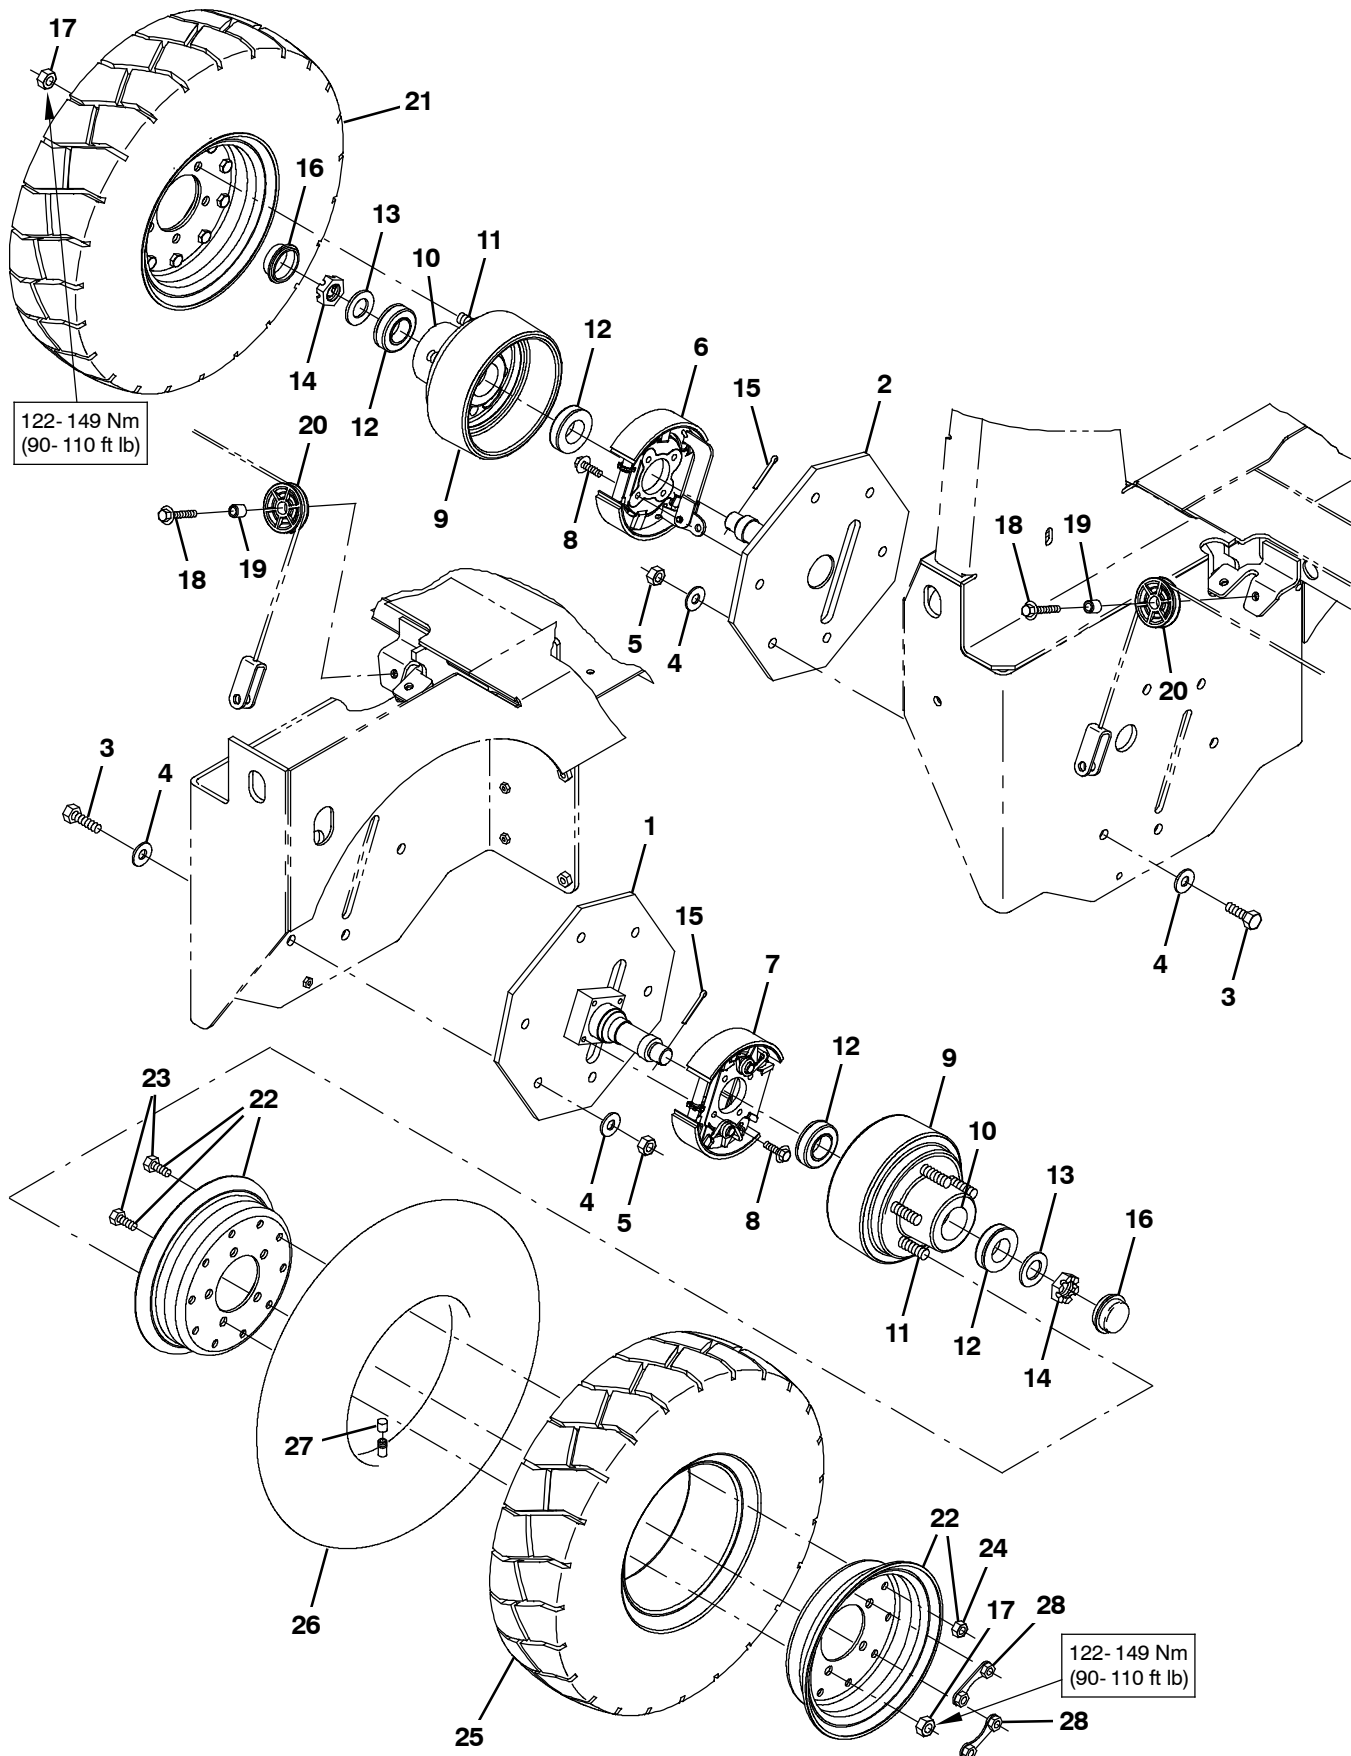


Fig. 29 - Wheel and Brakes Group, Front Pneumatic (Option)

Ref.	Part No.	Serial Number	Description	Qty.
1	1028159	(006501-	) Spindle Wldt, Wheel, Front, Lh	1
2	1028146	(006501-	) Spindle Wldt, Wheel, Front, Rh	1
3	06969	(006501-	) Screw, Hex, M12 X 1.75 X 40, 8.8	12
4	32486	(006501-	) Washer, Flat, 0.50, Sae	24
5	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	12
▽	6	1026856	(006501-) Brake, Knot, Rh, 7.0d	1
▲		9004865	(006501-) Shoe Assy, Brake, 177.8 X 45	2
▲		9004867	(006501-) Lever Assy, 177.8 X 45	1
▲		9004868	(006501-) Spring, Tens, Brake	1
▲		9004870	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004871	(006501-) Adjuster Kit, Manual, W/ Pivot	1
▲		9004869	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004873	(006501-) Clip, Spring	2
▽	7	1026841	(006501-) Brake, Knot, Lh, 7.0d	1
▲		9004865	(006501-) Shoe Assy, Brake, 177.8 X 45	2
▲		9004867	(006501-) Lever Assy, 177.8 X 45	1
▲		9004868	(006501-) Spring, Tens, Brake	1
▲		9004870	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004871	(006501-) Adjuster Kit, Manual, W/ Pivot	1
▲		9004869	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004873	(006501-) Clip, Spring	2
	8	1037354	(006501-) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
▽	9	1036027	(006501-) Drum Assy, Brake	2
▲	10	51338	(006501-) Bearing, Cup, 2.56d 0.55w	2
▲	11	67665	(006501-) Stud, Wheel, .50- 20 X 1.88l, 0.560th	5
	12	51339	(006501-) Bearing, Cone, 1.38b 0.71w	4
	13	32598	(006501-) Washer, Flat, 1.02b 1.75d .12, Stl	2
	14	14242	(006501-) Nut, Hex, Sltd, 1.00- 20	2
	15	08202	(006501-) Pin, Cotter, .125 X 1.75	2
	16	54390	(006501-) Cap, Hub, Dust, 2.57d 0.77l	2
	17	24339	(006501-) Nut, Wheel, .50- 20 X 60 Angle	10
	18	1037355	(006501-) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	19	222460	(006501-) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	2
	20	369781	(006501-) Pulley, Cable, 1.5d Nyl	2
▽	21	1032515	(006501-) Tire Assy, Pneu, 21 X 6.0- 12 4.5bc, Ce	2
▲▽	22	1039523	(006501-) Rim Assy, 09.0 X 4.0, 4.5bc /5bolt	1
▲▲	23	370181	(006501-) Screw, Hex, M10 X 1.50 X 25, 10.9	10
▲▲	24	41430	(006501-) Nut, Hex, Lock, M10 X 1.5, NI	6
▲	25	1039520	(006501-) Tire, Pneu, 21 X 6.0 X 9.0 12 Ply [lc40]	1
▲	26	1039517	(006501-) Innertube, 6.00 X 9.00 [Js- 2]	1
▲	27	45786	(006501-) Cap, Valve, Tire, Tubeless [Schrader]	1
▲	28	1032488	(006501-) Plate, Wheel, Ce	2

Fig. 30 - Brake Pedal and Parking Brake Group

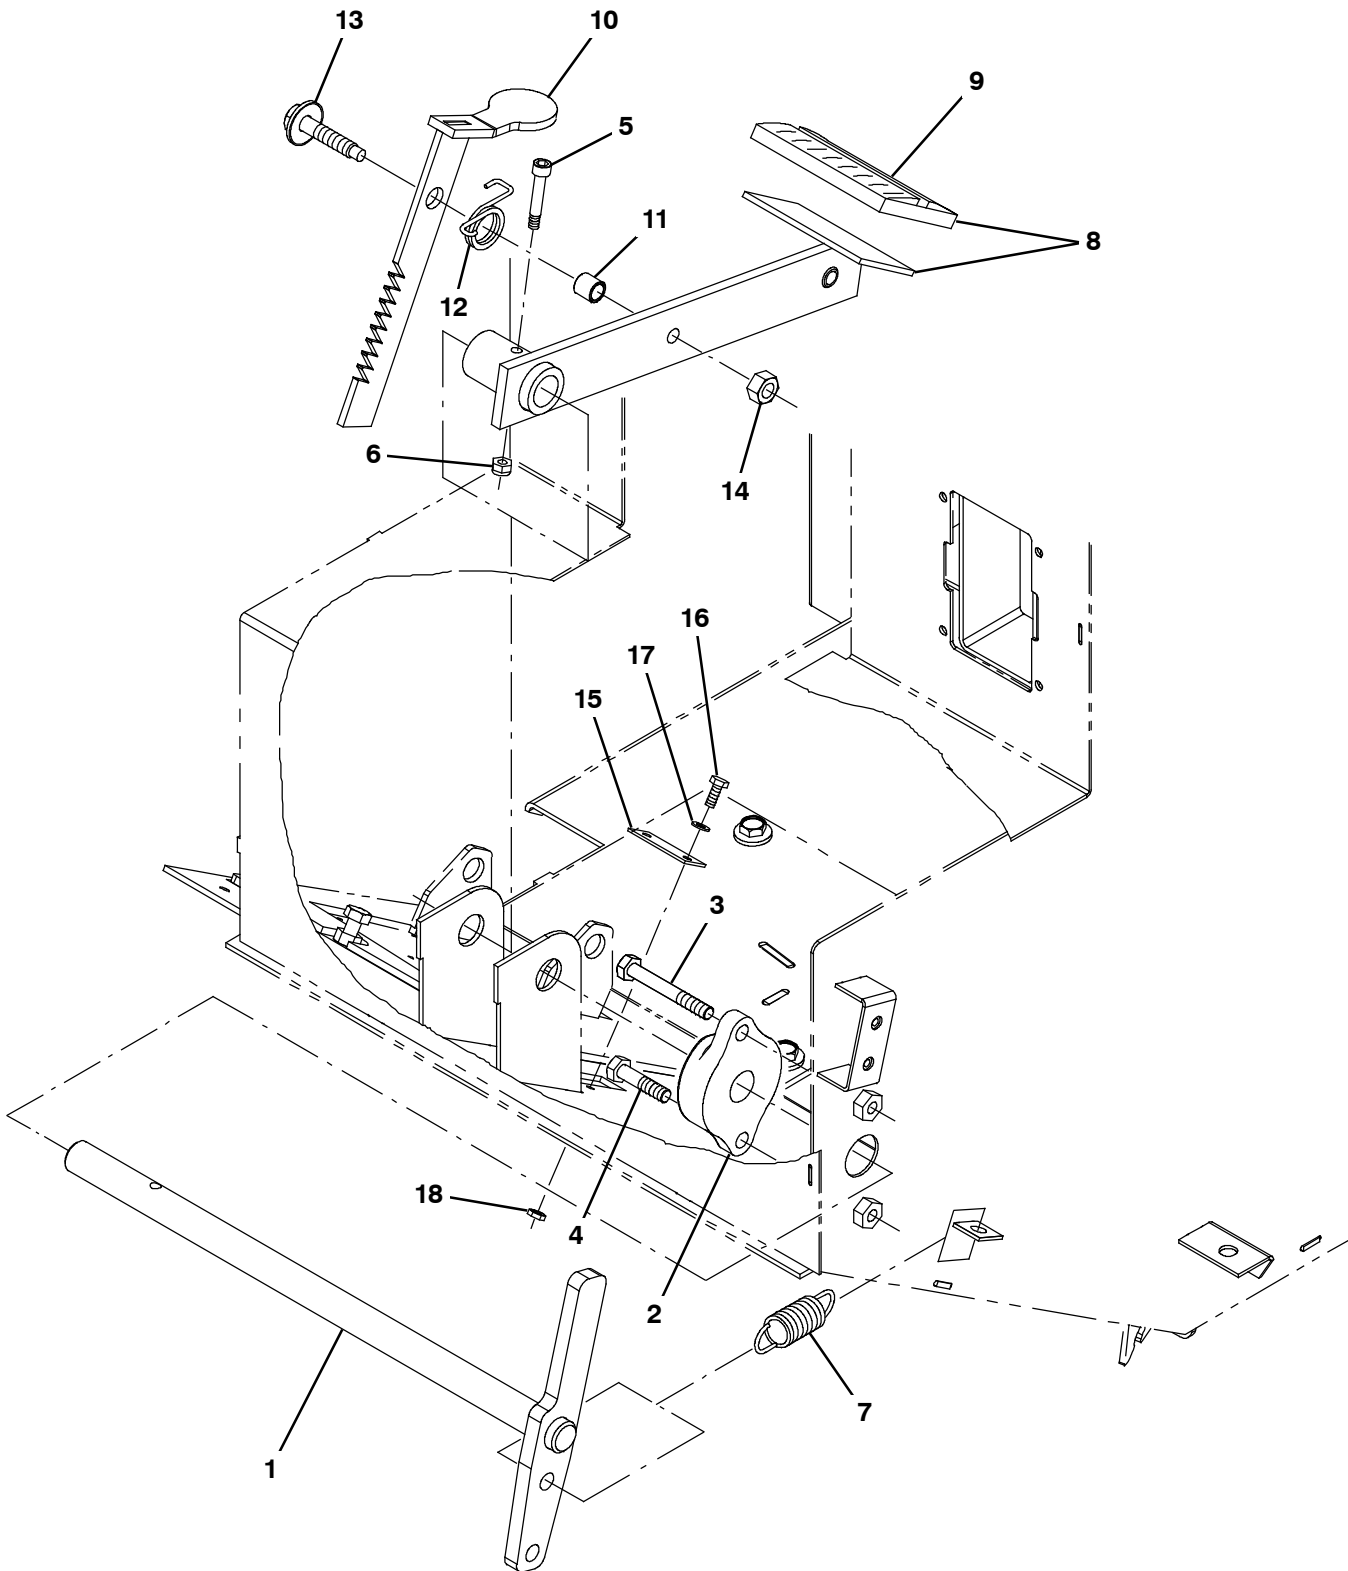


Fig. 30 - Brake Pedal and Parking Brake Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1026605	(006501-	) Rod Wldt, Brake	1
2	26663	(006501-	) Bearing, Flng, 2hole, 0.75b	1
3	363976	(006501-	) Screw, Hex, M8 X 1.25 X 60, 8.8, FI	1
4	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
5	31249	(006501-	) Bolt, Shld, .25d X 1.25, #10- 24	1
6	45181	(006501-	) Nut, Hex, Lock, #10- 24, NI	1
7	87816	(006501-	) Spring, Extn, 0.75od 0.09wir 02.5l	1
▽ 8	1026610	(006501-	) Pedal Wldt, Brake	1
▲ 9	51109	(006501-	) Pad, Pedal, Brake, 3.96l 2.36w 0.75	1
10	1042021	(006501-	) Brake Wldt, Parking	1
11	46563	(006501-	) Bushing, Sleeve, 0.37b 0.50d 0.50l, Oib	1
12	59009	(006501-	) Spring, Tors, 0.75id .06wir 02.8coil	1
13	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
14	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
15	1042024	(006501-	) Plate, Stop, Parking	1
16	33928	(006501-	) Screw, Hex, M4 X 0.70 X 20, Ss	2
17	19065	(006501-	) Washer, Flat, 08	2
18	33932	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI, Ss	2

Fig. 31 - Directional Pedal Group

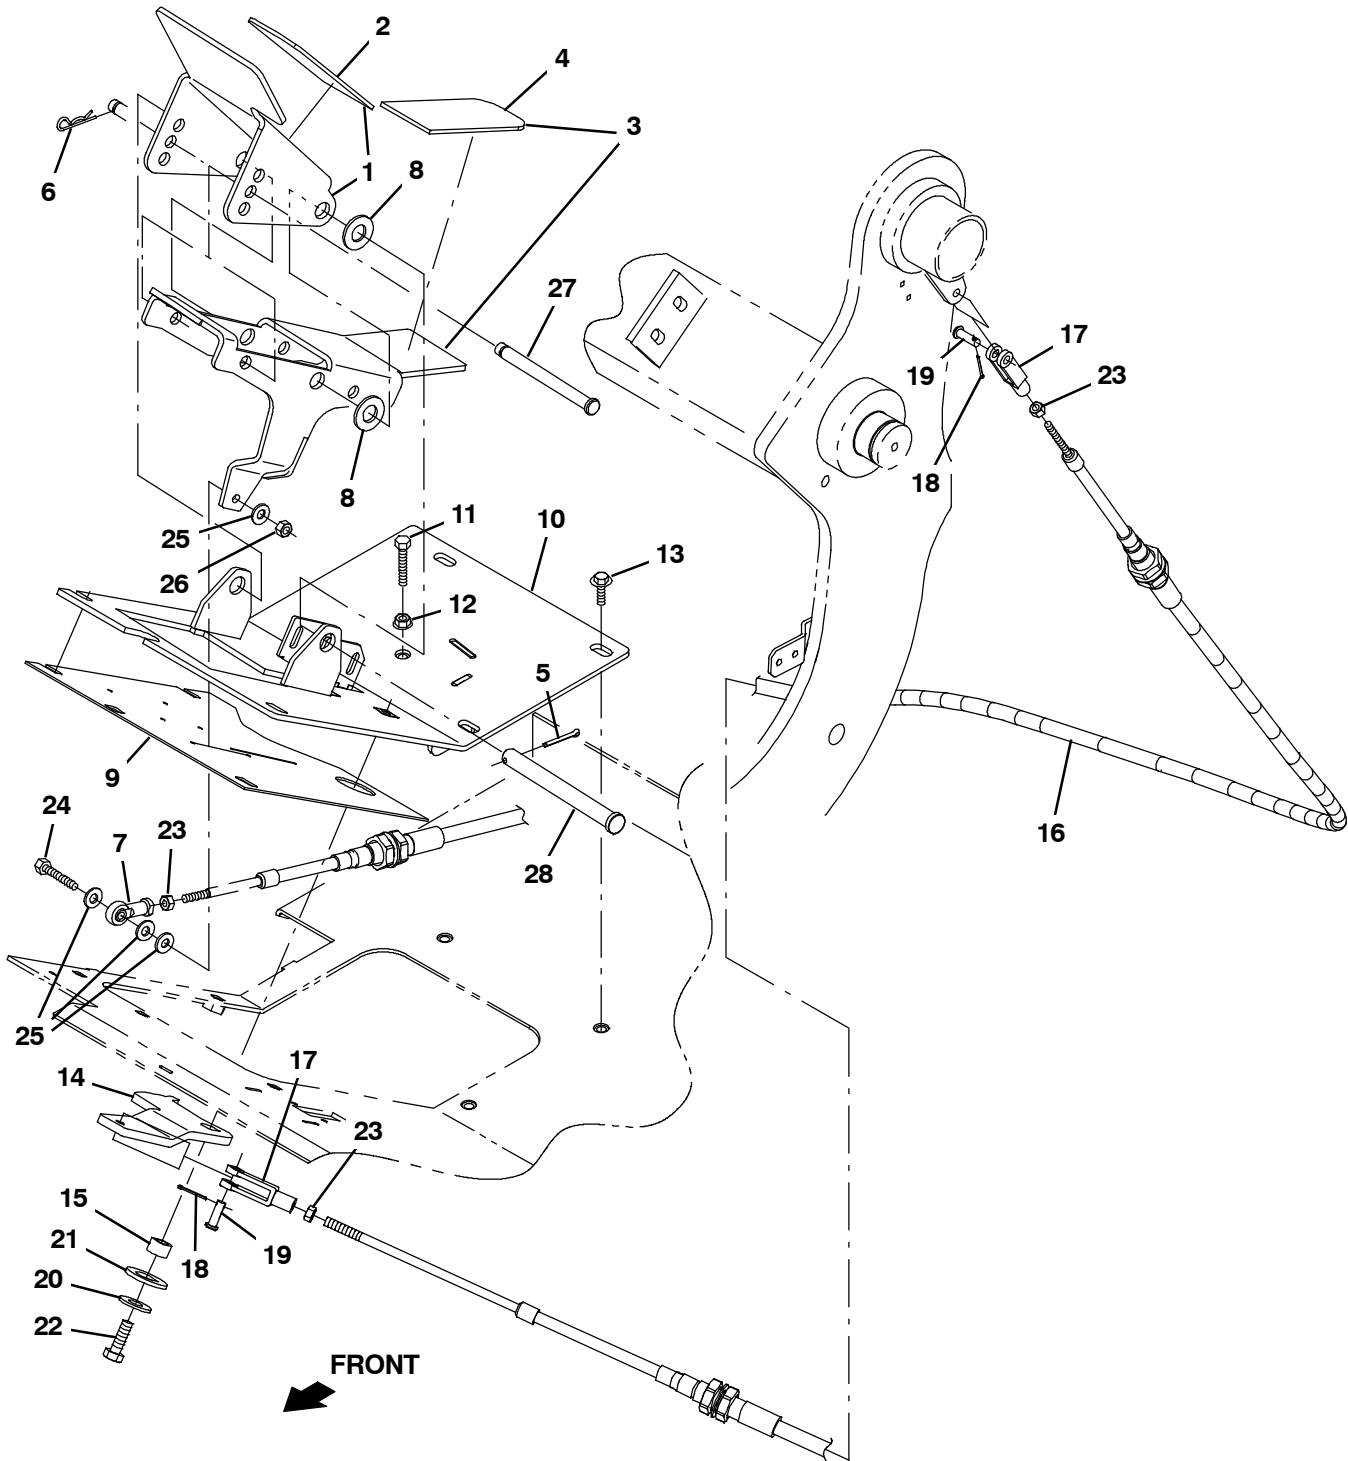


Fig. 31 - Directional Pedal Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9004575	(006501-	) Pedal, Propel, Upper, W/Tread	1
▲	2	82839	(006501-	) Tread, Non- Skid, 02.2w 11.5l	1
▽	3	9004574	(006501-	) Pedal, Propel, Lower, W/Tread	1
▲	4	82839	(006501-	) Tread, Non- Skid, 02.2w 11.5l	1
	5	08182	(006501-	) Pin, Cotter, .125 X 1.00	1
	6	86866	(006501-	) Pin, Cotter, Hair, 0.38d .072 Wir	1
	7	1033995	(006501-	) Rod- End, M6 X 1.0rh Fem 6mmb [Nylon]	2
	8	32486	(006501-	) Washer, Flat, 0.50, Sae	2
	9	1038360	(006501-	) Gasket, Rbr, Pedal, Propel	1
	10	1026688	(006501-	) Panel Wldt, Access	1
	11	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
	12	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
	13	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
	14	1034910	(006501-	) Link, Crank, Limiter	1
	15	1040761	(006501-	) Bushing, Sleeve, 0.31b 0.55d 0.38l, Oib	1
	16	1035620	(006501-	) Cable, Push / Pull, 070.4l M6x1.0/M6x1.0	1
	17	1035826	(006501-	) Clevis, Adj, M6 Pin, M6 X 1.0 Rh, Pl	2
	18	08178	(006501-	) Pin, Cotter, .062 X 0.75	2
	19	14605	(006501-	) Pin, Clevis, 0.25d X 0.75l	2
	20	32492	(006501-	) Washer, Flat, 0.38, Std	1
	21	15331	(006501-	) Washer, Flat, 0.62, Sae	1
	22	09010	(006501-	) Screw, Hex, M8 X 1.25 X 25, Ss	1
	23	41359	(006501-	) Nut, Hex, Std, M6 X 1.00, 8	3
	24	09007	(006501-	) Screw, Hex, M6 X 1.00 X 25, Ss	1
	25	01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	4
	26	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	1
	27	1040162	(006501-	) Pin, Clevis, 0.37d X 4.33l	1
	28	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1

Fig. 32 - Hydraulic Pump Linkage Group, S30 and XP

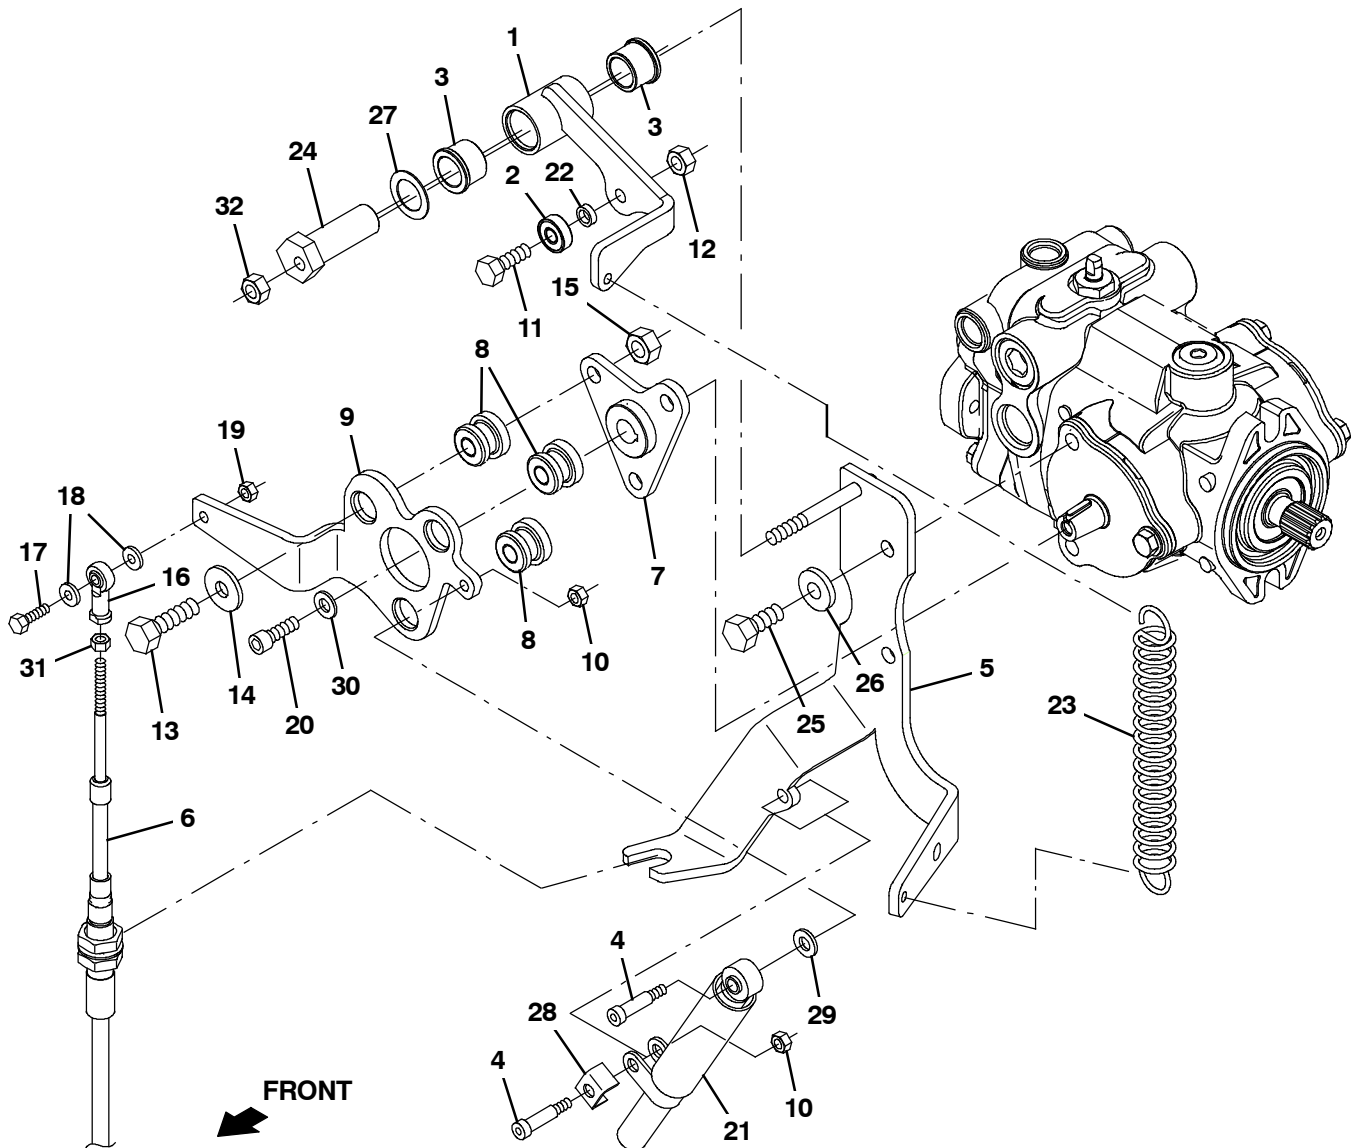


Fig. 32 - Hydraulic Pump Linkage Group, S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1031921	(006501-	) Arm Wldt, Neutral	1
2	1027651	(006501-	) Bearing, Ball, 8mmb X 22mmd X 7mmw	1
3	1028246	(006501-	) Bearing, Flng, 0.75b 1.00d 0.75l, Bnz	2
4	16213	(006501-	) Bolt, Shld, .31d X 1.00, .25- 20	2
5	1072476	(006501-	) Bracket Wldt, Linkage, Propel [Mits]	1
6	1035619	(006501-	) Cable, Push / Pull, 062.5l M6x1.0/M6x1.0	1
7	1031939	(006501-	) Hub Wldt	1
8	59649	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	3
9	1034244	(006501-	) Lever, Pump	1
10	75934	(006501-	) Nut, Hex, Lock, .25- 20, NI	2
11	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
12	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
13	39284	(006501-	) Screw, Hex, M10 X 1.50 X 35, 8.8	3
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, PI	3
15	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	3
16	1033995	(006501-	) Rod- End, M6 X 1.0rh Fem 6mmb [Nylon]	1
17	06945	(006501-	) Screw, Hex, M6 X 1.00 X 30, 8.8	1
18	32483	(006501-	) Washer, Flat, 0.25, Sae	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1
20	1033237	(006501-	) Screw, Soc, .31- 24 X 1.00, Al	1
21	73411	(006501-	) Shock Absorber, 2.3 Strk	1
22	1027531	(006501-	) Spacer, 0.33b 0.50d 0.15l, PI	1
23	222236	(006501-	) Spring, Extn, 1.00od 0.12wir 05.0l	1
24	1027533	(006501-	) Pin, Pivot, 0.75d 02.1l, Int 0.33b	1
25	21198	(006501-	) Screw, Hex, .38- 16 X 1.25, G5	2
26	32491	(006501-	) Washer, Flat, 0.31, Std	2
27	64489	(006501-	) Washer, Flat, 0.81b 1.24d .03, Stl, PI	1
28	84170	(006501-	) Bracket, Retainer, Safety	1
29	39349	(006501-	) Washer, Flat, 0.31, Sae	1
30	41186	(006501-	) Washer, Flat, Belleville, .31	1
31	41359	(006501-	) Nut, Hex, Std, M6 X 1.00, 8	1
32	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1

Fig. 33 - Hopper Group, Plastic

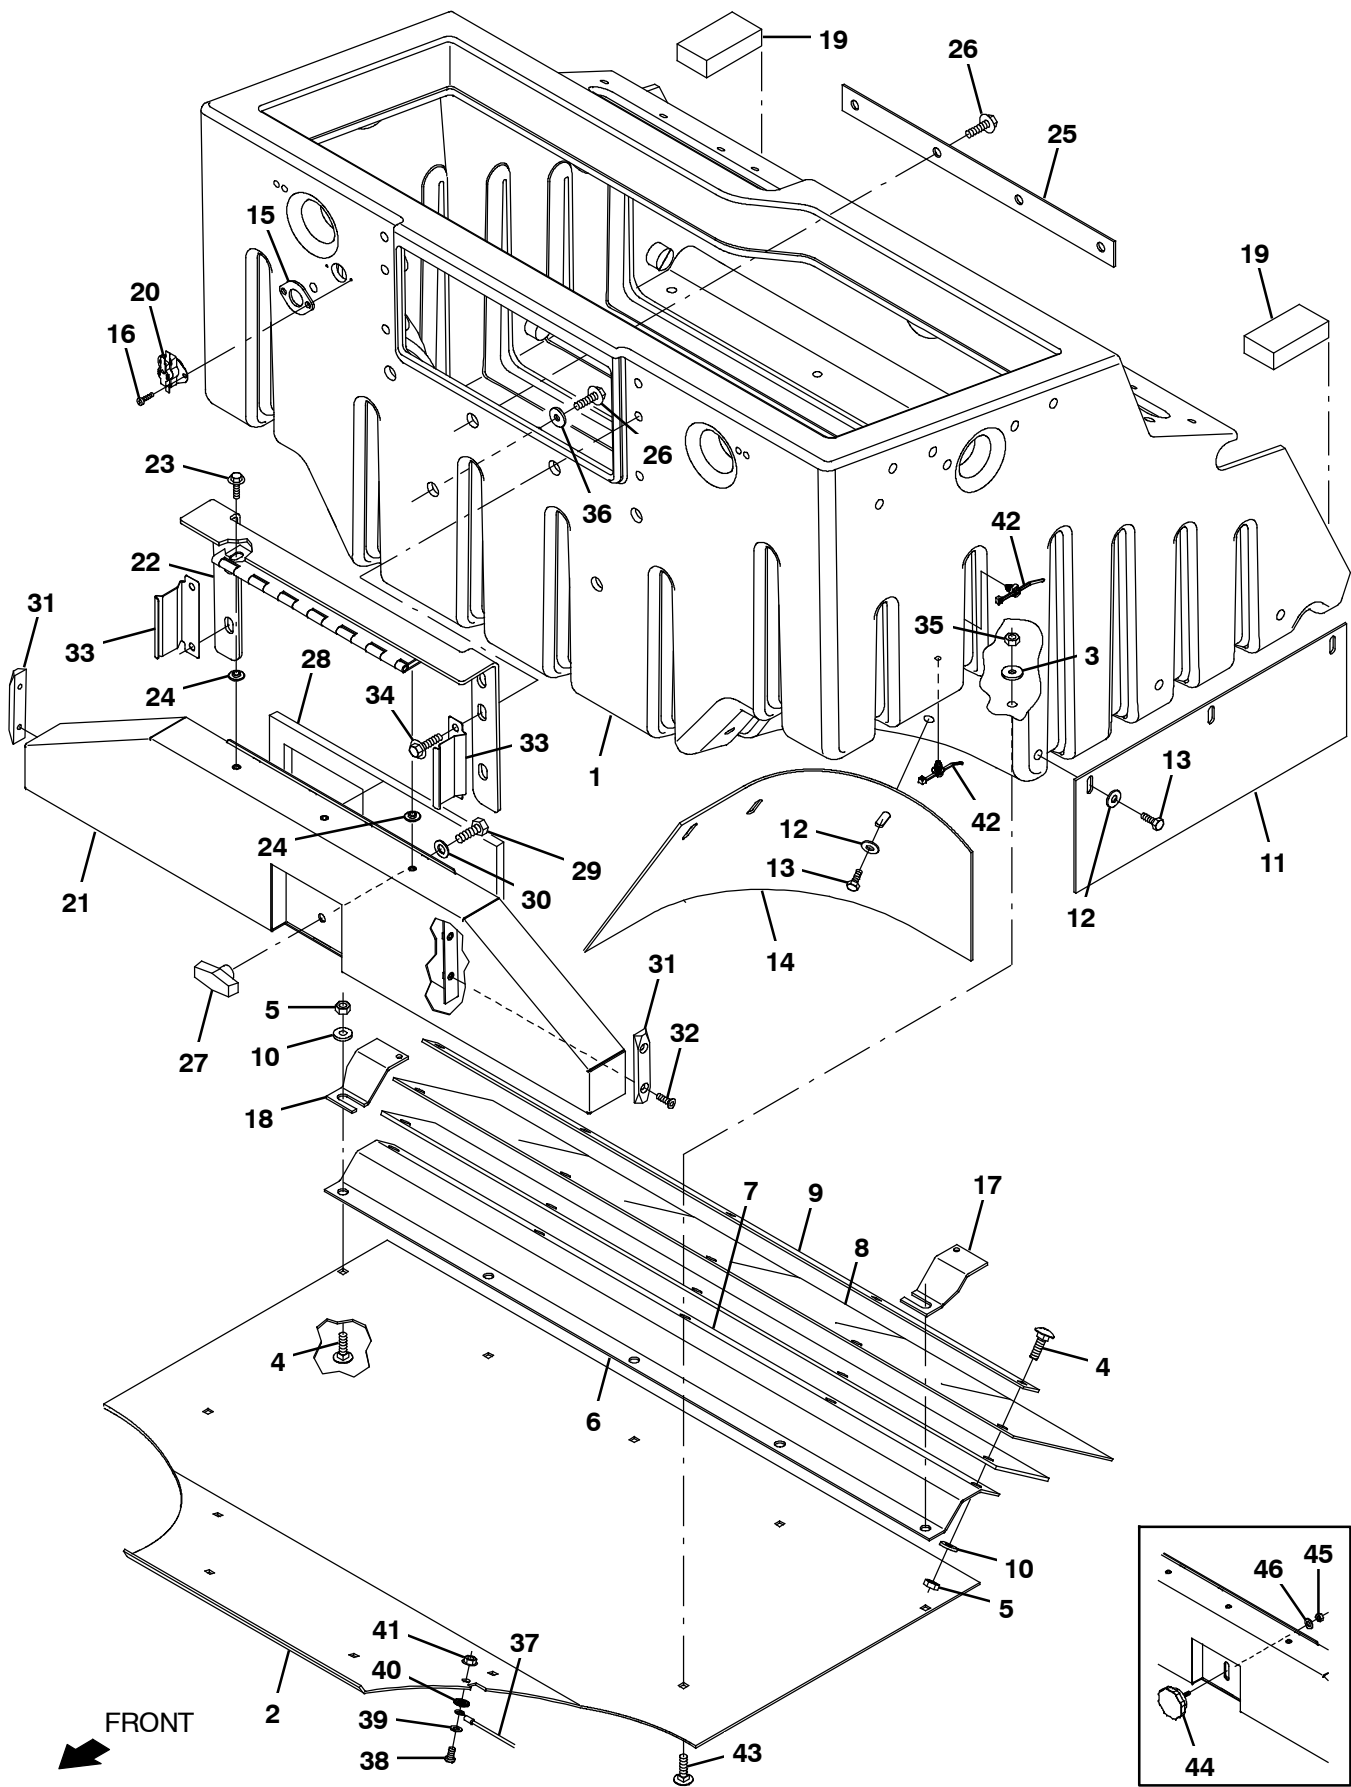


Fig. 33 - Hopper Group, Plastic

	Ref.	Part No.	Serial Number	Description	Qty.
▽ ▲	1	1210993	(006501-	) Hopper, Plstc, Trimmed [S30]	1
	2	1214092	(006501-	) Plate Wldt, Sppt, Hppr Bottom	1
	3	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	6
		9013115	(006501-	) Skirt Kit, Hppr, Maint [S30]	1
	4	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	10
	5	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	10
	6	1212460	(006501-	) Bracket, Sppt, Hppr Seal	1
	7	1212516	(006501-	) Skirt, Lip	1
	8	1212509	(006501-	) Skirt, Lip, Hppr	1
▲	9	1026798	(006501-	) Strap, Main, Lip	1
▲	10	32491	(006501-	) Washer, Flat, 0.31, Std	10
▲	11	1038037	(006501-	) Skirt, Hppr	1
▲	12	41178	(006501-	) Washer, Flat, 0.25, Fendr	6
▲	13	11635	(006501-	) Screw, Hex, M6 X 1.00 X 12, NI, Ss	6
▲	14	1212510	(006501-	) Skirt, Neo, .12, 15.9w, 20.8l, 03/SI	1
	15	82733	(006501-	) Gasket, Sensor, Thermal	1
	16	360943	(006501-	) Screw, Pan, Phl, 10- 14 X 0.75, F/ Plstc	2
	17	1044768	(006501-	) Bracket, Seal, Lh	1
	18	1044764	(006501-	) Bracket, Seal, Rh	1
	19	1049158	(006501-	) Insulation, Acstc, 1.0, 2.0 X 03.8 Adh	2
	20	367679	(006501-	) Switch, Thermal, 160deg, Spdt	1
	21	1213278	(006501-	) Door Wldt, Hppr	1
	22	1213263	(006501-	) Bracket Wldt, Door, Front	1
	23	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3
	24	1213565	(006501-	) Sleeve, Flange	2
▽ ▲	25	1213673	(006501-	) Bar, Flat, Ss 0.12 1.5 X 18.5l, 4/0.5h	1
	26	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	6
		9013366	(006501-	) Latch Kit, Door, Access, Ci [S30]	1
	27	04706	(006784-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l,Plstc	1
	28	1035660	(006501-	) Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
	29	21195	(006784-	) Screw, Hex, .38- 16 X 0.75, G5	1
	30	32492	(006784-	) Washer, Flat, 0.38, Std	1
	31	1213971	(006501-	) Block, Nylon	2
	32	09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	33	1213604	(006501-	) Latch, Door	2
▲	34	1020341	(006501-	) Screw, Hex, M8 X 1.25 X 20, 9.8, Sems	4
	35	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	6
	36	30013	(006501-	) Washer, Flat, 0.31, Fendr	2
	37	1074155	(006501-	) Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring	1
	38	09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	1
	39	32483	(006501-	) Washer, Flat, 0.25, Sae	1
	40	41140	(006501-	) Washer, Lock, Int- Ext, 0.25	1
	41	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	1
	42	1210807	(006501-	) Wire, Tie [W/.25" Fir Tree Clip]	3
	43	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	6
	44	1047543	(006501- 006783)	Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1
	45	08708	(006501- 006783)	Nut, Hex, Lock, M6 X 1.00, NI	1
	46	01684	(006501- 006783)	Washer, Flat, 0.27b 0.69d .05, Ss	1

Fig. 34 - Hopper Group, Steel

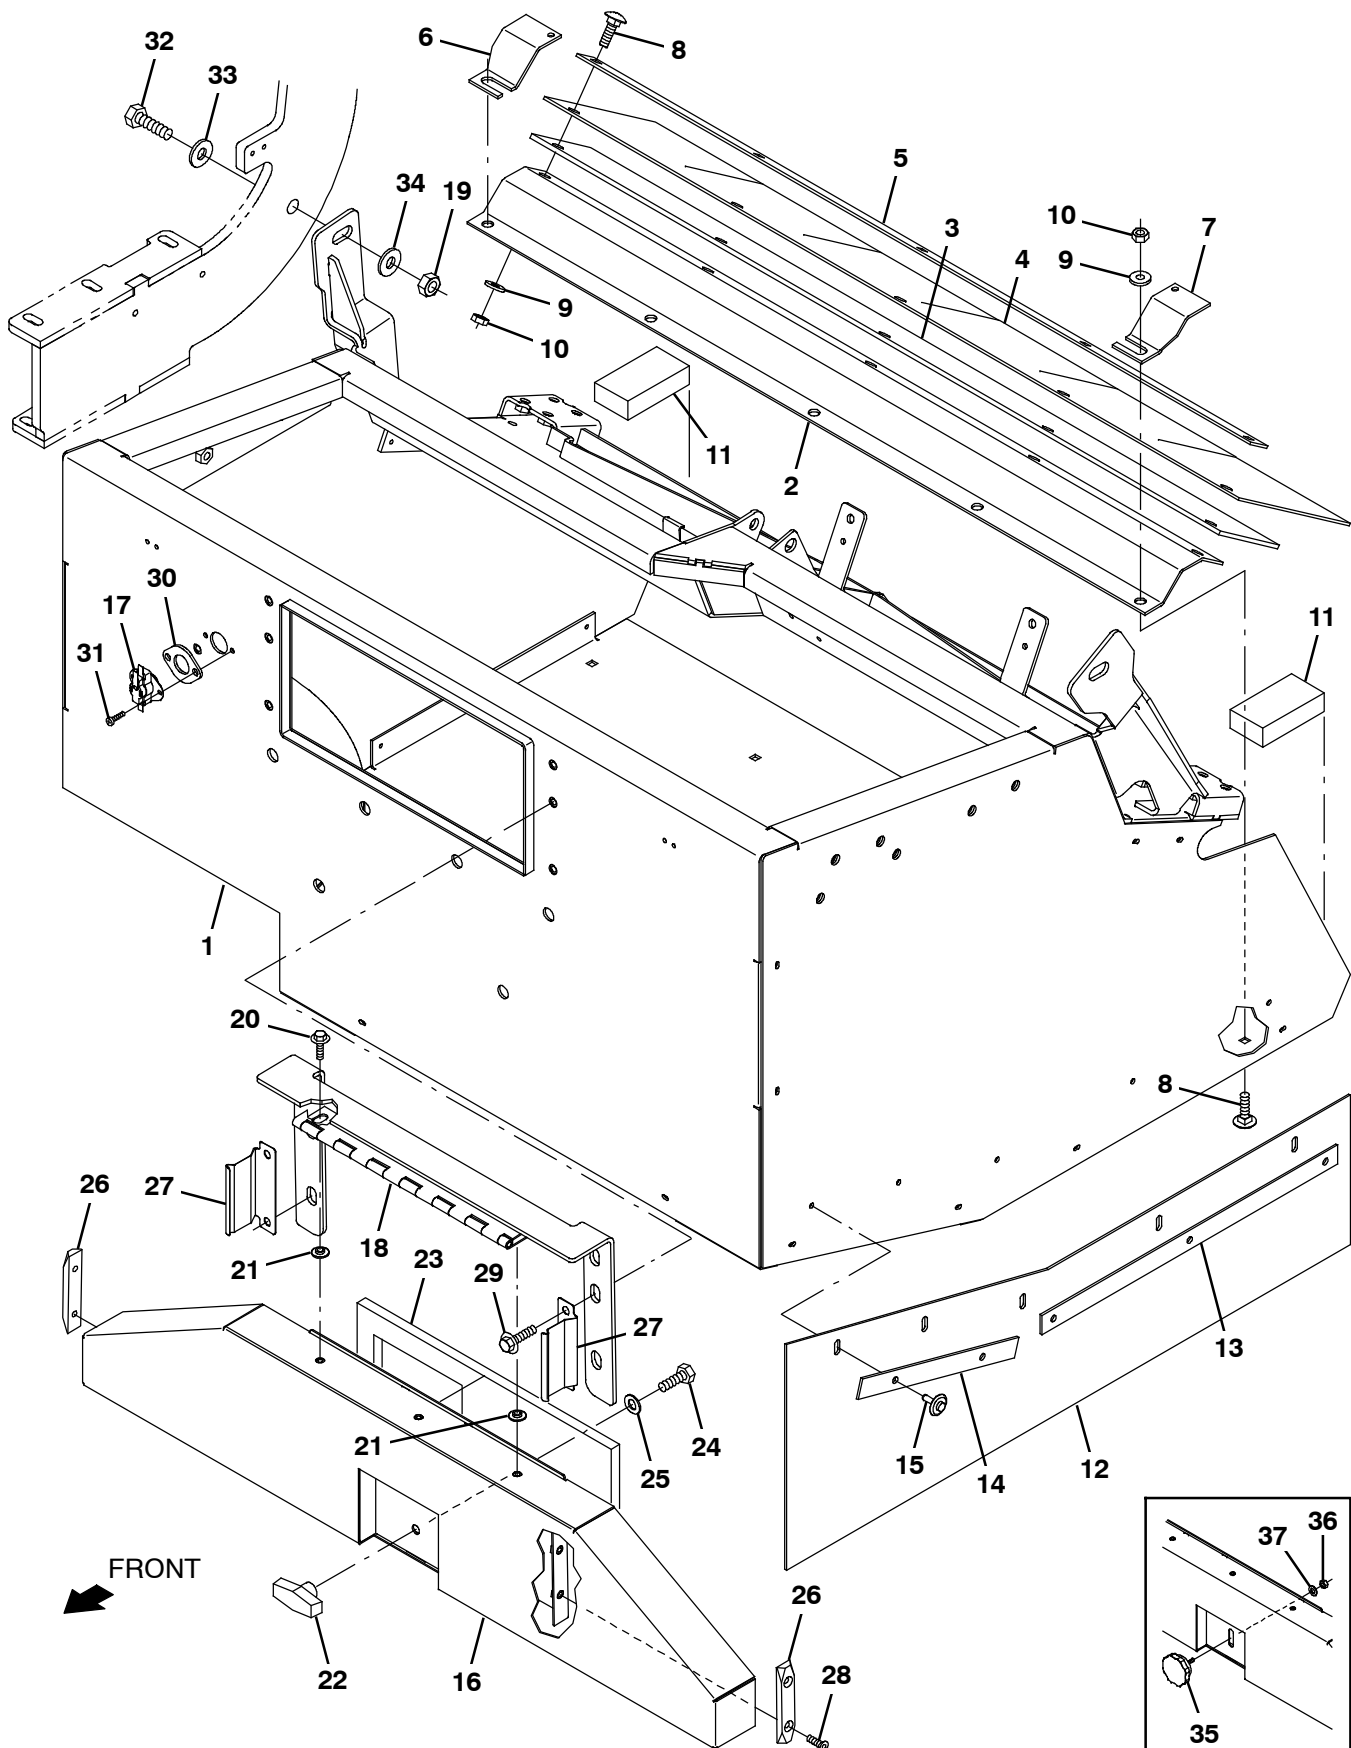


Fig. 34 - Hopper Group, Steel

Ref.	Part No.	Serial Number	Description	Qty.	
1	1211585	(006501-	) Hopper Wldt, Stl [S30]	1	
2	1212460	(006501-	) Bracket, Sppt, Hppr Seal	1	
3	1212516	(006501-	) Skirt, Lip	1	
4	1040590	(006501-	) Skirt, Lip, Hppr, Stl	1	
5	1026798	(006501-	) Strap, Main, Lip	1	
6	1044764	(006501-	) Bracket, Seal, Rh	1	
7	1044768	(006501-	) Bracket, Seal, Lh	1	
8	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	10	
9	32491	(006501-	) Washer, Flat, 0.31, Std	10	
10	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	10	
11	1049158	(006501-	) Insulation, Acstc, 1.0, 2.0 X 03.8 Adh	2	
12	1040276	(006501-	) Skirt, Deflector	1	
13	1040400	(006501-	) Retainer, Skirt, .12, 1.0w X 18.0l, Gray	1	
14	1040408	(006501-	) Retainer, Skirt, .12, 1.0w X 09.8l, Gray	1	
15	72968	(006501-	) Rivet, Plstc, .250d X 0.90	5	
16	1213278	(006501-	) Door Wldt, Hppr	1	
17	367679	(006501-	) Switch, Thermal, 160deg, Spdt	1	
18	1213263	(006501-	) Bracket Wldt, Door, Front	1	
19	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	2	
20	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3	
▽	21	1213565	(006501-	) Sleeve, Flange	2
		9013366	(006501-	) Latch Kit, Door, Access, Ci [S30]	1
▲	22	04706	(006784-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l,Plstc	1
▲	23	1035660	(006501-	) Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
▲	24	21195	(006784-	) Screw, Hex, .38- 16 X 0.75, G5	1
▲	25	32492	(006784-	) Washer, Flat, 0.38, Std	1
▲	26	1213971	(006501-	) Block, Nylon	2
▲	27	1213604	(006501-	) Latch, Door	2
▲	28	09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	29	1020341	(006501-	) Screw, Hex, M8 X 1.25 X 20, 9.8, Sems	4
30	82733	(006501-	) Gasket, Sensor, Thermal	1	
31	24265	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2	
32	69972	(006501-	) Screw, Hex, M12 X 1.75 X 40, 10.9	2	
33	36328	(006501-	) Washer, Flat, Belleville, .50	2	
34	32493	(006501-	) Washer, Flat, 0.50, Std	2	
35	1047543	(006501- 006783)	) Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1	
36	08708	(006501- 006783)	) Nut, Hex, Lock, M6 X 1.00, NI	1	
37	01684	(006501- 006783)	) Washer, Flat, 0.27b 0.69d .05, Ss	1	

Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic

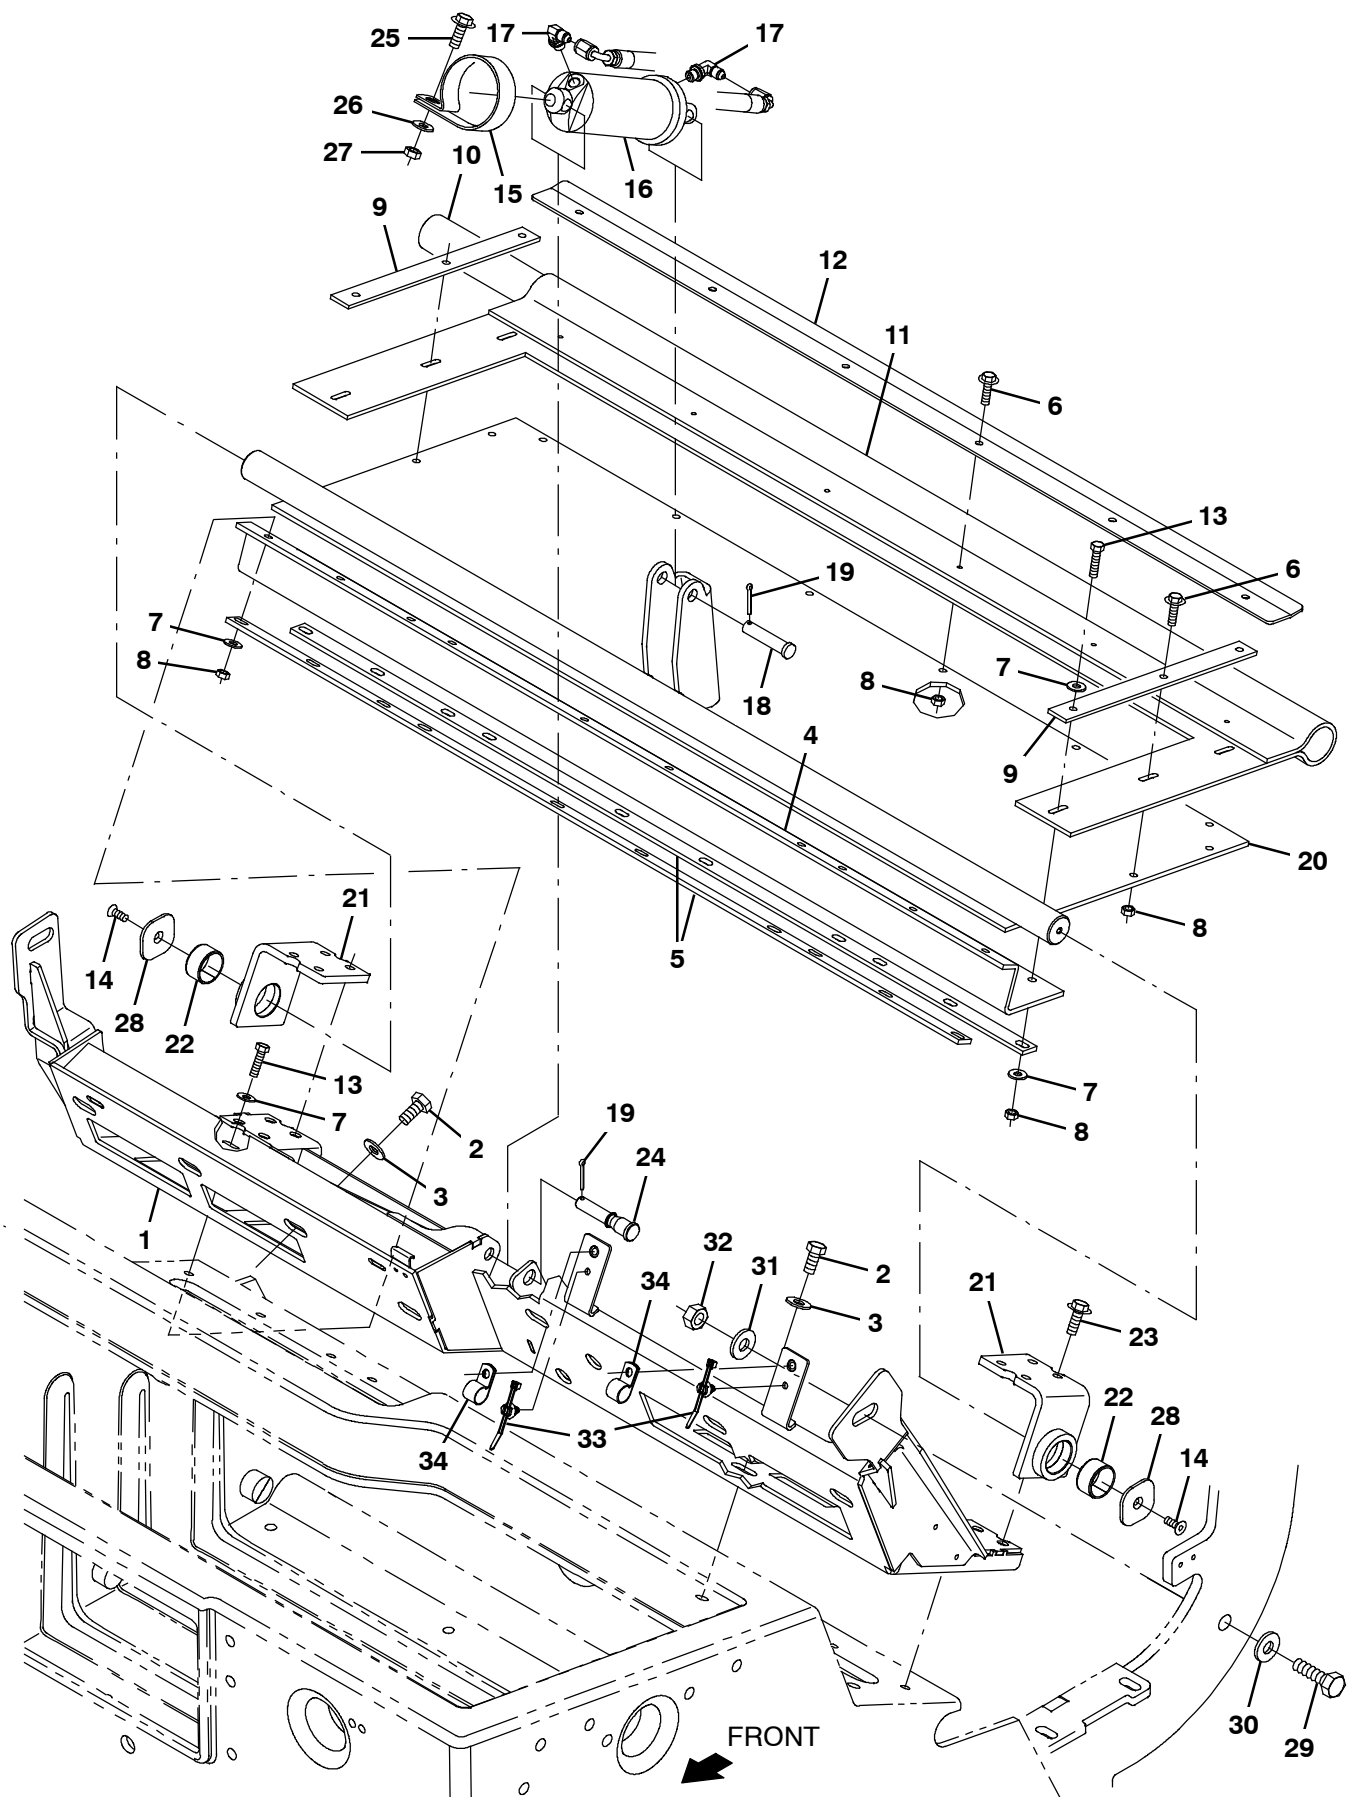


Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic

Ref.	Part No.	Serial Number	Description	Qty.
	1	1211089	(006501-) Bracket Wldt, Mtg, Door, Hppr	1
	2	10959	(006501-) Screw, Hex, M10 X 1.50 X 20, NI, Ss	13
	3	01686	(006501-) Washer, Flat, 0.44b 1.00d .08, Ss	13
▽		9013116	(006501-) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	4	1212570	(006501-) Seal, Wiper, Door	1
▲	5	1212756	(006501-) Retainer, Seal	2
▲	6	1037345	(006501-) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	7	32490	(006501-) Washer, Flat, 0.25, Std	34
▲	8	08712	(006501-) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	9	1044950	(006501-) Strap, Door, Dump, Side	2
▲	10	1030218	(006501-) Cord, Sponge	1
▲	11	1212440	(006501-) Seal, Door, Dump	1
▲	12	1044419	(006501-) Plate, Retainer, Door, Dump	1
▲	13	06946	(006501-) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	14	09062	(006501-) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	2
	15	70157	(006501-) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
	16	1038176	(006501-) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
	17	762427	(006501-) Fitting, Hyd, E90, Fm04/Om04	2
	18	630448	(006501-) Pin, Clevis, 0.50d X 2.25l	1
	19	08236	(006501-) Pin, Cotter, .156 X 1.25	2
	20	1211061	(006501-) Door Wldt, Hppr	1
	21	1211096	(006501-) Bracket Wldt, Door	2
	22	1040759	(006501-) Bearing, Journal- 1.25 I.D. X .75 Lg	2
	23	1037354	(006501-) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
	24	1213549	(006501-) Pin, Clevis (Shoulder)	1
	25	1037355	(006501-) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
	26	32491	(006501-) Washer, Flat, 0.31, Std	1
	27	08713	(006501-) Nut, Hex, Lock, M8 X 1.25, NI, Ss	1
	28	1212373	(006501-) Washer, Retainer, Door, Dump	2
	29	69972	(006501-) Screw, Hex, M12 X 1.75 X 40, 10.9	2
	30	36328	(006501-) Washer, Flat, Belleville, .50	2
	31	32493	(006501-) Washer, Flat, 0.50, Std	2
	32	08711	(006501-) Nut, Hex, Lock, M12 X 1.75, NI	2
	33	1210807	(006501-) Wire, Tie [W/.25" Fir Tree Clip]	2
	34	67767	(006501-) Clamp, Cable, Stl, 0.69d X 0.62w, 1hole	2

Fig. 36 - Hopper Cylinder and Dump Door Group, Steel

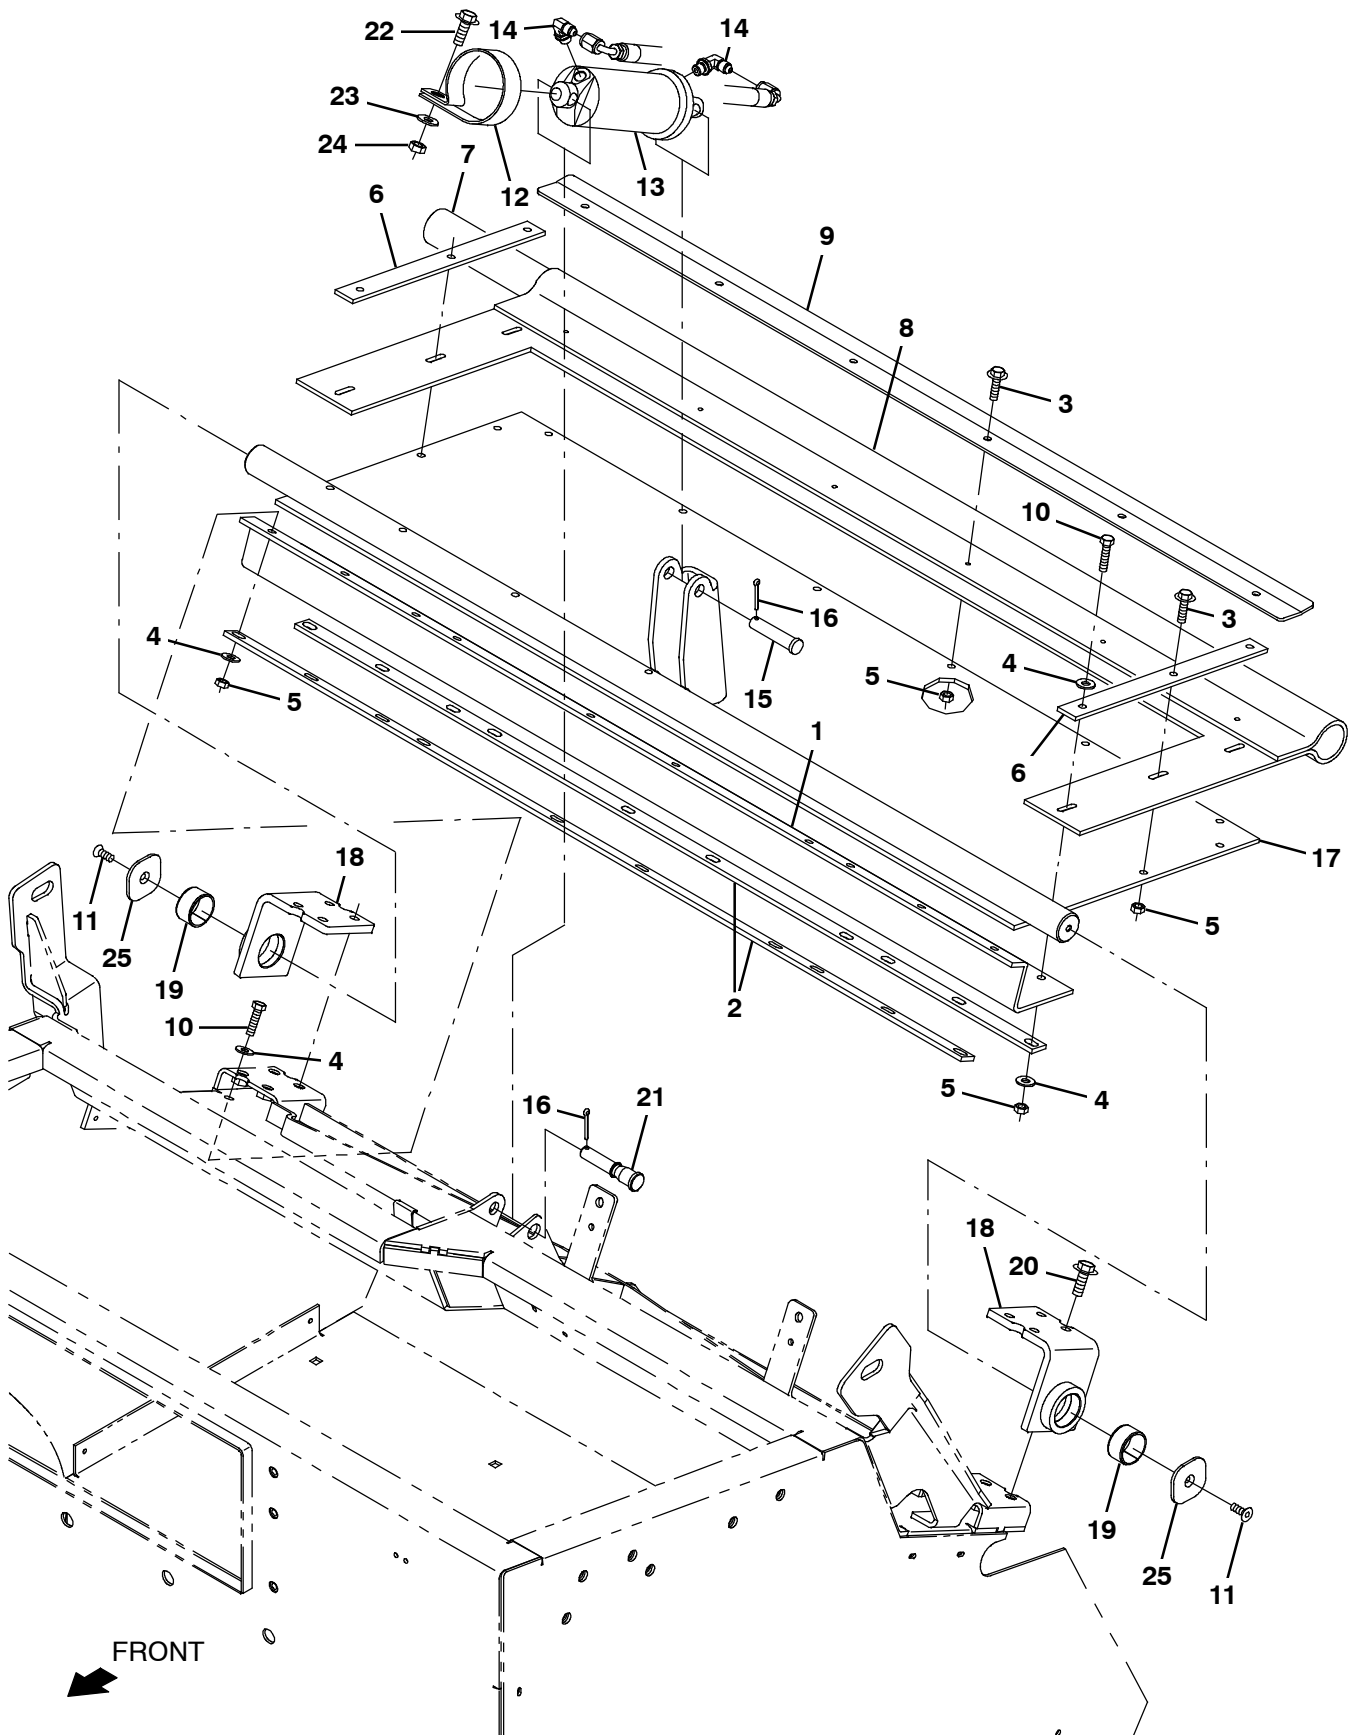


Fig. 36 - Hopper Cylinder and Dump Door Group, Steel

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9013116	(006501-	) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	1	1212570	(006501-	) Seal, Wiper, Door	1
▲	2	1212756	(006501-	) Retainer, Seal	2
▲	3	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	4	32490	(006501-	) Washer, Flat, 0.25, Std	34
▲	5	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	6	1044950	(006501-	) Strap, Door, Dump, Side	2
▲	7	1030218	(006501-	) Cord, Sponge	1
▲	8	1212440	(006501-	) Seal, Door, Dump	1
▲	9	1044419	(006501-	) Plate, Retainer, Door, Dump	1
▲	10	06946	(006501-	) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	11	09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	2
	12	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
	13	1038176	(006501-	) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
	14	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
	15	630448	(006501-	) Pin, Clevis, 0.50d X 2.25l	1
	16	08236	(006501-	) Pin, Cotter, .156 X 1.25	2
	17	1211061	(006501-	) Door Wldt, Hppr	1
	18	1211096	(006501-	) Bracket Wldt, Door	2
	19	1040759	(006501-	) Bearing, Journal- 1.25 I.D. X .75 Lg	2
	20	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
	21	1213549	(006501-	) Pin, Clevis (Shoulder)	1
	22	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
	23	32491	(006501-	) Washer, Flat, 0.31, Std	1
	24	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	1
	25	1212373	(006501-	) Washer, Retainer, Door, Dump	2

Fig. 37 - Hopper Cover Group

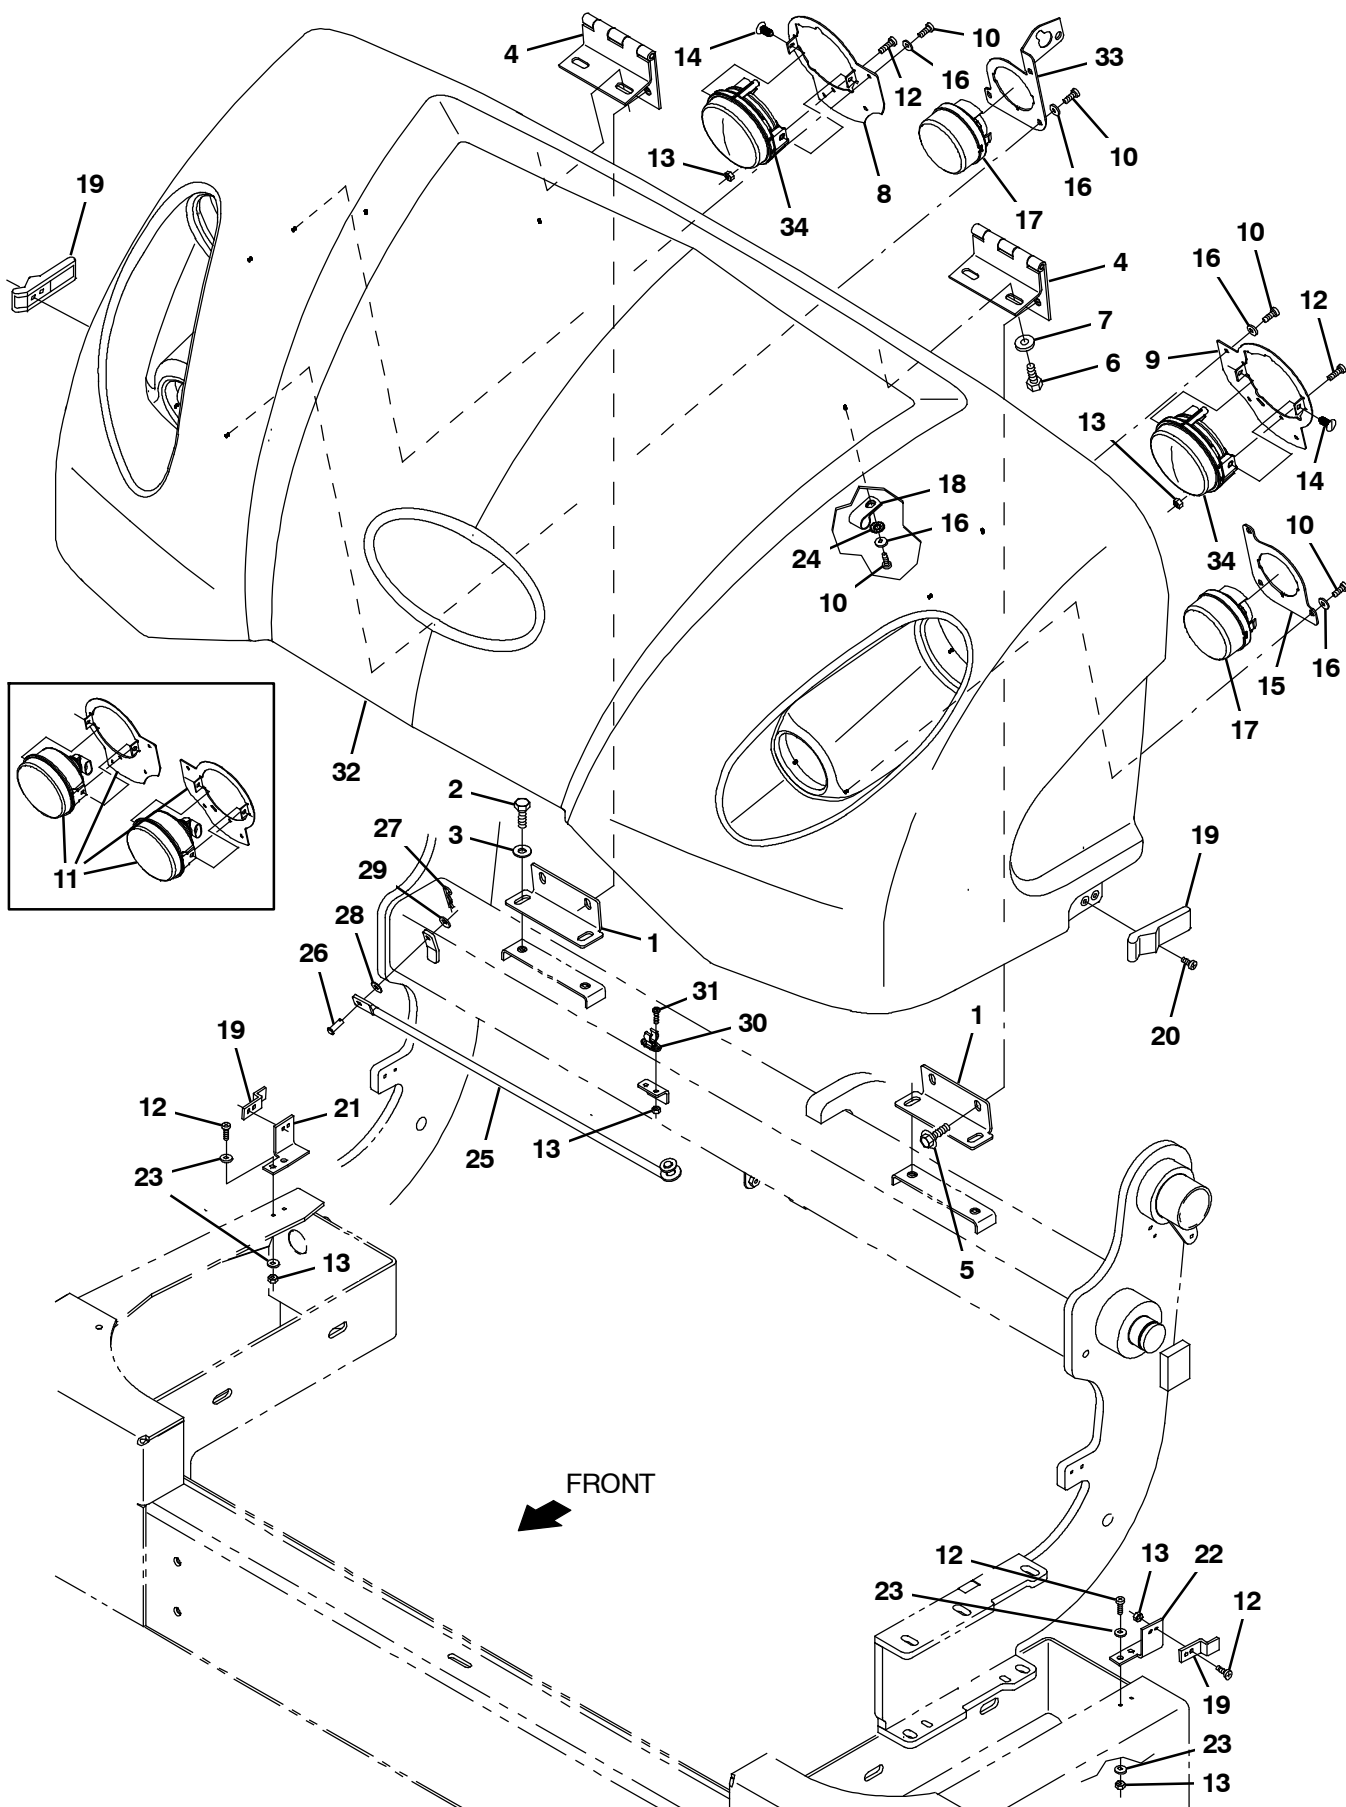


Fig. 37 - Hopper Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211012	(006501-	) Angle, Mtg, Cover, Hppr	2
2	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	4
3	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	4
4	1211024	(006501-	) Hinge Wldt, Mtg, Cover, Hppr [S30]	2
5	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
6	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	4
7	32491	(006501-	) Washer, Flat, 0.31, Std	4
8	1242881	(006948-	) Plate, Ring, Headlight, Rh	1
9	1242555	(006948-	) Plate, Ring, Headlight, Lh	1
10	360943	(006501-	) Screw, Pan, 12- 16 X 0.75, F/ Plstc	17
▽	11	9018569	(006501- 006947) Headlight Kit, Led, Replmt [S30]	1
▲		1060413	(006501- 006947) Lamp, 12vdc, 37.5watt, Halogen	1
	12	06927	(006501-) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	10
	13	02850	(006501-) Nut, Hex, Lock, M4 X 0.70, NI	12
	14	1066063	(006501-) Plug, Hole, Rnd, 0.25h 0.43l, Brb, Nyl	4
	15	1057934	(006501-) Plate, Ring, Light	1
	16	19066	(006501-) Washer, Flat, 10	17
	17	1029238	(006501-) Lens Assy, W/ Reflector	2
	18	82829	(006501-) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	4
	19	49800	(006501-) Latch	2
	20	49697	(006501-) Screw, Pan, Phl, M4 X 0.70 X 10, Ss	4
	21	1039971	(006501-) Bracket, Latch, Rh	1
	22	1039999	(006501-) Bracket, Latch, Lh	1
	23	19065	(006501-) Washer, Flat, 08	8
	24	41139	(006501-) Washer, Lock, Int- ext, 10	4
	25	1212389	(006501-) Rod Wldt, Prop, Cover, Hppr	1
	26	28296	(006501-) Pin, Clevis, 0.25d X 0.50l	1
	27	44906	(006501-) Pin, Cotter, Hair, 0.38d .093 Wir	1
	28	43454	(006501-) Washer, Flat, 0.34b 0.69d .06, Nyl	1
	29	32483	(006501-) Washer, Flat, 0.25, Sae	1
	30	1061002	(006501-) Clip, Grip, Rod, 0.49- 0.63, Blk Plstc.	1
	31	06927	(006501-) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	2
	32	1056815	(006501-) Cover, Hppr, Rm- Cptl, Trimmed	1
	33	1215646	(006501-) Plate, Ring, Light	1
	34	1242544	(006948-) Headlight, Led, Rnd [S20/S30 lc]	2

Fig. 38 - Hopper Lift Arms and Bumper Group

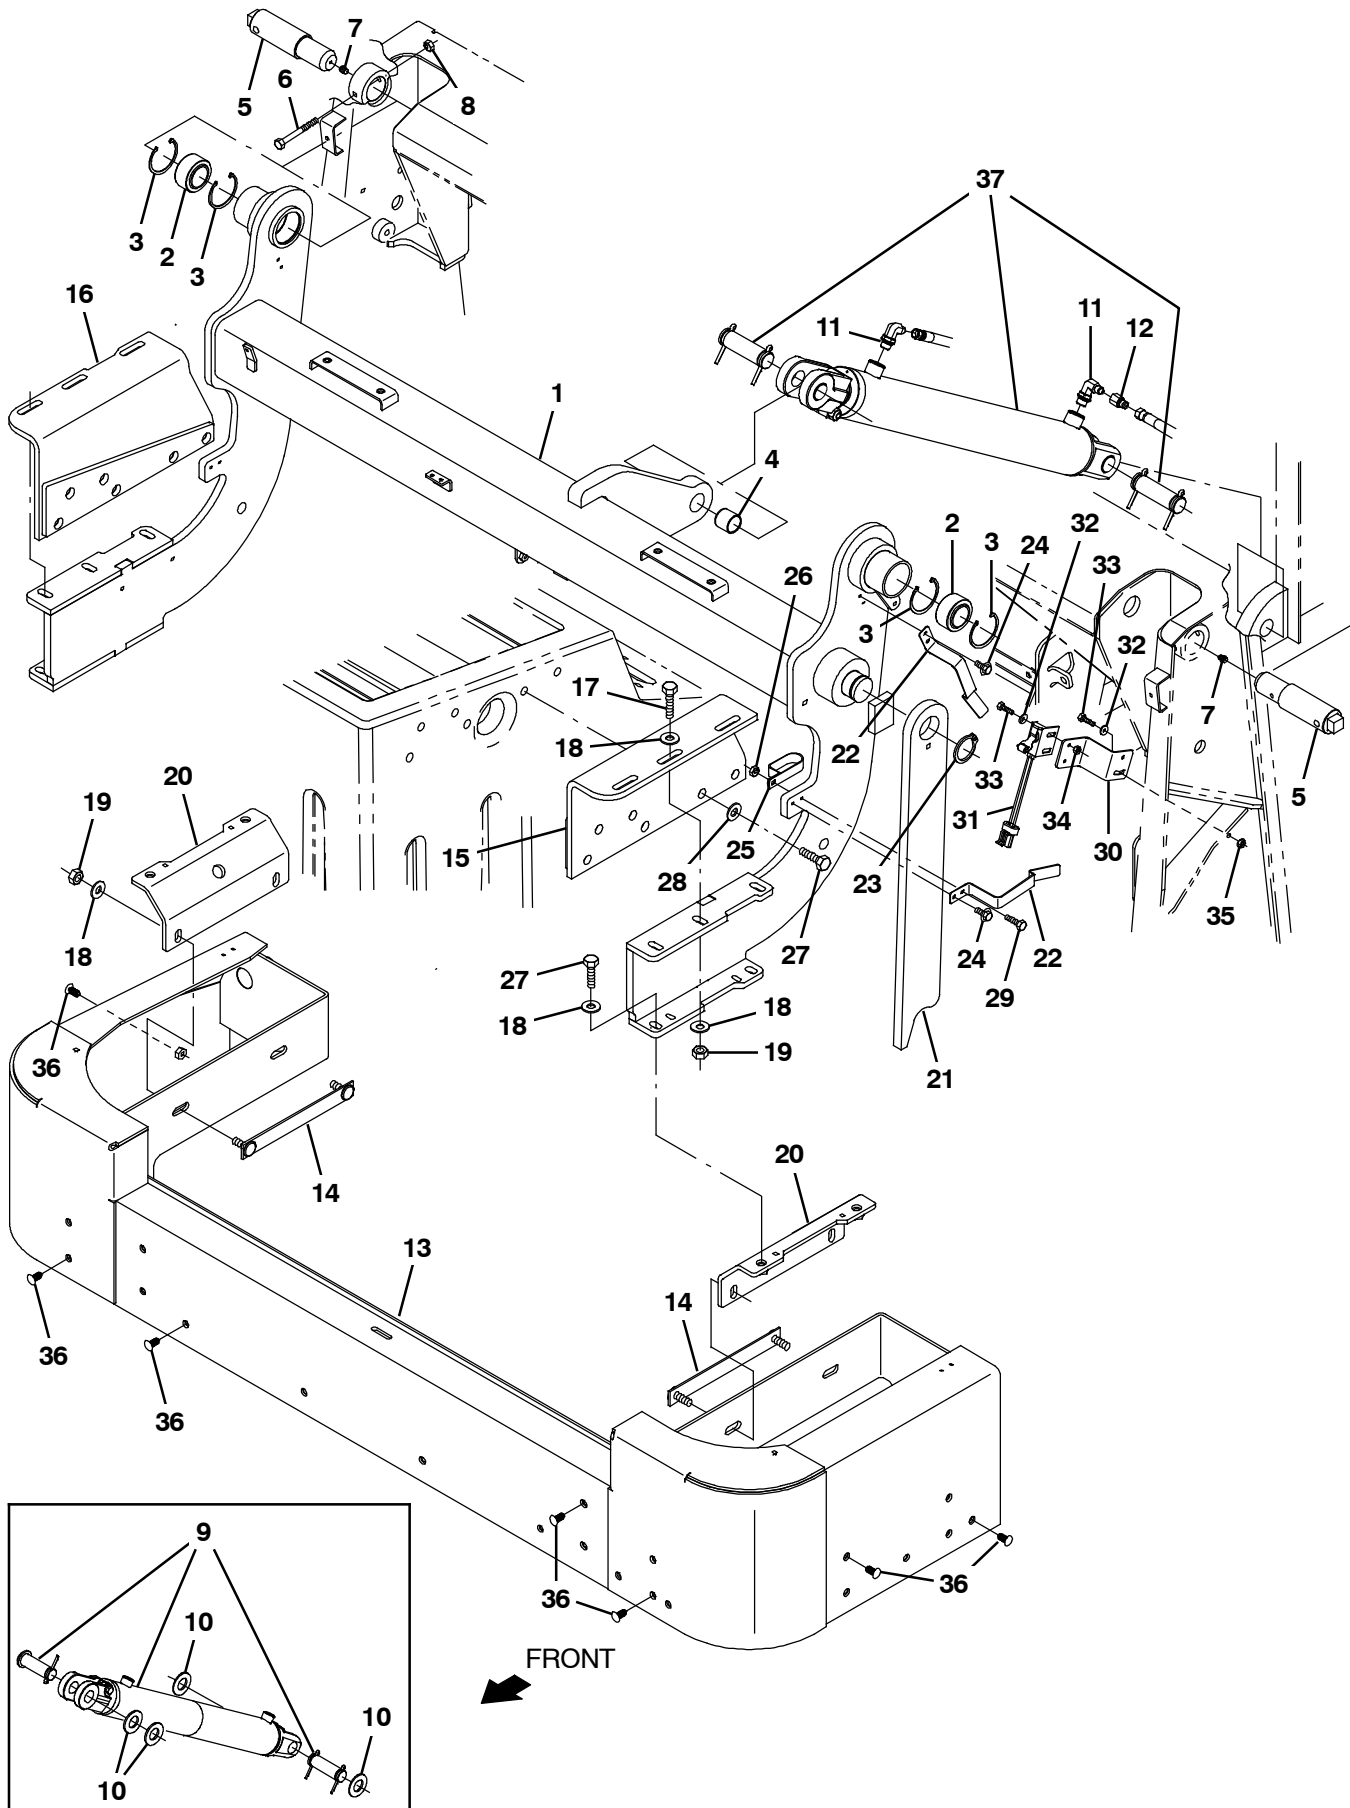


Fig. 38 - Hopper Lift Arms and Bumper Group

Ref.	Part No.	Serial Number	Description	Qty.	
1	1210785	(006501-	) Arm Wldt, Hppr, Rear Dump	1	
2	42120- 1	(006501-	) Bearing, Self Align, 1.25b 2.00d	2	
3	59542	(006501-	) Ring, Retaining, Int, 2.00d	4	
4	35529	(006501-	) Bushing, Sleeve, 1.00b 1.13d 0.99l, Fgl	1	
5	1212820	(006501-	) Pin, Lift, Hppr	2	
6	39279	(006501-	) Screw, Hex, M8 X 1.25 X 70, 8.8	2	
7	07259	(006501-	) Fitting, Grease, Str Pm04 .47l	2	
8	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2	
▽	9	1038915	(006501- 006823) Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000	1	
▲		373702	(006501- 006823) Seal Kit	1	
10	32598	(006501- 006823)	Washer, Flat, 1.02b 1.75d .12, Stl	4	
11	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	2	
12	1067059	(006501-	) Fitting, Hyd, Rst, Fm04/Of04, .047	1	
13	1212410	(006501-	) Bumper Wldt, Front	1	
14	1210948	(006501-	) Plate Wldt, Mtg, Bumper	2	
15	1210931	(006501-	) Bracket Wldt, Mtg, Hppr, Rh	1	
16	1210940	(006501-	) Bracket Wldt, Mtg, Hppr, Lh	1	
17	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	6	
18	01686	(006501-	) Washer, Flat, 0.44b 1.00d .08, Ss	16	
19	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	10	
20	1210954	(006501-	) Bracket Wldt, Mtg, Bumper	2	
21	9004527	(006501-	) Arm, Safety, Hppr, W/ Label, Replmt	1	
22	1210813	(006501-	) Clip, Spring, Prop Arm	2	
23	63296	(006501-	) Plate, Brake, Pedal	1	
24	222158	(006501-	) Screw, Hex, M6 X 1.00 X 10, Fmg	4	
25	67366	(006501-	) Clamp, Cable, Stl, 1.0x2.0x0.62w, 1hole	1	
26	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1	
27	39284	(006501-	) Screw, Hex, M10 X 1.50 X 35, 8.8	16	
28	32492	(006501-	) Washer, Flat, 0.38, Std	12	
29	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	1	
30	1212087	(006501-	) Bracket, Mtg, Switch	1	
31	367404	(006501-	) Switch, Snap, 15a No, Rlr	1	
32	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	4	
33	09252	(006501-	) Screw, Hex, M5 X 0.80 X 20, 8.8	4	
34	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	4	
35	07789	(006501-	) Nut, Hex, Fing, M5 X 0.80	2	
36	21168	(006501-	) Plug, Hole, Rnd, 0.25h 0.8l, Brb, Nyl	26	
▽	37	1048538	(006824-	) Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000	1
▲		9011419	(006824-	) Seal Kit, Cyl, Hyd	1

Fig. 39 - Hopper Counter Weight Group, Steel

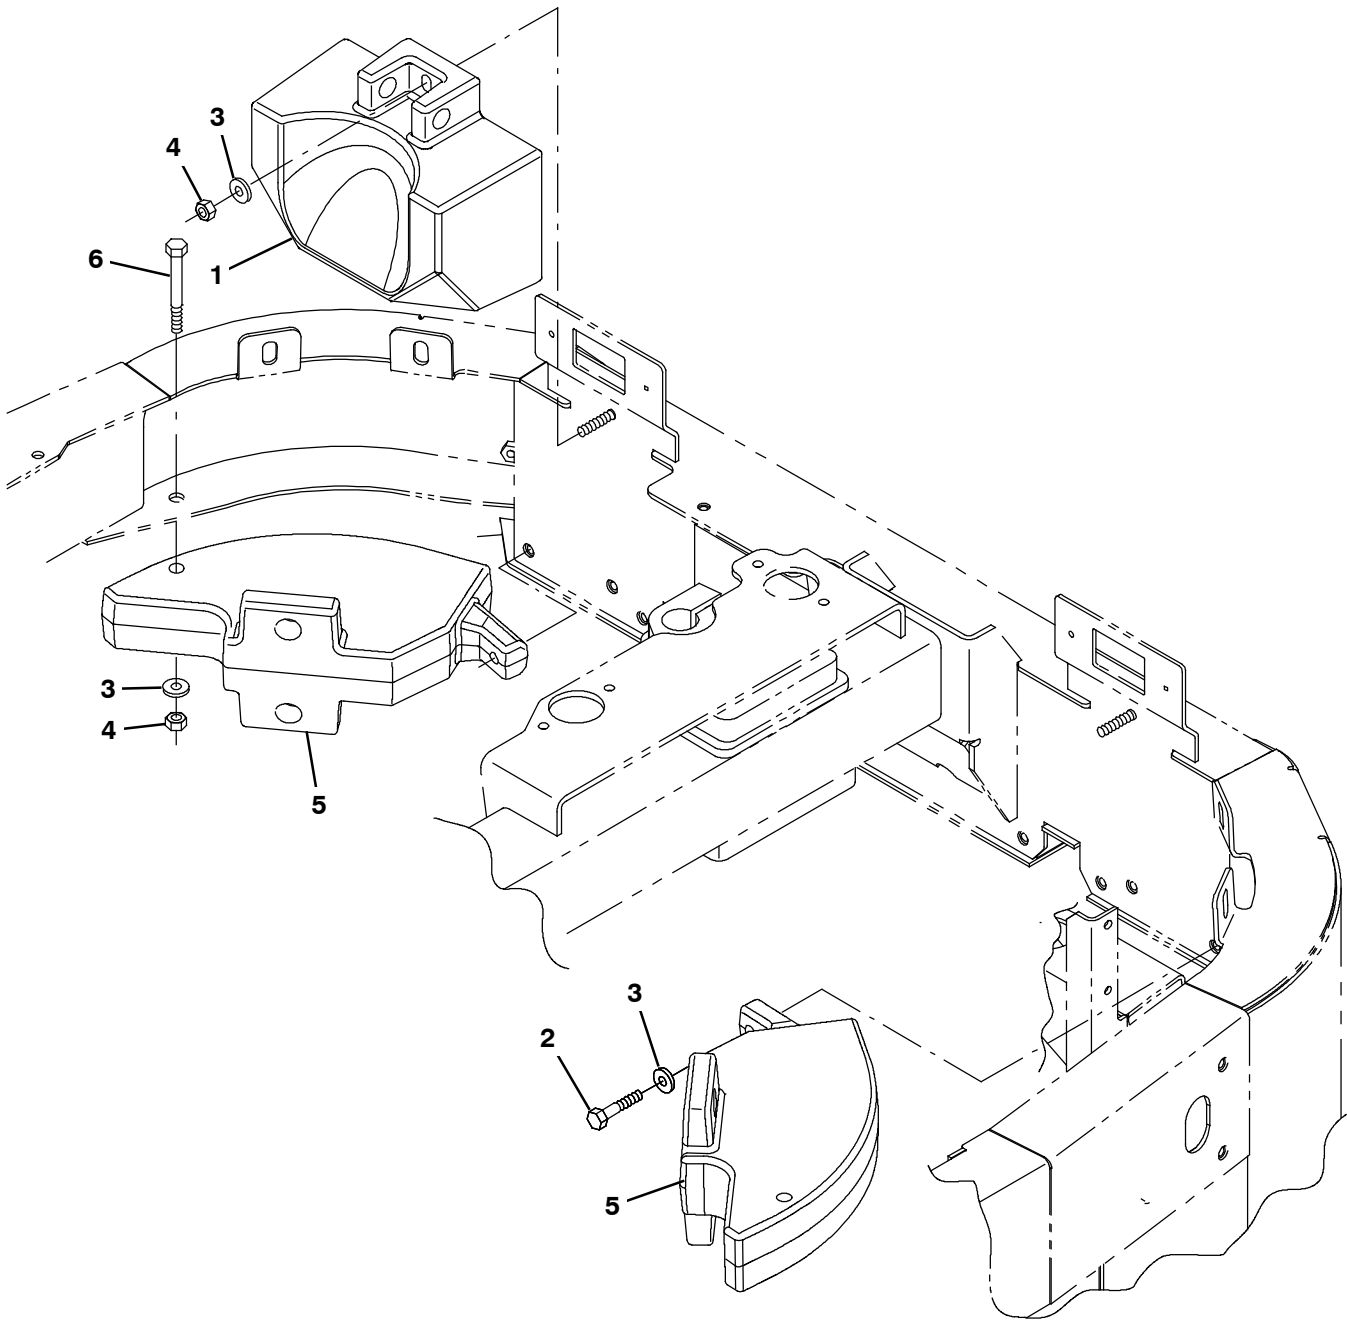


Fig. 39 - Hopper Counter Weight Group, Steel

Ref.	Part No.	Serial Number	Description	Qty.
1	1031503	(006501-	) Weight, Counter, Casting, 72.8lb	1
2	16930	(006501-	) Screw, Hex, M10 X 1.50 X 50, 8.8	3
3	32493	(006501-	) Washer, Flat, 0.50, Std	6
4	08714	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI, Ss	3
5	1034978	(006501-	) Weight, Counter, Casting, 52.8lb	2
6	03193	(006501-	) Screw, Hex, M10 X 1.50 X 90, 8.8	2

Fig. 40 - Hopper Pre-Filter Group

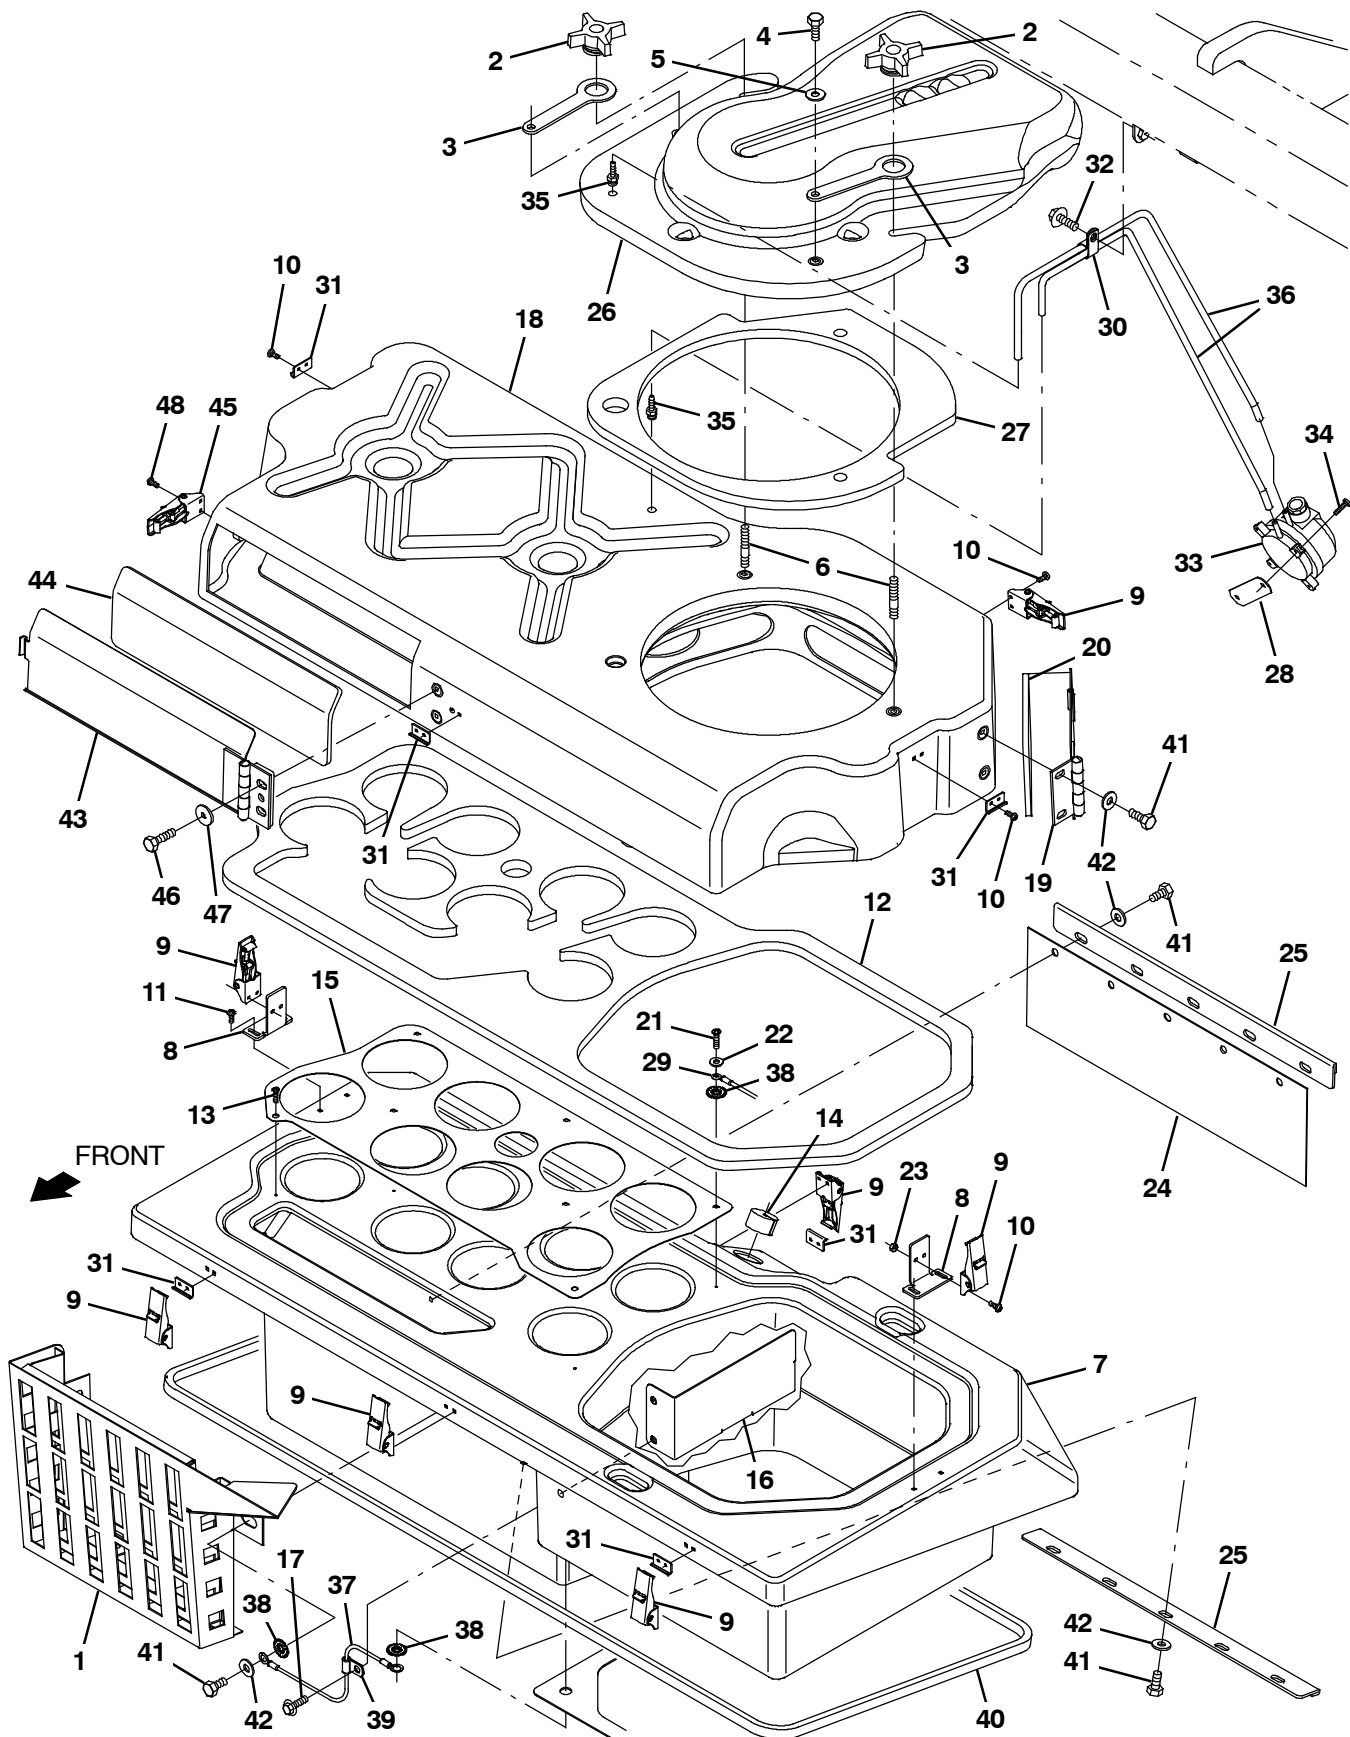


Fig. 40 - Hopper Pre-Filter Group

Ref.	Part No.	Serial Number	Description	Qty.
▽	1 1211263	(006501-	) Panel Wldt, Perma Filter	1
▲	9013364	(006501-	) Strap Kit, Knob, Filtr Box [S30]	1
▲	2 1048335	(006501-	) Knob, Star, 2.75d 4ear 1.1l M8x1.25	2
▲	3 1048353	(006501-	) Strap, Rbr	2
▲	4 15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	2
▲	5 01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	2
▲	6 1049860	(006501-	) Stud, M8 X 1.25 [55.0]	2
	7 1210746	(006501-	) Box, Lower, Cyclone, Trimmed	1
	8 1213221	(006501-	) Bracket, Mtg, Cyclonics	2
	9 384418	(006501-	) Latch, Door [Southco 91- 562- 07]	7
	10 06925	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 6, 4.8	16
	11 24265	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	4
	12 1210796	(006501-	) Gasket, Tray, Cyclonic	1
	13 360943	(006501-	) Screw, Pan, Phl, 10- 14 X 0.75, F/ Plstc	7
	14 1049982	(006501-	) Seal, Foam	1
	15 1213817	(006501-	) Plate, Grounding, Cyclone	1
	16 1213825	(006501-	) Bracket Wldt	1
	17 1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3
	18 1211007	(006501-	) Box, Pre- Filter, Upper	1
	19 1212149	(006501-	) Door Wldt, Cleanout	1
	20 1212512	(006501-	) Seal, Cleanout Door	1
	21 09200	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 12, Ss	1
	22 01683	(006501-	) Washer, Flat, 10, Ss	1
	23 02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	4
	24 1211566	(006501-	) Seal Assy, Door, Cyclonics	1
	25 1211554	(006501-	) Retainer, Seal, Door	2
	26 1210996	(006501-	) Cover, Filter, Trimmed	1
	27 1213191	(006501-	) Gasket, Cover	1
	28 1213382	(006501-	) Plate, Sensor, Pressure	1
	29 1074155	(006501-	) Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring	1
	30 67767	(006501-	) Clamp, Cable, Stl, 0.69d X 0.62w, 1hole	1
	31 384419	(006501-	) Bracket, Latch, Keeper [Southco]	6
	32 1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	1
	33 9009247	(006501-	) Switch Kit, Press, Replmt[S30]	1
	34 06927	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	2
	35 40607	(006501-	) Fitting, Brs, Str, Bm03/Pm02	2
	36 1031576	(006501-	) Hose, Afmkt, Vacuum, 0.16id, 08ft	1
	37 1074156	(006501-	) Wire, 10ga, 15.0l, Grn, M8 Ring/M8 Ring	1
	38 41140	(006501-	) Washer, Lock, Int- Ext, 0.25	3
	39 46236	(006501-	) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
	40 1211682	(006501-	) Seal, Hopper, Box, Lower	1
	41 15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	14
	42 01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	14
	43 1233504	(008826-	) Door Wldt, Cleanout [S30]	1
	44 1236153	(008826-	) Seal, Cleanout Door	1
	45 384418	(008826-	) Latch, Door [Southco 91- 562- 07]	1
	46 1037355	(008826-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	47 32491	(008826-	) Washer, Flat, 0.31, Std	2
	48 24265	(008826-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2

Fig. 41 - Hopper Vacuum Fan Group

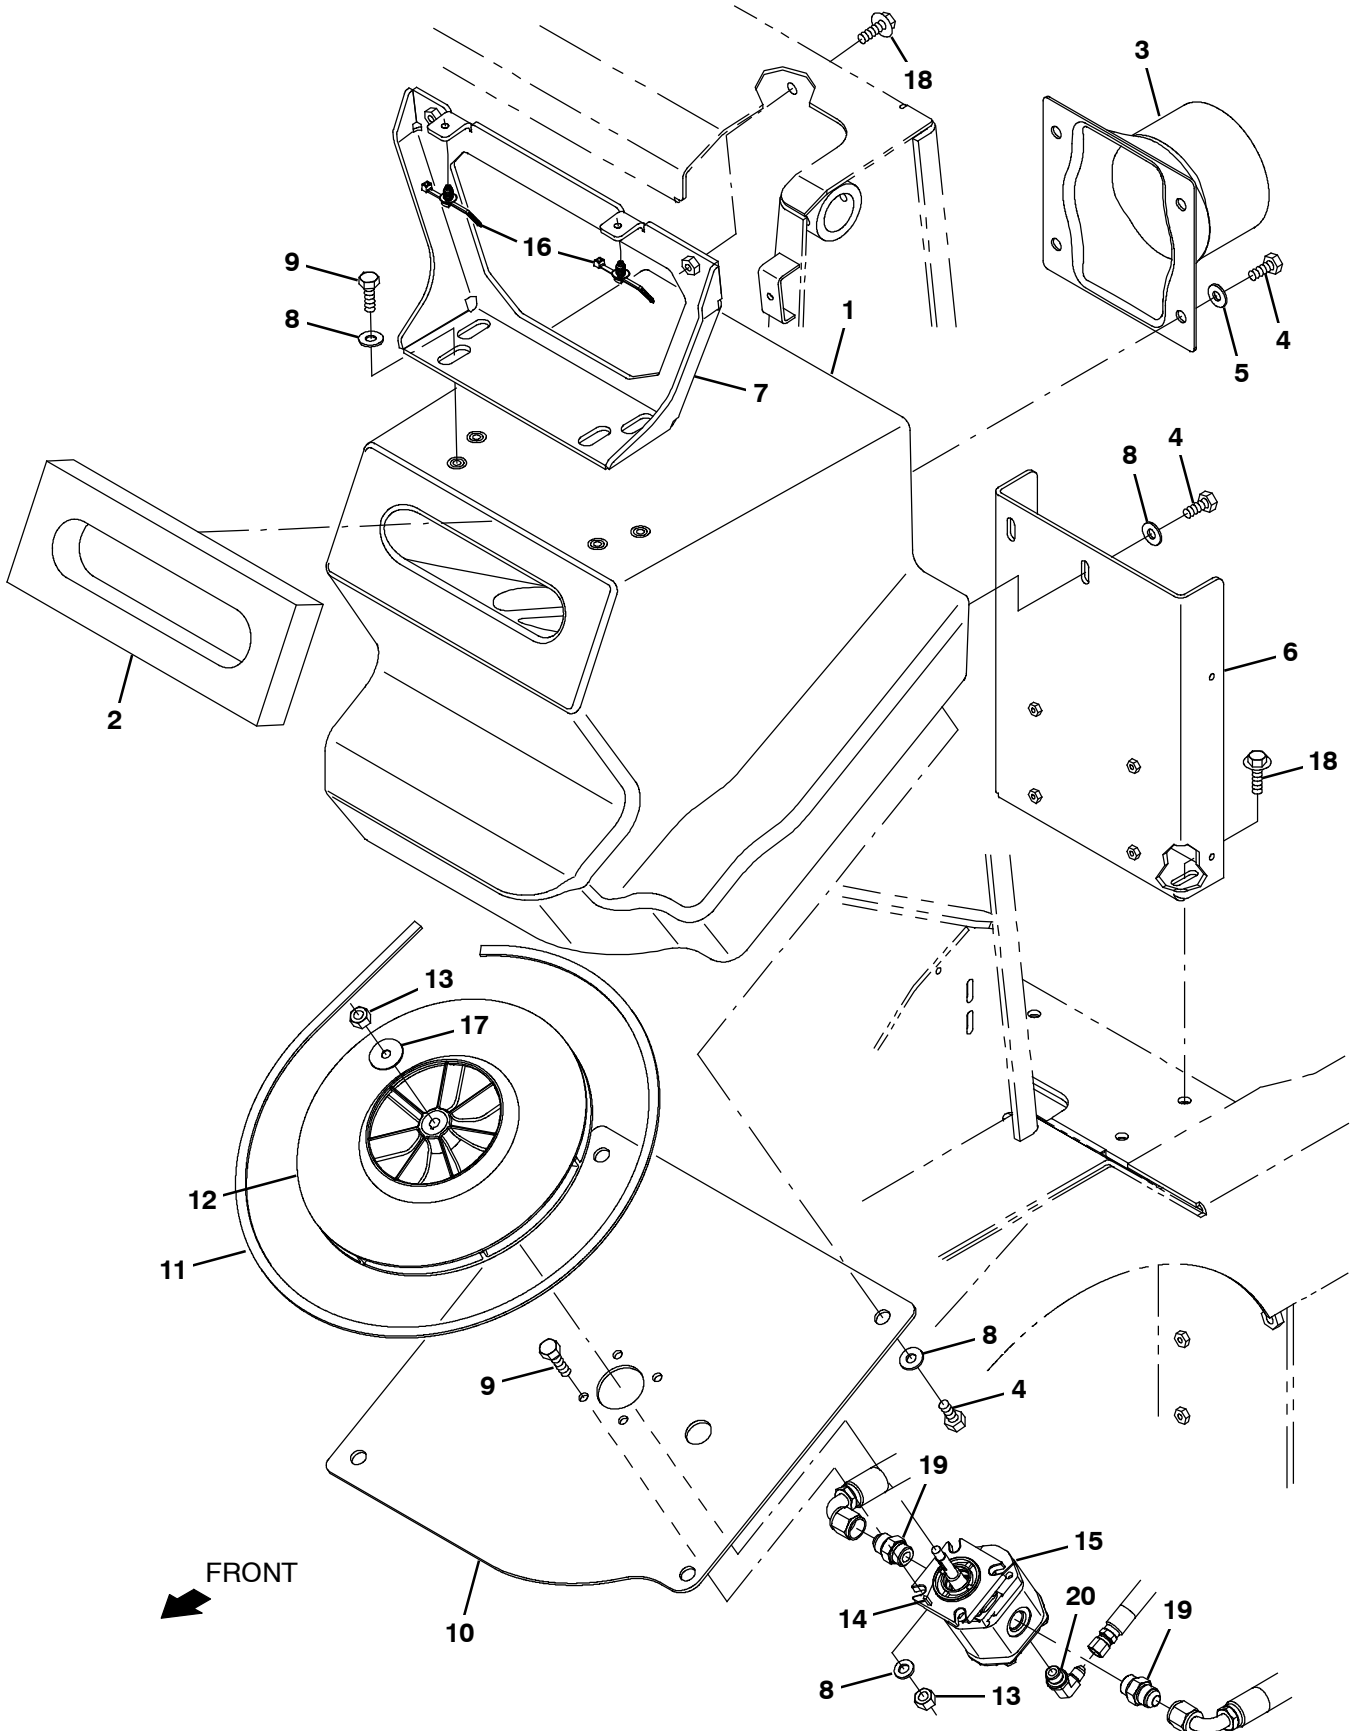


Fig. 41 - Hopper Vacuum Fan Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211570	(006501-	) Housing, Fan, Rm- Cphg	1
2	1212709	(006501-	) Gasket, Vacuum	1
3	1031122	(006501-	) Duct, Outlet, Vacuum	1
4	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	8
5	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	4
6	1215033	(006501-	) Bracket Wldt, Mtg, Fan	1
7	1212592	(006501-	) Bracket Wldt, Mtg, Fan	1
8	32491	(006501-	) Washer, Flat, 0.31, Std	12
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	8
10	1211691	(006501-	) Plate, Fan, [Phoenix]	1
11	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
12	1039127	(006501-	) Impeller Assy, Vacfan [Coyote]	1
13	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	5
14	00960	(006501-	) Key, Sq, 0.12 X 0.12, 0.50l	1
15	1039846	(006501-	) Motor, Hyd, Gear, Ext 0.28 Rh 3000	1
16	1210807	(006501-	) Wire, Tie [W/.25" Fir Tree Clip]	2
17	30013	(006501-	) Washer, Flat, 0.31, Fendr	1
18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
19	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	2
20	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	1

Fig. 42 - Hopper Filter Shaker Group

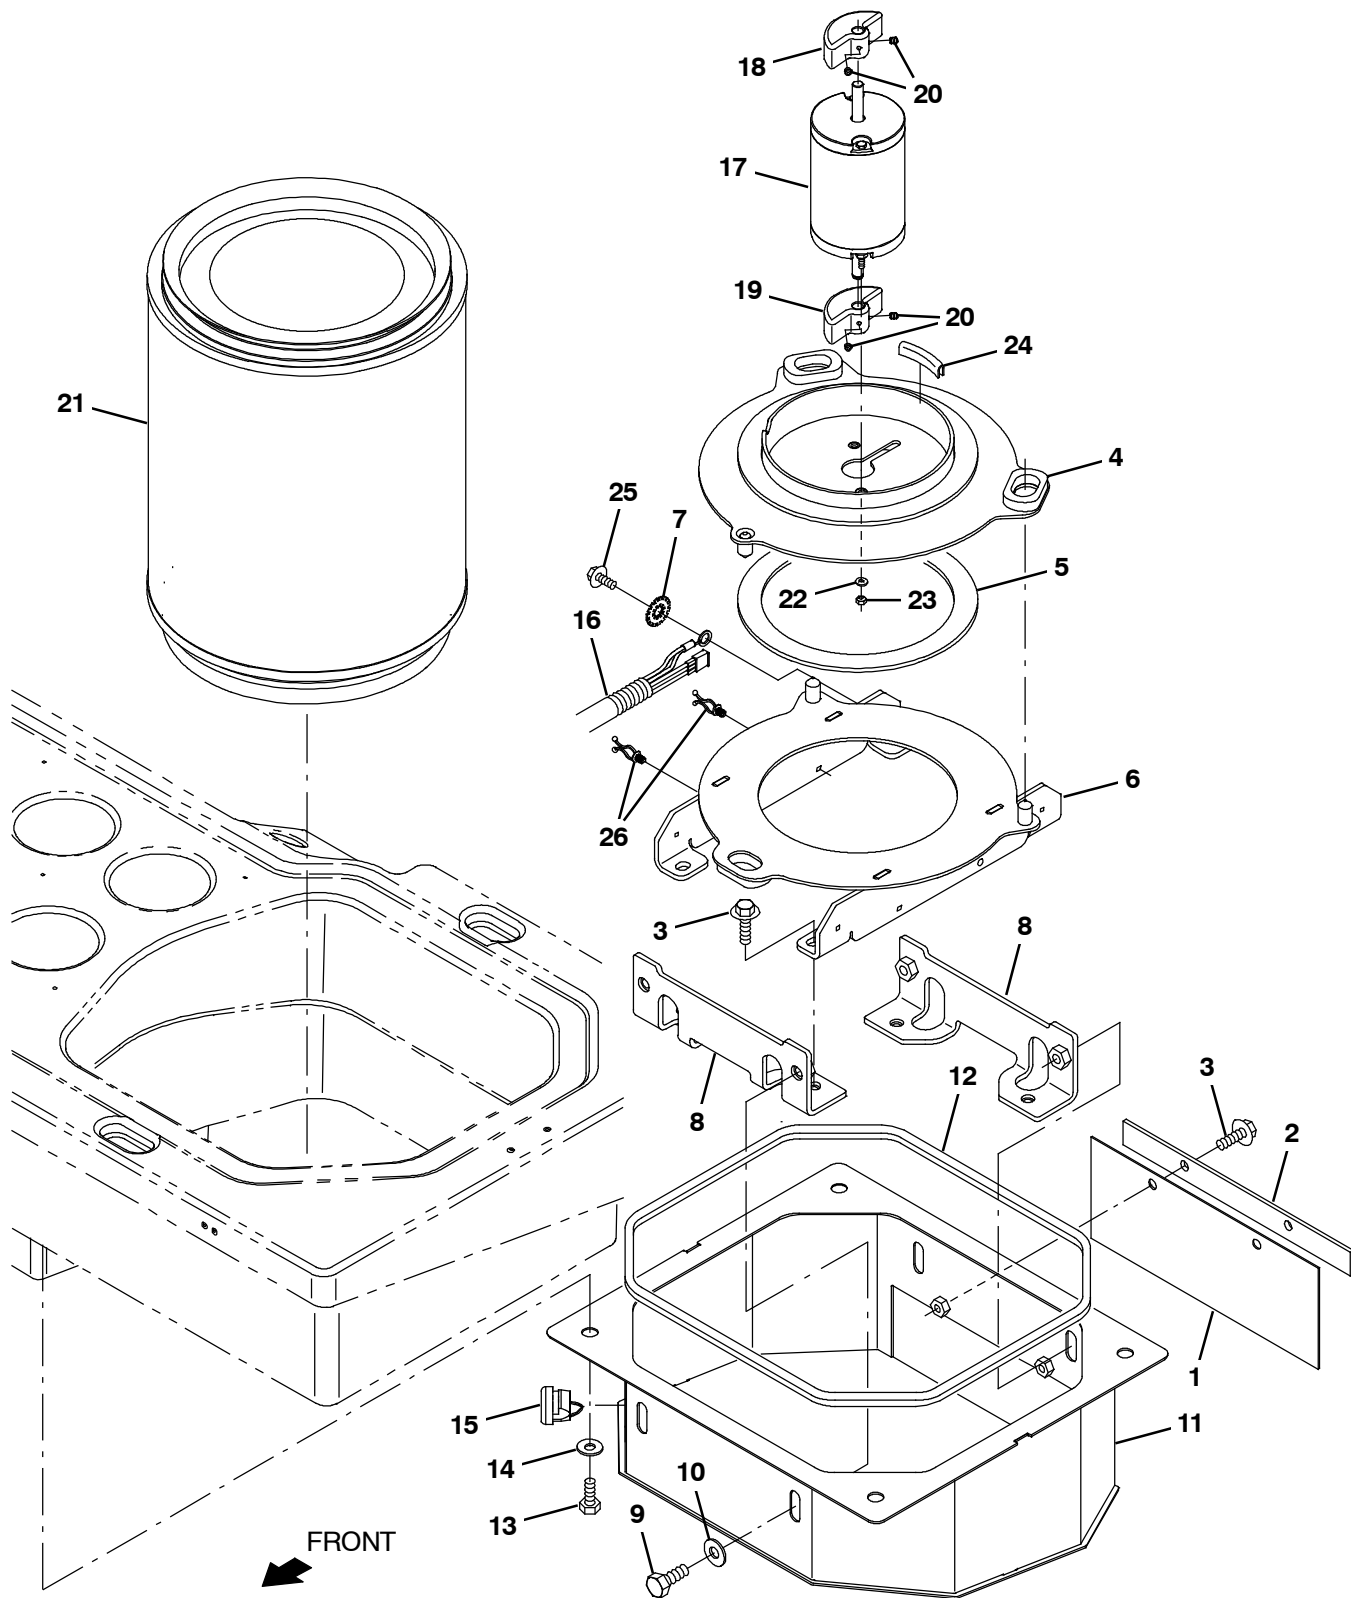


Fig. 42 - Hopper Filter Shaker Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211378	(006501-	) Seal Assy, Door, Shagr	1
2	1211409	(006501-	) Retainer, Seal, Door	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
4	1044352	(006501-	) Bracket Wldt, Fltr	1
5	1044351	(006501-	) Spacer, Fltr	1
6	1211379	(006501-	) Bracket Wldt, Shagr, Filter	1
7	41140	(006501-	) Washer, Lock, Int- Ext, 0.25	1
8	1211382	(006501-	) Angle Wldt, Mtg, Shagr	2
9	06961	(006501-	) Screw, Hex, M10 X 1.5	4
10	32492	(006501-	) Washer, Flat, 0.38, Std	4
11	1211353	(006501-	) Tray Wldt, Debris, Filter	1
12	1211685	(006501-	) Seal, Tray, Debris, Shaker	1
13	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	4
14	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	4
15	1051199	(006501-	) Strainrelief	1
16	1047717	(006501-	) Harness, Shagr, Motor [S20]	1
17	1075327	(006501-	) Motor, Ele, 12vdc 2108rpm 0.09hp 07.0a	1
18	1053291	(006501-	) Weight, Eccentric, Pntd	1
19	1053321	(006501-	) Weight, Eccentric, Pntd	1
20	39322	(006501-	) Screw, Set, Soc, 10- 24 X 0.38, Al	4
21	1045900	(006501-	) Filter, Cyl, 11.09d, 13.31l, 6.724 ld	1
22	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
23	86618	(006501-	) Nut, Hex, Lock, #10- 32, NI	2
24	50850	(006501-	) Molding, Trim, Pvc, .08- .11 03.2l	1
25	74455	(006501-	) Screw, Hex, M6 X 1.00 X 12, Fmg	1
26	30406	(006501-	) Clip, Keeper	2

Fig. 43 - Side Brush Lift Group, S30

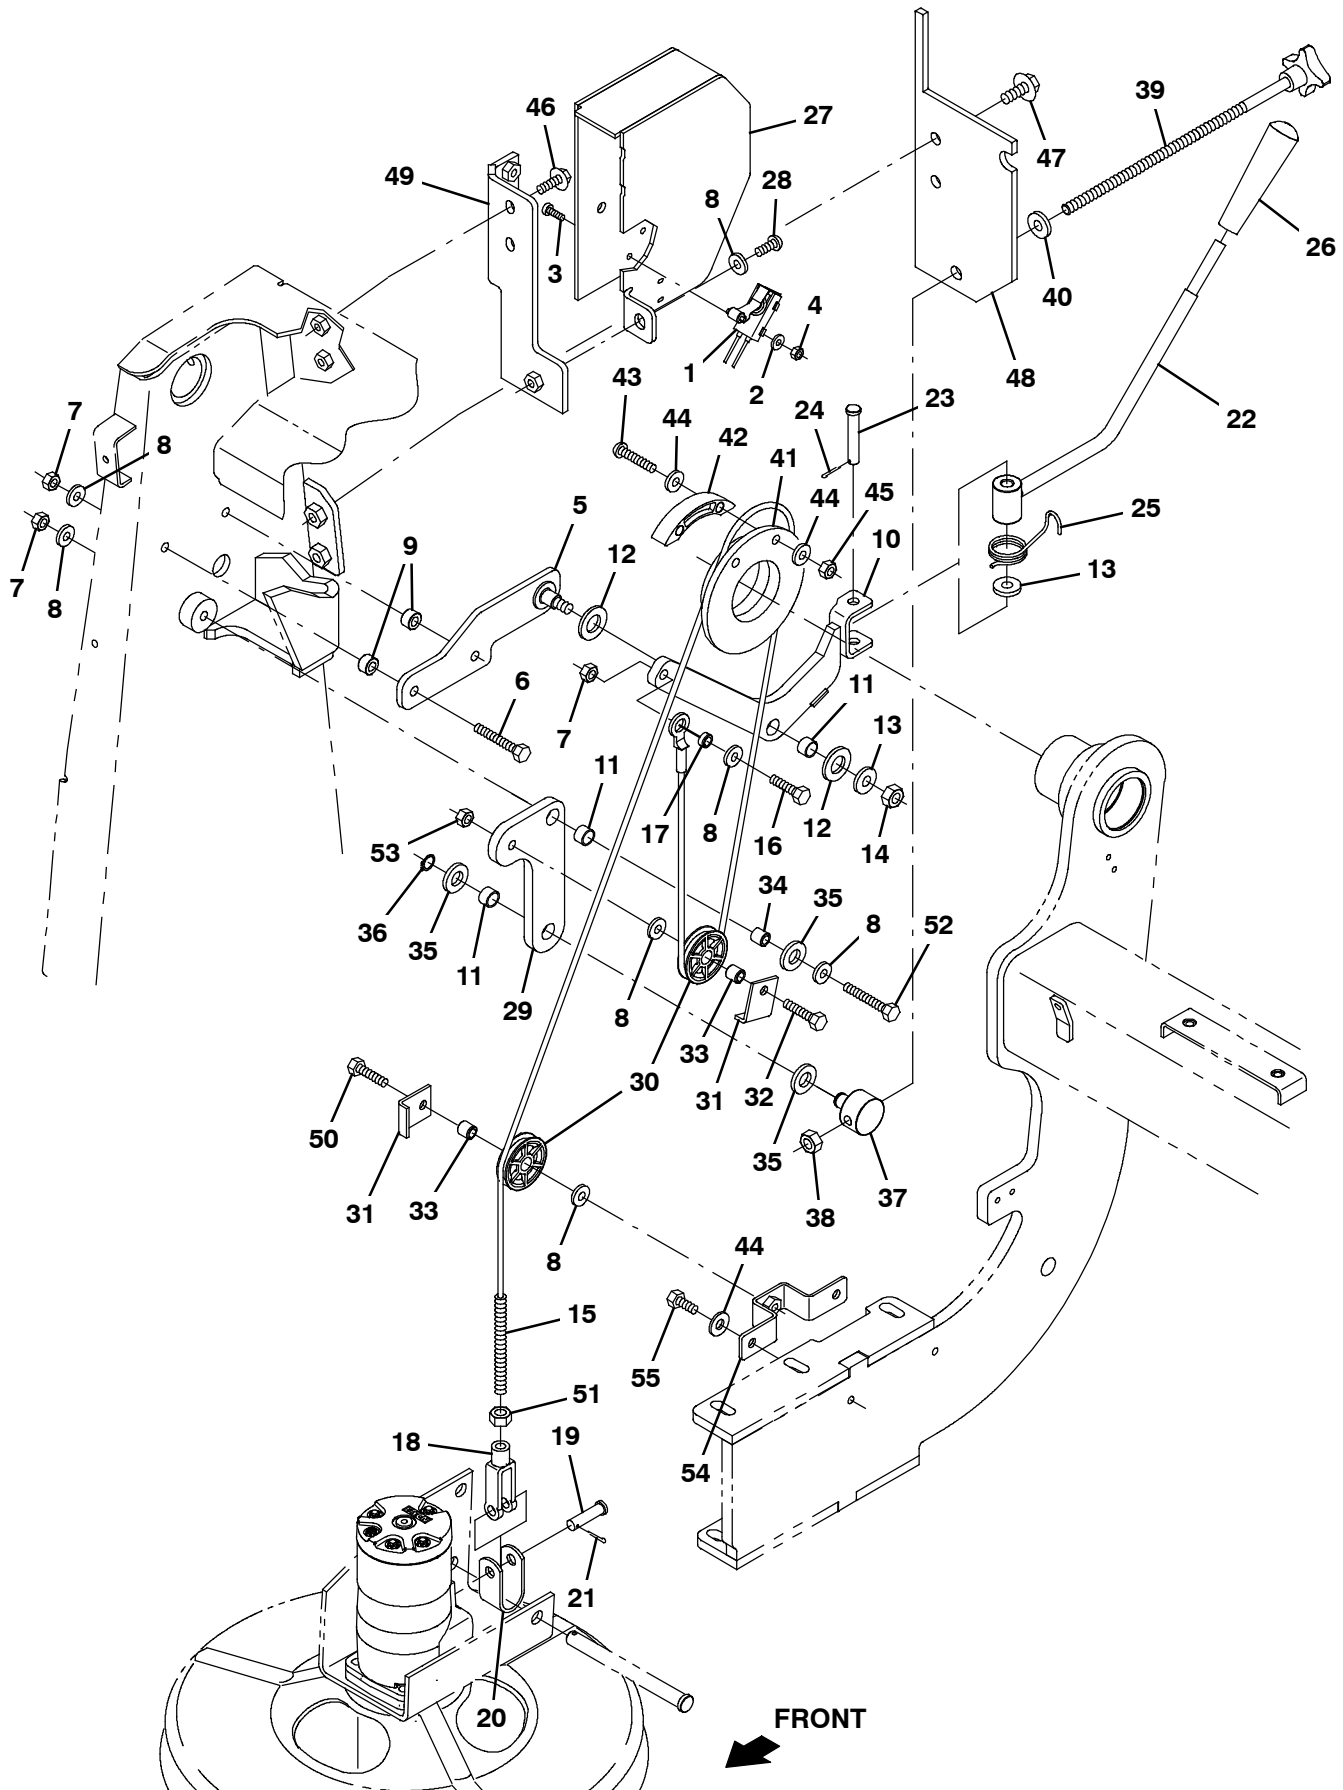


Fig. 43 - Side Brush Lift Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	367403	(006501-	) Switch, Snap, 15a Nc, Rlr	1
2	19066	(006501-	) Washer, Flat, 10	2
3	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	2
4	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
5	1038329	(006501-	) Bracket Wldt, Brush, Side	1
6	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	2
7	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
8	39349	(006501-	) Washer, Flat, 0.31, Sae	11
9	360460	(006501-	) Sleeve, P/M, 0.33b 0.63d 0.4l, Ss / Oil	2
10	1038372	(006501-	) Lever Wldt, Brush, Side	1
11	64173	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.38l, Stl	3
12	64425	(006501-	) Washer, Thrust, 0.61b 1.25d .06, Fgl	2
13	32485	(006501-	) Washer, Flat, 0.38, Sae	2
14	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
15	1036702	(006501-	) Cable, Glv .13d 063.4l .50eye / M10	1
16	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
17	360801	(006501-	) Sleeve, 0.31b 0.50d 0.3l, Ss	1
18	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
19	29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	1
20	59899	(006501-	) Bracket, U, .12, 1.2w 2.3 1.0l, 2/0.6h	1
21	08179	(006501-	) Pin, Cotter, .094 X 1.00	1
22	1037265	(006501-	) Arm Wldt, Lever	1
23	51813	(006501-	) Pin, Clevis, 0.37d X 2.12l	1
24	08182	(006501-	) Pin, Cotter, .125 X 1.00	1
25	1037476	(006501-	) Spring, Tors, 1.09id .11wir 03.0coil	1
26	54995	(006501-	) Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr]	1
27	1038101	(006501-	) Bracket Wldt	1
28	1031665	(006501-	) Screw, Pan, M8 X 1.25 X 25, Blk	3
29	1038060	(006501-	) Plate, Adj, Brush	1
30	369781	(006501-	) Pulley, Cable, 1.5d Nyl	2
31	54400	(006501-	) Bracket, Angle, Keeper, Cable	2
32	59658	(006501-	) Screw, Hex, M8 X 1.25 X 35, NI, Ss	1
33	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
34	223609	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
35	32486	(006501-	) Washer, Flat, 0.50, Sae	3
36	86953	(006501-	) Ring, Retaining, Ext, 0.50d, Ss	1
37	1039228	(006501-	) Pivot, Adj, Brush	1
38	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
39	1039553	(006501-	) Knob Assy,Star,1.97d 4ear M10x1.5 10.75l	1
40	763042	(006501-	) Washer, Flat, Belleville, M10	1
41	1034760	(006501-	) Pulley, Cable, 3.1d 2.30b, .19d Cable	1
42	1034763	(006501-	) Retainer, Pulley	1
43	397826	(006501-	) Screw, Btn, M8 X 1.25 X 40, Ss	2
44	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	6
45	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	2
46	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2
47	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	2
48	1060763	(006501-	) Plate, Lift, Brush	1
49	1038896	(006501-	) Plate, Lift, Brush	1
50	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
51	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
52	39278	(006501-	) Screw, Hex, M8 X 1.25 X 50, 8.8	1
53	39311	(006501-	) Nut, Hex, Std, M8 X 1.25	1
54	1210805	(006501-	) Bracket Wldt, Arm	1
55	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	1

Fig. 44 - Side Brush Motor and Pivot Group, S30

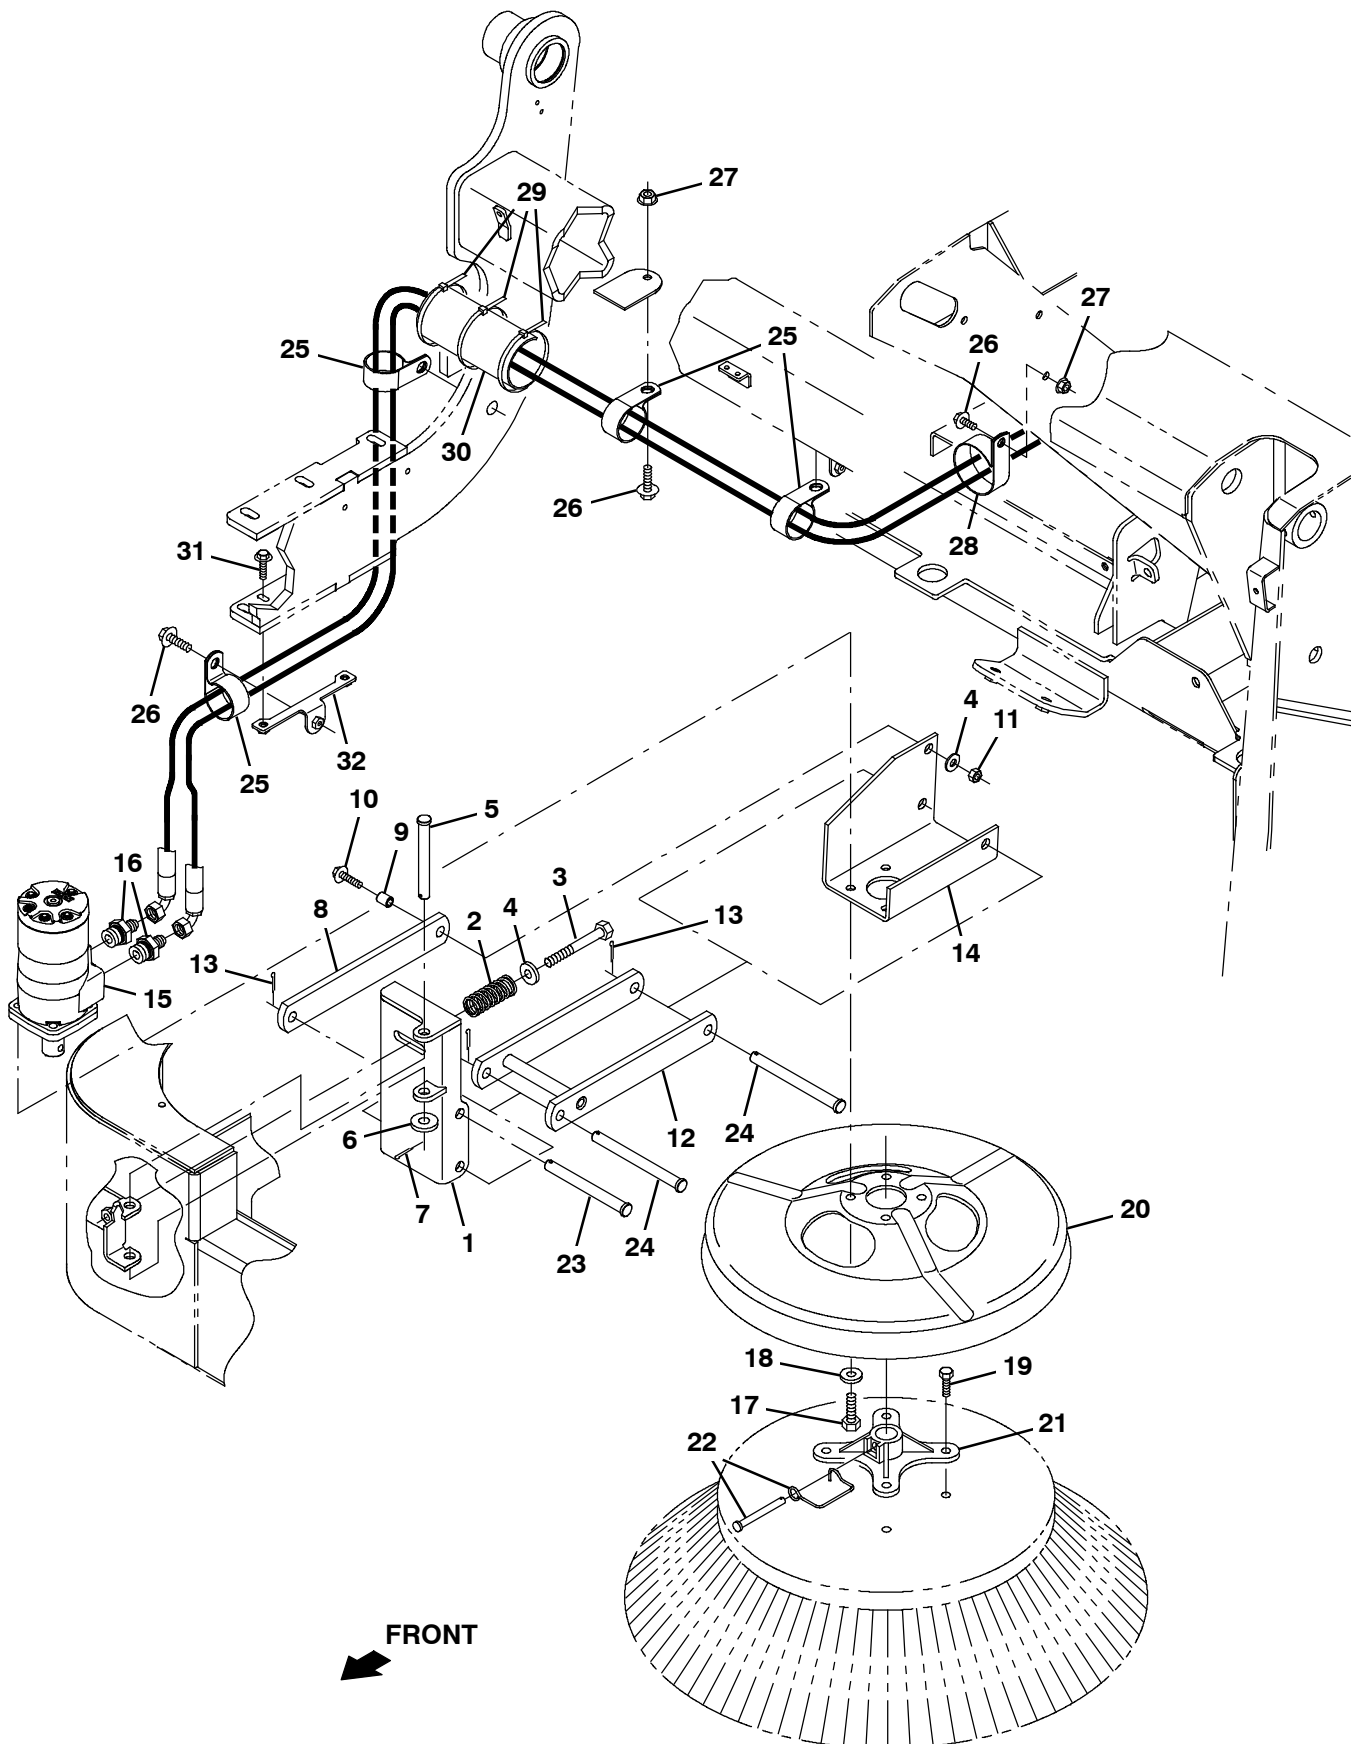


Fig. 44 - Side Brush Motor and Pivot Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1029704	(006501-	) Pivot Wldt, Brush, Side	1
2	45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
3	06965	(006501-	) Screw, Hex, M10 X 1.50 X 80, 8.8	1
4	32485	(006501-	) Washer, Flat, 0.38, Sae	2
5	222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
6	32486	(006501-	) Washer, Flat, 0.50, Sae	1
7	08175	(006501-	) Pin, Cotter, .125 X 1.25	1
8	1029709	(006501-	) Arm, Brush, Side	1
9	80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
10	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
12	1029682	(006501-	) Arm Wldt, Brush, Side	1
13	08182	(006501-	) Pin, Cotter, .125 X 1.00	3
14	1029674	(006501-	) Bracket, Mtg, Motor, Side Brush	1
15	1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
16	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
17	46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
18	32492	(006501-	) Washer, Flat, 0.38, Std	4
19	39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
20	1054256	(006501-	) Guard, Brush	1
21	47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
22	84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
23	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
24	51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
25	53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	4
26	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
27	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
28	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	2
29	44961	(006501-	) Tie, Cable, Nyl, 14.5l .30w 4.0 Max D	3
30	762179	(006501-	) Guard, Hose, Rbr, 5.0l	1
31	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
32	1213656	(006501-	) Bracket, Wldt,Mtg,Hyd	1

Fig. 45 - Side Brush Motor Group, S30 XP

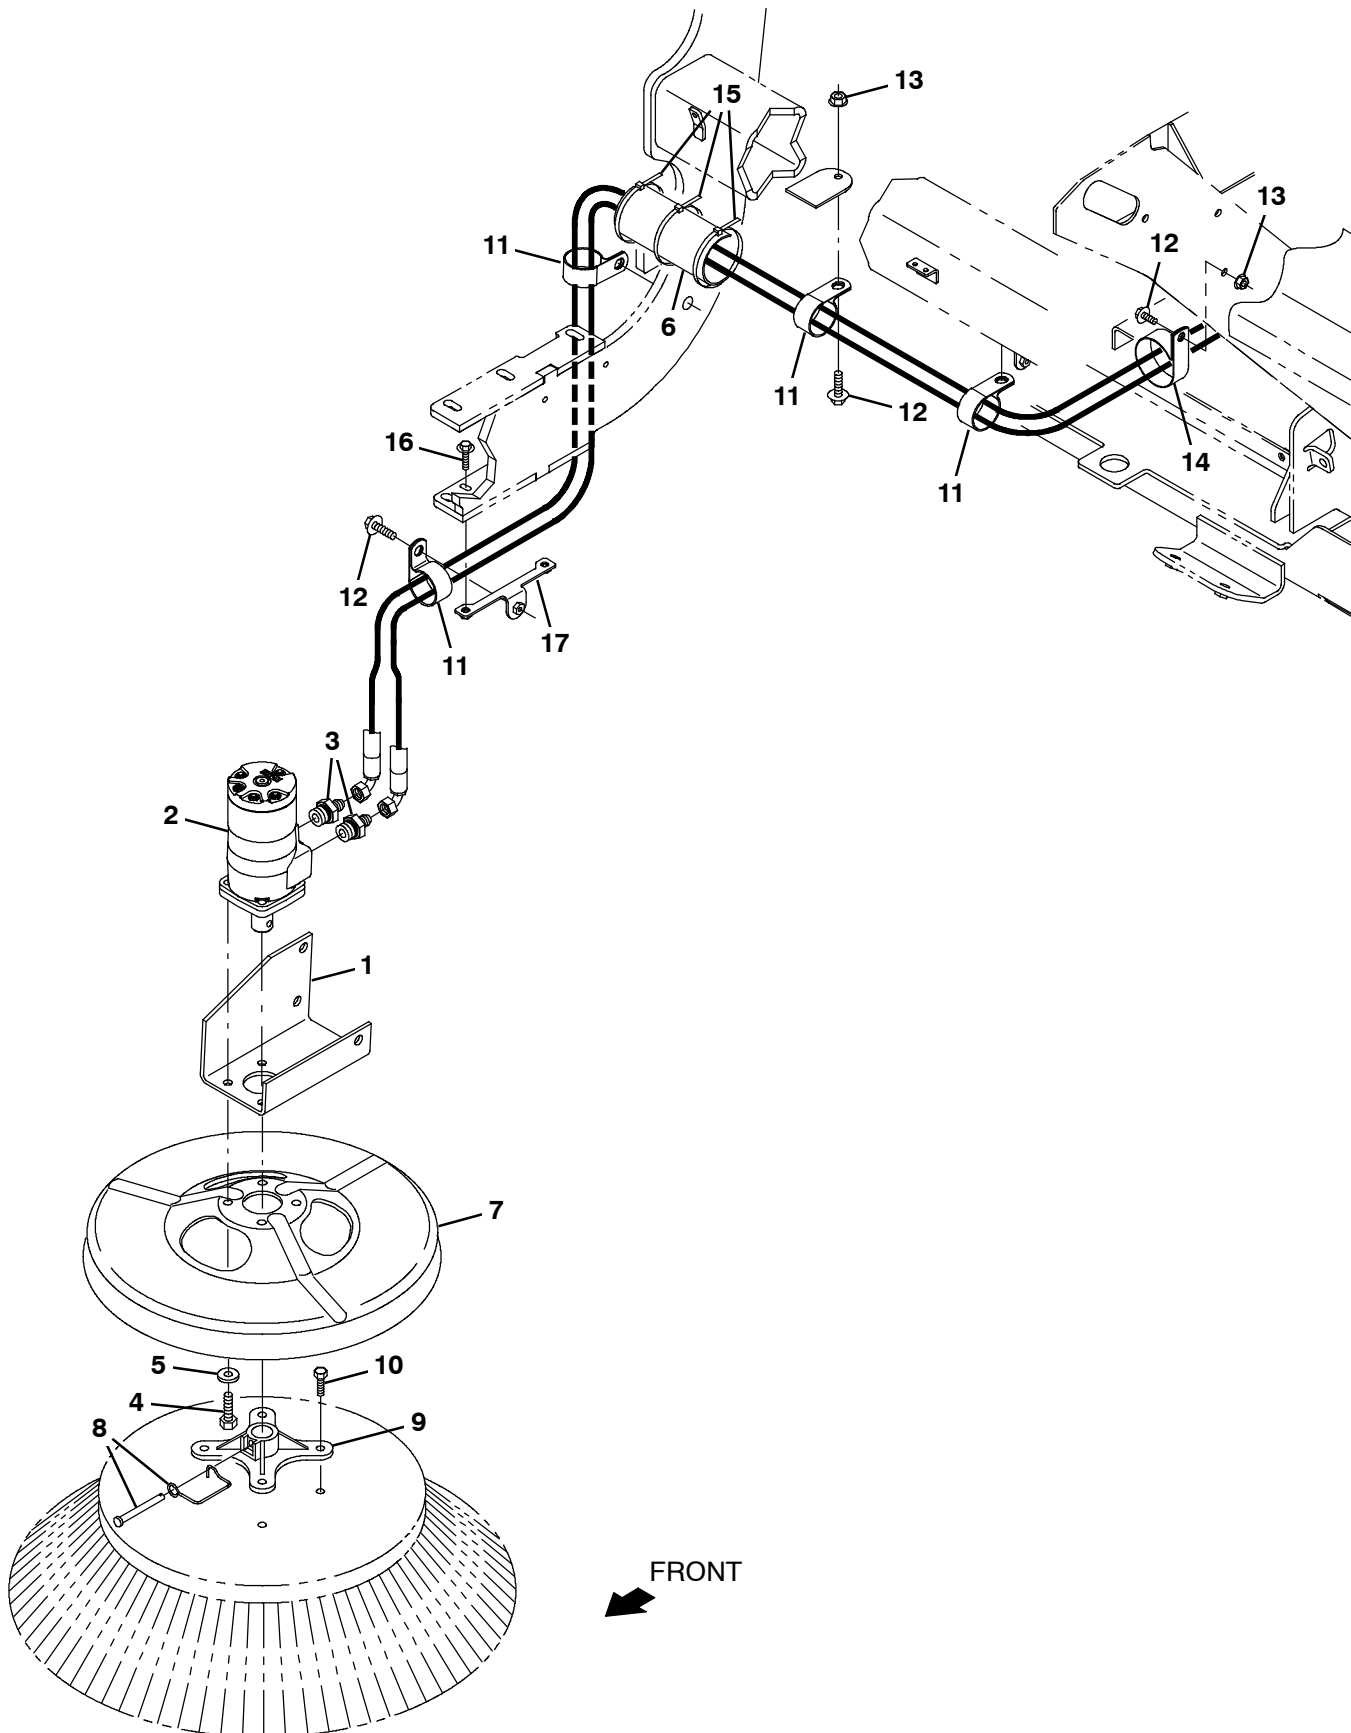


Fig. 45 - Side Brush Motor Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1029674	(006501-	) Bracket, Mtg, Motor, Side Brush	1
2	1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
3	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
4	46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
5	32492	(006501-	) Washer, Flat, 0.38, Std	4
6	762179	(006501-	) Guard, Hose, Rbr, 5.0l	1
7	1054256	(006501-	) Guard, Brush	1
8	84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
9	47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
10	39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
11	53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	4
12	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
13	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
14	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	2
15	44961	(006501-	) Tie, Cable, Nyl, 14.5l .30w 4.0 Max D	3
16	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
17	1213656	(006501-	) Bracket, Wldt,Mtg,Hyd	1

Fig. 46 - Side Brush Lift and Pivot Group, S30 XP

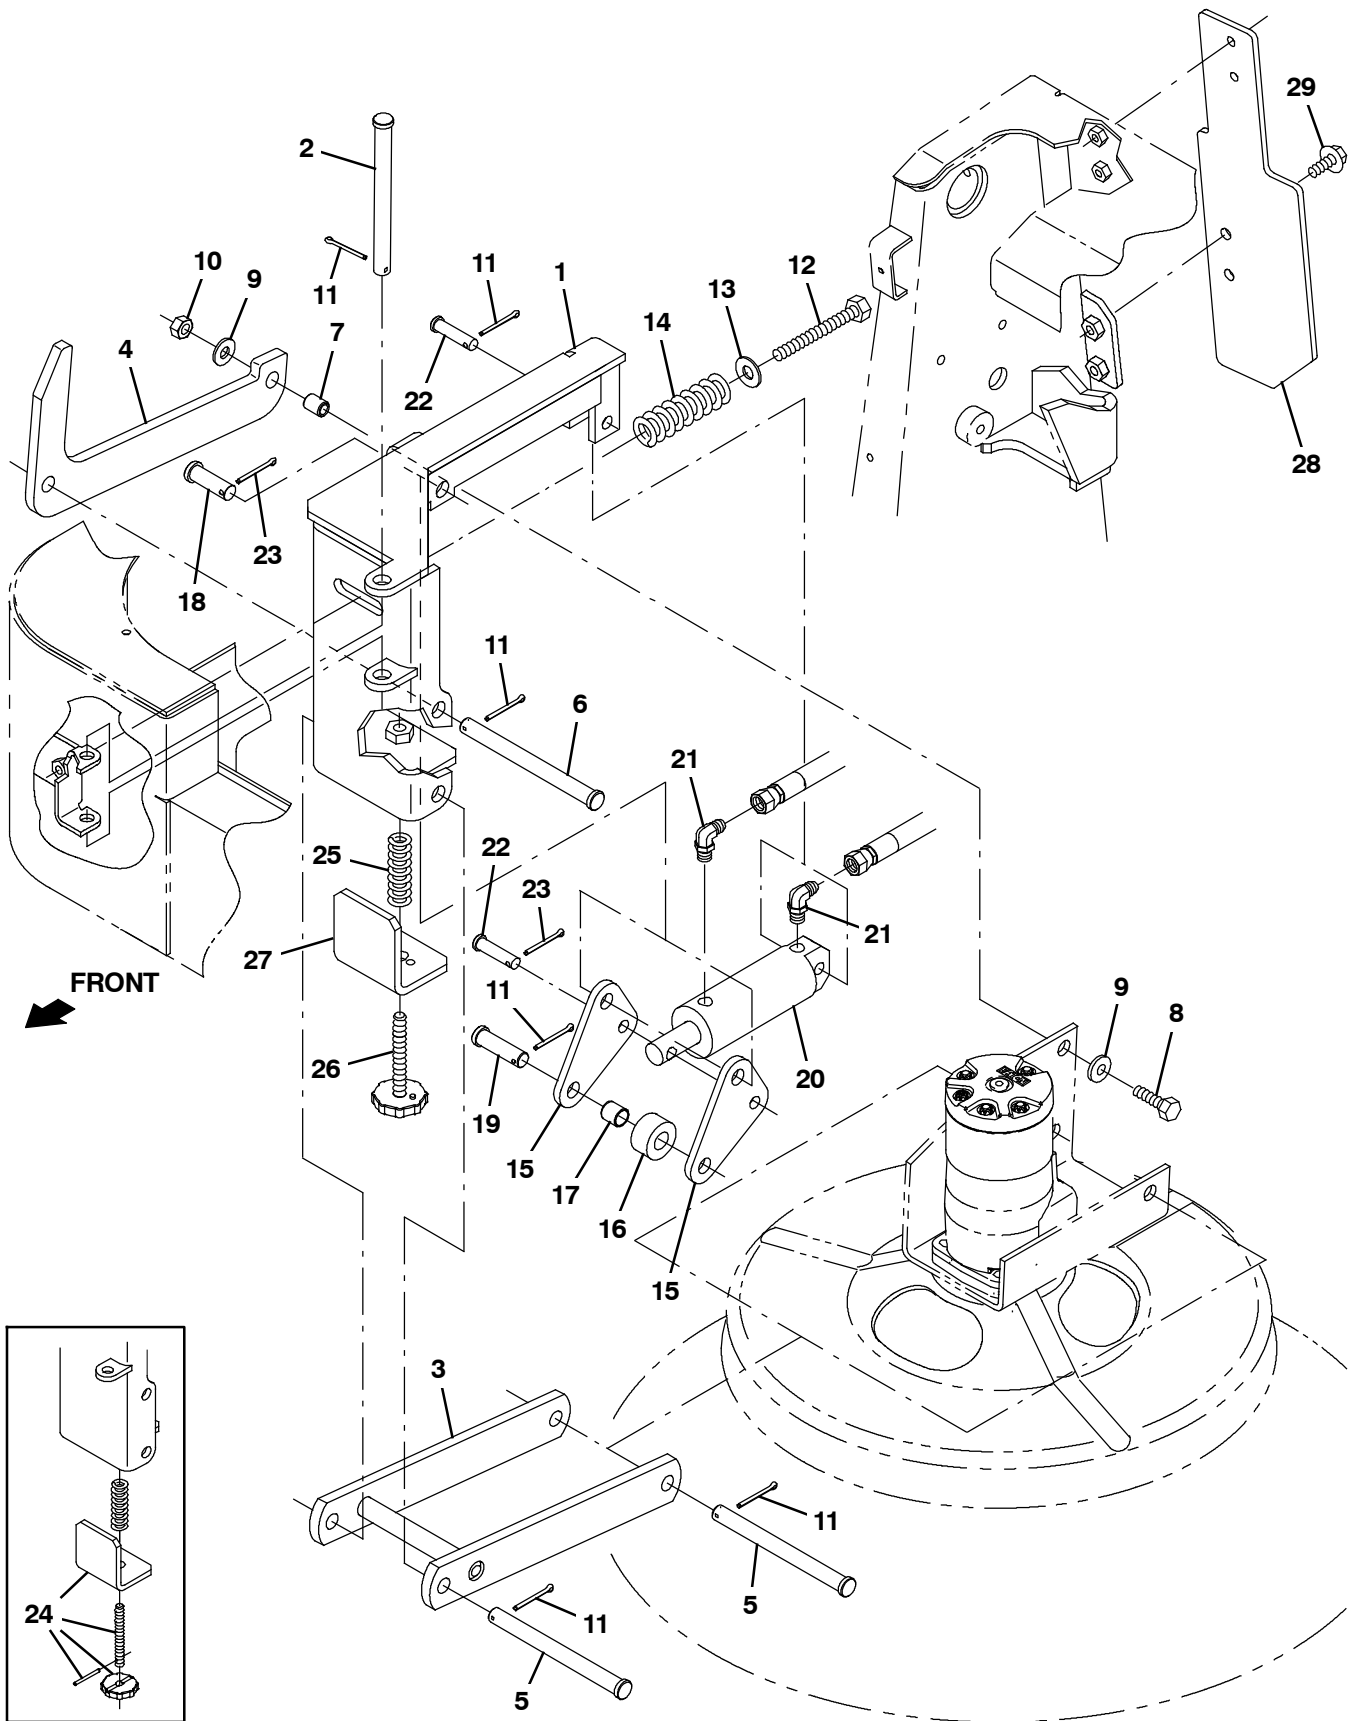


Fig. 46 - Side Brush Lift and Pivot Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1039628	(006501-	) Pivot Wldt, Brush, Side	1
2	222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
3	1029682	(006501-	) Arm Wldt, Brush, Side	1
4	1026459	(006501-	) Arm, Linkage, Side Brush	1
5	51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
6	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
7	80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
8	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
9	32491	(006501-	) Washer, Flat, 0.31, Std	2
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
11	08182	(006501-	) Pin, Cotter, .125 X 1.00	6
12	06963	(006501-	) Screw, Hex, M10 X 1.5 X 60, 8.8	1
13	32492	(006501-	) Washer, Flat, 0.38, Std	1
14	45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
15	1026462	(006501-	) Lever, Lift, Brush	2
16	1026525	(006501-	) Tube, 0.59id 1.25od 00.6l, Stl	1
17	59634	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl	1
18	51534	(006501-	) Pin, Clevis, 0.50d X 2.00l	1
19	43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	1
20	1041034	(006501-	) Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500	1
21	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
22	29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	2
23	39005	(006501-	) Pin, Cotter, .094 X 0.75	2
24	9015652	(006501- 008330	) Knob Kit, Repair Side Brush	1
25	22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
26	1075444	(008331-	) Knob, Assy, Sb Xp	1
27	1075439	(008331-	) Angle	1
28	1060764	(006501-	) Plate,Lift,Premium	1
29	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	4

Fig. 47 - Main Brush Lift Group, S30

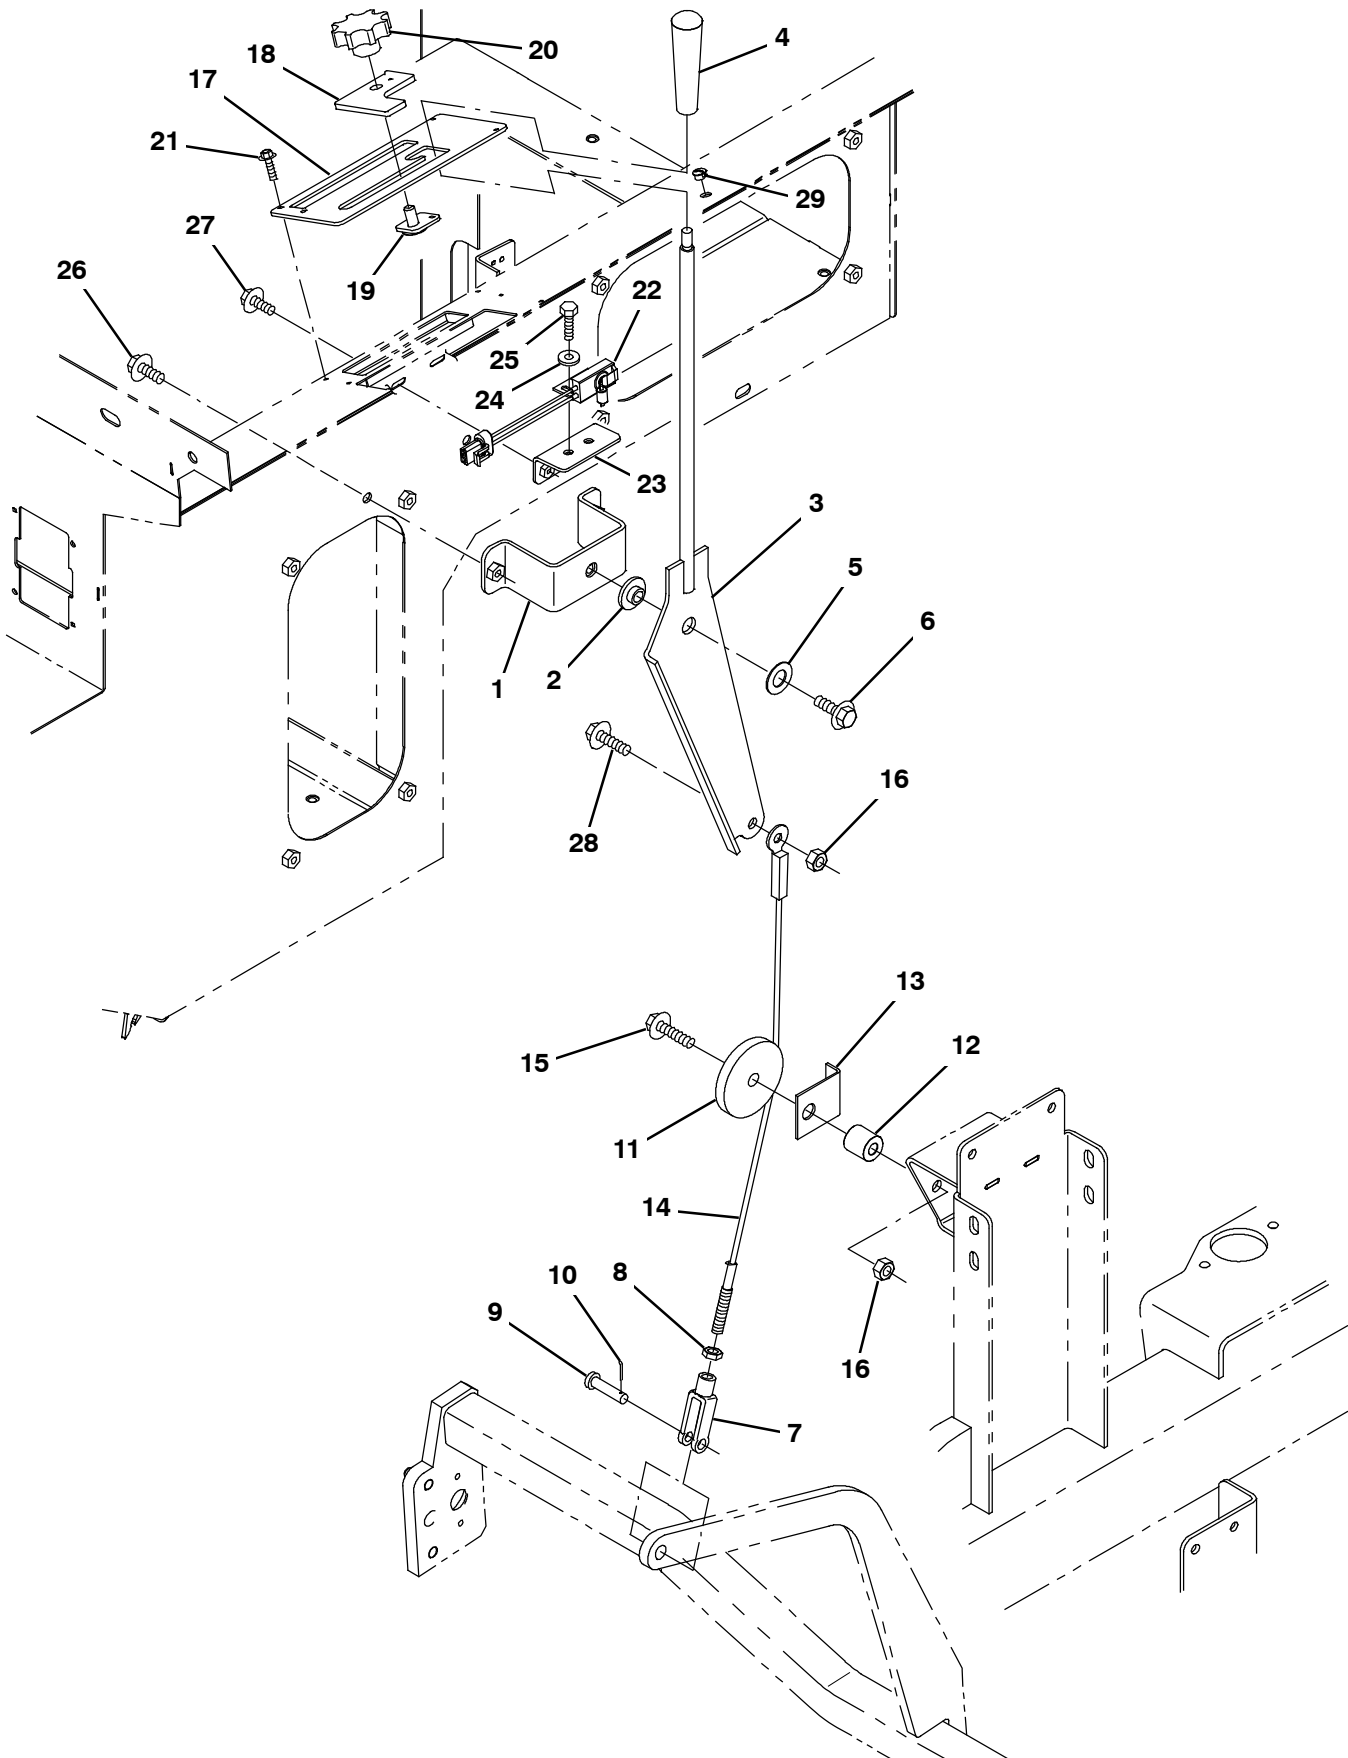


Fig. 47 - Main Brush Lift Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1042785	(006501-	) Bracket, Lift	1
2	363087	(006501-	) Bushing, Flng, 0.44b 1.25d 0.25l	1
3	1041539	(006501-	) Lever Wldt, Lift, Brush, Main	1
4	54995	(006501-	) Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr]	1
5	07450	(006501-	) Bearing, Thrust, 0.66b 1.25d 0.06w	1
6	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	1
7	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
8	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
9	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
10	08179	(006501-	) Pin, Cotter, .094 X 1.00	1
11	379684	(006501-	) Pulley Assy, Cable, 2.8d 0.50b	1
12	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
13	379686	(006501-	) Angle, Keeper, Cable	1
14	1041123	(006501-	) Cable, Glv .19 24.5l .3 Eye / M10	1
15	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
16	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
17	1046048	(006501-	) Panel Wldt, Handle, Lift	1
18	1042855	(006501-	) Plate Wldt, Brush, Adj	1
19	1046052	(006501-	) Plate Wldt, Stop [S30]	1
20	383205	(006501-	) Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl	1
21	1045964	(006501-	) Screw, Hex, M4 X 0.70 X 10, Fmg, Blk	4
22	1040019	(006501-	) Switch, Limit, 15a, Nc	1
23	1040753	(006501-	) Bracket, Switch	1
24	19066	(006501-	) Washer, Flat, 10	2
25	09244	(006501-	) Screw, Hex, M5 X 0.80 X 16, 8.8	2
26	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
27	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
28	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	1
29	33807	(006501-	) Plug, Hole, Rnd, 0.44h .03- .12, Blk Nyl	1

Fig. 48 - Main Brush Lift Group, S30 XP

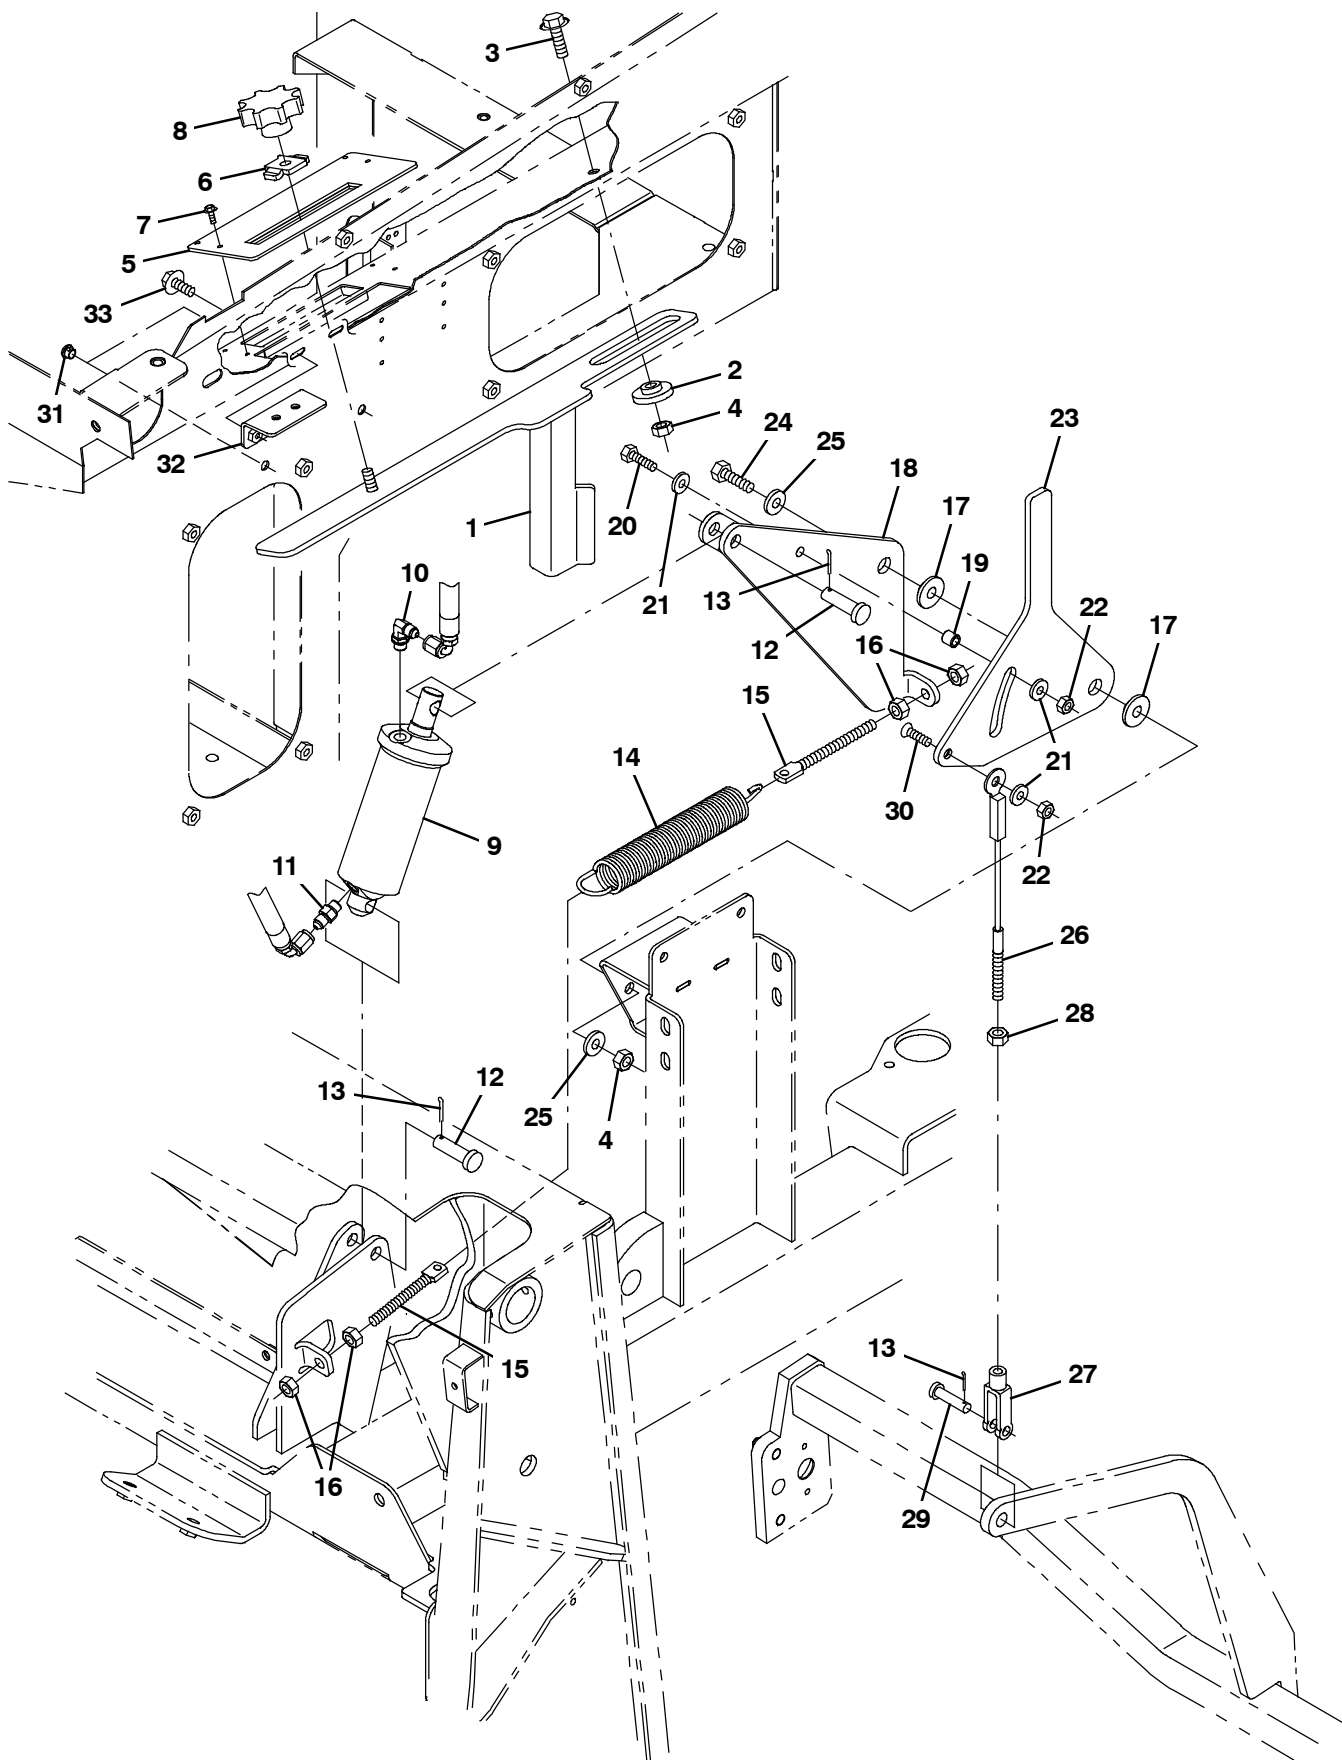


Fig. 48 - Main Brush Lift Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1032432	(006501-	) Plate Wldt, Brush, Adj	1
2	1032429	(006501-	) Retainer, Stop	1
3	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	1
4	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	2
5	1032449	(006501-	) Panel Wldt, Lift	1
6	1005740	(006501-	) Plate, Brush, Adj	1
7	1045964	(006501-	) Screw, Hex, M4 X 0.70 X 10, Fmg, Blk	4
8	383205	(006501-	) Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl	1
9	1038176	(006501-	) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
10	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	1
11	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04	1
12	43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	2
13	08182	(006501-	) Pin, Cotter, .125 X 1.00	3
14	368197	(006501-	) Spring, Extn, 1.39od 0.15wir 09.0l	1
15	1007220	(006501-	) Bolt, Eye, M10 X 1.50 X 117mm, 08.00 Eye	2
16	39312	(006501-	) Nut, Hex, Std, M10 X 1.50	4
17	363087	(006501-	) Bushing, Flng, 0.44b 1.25d 0.25l	2
18	1035400	(006501-	) Bracket Wldt, Mtg, Cyl	1
19	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
20	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
21	32491	(006501-	) Washer, Flat, 0.31, Std	3
22	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
23	1041446	(006501-	) Bracket, Brush, Stop Adj	1
24	06962	(006501-	) Screw, Hex, M10 X 1.50 X 45, 8.8	1
25	32492	(006501-	) Washer, Flat, 0.38, Std	2
26	383194	(006501-	) Cable, Glv .19d 009.88l .38eye / M10	1
27	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
28	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
29	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
30	07810	(006501-	) Screw, Flt, Soc, M8 X 1.25 X 25, 10.9	1
31	01314	(006501-	) Plug, Hole, Rnd, 0.38h .03- .12, Blk Nyl	2
32	1040753	(006501-	) Bracket, Switch	1
33	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	2

Fig. 49 - Main Brush Drive Group


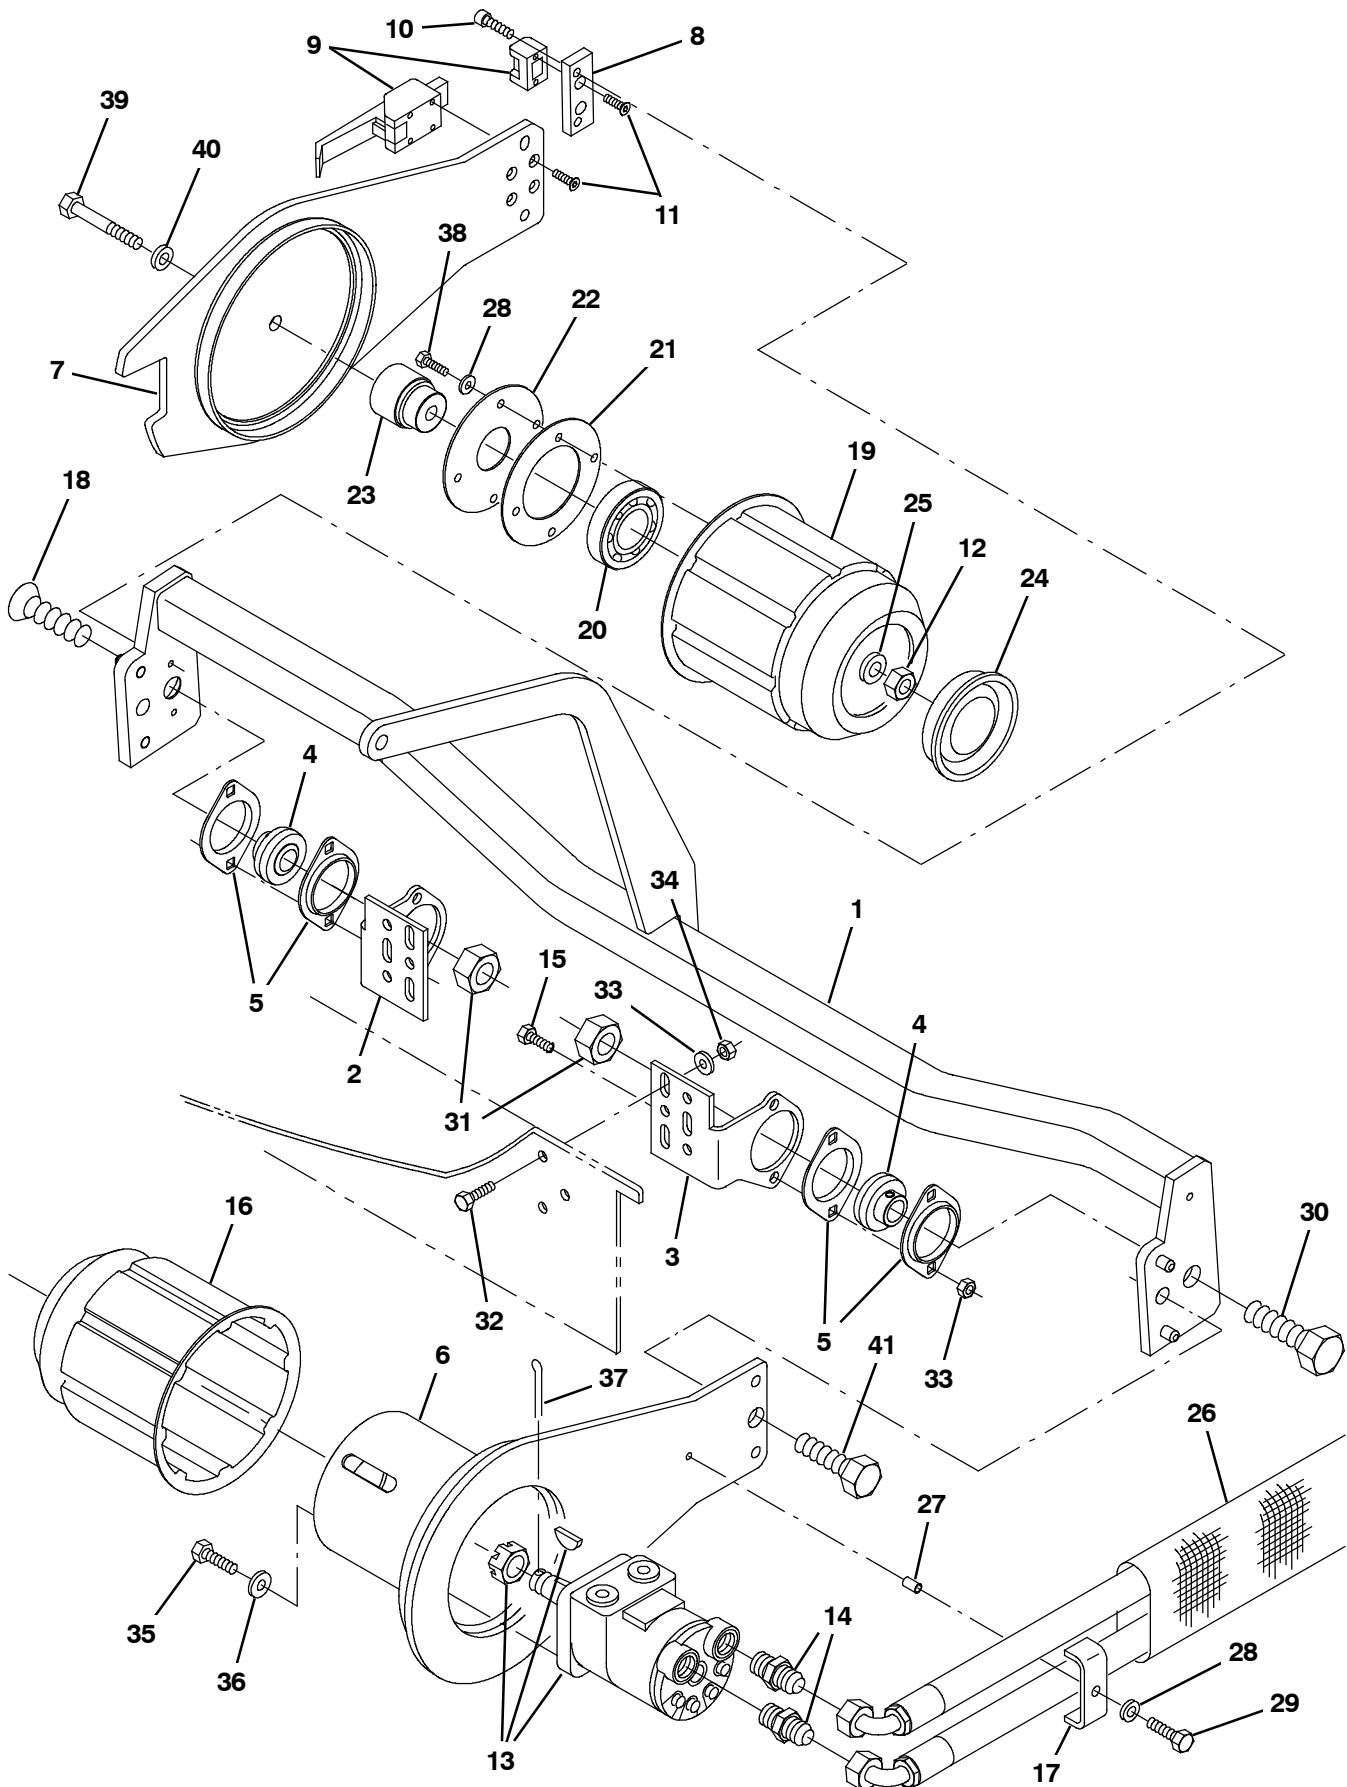


Fig. 49 - Main Brush Drive Group

Ref.	Part No.	Serial Number	Description	Qty.
	1	1039501	(006501-) Tube Wldt	1
	2	383142	(006501-) Bracket, Mtg, Rh	1
	3	383143	(006501-) Bracket, Mtg, Lh	1
	4	25887	(006501-) Bearing, W/ Collar, 0.75b 1.85d 1.06w	2
	5	35973	(006501-) Flange, Brg, 1.9id 2h	4
▽ ▲	6	383139	(006501-) Arm Wldt, Brush, Main, Drive, Lh	1
	7	377249	(006501-) Arm, Brush, Main, W/ Label	1
		383203	(006501-) Label, Info, Brush Arm	1
	8	54204	(006501-) Plate, Mtg	1
	9	54878	(006501-) Latch, Cmpr, M5 X 0.8 Blk	1
	10	57824	(006501-) Screw, Soc, M6 X 1.00 X 20, 12.9, NI	2
	11	09120	(006501-) Screw, Flt, Soc, M5 X 0.80 X 16, 10.9	6
	12	08711	(006501-) Nut, Hex, Lock, M12 X 1.75, NI	1
	13	1057337	(006501-) Motor, Hyd, Gear, Int 02.8 Bi- Dir 2500	1
	14	762445	(006501-) Fitting, Hyd, Str, Fm08/Om08	2
	15	16931	(006501-) Screw, Hex, M8 X 1.25 X 20, 8.8	4
	16	1057643	(006501-) Plug Wldt, Drive, Brush	1
	17	51715	(006501-) Bracket, U, .19, 2.8w 0.9 1.0l, 1/0.3h	1
	18	1007807	(006501-) Screw, Flt, Soc, .75- 10 X 2.50, Al	1
	19	55779	(006501-) Plug Wldt, Idler, Brush	1
	20	24899	(006501-) Bearing, Ball, 1.38b 2.83d 0.67w	1
	21	30252	(006501-) Disc, 0.08, 04.39d 02.56b, 4/.28h 3.8bc	1
	22	30253	(006501-) Disc, 0.06, 04.39d 01.67b, 4/.30h 3.8bc	1
	23	30251	(006501-) Shaft, Idler, Plug, Brush	1
	24	30255	(006501-) Cap, Vinyl, 3.28d 0.45l	1
	25	51564	(006501-) Washer, Flat, 0.53b 1.75d .12, Stl, Pl	1
	26	13773	(006501-) Sleeve, Nyl, #27 20.0l	1
	27	56228	(006501-) Tube, Plstc, 0.25id 0.31od 00.5l, Blk	1
	28	01684	(006501-) Washer, Flat, 0.27b 0.69d .05, Ss	1
	29	07805	(006501-) Screw, Hex, M6 X 1.00 X 35, Ss	1
	30	39395	(006501-) Screw, Hex, .75- 10 X 2.50, Fl	1
	31	32987	(006501-) Nut, Hex, Lock, .75- 10, NI	2
	32	09010	(006501-) Screw, Hex, M8 X 1.25 X 25, Ss	6
	33	08709	(006501-) Nut, Hex, Lock, M8 X 1.25, NI	10
	34	41186	(006501-) Washer, Flat, Belleville, .31	3
	35	01762	(006501-) Screw, Hex, .38- 16 X 0.75, NI	4
	36	32485	(006501-) Washer, Flat, 0.38, Sae	4
	37	08175	(006501-) Pin, Cotter, .125 X 1.25	1
	38	12277	(006501-) Screw, Hex, M6 X 1.00 X 20, NI, Ss	4
	39	06975	(006501-) Screw, Hex, M12 X 1.75 X 90, 8.8	1
	40	36328	(006501-) Washer, Flat, Belleville, .50	1
	41	06977	(006501-) Screw, Hex, M16 X 2.00 X 20, 8.8	1

Fig. 50 - Hydraulic Schematic

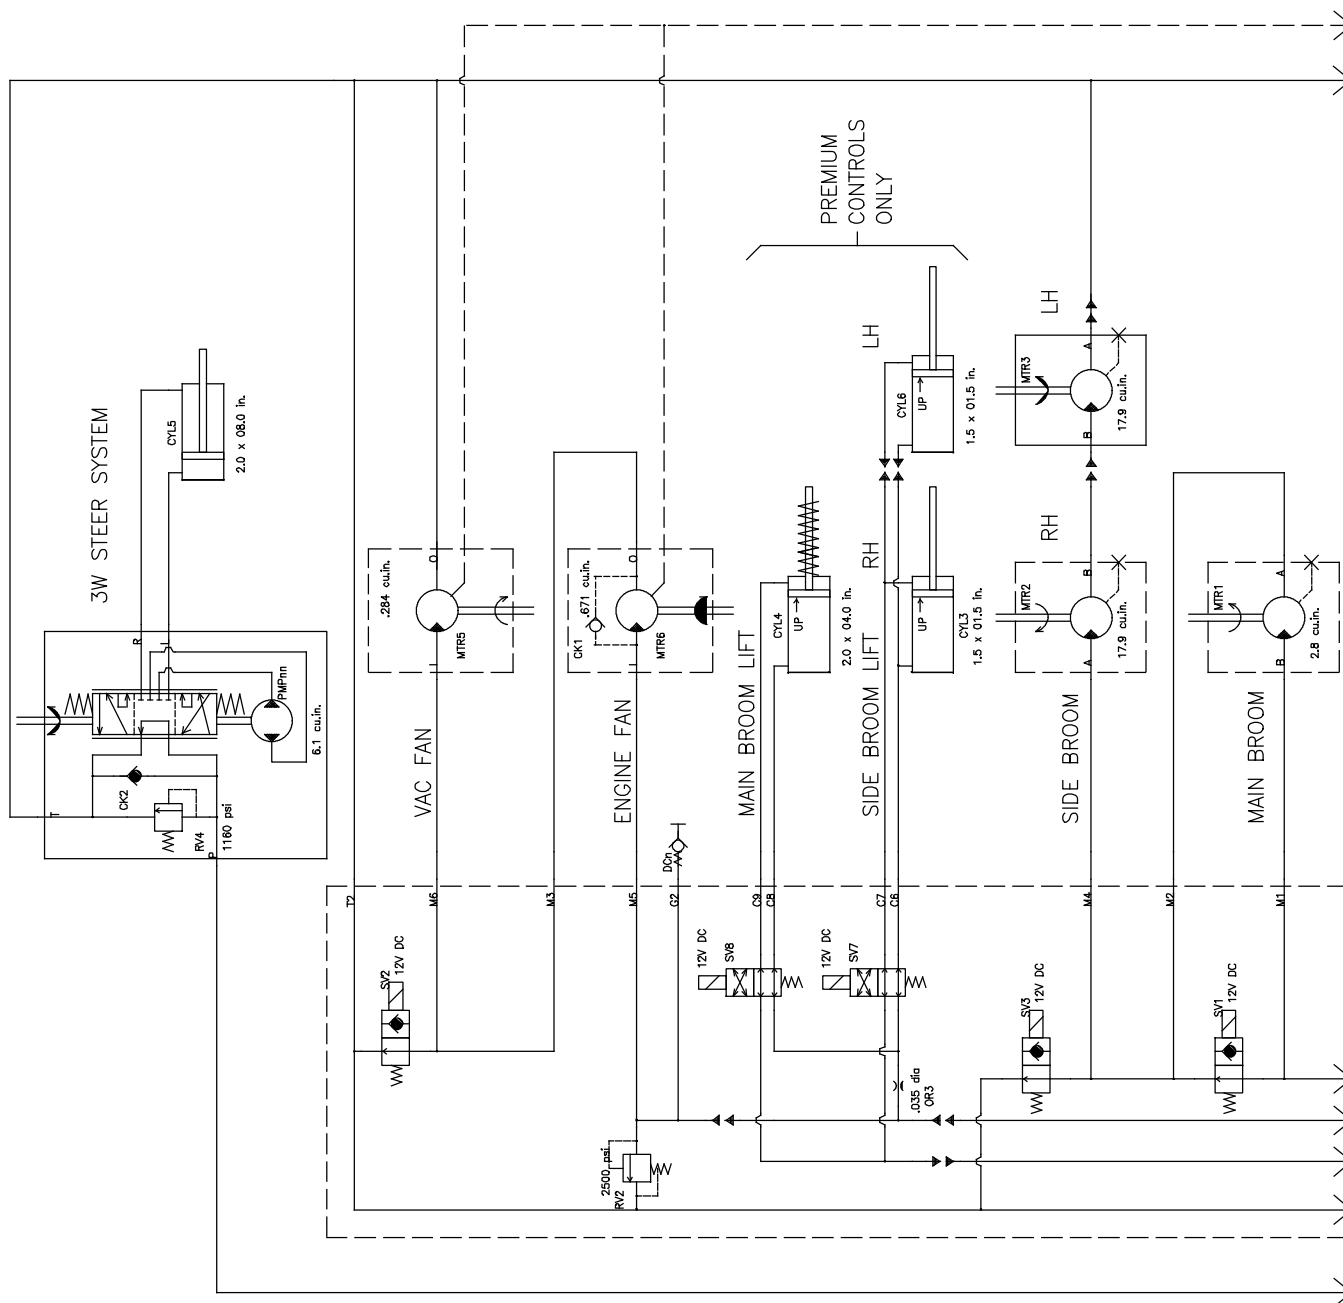

1027521- 354734

1000

Fig. 51 - Hydraulic Hose Group, S30

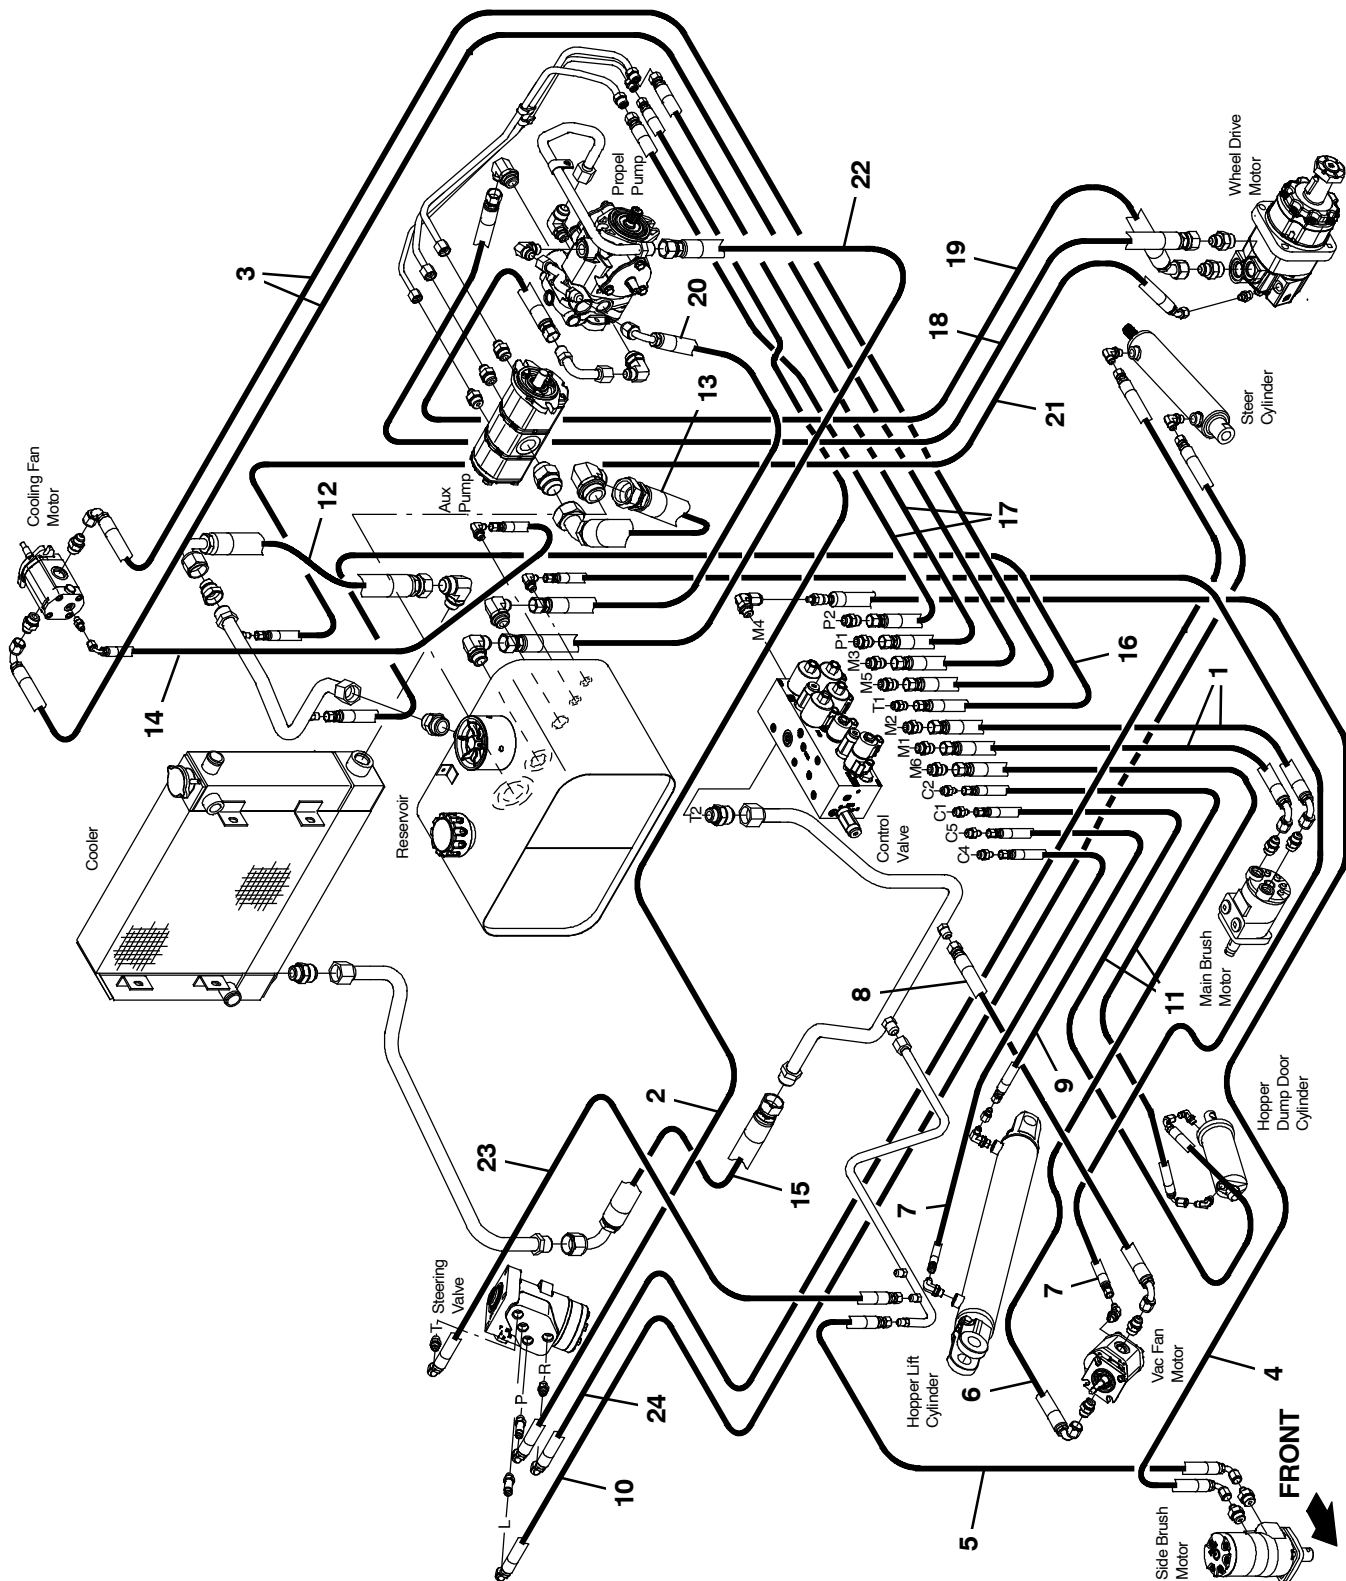


Fig. 51 - Hydraulic Hose Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1067109	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0	2
2	1067102	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0	1
3	1067110	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0	2
4	1072649	(006501-	) Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0	1
5	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
6	767441	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0	1
7	1067094	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0	2
8	767315	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0	1
9	1067089	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0	1
10	1067099	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0	1
11	1067087	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0	2
12	1072633	(006501-	) Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0	1
13	1067300	(006501-	) Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5	1
14	1067086	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0	1
15	1067115	(006501-	) Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0	1
16	1067106	(006501-	) Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0	1
17	1072531	(006501-	) Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0	2
18	1065452	(006501-	) Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0	1
19	1065453	(006501-	) Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0	1
20	1067113	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0	1
21	1067084	(006501-	) Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0	1
22	1067299	(006501-	) Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0	1
23	1074041	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0	1
24	1067101	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0	1

Fig. 52 - Hydraulic Hose Group, S30 XP

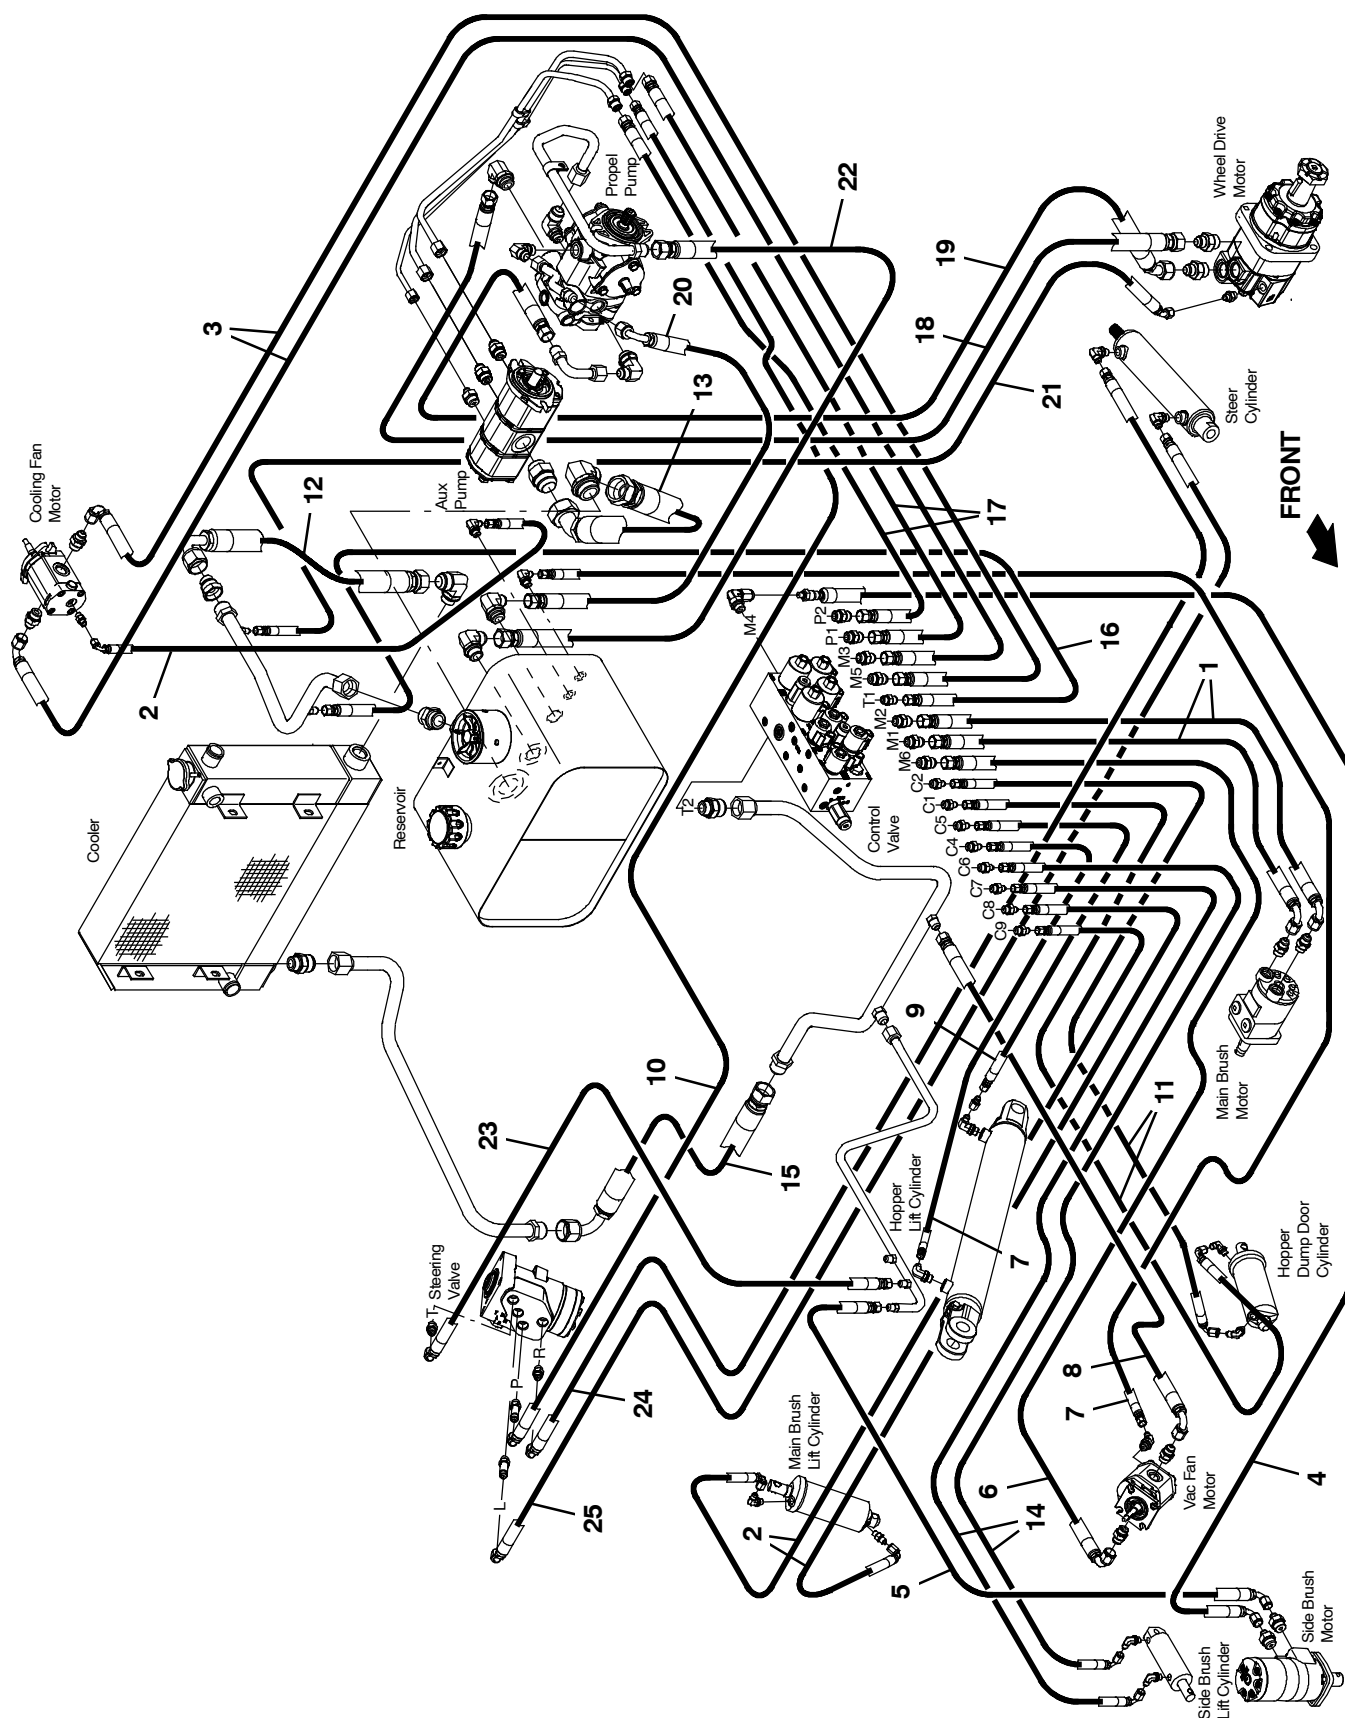


Fig. 52 - Hydraulic Hose Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1067109	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0	2
2	1067086	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0	3
3	1067110	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0	2
4	1072649	(006501-	) Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0	1
5	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
6	767441	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0	1
7	1067094	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0	2
8	767315	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0	1
9	1067089	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0	1
10	1067102	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0	1
11	1067087	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0	2
12	1072633	(006501-	) Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0	1
14	1067088	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0	2
13	1067300	(006501-	) Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5	1
15	1067115	(006501-	) Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0	1
16	1067106	(006501-	) Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0	1
17	1072531	(006501-	) Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0	2
18	1065452	(006501-	) Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0	1
19	1065453	(006501-	) Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0	1
20	1067113	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0	1
21	1067084	(006501-	) Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0	1
22	1067299	(006501-	) Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0	1
23	1074041	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0	1
24	1067101	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0	1
25	1067099	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0	1

Fig. 53 - Hydraulic Reservoir Group

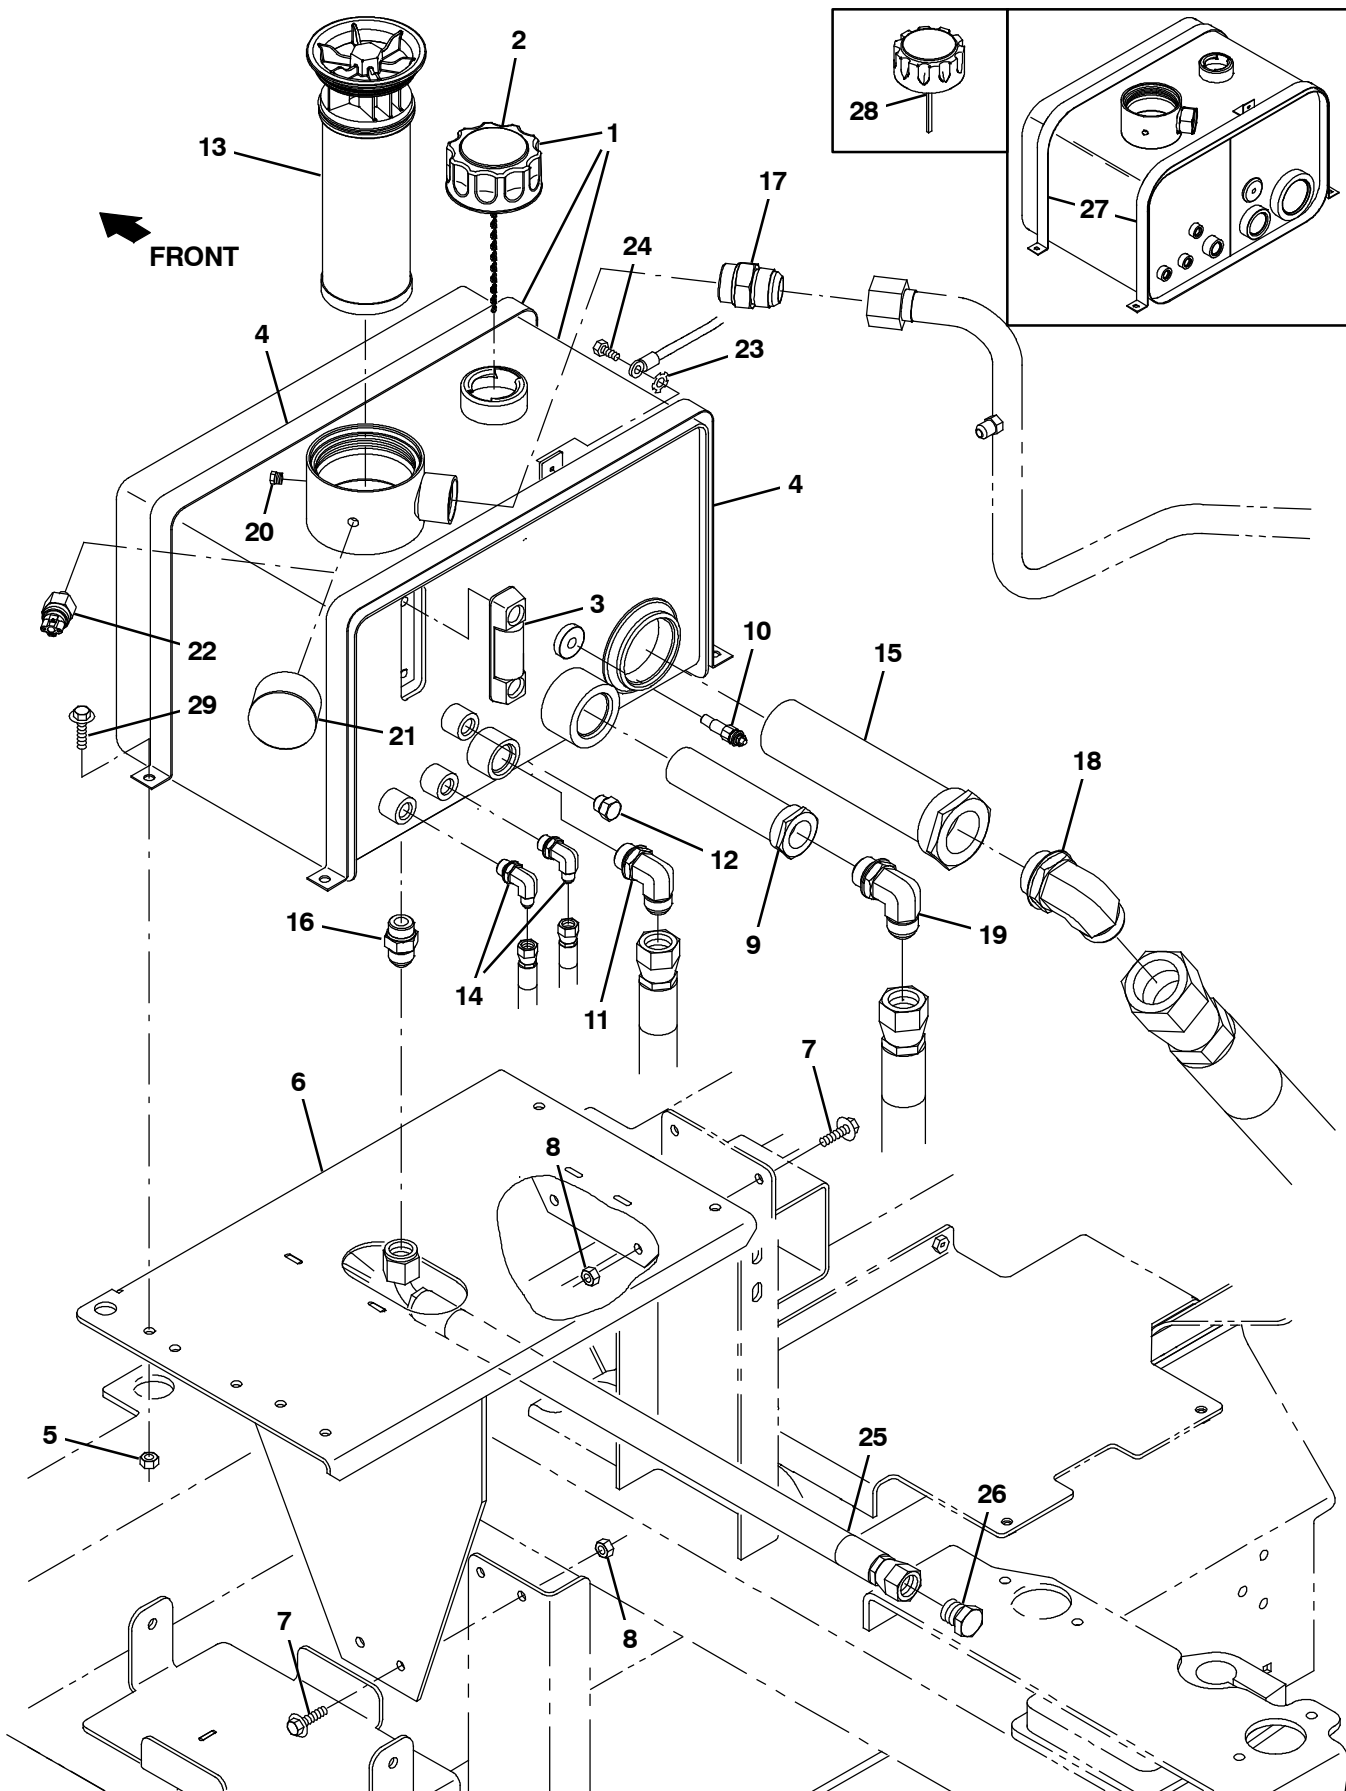


Fig. 53 - Hydraulic Reservoir Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9004518	(006501-	) Reservoir, Hyd, W/ Label, Replmt	1
▲	2	1018289	(007685-	) Cap, Breather, Hyd, W Chain	1
▲	3	65215	(007685-	) Gauge, Sensing, Level	1
▲	4	1074668	(007685-	) Strap, Tank, Hyd	2
	5	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
	6	1045125	(006501-	) Bracket Wldt, Reservoir, Hyd	1
	7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
	8	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	4
	9	361023	(006501-	) Strainer, Hyd, 010gpm 100mesh	1
	10	58592	(006501-	) Send- Unit, Water, Temp,04npt[113oh/195d]	1
	11	762469	(006501-	) Fitting, Hyd, E90, Fm10/Om12	1
	12	46482	(006501-	) Fitting, Hyd, Plug, Om06	1
	13	1021579	(006501-	) Filter Assy, Hyd, 10mic	1
	14	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	2
	15	31613	(006501-	) Strainer, Hyd, 025gpm 100mesh 03psi	1
	16	762463	(006501-	) Fitting, Hyd, Str, Fm10/Om10	1
	17	762481	(006501-	) Fitting, Hyd, Str, Fm16/Om16	1
	18	762484	(006501-	) Fitting, Hyd, E90, Fm20/Om20	1
	19	762492	(006501-	) Fitting, Hyd, E90, Fm12/Om12	1
	20	63511	(006501-	) Fitting, Hyd, Plug, Pm02	1
	21	1025132	(006501-	) Indicator, Press, 60psi (S30 only)	1
	22	1025133	(006501-	) Switch, Press, Hyd, 18- 24psi, Spst, No (S30XP only)	1
	23	32982	(006501-	) Washer, Lock, Int, 0.25	1
	24	222158	(006501-	) Screw, Hex, M6 X 1.00 X 10, Fmg	1
	25	1067773	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 42.0	1
	26	762156	(006501-	) Fitting, Hyd, Plug, Fm10	1
	27	1032915	(006501- 007684	) Strap, Tank, Hyd	2
	28	25122	(006501- 007684	) Cap, Breather, Hyd, 2.4 Dipstick	1
	29	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2

Fig. 54 - Hydraulic Cooler and Tubes Group

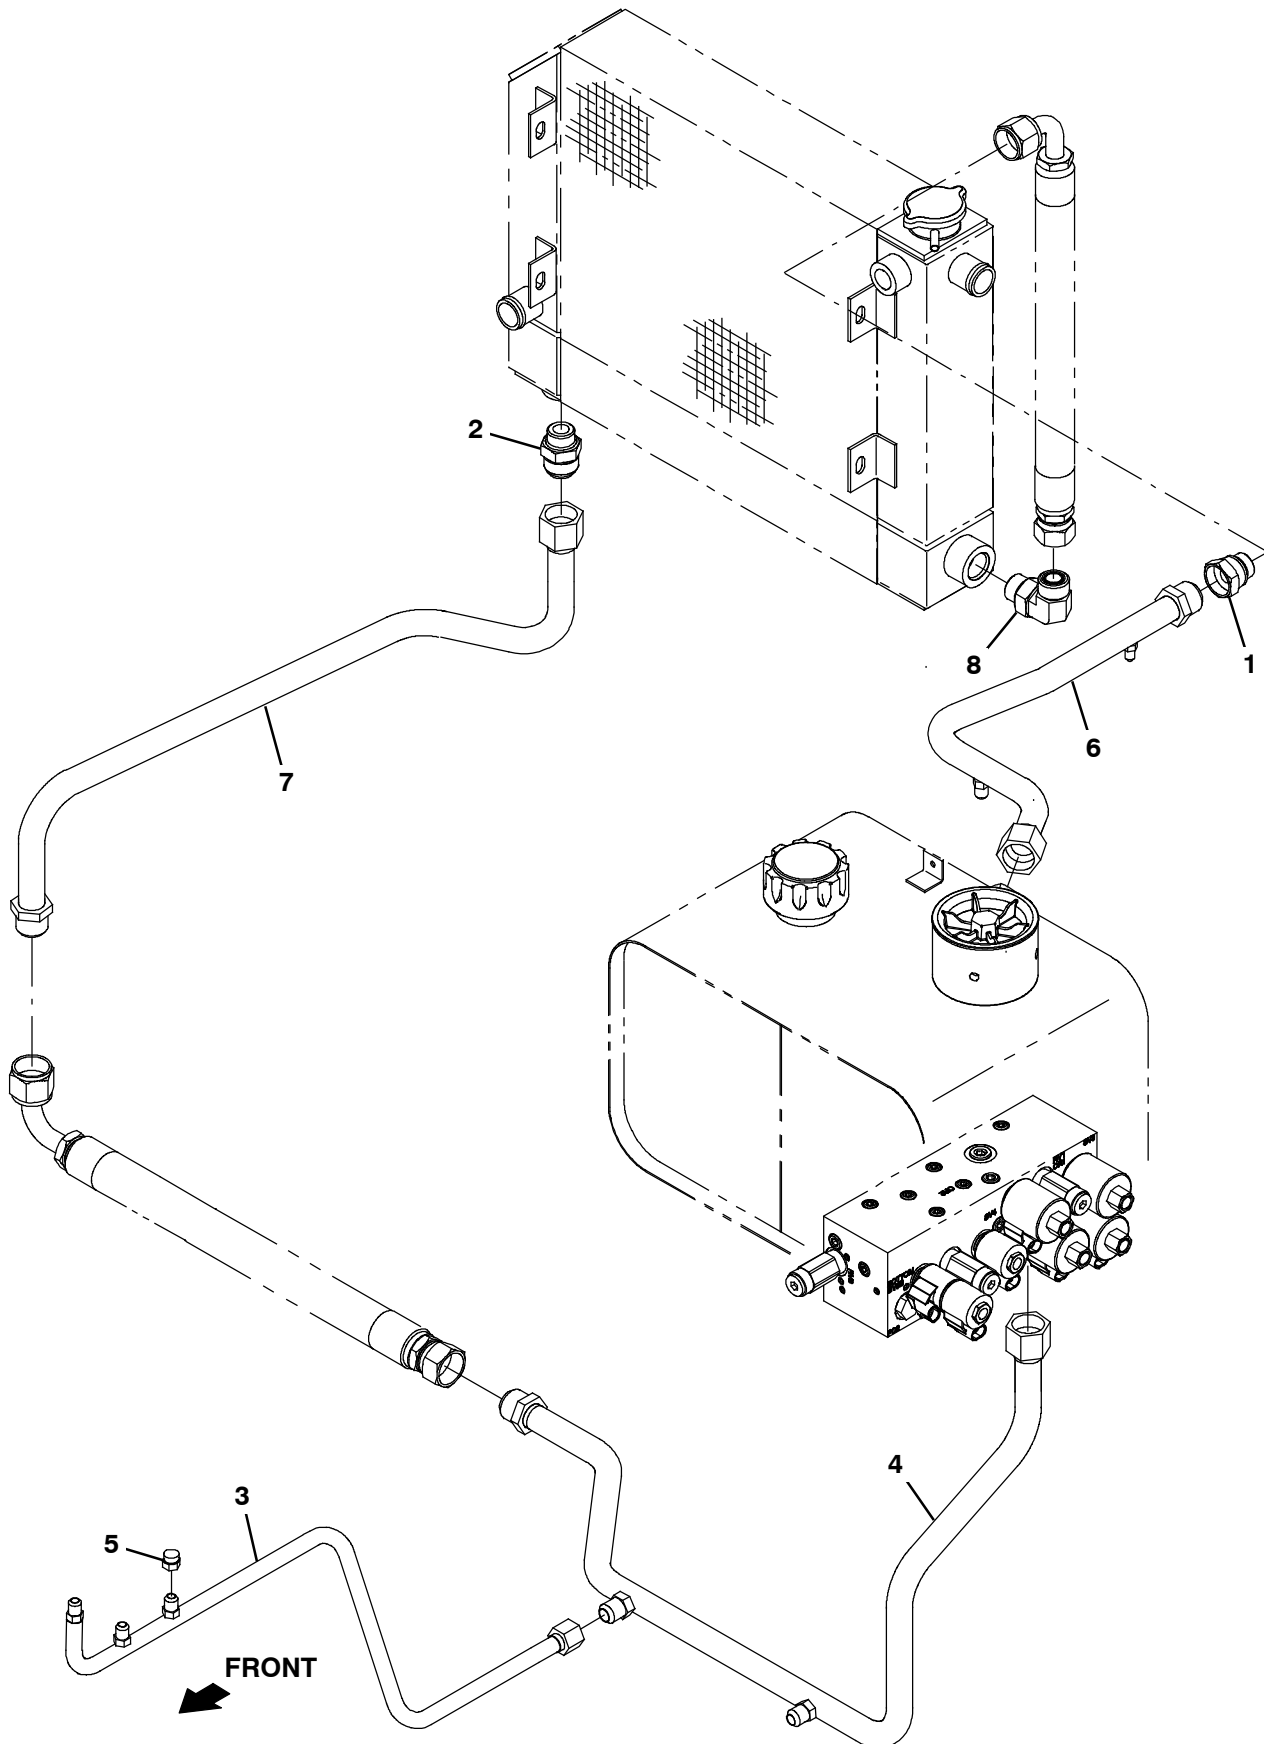


Fig. 54 - Hydraulic Cooler and Tubes Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1072632	(006501-	) Fitting, Hyd, Str, Ff16/Fm12	1
2	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
3	1067177	(006501-	) Tube, Hyd, Steering Drain	1
4	1067187	(006501-	) Tube Assy, Hyd, Valve Tank [Coyote]	1
5	40625	(006501-	) Fitting, Hyd, Cap, Jf06	1
6	1067185	(006501-	) Tube Assy, Hyd, Fltr	1
7	1067186	(006501-	) Tube Assy, Hyd, Cooler [Coyote]	1
8	762492	(006501-	) Fitting, Hyd, E90, Fm12/Om12	1

Fig. 55 - Hydraulic Pumps Group, S30 and XP

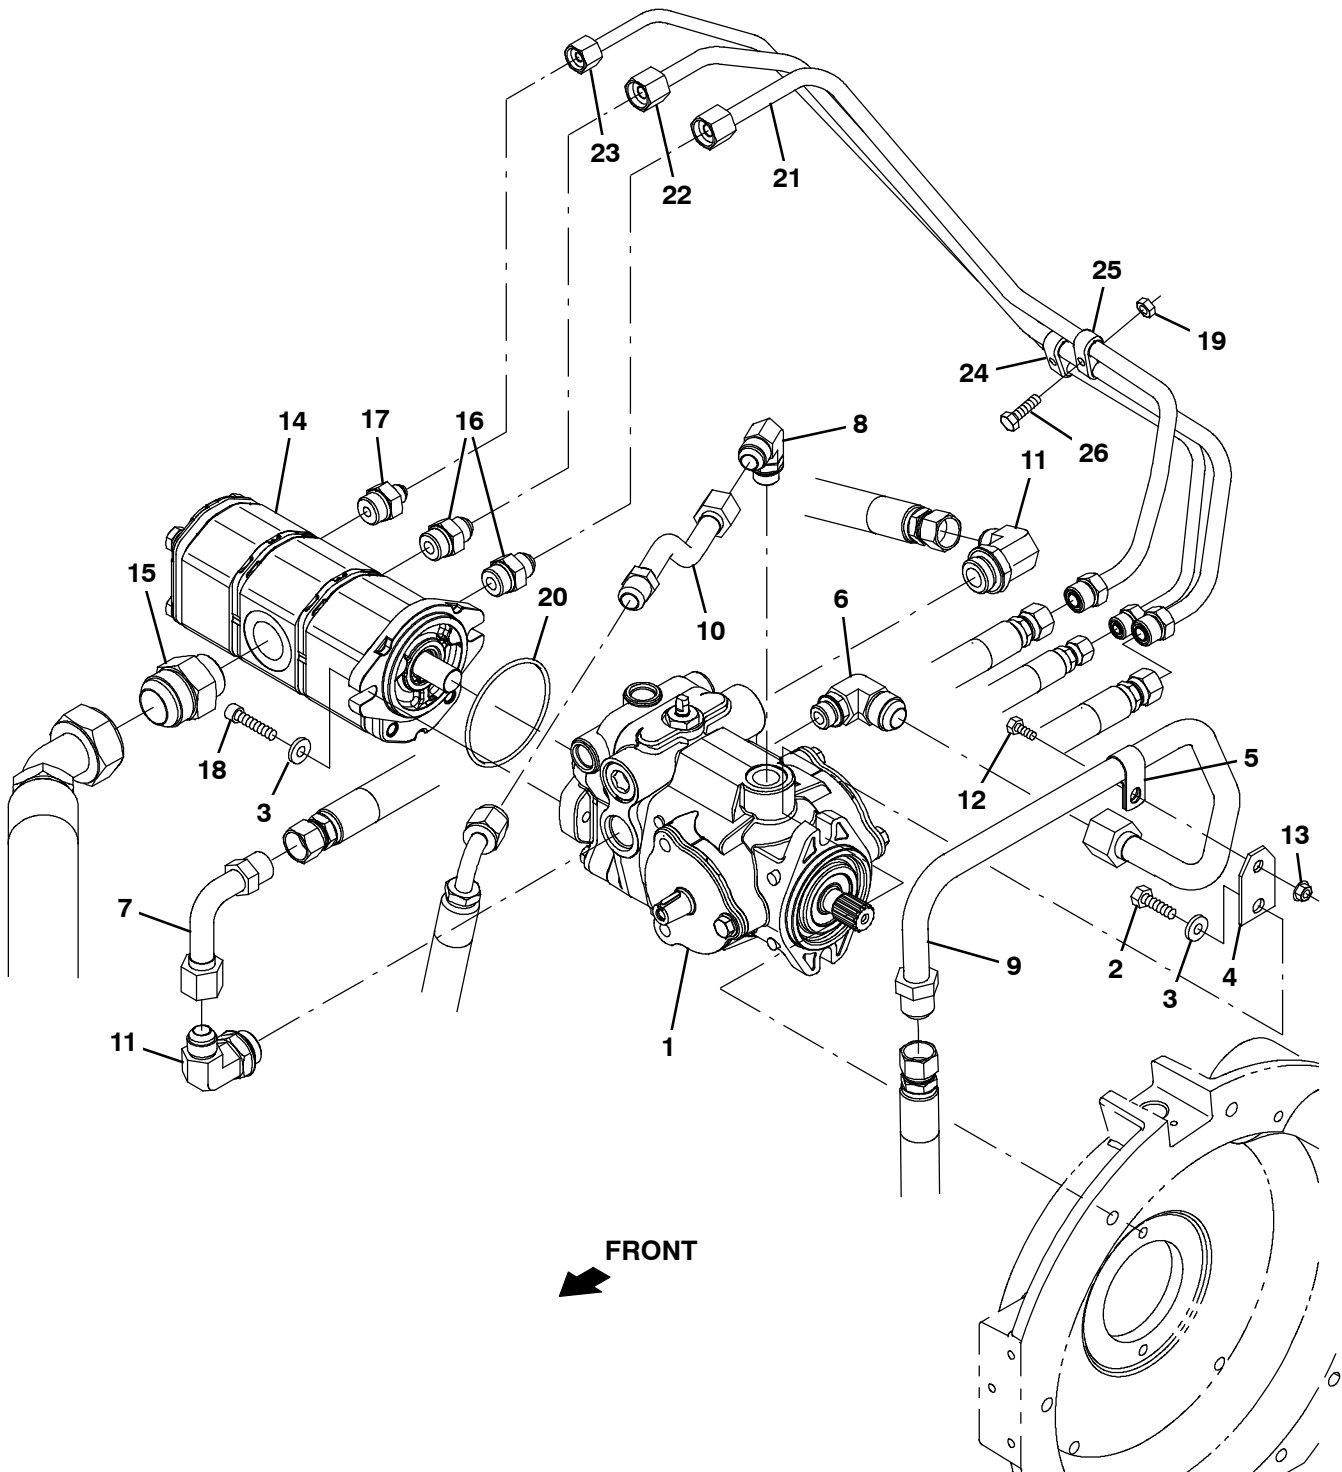


Fig. 55 - Hydraulic Pumps Group, S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1054905	(006501-	) Pump, Hyd, Piston, Var, 1.24 4500, Cw (See Breakdowns)	1
2	21198	(006501-	) Screw, Hex, .38- 16 X 1.25, G5	2
3	32485	(006501-	) Washer, Flat, 0.38, Sae	4
4	1039309	(006501-	) Bracket, Sppt, Hyd Tube	1
5	07471	(006501-	) Clamp, Cable, Stl, 0.75d X 0.75w, 1hole	1
6	1067053	(006501-	) Fitting, Hyd, E90, Fm12/Om08	1
7	1065781	(006501-	) Tube, Hyd, Pump, Rear Drive, Ff10/Fm10	1
8	762466	(006501-	) Fitting, Hyd, E90, Fm10/Om08	1
9	1067181	(006501-	) Tube, Hyd [Pump Charge]	1
10	1067182	(006501-	) Tube, Hyd, Pump, Drain	1
11	762469	(006501-	) Fitting, Hyd, E90, Fm10/Om12	2
12	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	1
13	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
▽	14	1030374	(006501-) Pump, Hyd, Gear, Ext, 3, 00.70 2500, Cw	1
▲		373708	(006501-) Pump, Info, Repair	1
▲		373707	(006501-) Seal Kit	1
15	1007953	(006501-	) Fitting, Hyd, Str, Fm20/Om16	1
16	762456	(006501-	) Fitting, Hyd, Str, Fm08/Om10	2
17	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	1
18	10832	(006501-	) Screw, Soc, .38- 16 X 1.50, Al	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
20	65145- 1	(006501-	) Seal, Org, .069 X 03.06id	1
21	1067180	(006501-	) Tube, Hyd, Gear Pump Rear [Coyote]	1
22	1071716	(006501-	) Tube, Hyd, Gear Pump Middle[S30 Mit2013]	1
23	1071717	(006501-	) Tube, Hyd, Gear Pump Front[S30 Mit2013]	1
24	1043755	(006501-	) Clamp, Tube, 0.37d 0.50d, 2 Hole	1
25	1043754	(006501-	) Clamp, Tube, 0.50d 0.50d, 2 Hole	1
26	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	2

Fig. 56 - Hydraulic Valve Group, S30

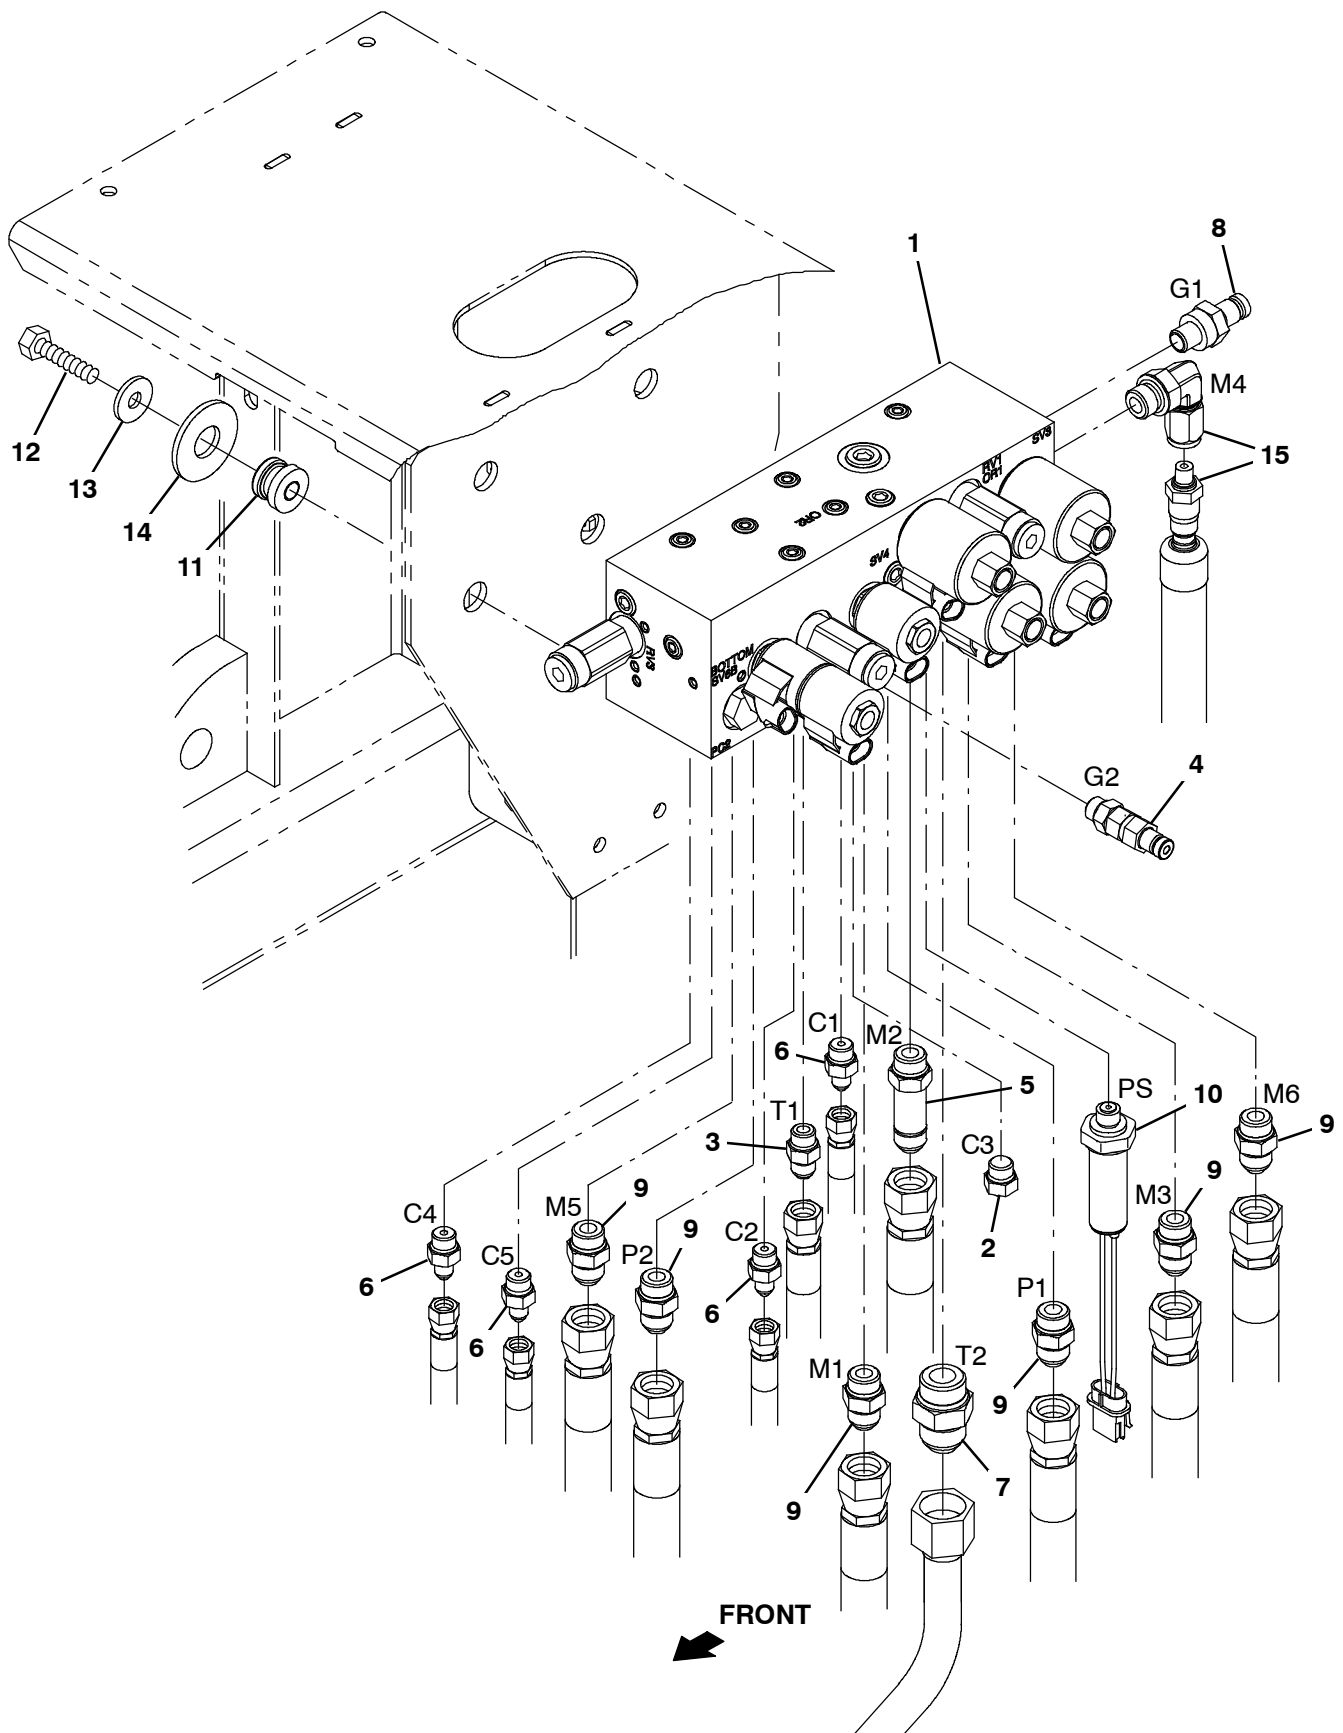


Fig. 56 - Hydraulic Valve Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1040091	(006501-	) Valve, Hyd, Solenoid, 12vdc [06s] (See Breakdowns)	1
2	46482	(006501-	) Fitting, Hyd, Plug, Om06	1
3	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
4	1043652	(006501-	) Fitting, Hyd, Str, Om06/Qm04	1
5	767430	(006501-	) Fitting, Hyd, Str, Fm08/Om08, Long	1
6	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	4
7	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
8	395973	(006501-	) Fitting, Hyd, Str, Om04/Qm04	1
9	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	6
10	769077	(006501-	) Switch Assy, Press, No 02400psi	1
11	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
12	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	4
13	39350	(006501-	) Washer, Flat, 0.75, Sae	4
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, Pl	4
15	9011154	(006501-	) Hose Kit, Hyd, Replmt [S30]	1

Fig. 57 - Hydraulic Valve Group, S30 XP

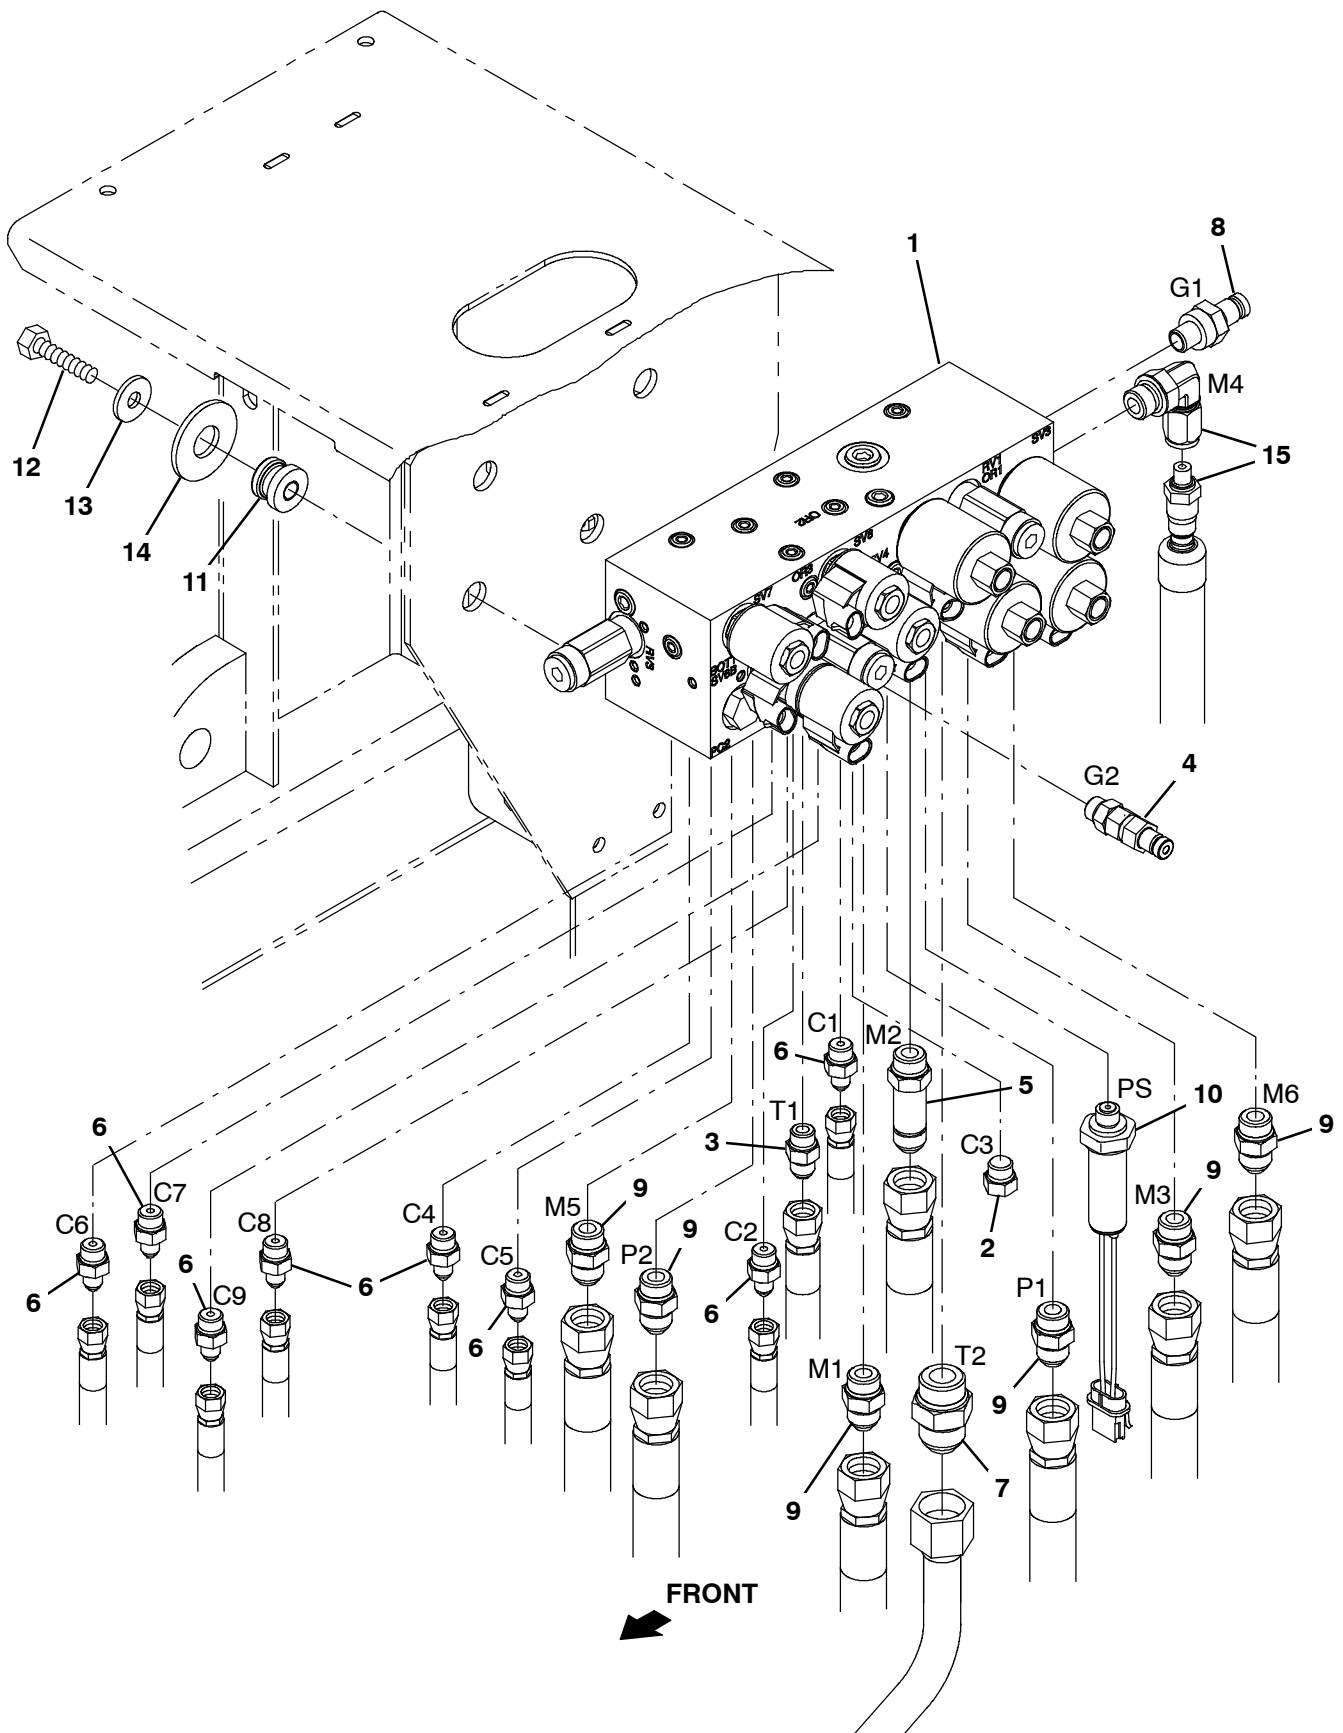


Fig. 57 - Hydraulic Valve Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1034671	(006501-	) Valve, Hyd, Solenoid, 12vdc [08s] (See Breakdowns)	1
2	46482	(006501-	) Fitting, Hyd, Plug, Om06	1
3	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
4	1043652	(006501-	) Fitting, Hyd, Str, Om06/Qm04	1
5	767430	(006501-	) Fitting, Hyd, Str, Fm08/Om08, Long	1
6	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	8
7	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
8	395973	(006501-	) Fitting, Hyd, Str, Om04/Qm04	1
9	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	6
10	769077	(006501-	) Switch Assy, Press, No 02400psi	1
11	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
12	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	4
13	39350	(006501-	) Washer, Flat, 0.75, Sae	4
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, Pl	4
15	9011154	(006501-	) Hose Kit, Hyd, Replmt [S30]	1

Fig. 58 - Electrical Schematic, S30

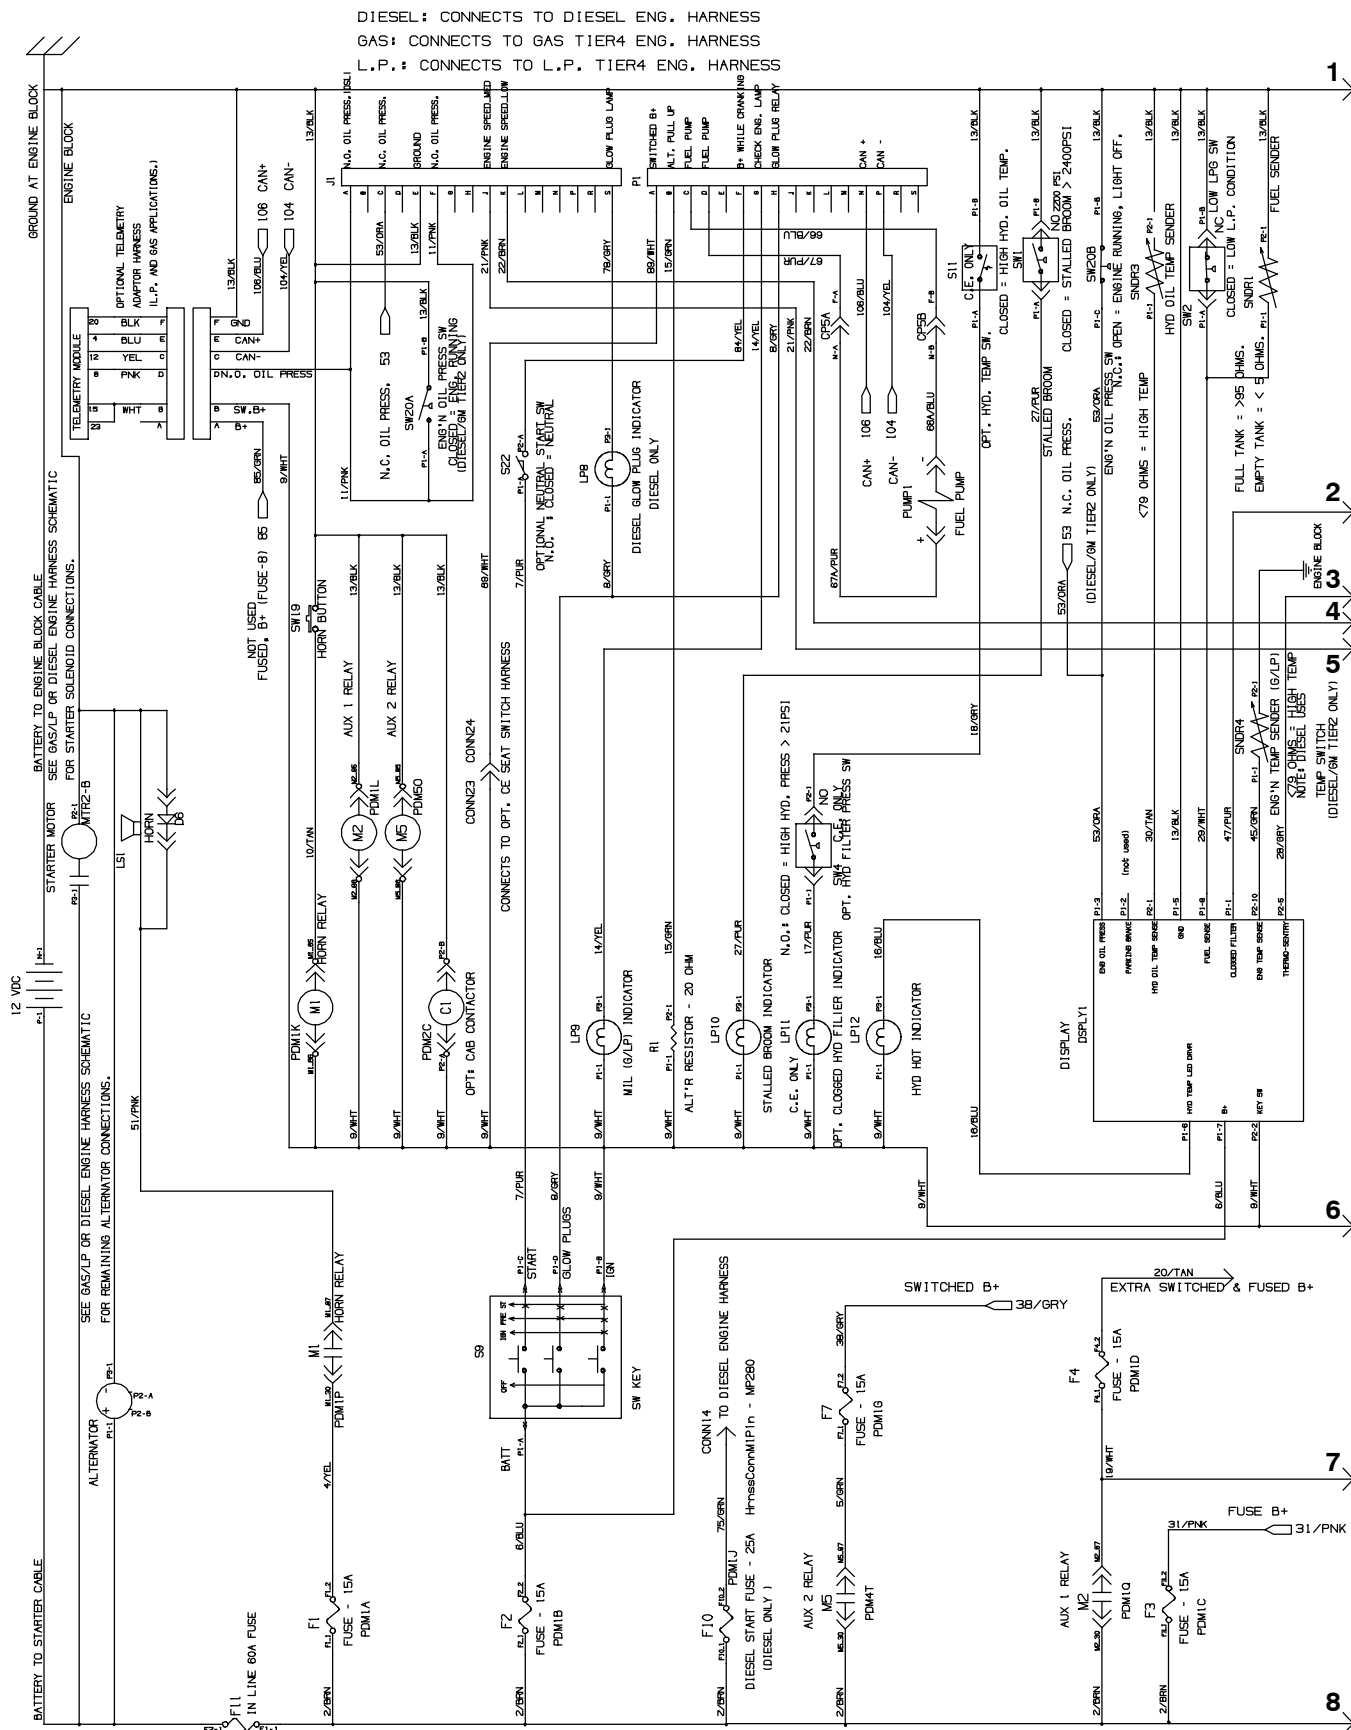


Fig. 58 - Electrical Schematic, S30



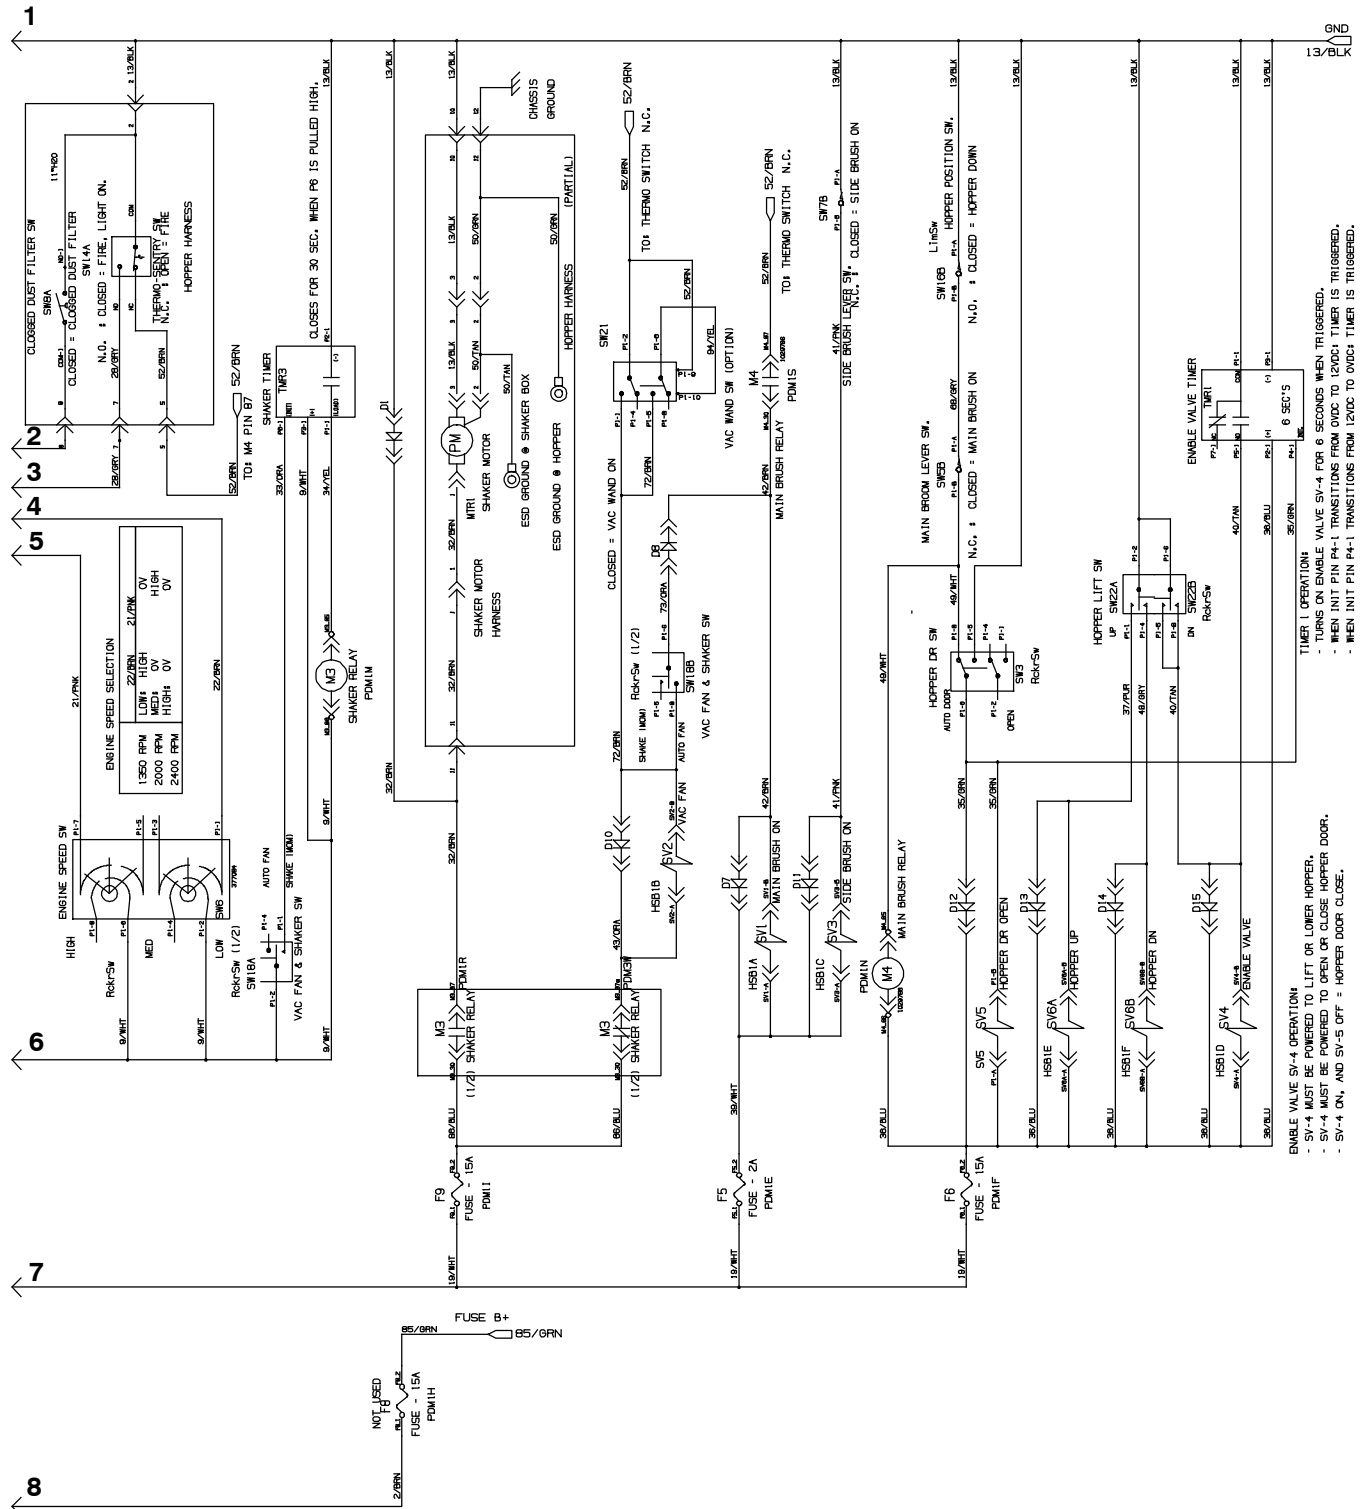


Fig. 58 - Electrical Schematic, S30

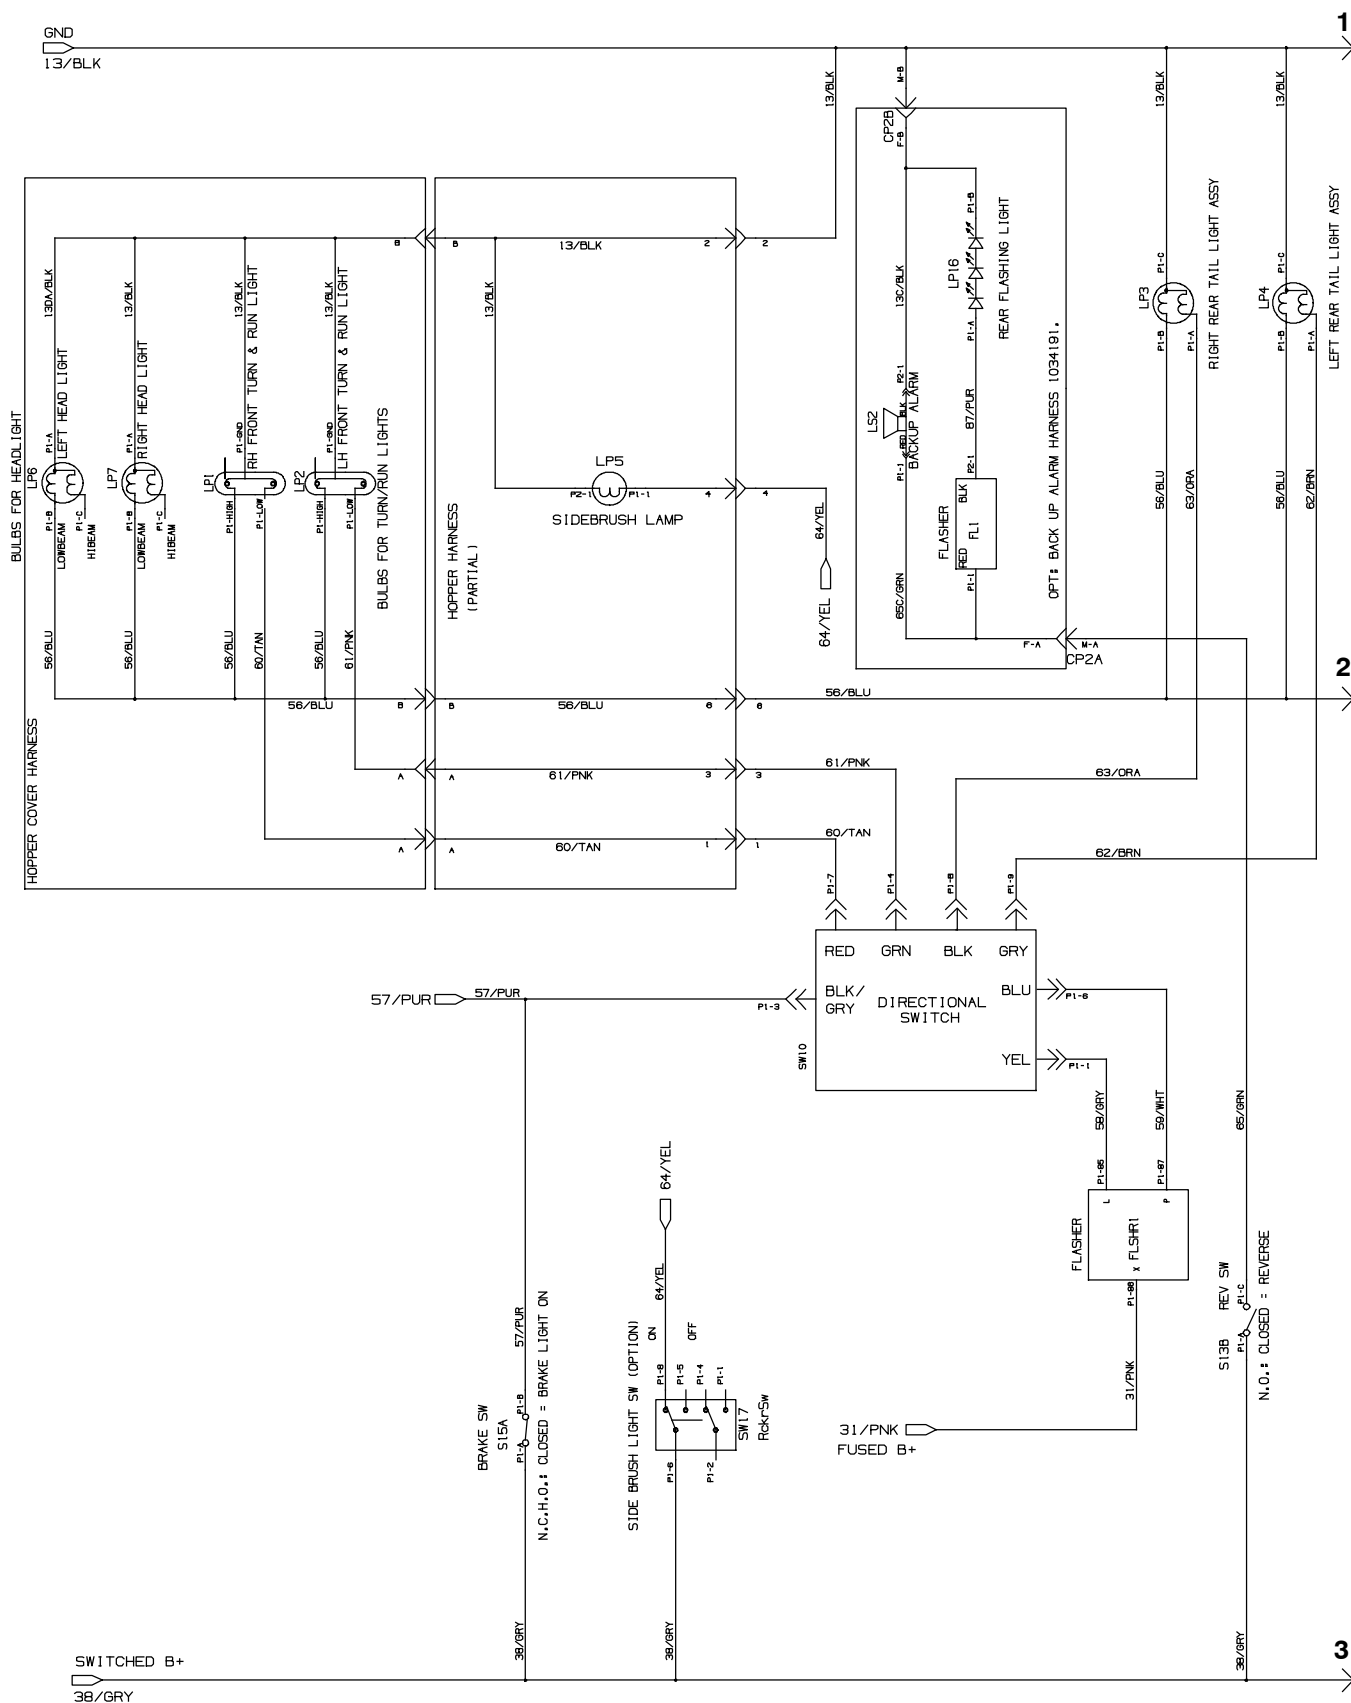




S30 Gas/LPG 9013316 (4- 2015)

1



Fig. 59 - Electrical Schematic, S30 XP

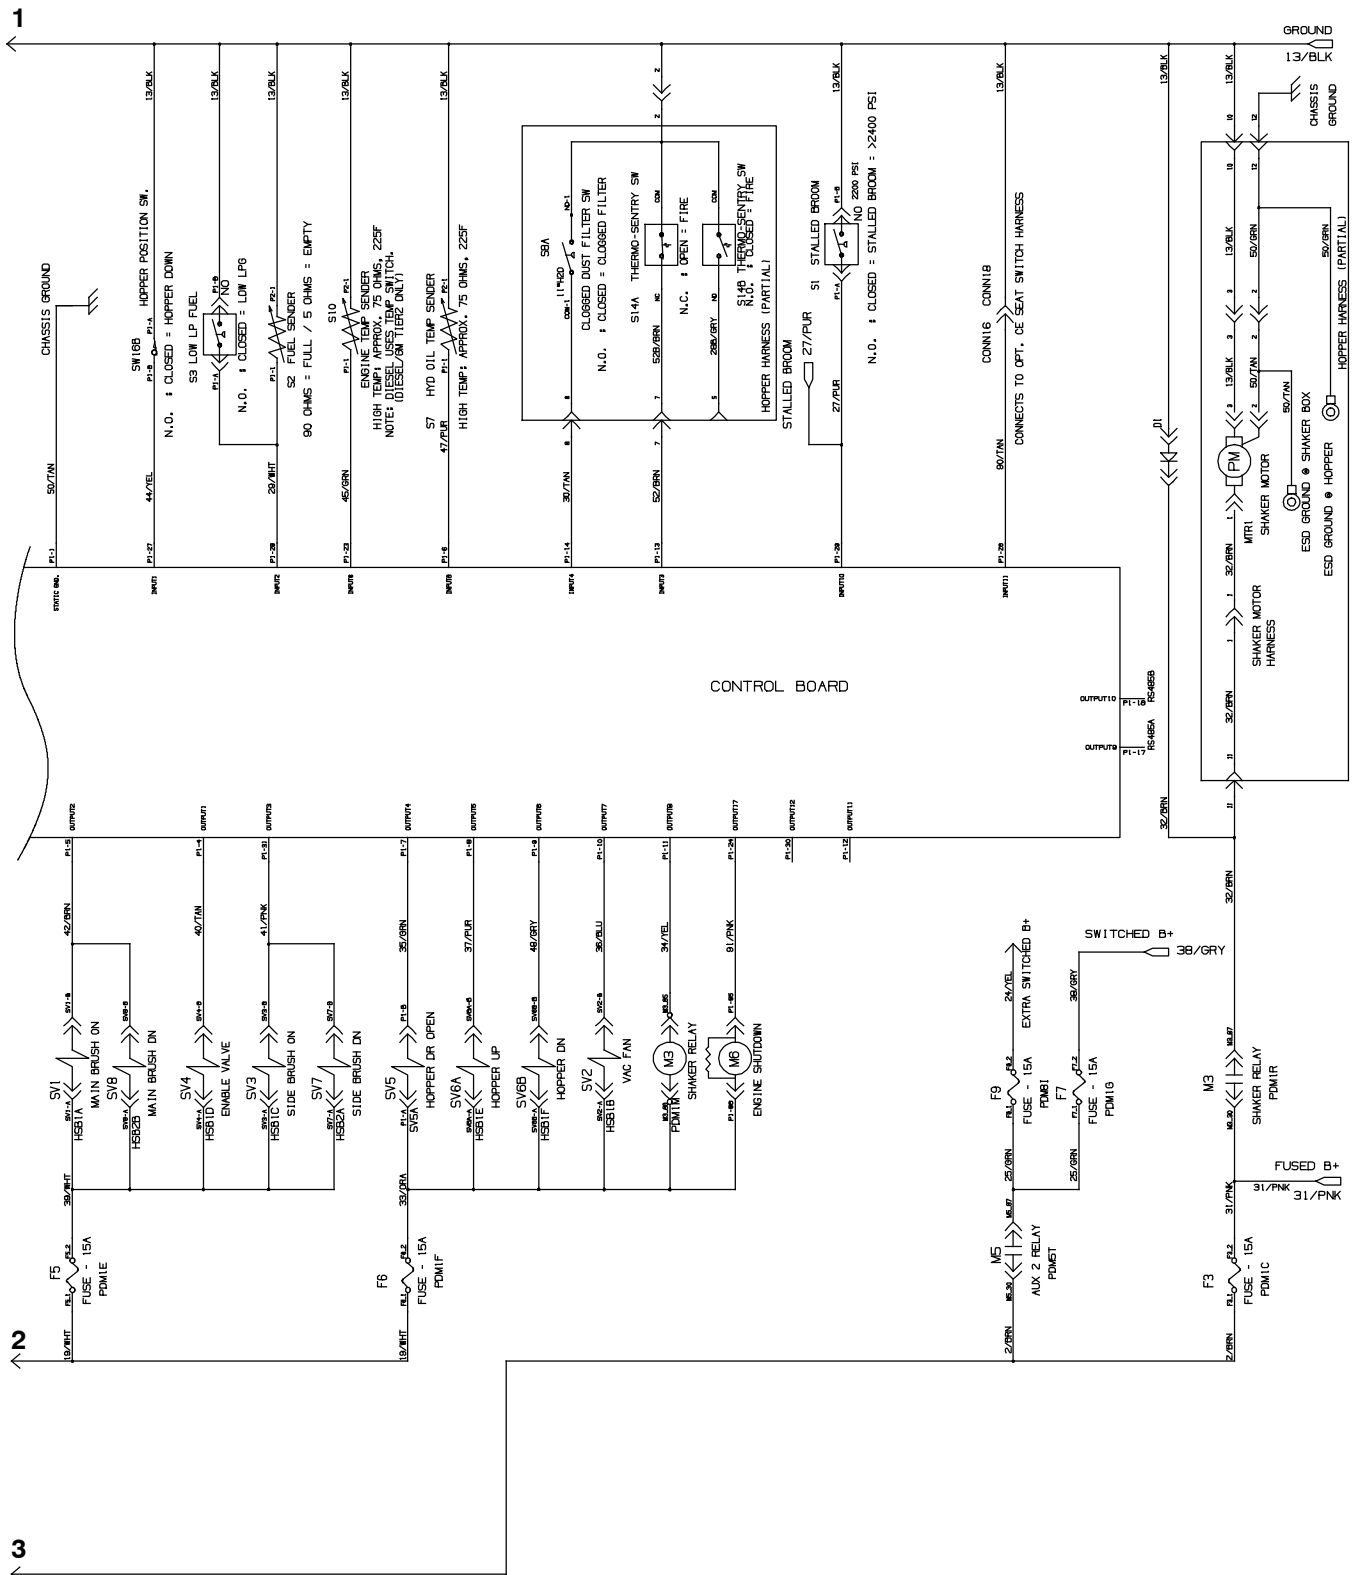

S30 Gas/LPG 9013316 (4- 2015)






Fig. 59 - Electrical Schematic, S30 XP

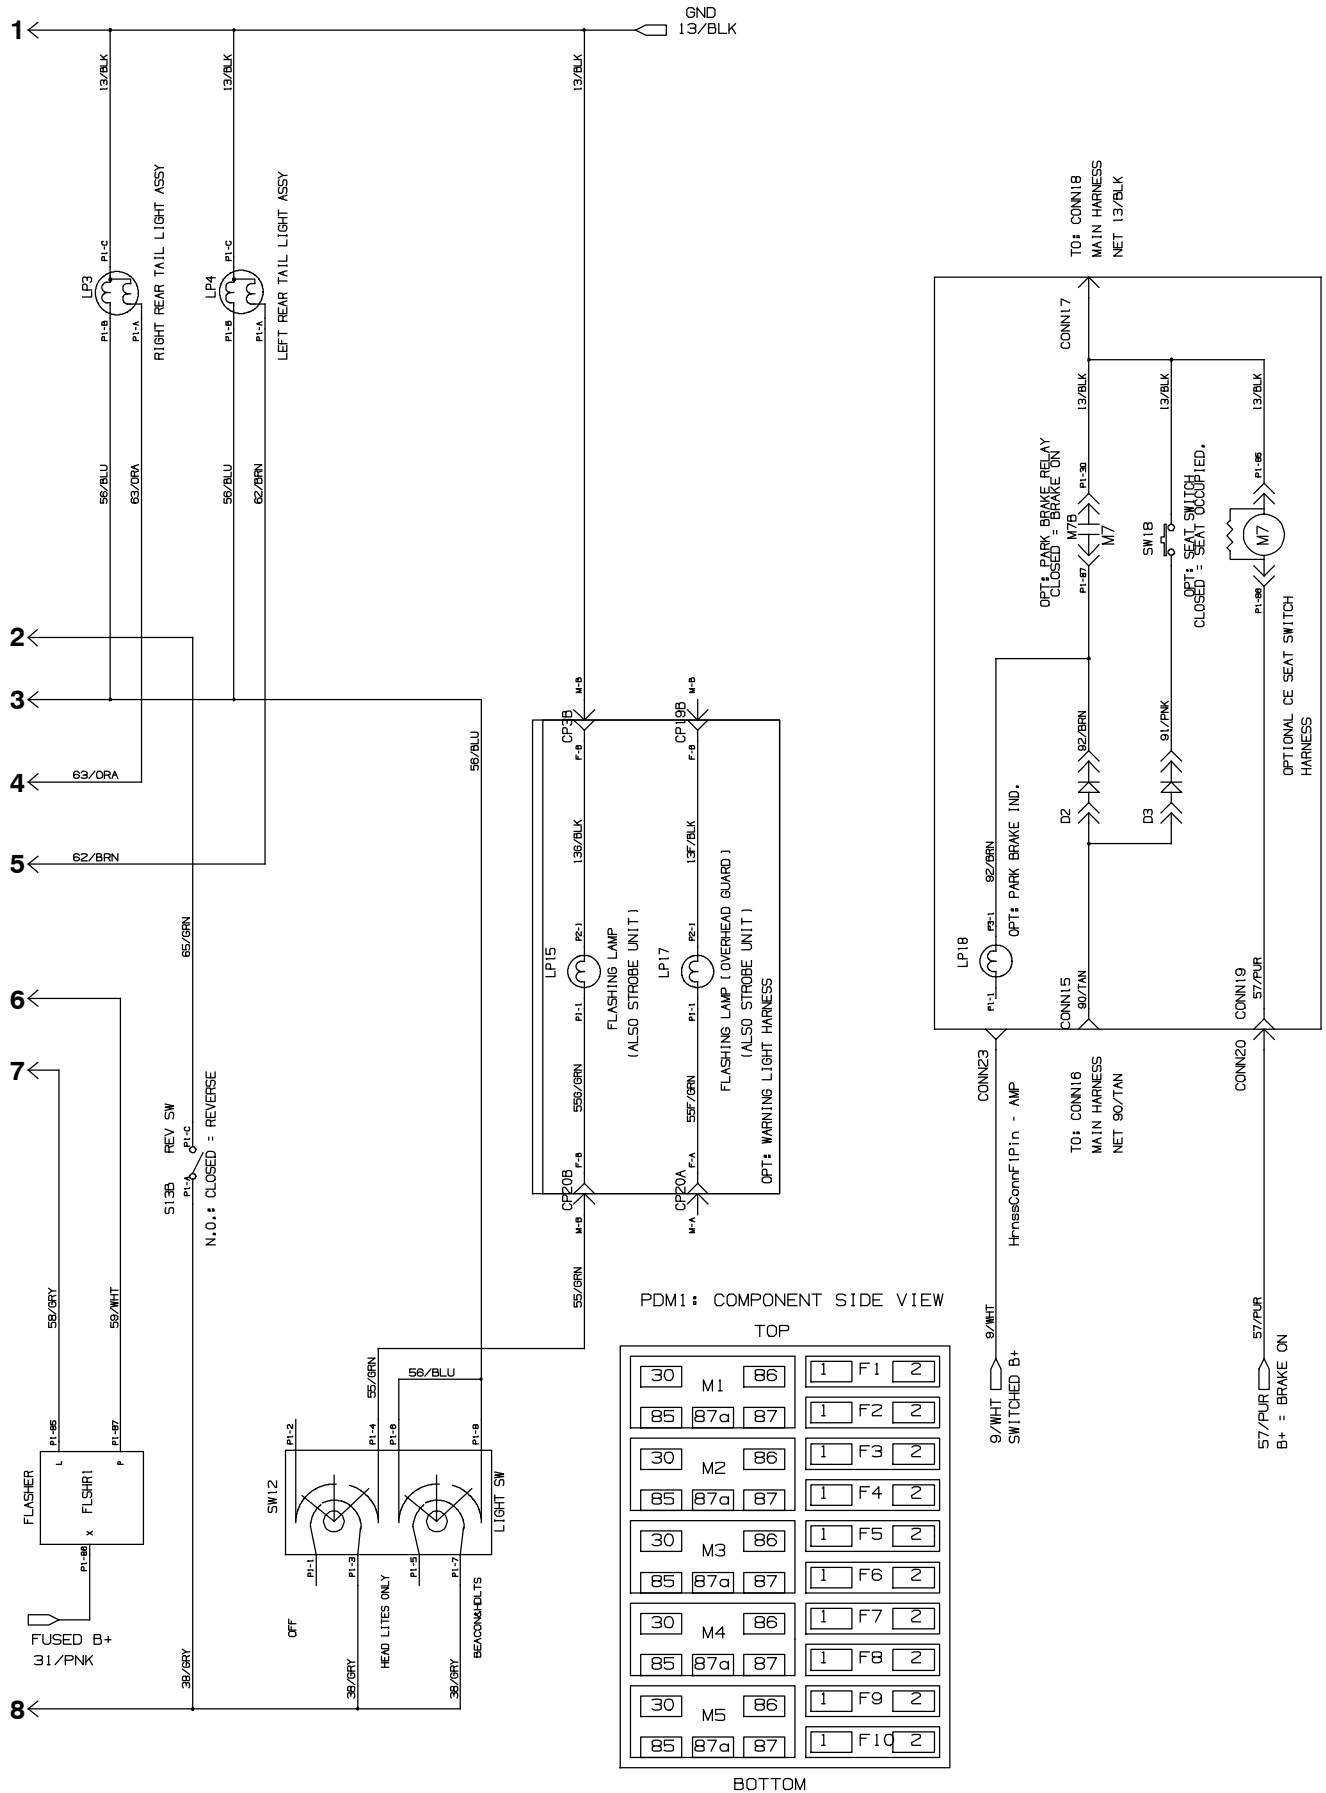

STANDARD PARTS

Fig. 60 - Electrical Schematic, Gas Engine Harness (1 of 2)

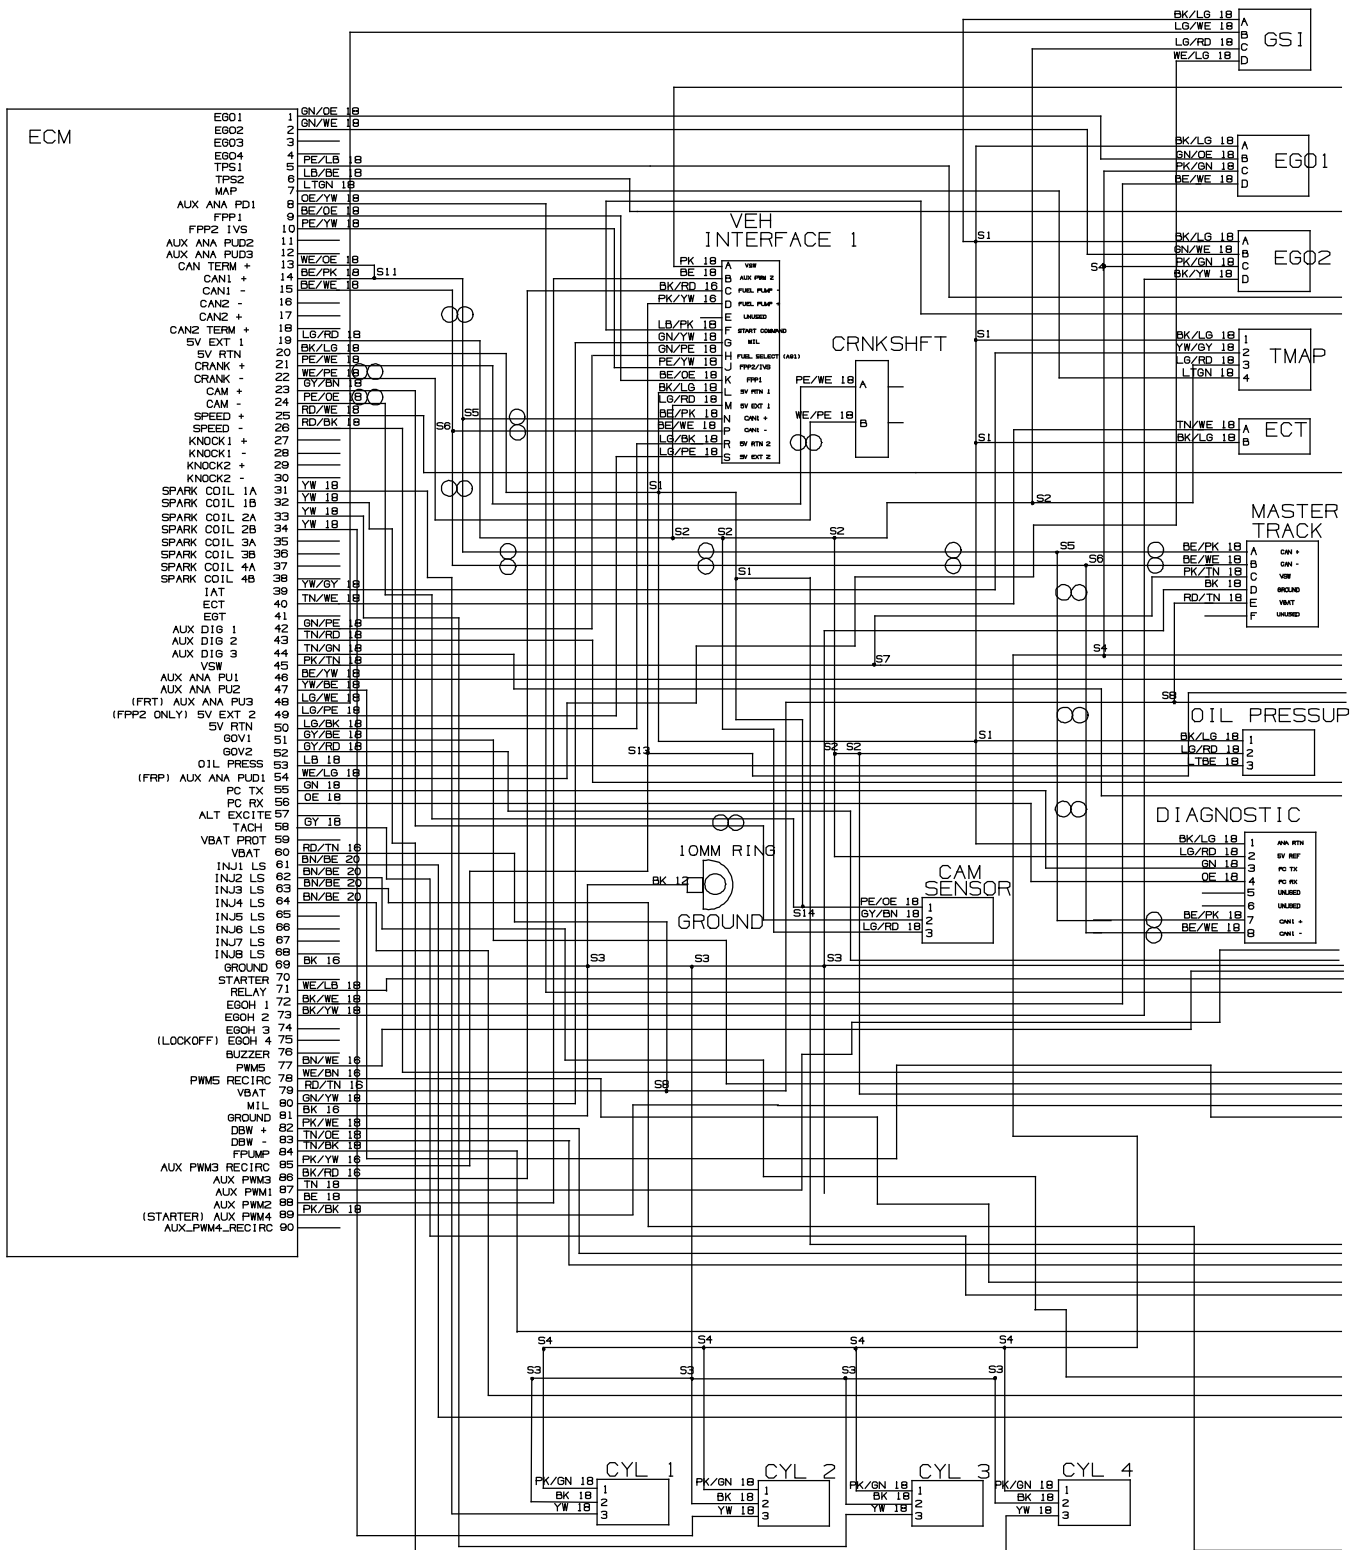

1071653- 356303

Fig. 60 - Electrical Schematic, Gas Engine Harness (2 of 2)





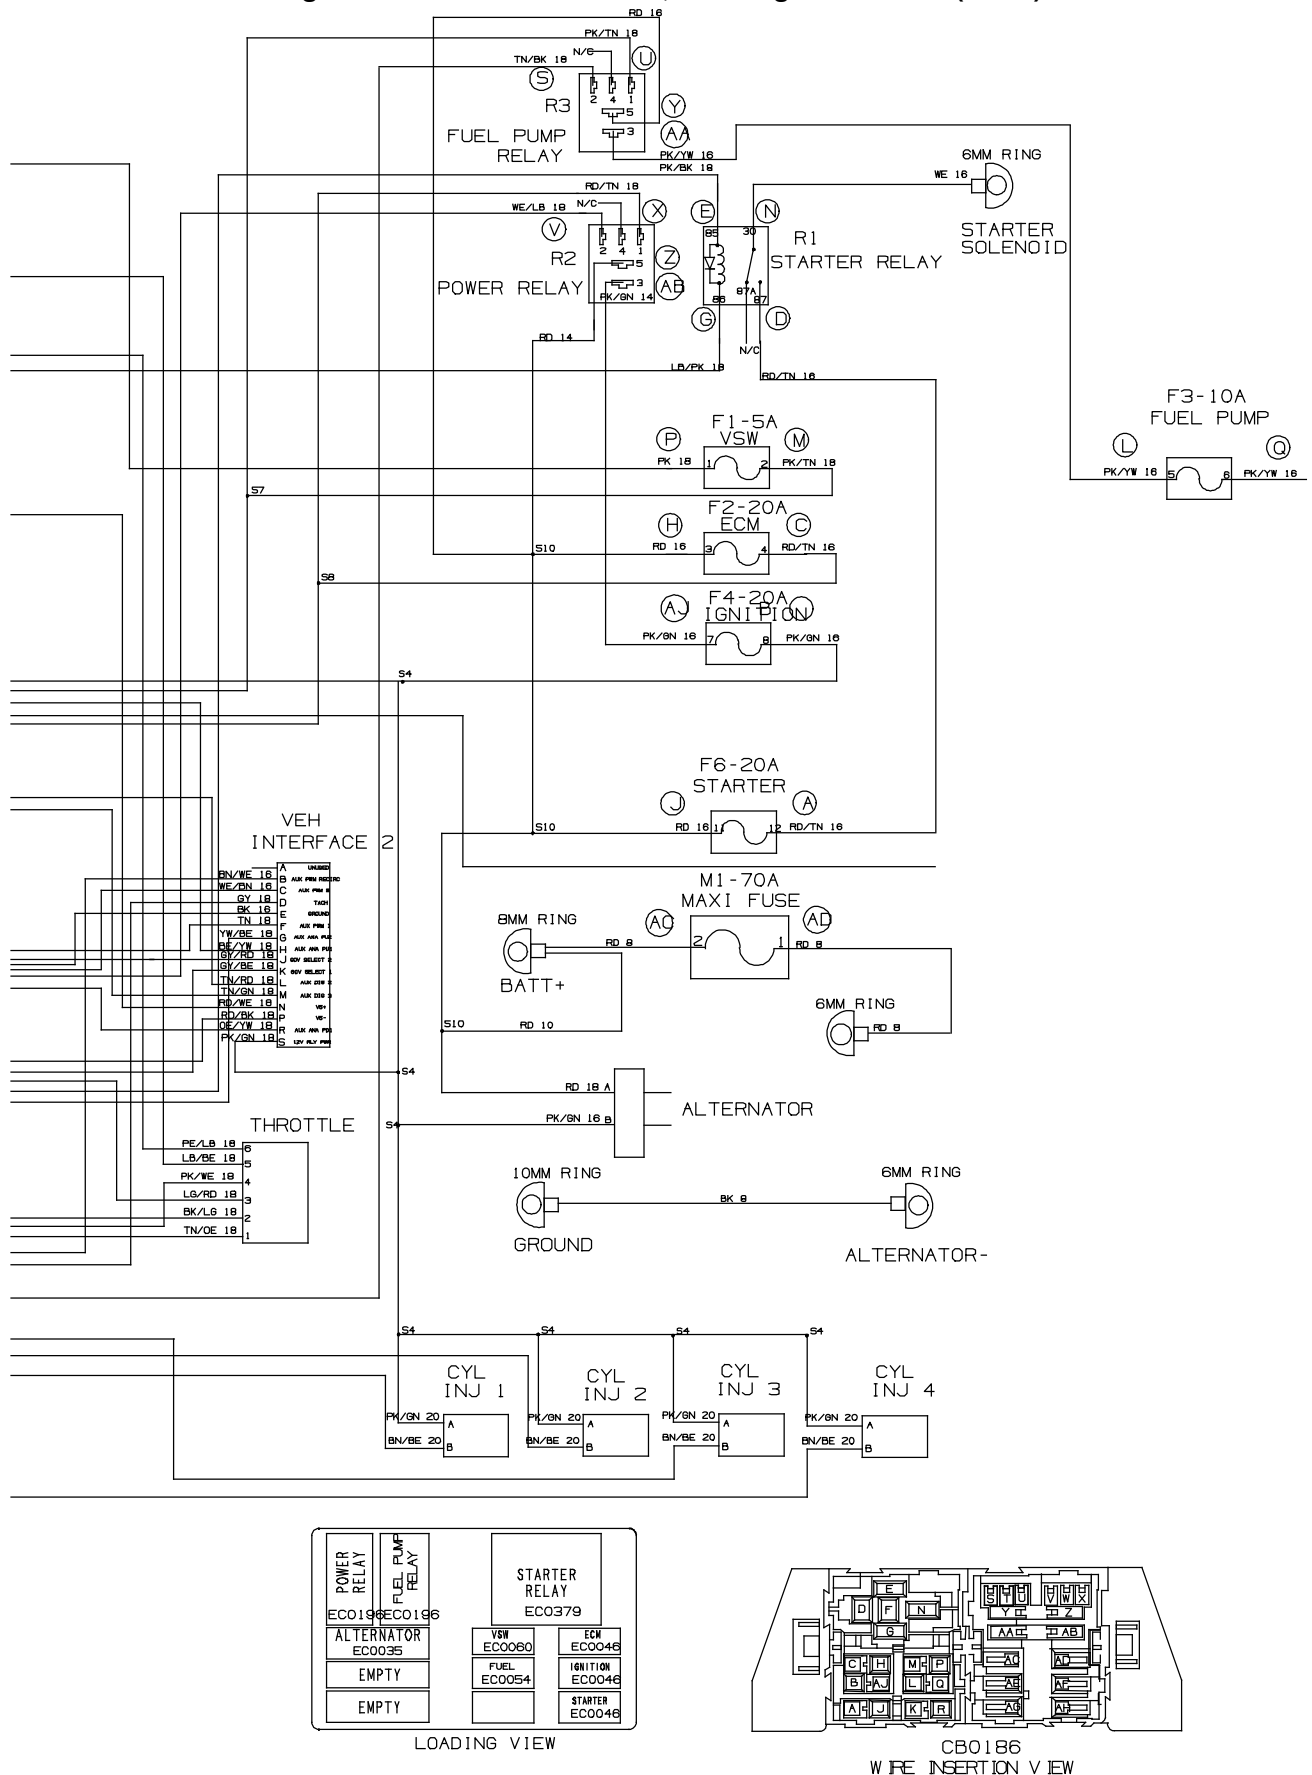


Fig. 61 - Electrical Schematic, LPG Engine Harness (1 of 2)

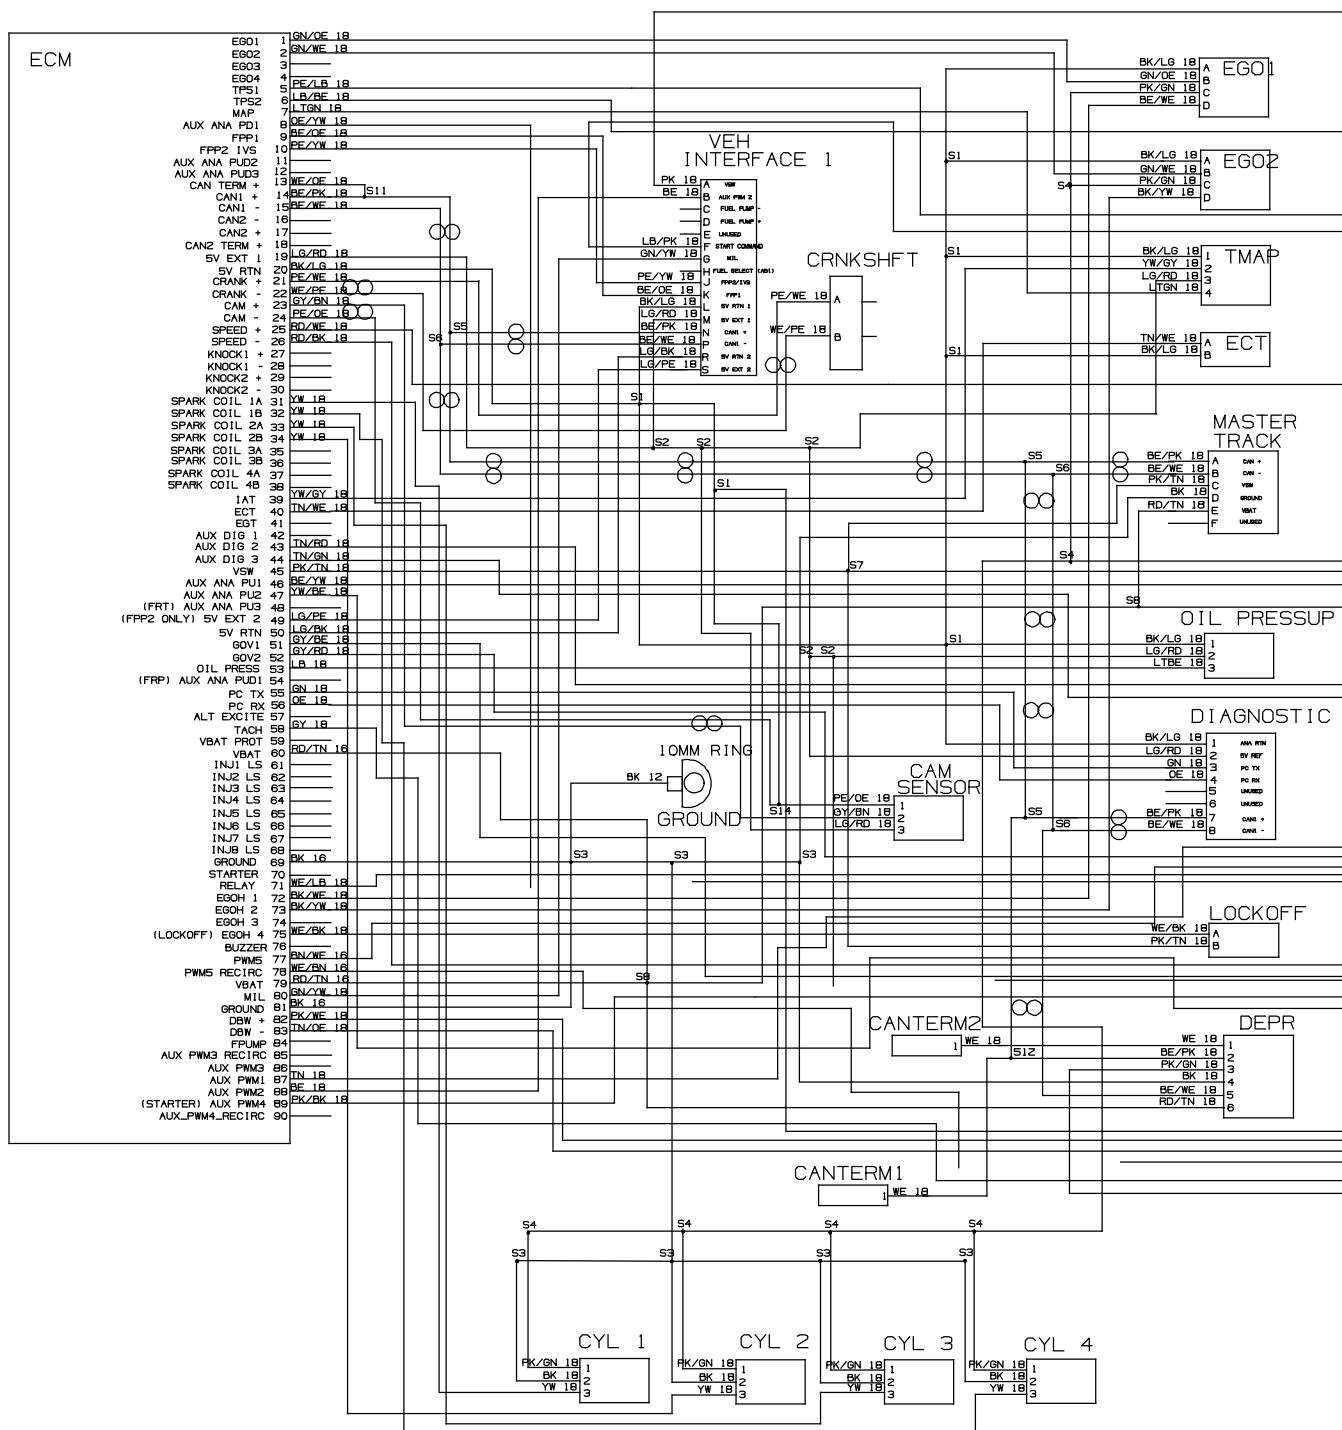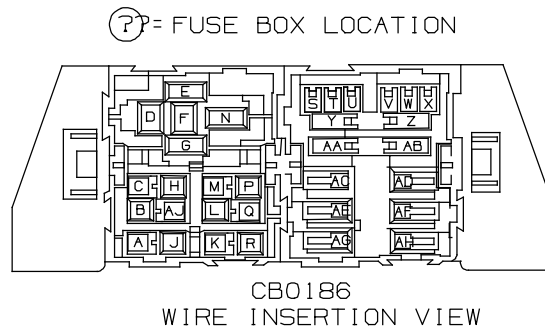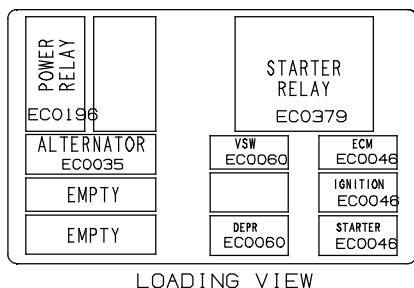


1071654- 356304

Fig. 61 - Electrical Schematic, LPG Engine Harness (2 of 2)

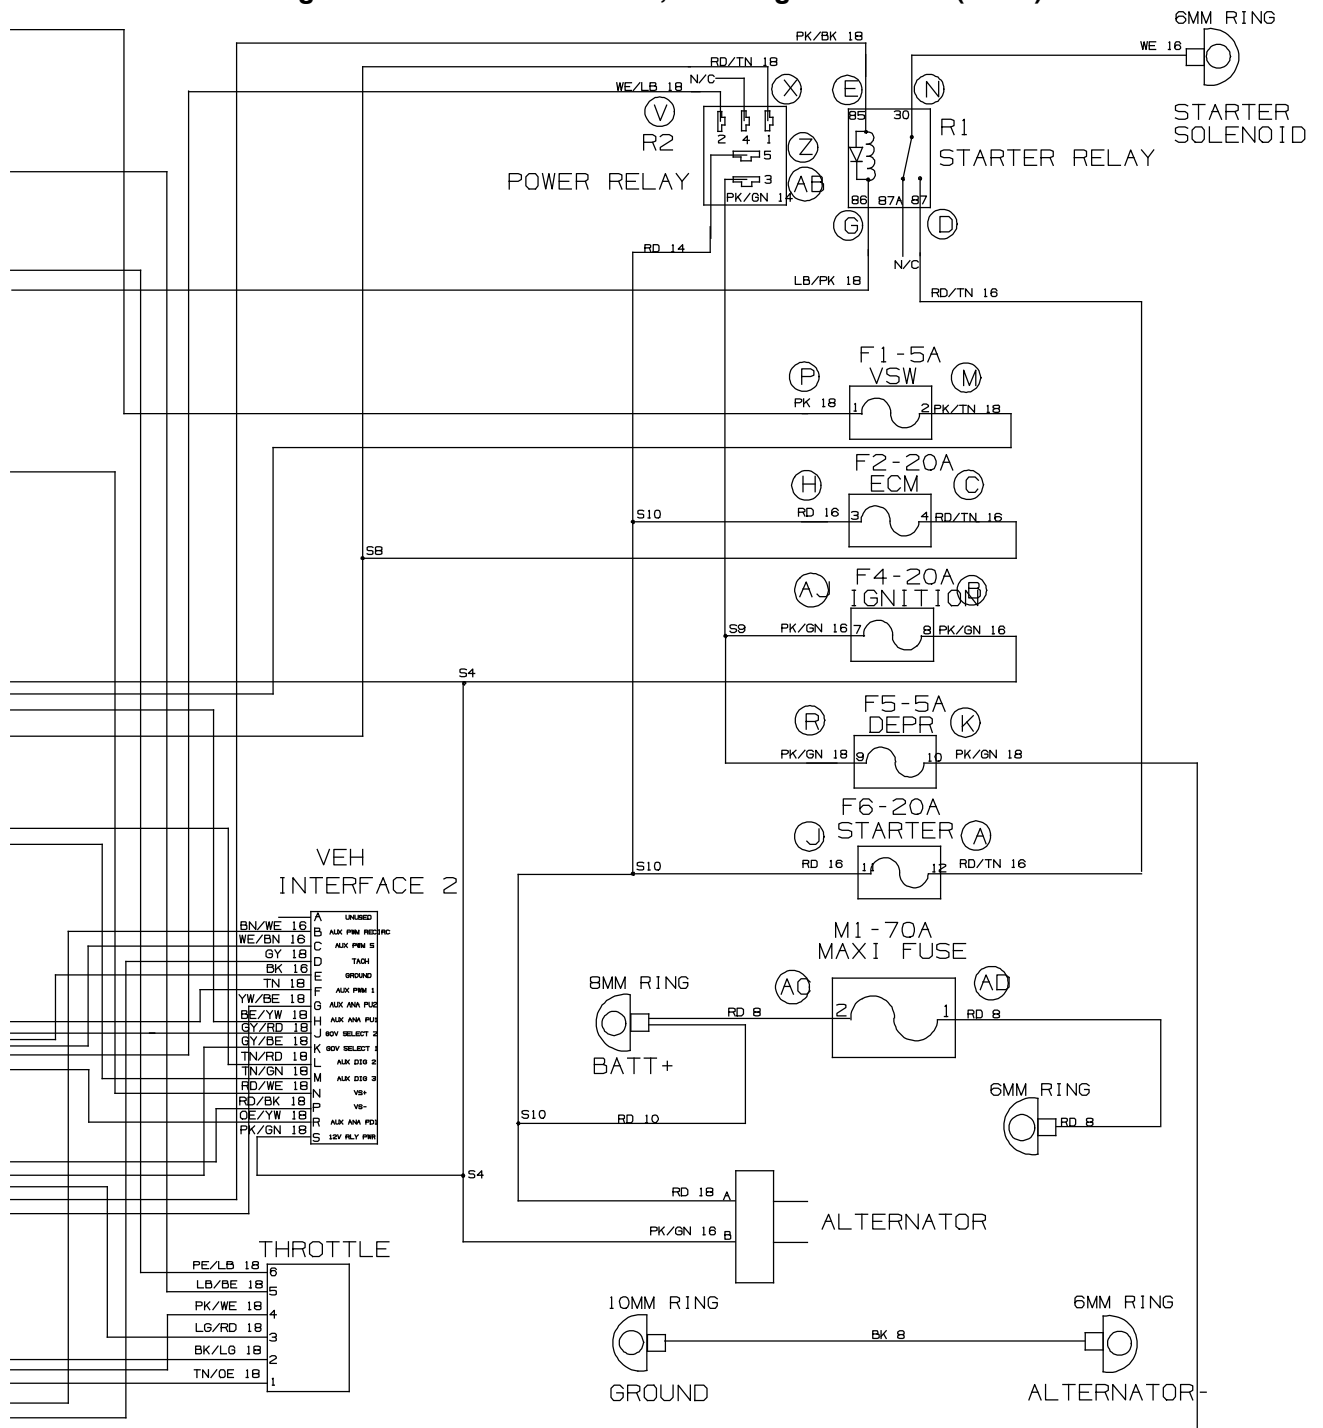

S30 Gas/LPG 9013316 (4- 2015)

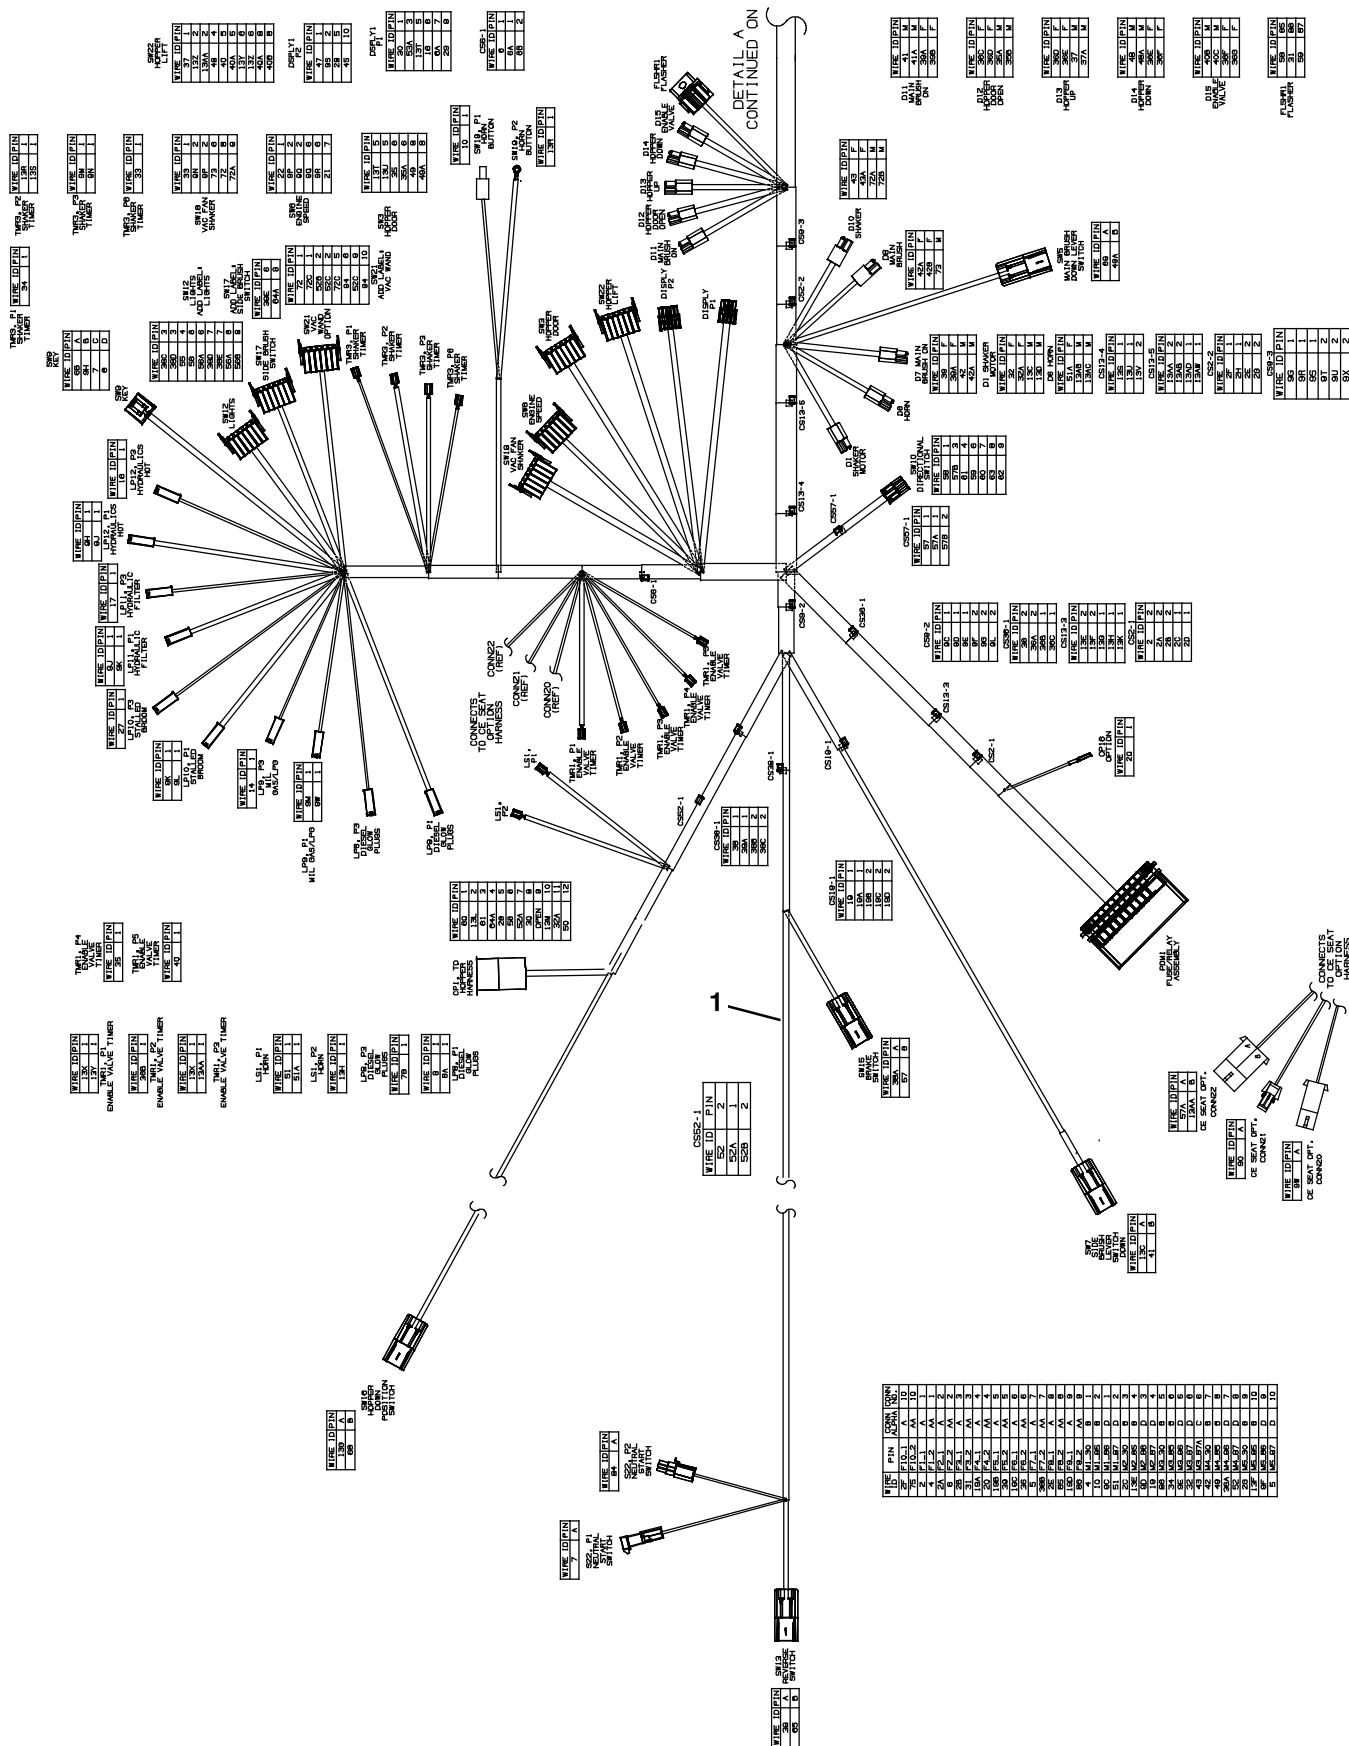

[illegible]

S30 Gas/LPG 9013316 (4- 2015)

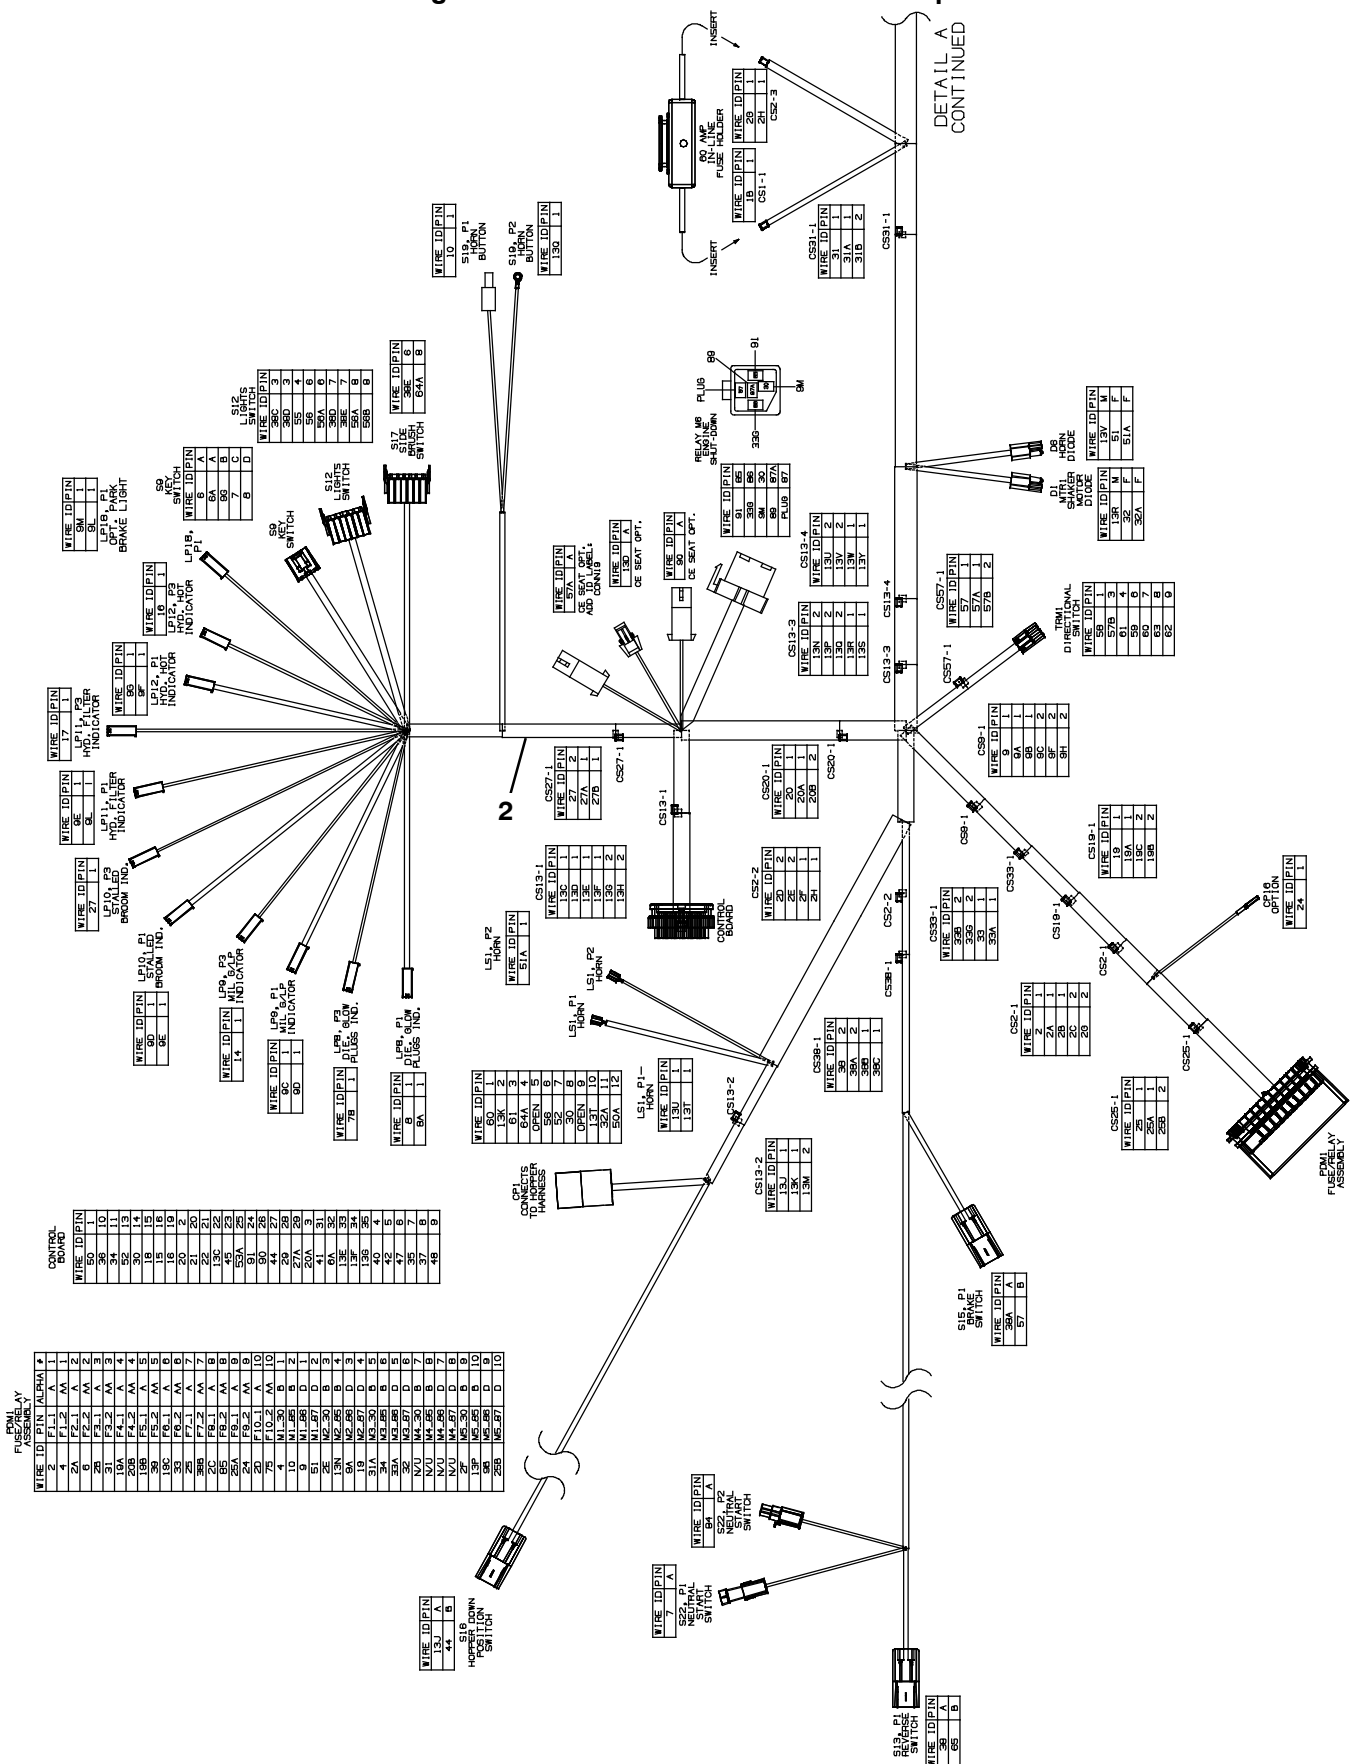


Fig. 62 - Electrical Wire Harnesses Group

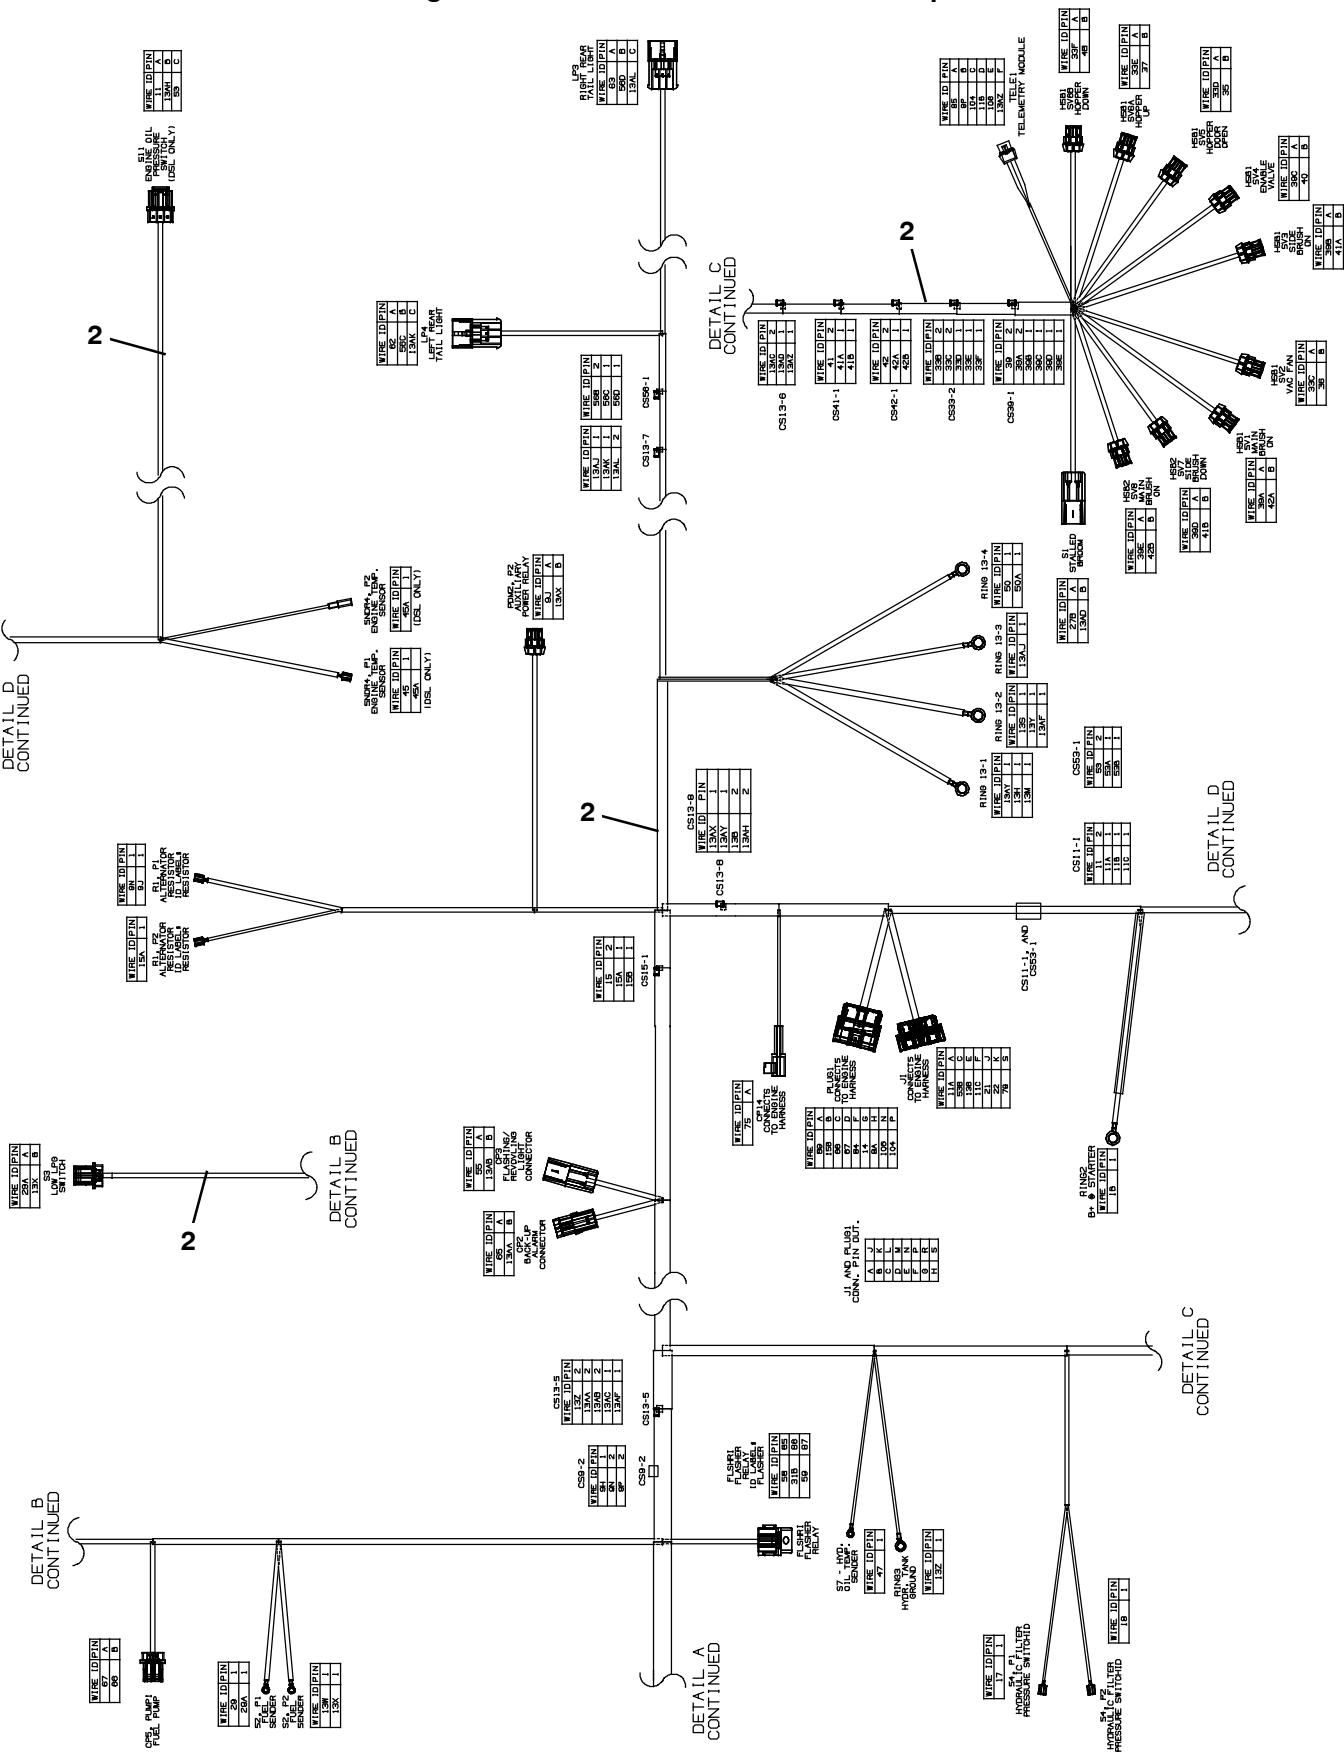


Fig. 62 - Electrical Wire Harnesses Group

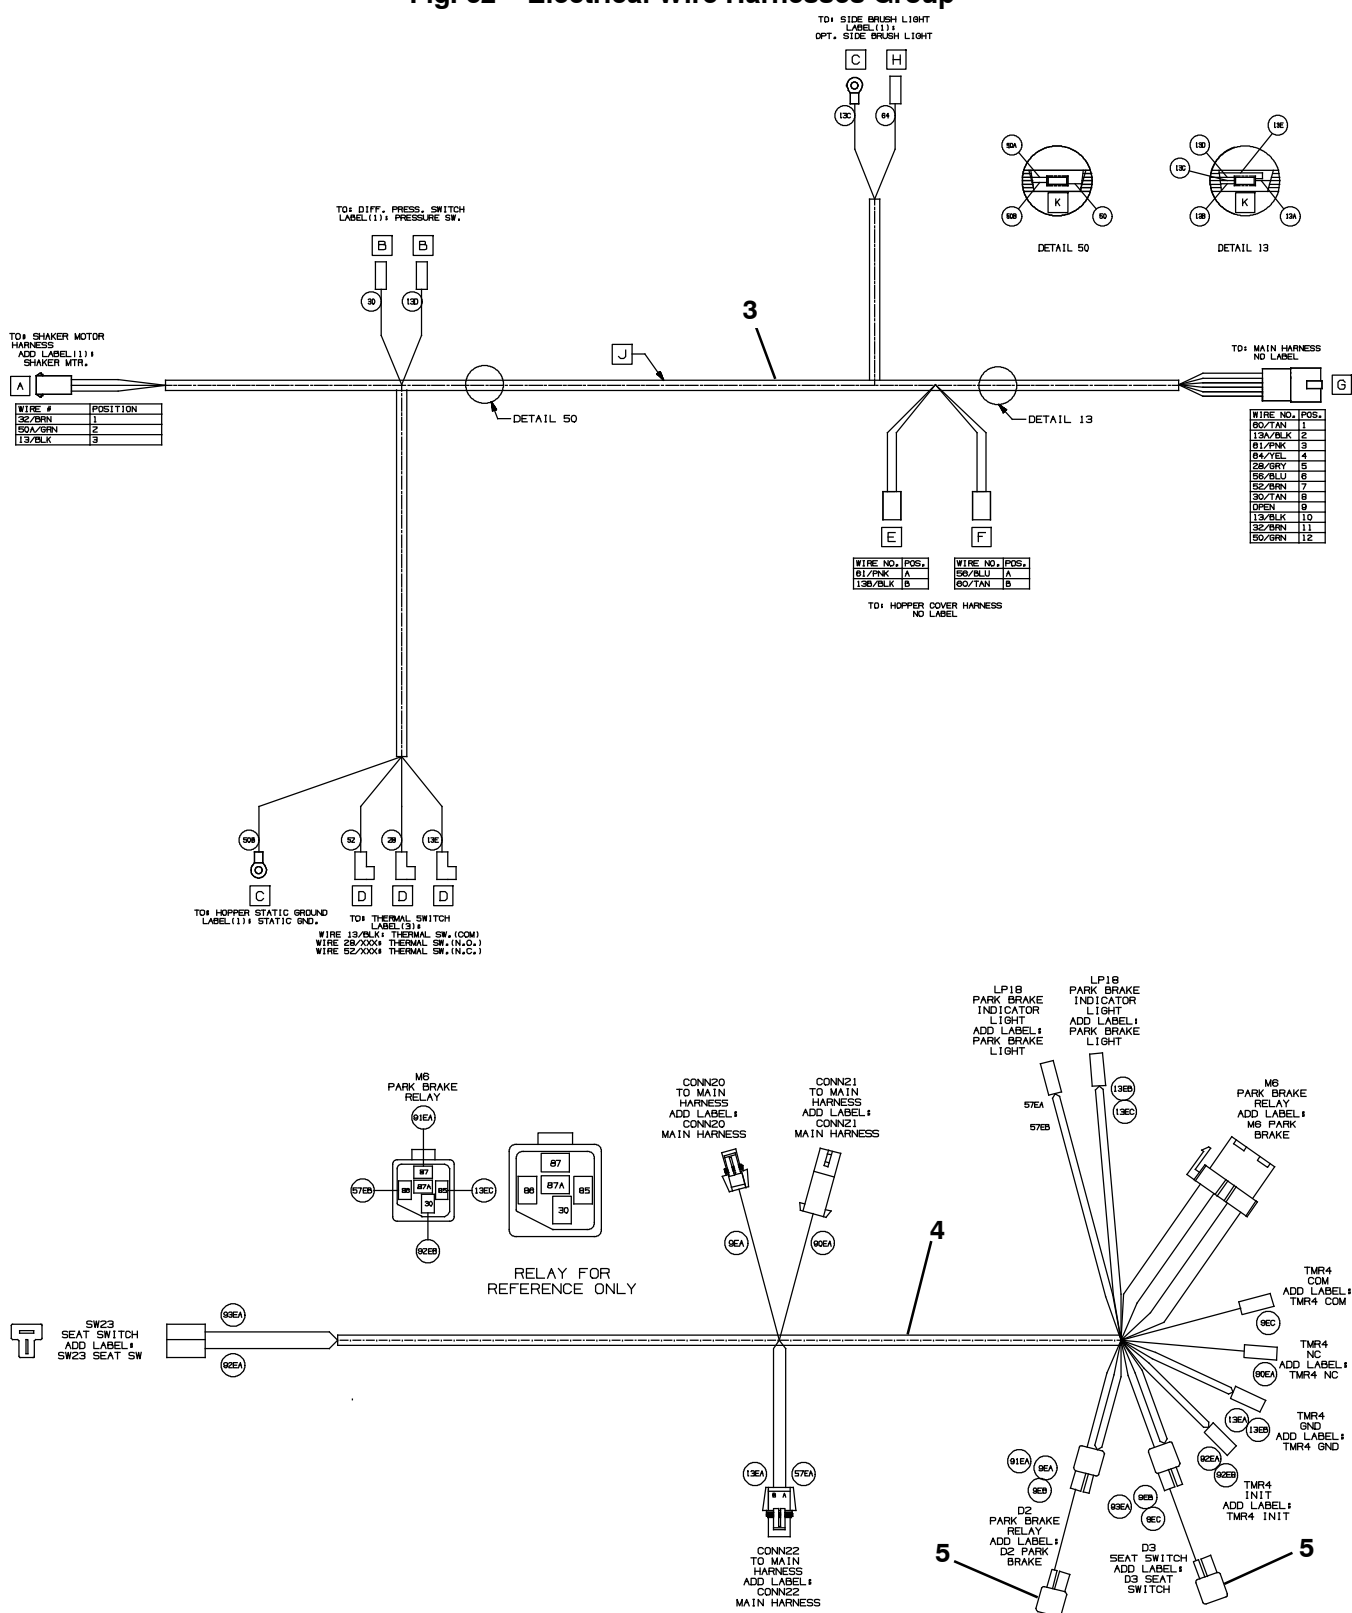


Fig. 62 - Electrical Wire Harnesses Group

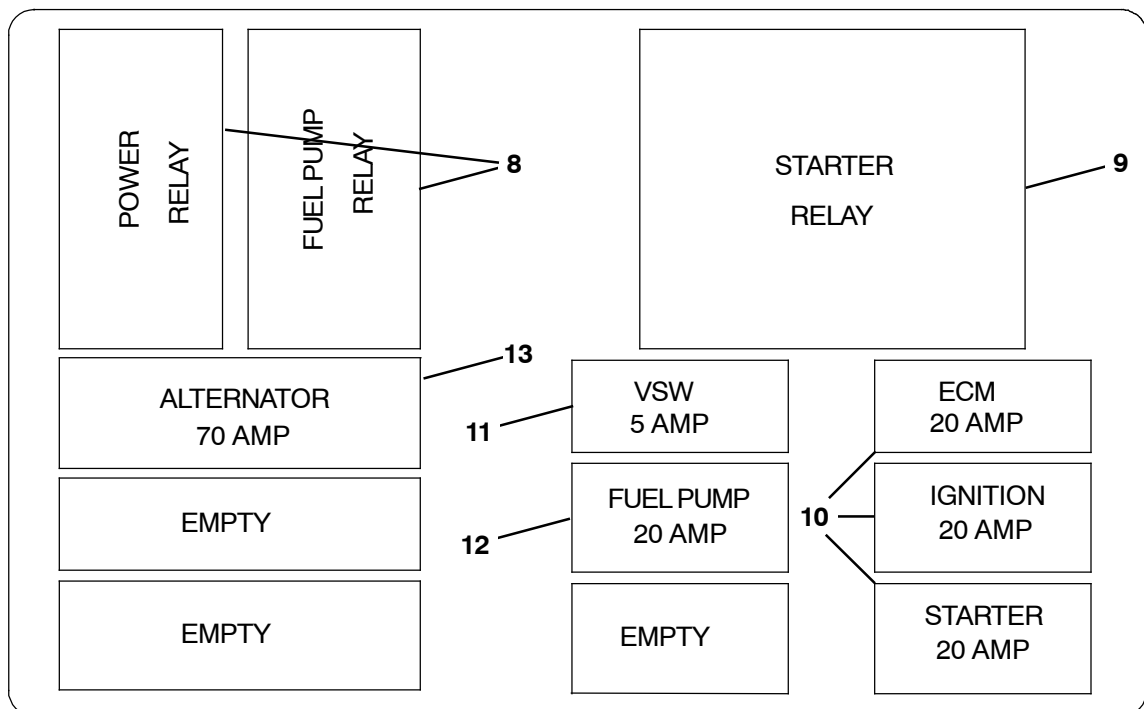
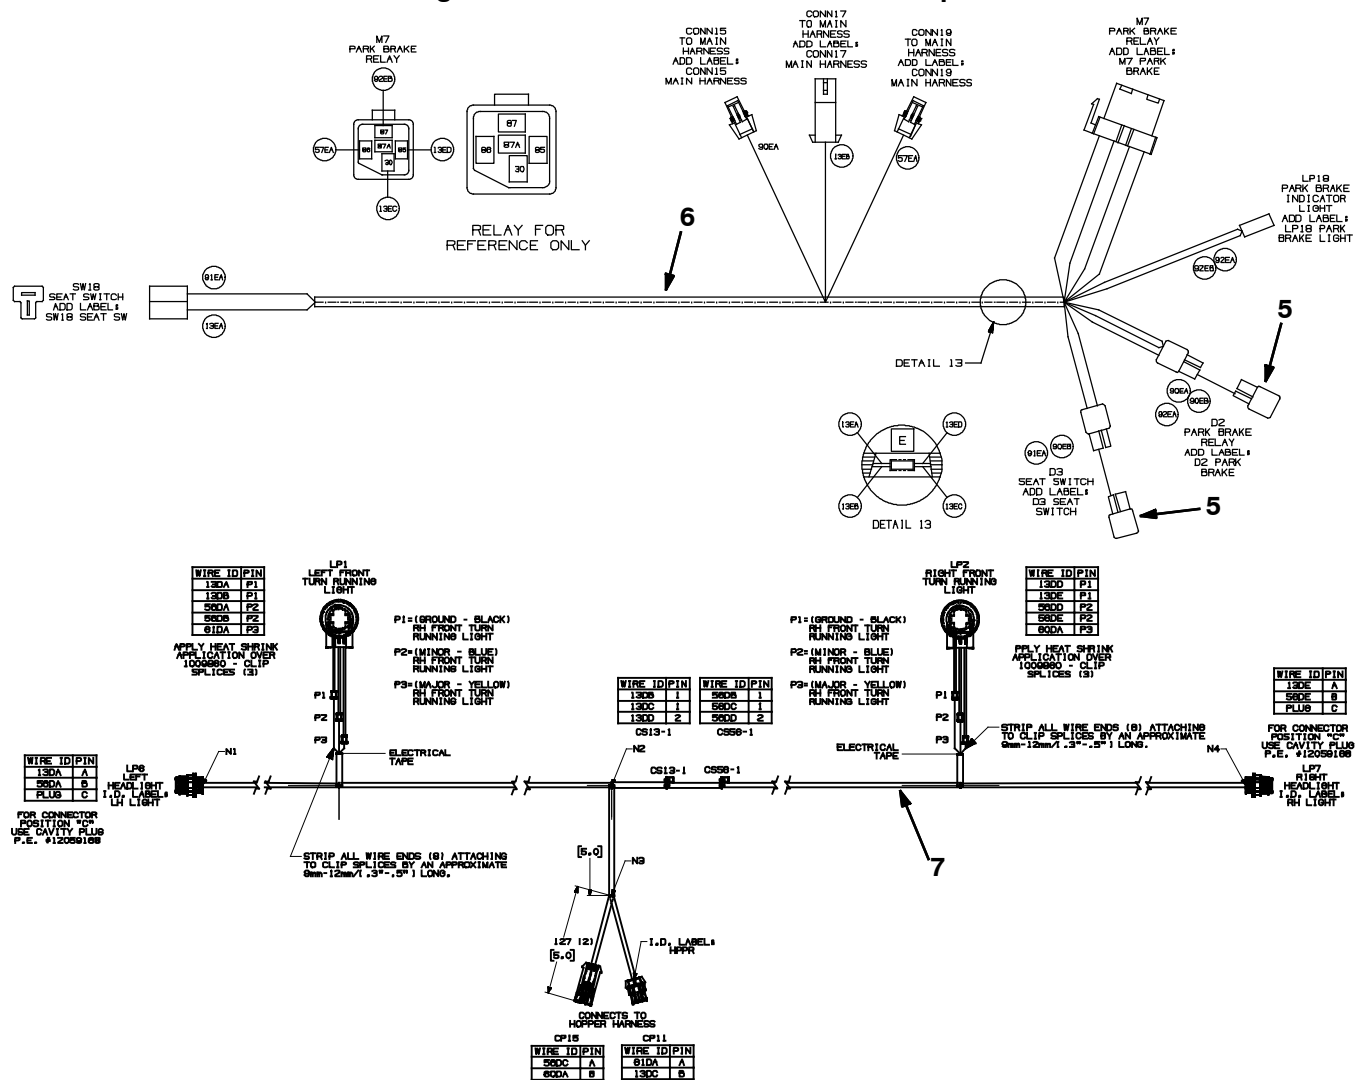


Fig. 62 - Electrical Wire Harnesses Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1073794	(006501-	) Harness, Main [S30, Phoenix] (S30 Only)	1
2	1073795	(006501-	) Harness, Main, [S30 Xp] (S30 XP Only)	1
3	1073902	(006501-	) Harness, Ele, Hppr [S30/S30xp Phoenix]	1
4	1047618	(006501-	) Harness, Switch, Seat, Ce [S30] (Europe Only)	1
5	222290	(006501-	) Diode, Ele, Plug (Europe Only)	2
6	1047619	(006501-	) Harness, Switch, Seat, Ce [S30 Xp] (Europe Only) (S30XP Only)	2
7	1033520	(006501-	) Harness, Cover, Hppr [S30]	1
▽	1071653	(006501-	) Harness, Wire, Eng, Gas [Mit, 2.0l]	1
▲	8 394916	(006501-	) Relay, 12vdc, 20a, Spdt	2
▲	9 57804	(006501-	) Relay, 12vdc, 40a, Spdt	1
▲	10 372237	(006501-	) Fuse, 20 Amp, [Min- 20]	3
▲	11 372235	(006501-	) Fuse, 5 Amp, [Min- 5]	1
▲	12 384999	(006501-	) Fuse, 10 Amp	1
▲	13 1076351	(006501-	) Fuse, Blade, 070a, 32vdc [Maxi]	1
▽	1071654	(006501-	) Harness, Wire, Eng, Lpg [Mit, 2.0l]	1
▲	8 394916	(006501-	) Relay, 12vdc, 20a, Spdt	2
▲	9 57804	(006501-	) Relay, 12vdc, 40a, Spdt	1
▲	10 372237	(006501-	) Fuse, 20 Amp, [Min- 20]	3
▲	11 372235	(006501-	) Fuse, 5 Amp, [Min- 5]	1
▲	12 384999	(006501-	) Fuse, 10 Amp	1
▲	13 1076351	(006501-	) Fuse, Blade, 070a, 32vdc [Maxi]	1

Fig. 63 - Label Group


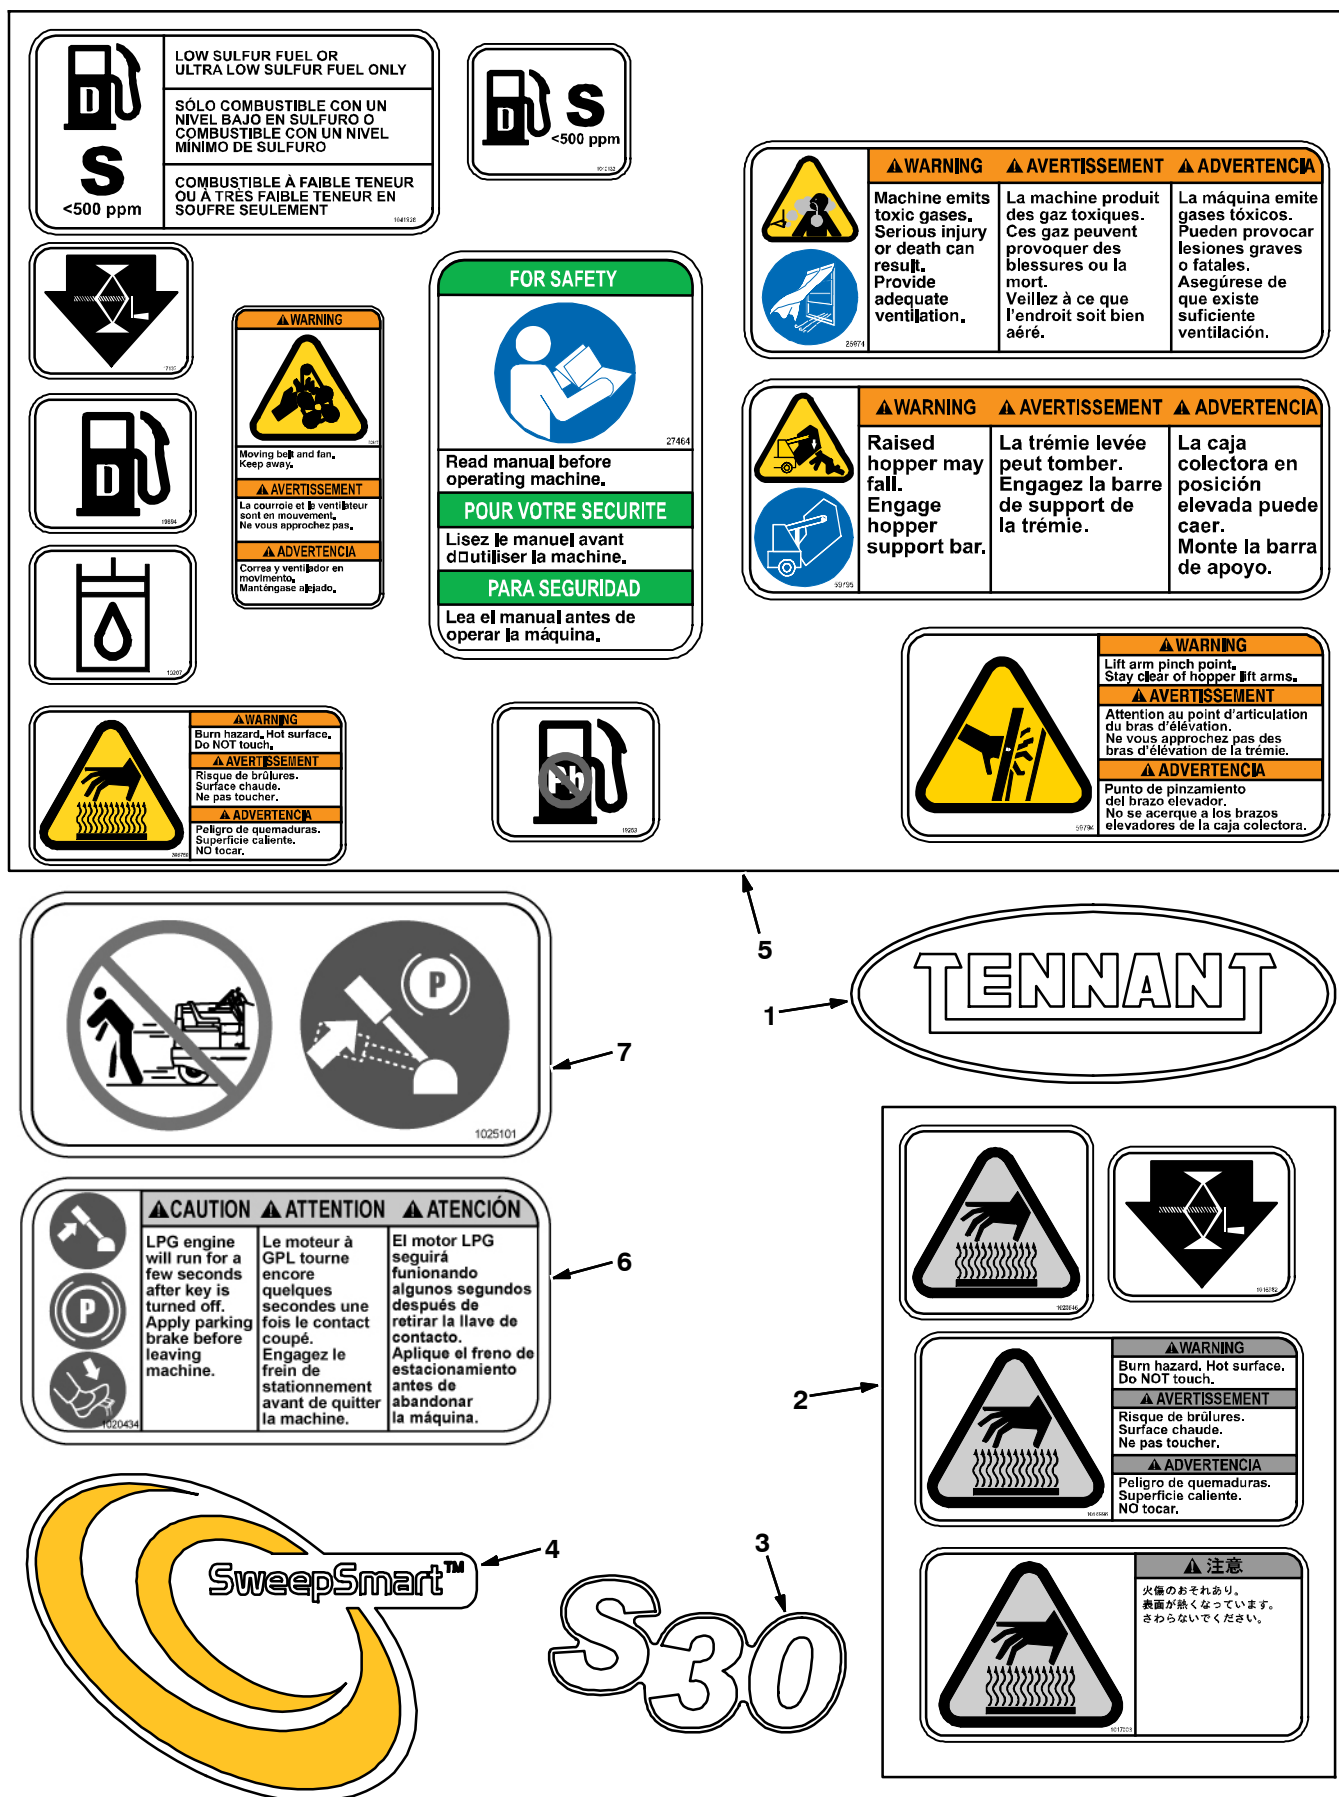


Fig. 63 - Label Group

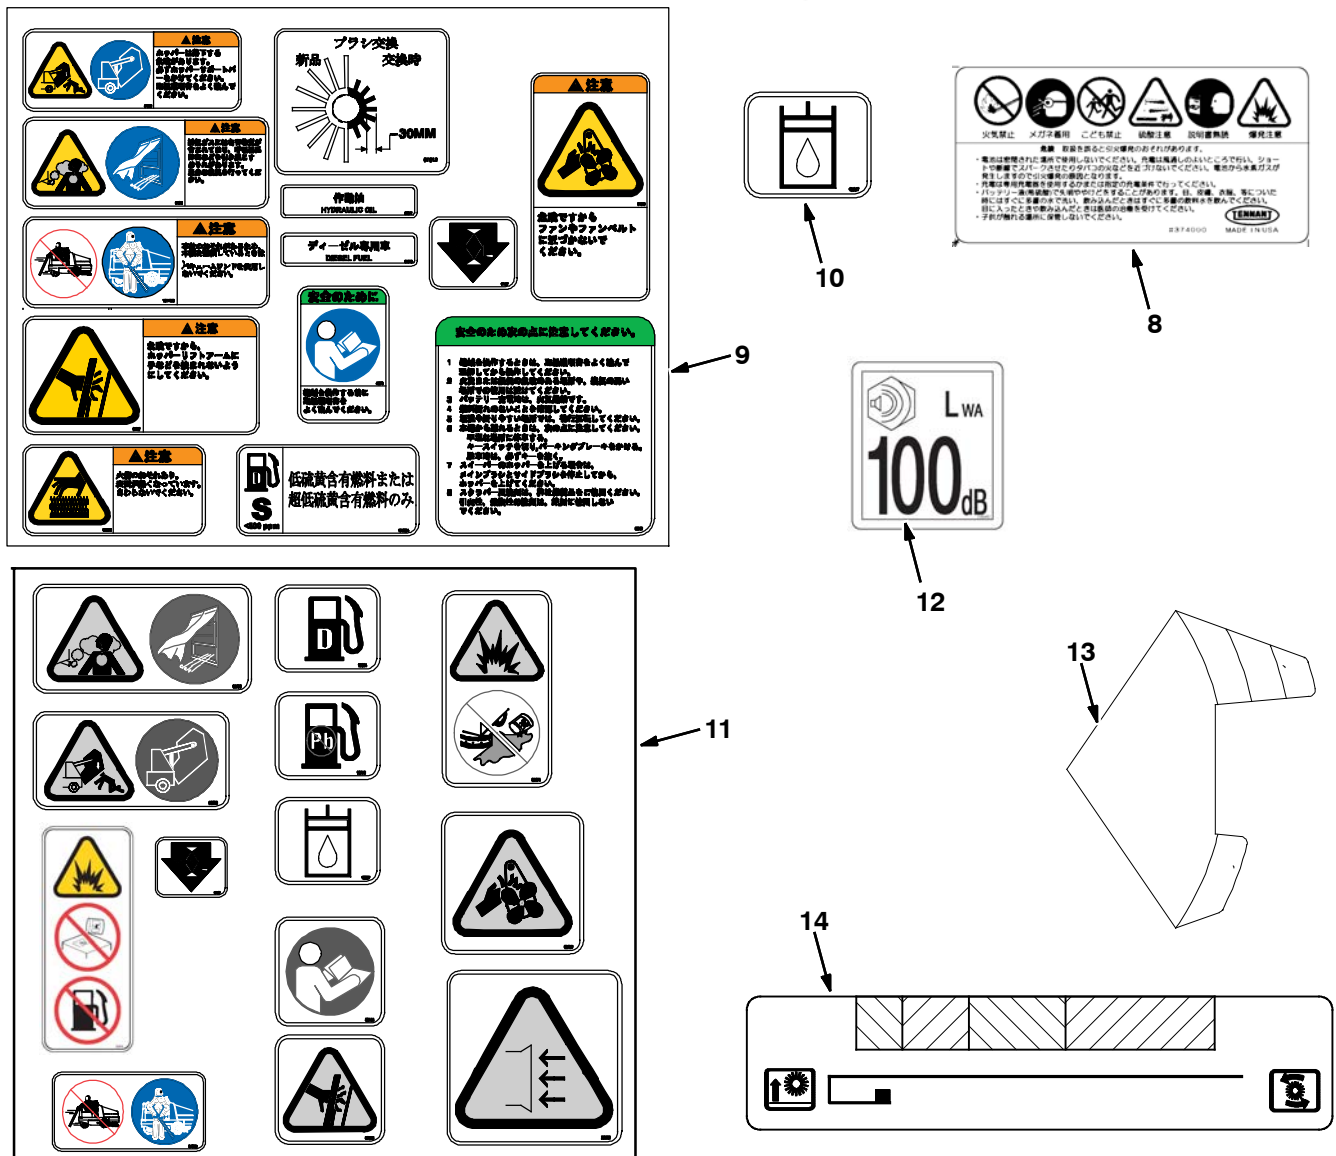

Ref.	Part No.	Serial Number	Description	Qty.
1	1047741	(006501-)	Label, Logo, 10.4l, White [Tennant]	1
2	1017141	(006501-)	Label Set, Hi Temp	1
3	1061047	(006501-)	Label, White [S30]	3
4	1061048	(006501-)	Label, Cyclone [S30]	3
5	59767	(006501-)	Label Set, Info/Hzrd [Multi- Mach]	1
6	1020434	(006501-)	Label, Caution [Apply Parking Brake]	1
7	1025101	(006501-)	Label, Caution [Apply Parking Brake] (CE and Japan Only)	1
8	374000	(006501-)	Label, Caution, Battery, Tj (Japan Only)	1
9	72381	(006501-)	Label Set, Info/Hzrd, Misc, Tj (Japan Only)	1
10	19207	(006501-)	Label, Info, Hyd Fluid, Na / Ce (Japan Only)	1
11	66188	(006501-)	Label Set, Info/Hzrd, Misc, Ce (Europe Only)	1
12	398481	(006501-)	Label, Level, Sound [100 Db] (Europe Only)	1
13	383203	(006501-)	Label, info, Arm Brush	1
14	383202	(006501-)	Label, Handle, Lift	1
	374224	(006501-)	Tape, Warning, Rh, Blk / Yel [33 Mtr] (Europe Only)	1
	C460919	(006501-)	Tape, Warning, Left Blk/Yel [33 Mtr] (Europe Only)	1

SECTION 3

Contents	Page
Fig. 1 - Indoor Light Kit	3- 2
Fig. 2 - Outdoor Light Kit	3- 4
Fig. 3 - Left Hand Side Brush Kit, S30 XP .	3- 6
Fig. 4 - Vacuum Wand Kit	3- 8
Fig. 5 - Overhead Guard Kit	3- 10
Fig. 6 - Cab Group	3- 12
Fig. 7 - Cab Cover Group	3- 14
Fig. 8 - Cab Door Group	3- 16
Fig. 9 - Cab Heater Group	3- 18
Fig. 10 - Cab Air Conditioner Group	3- 20
Fig. 11 - Cab Fuel Cover Group	3- 22
Fig. 12 - Cab Wire Harness Group	3- 24
Fig. 13 - Cab Wire Harness Electrical Schematic	3- 25
Fig. 14 - Corner Bumper Kit	3- 26
Fig. 15 - Telemetry Group	3- 27
Fig. 16 - Side and Rear Skirt Kit	3- 28
Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)	3- 30
Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)	3- 32
Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)	3- 34
Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)	3- 36
Fig. 21 - Wet Side Brush Dust Control Wire Harness Group (No. Amer. Only)	3- 38
Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501- 008140) (No. Amer. Only)	3- 40
Fig. 23 - Wet Side Brush Dust Control Electrical Schematic, S30 (No. Amer. Only)	3- 42
Fig. 24 - Wet Side Brush Dust Control Electrical Schematic, S30 XP (No. Amer. Only)	3- 43
Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit	3- 44
Fig. 26 - Dual Side Brush Dust Control Skirt Kit	3- 46
Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)	3- 48
Fig. 28 - HEPA Filter Box Group (No. Amer. Only)	3- 50
Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)	3- 52
Fig. 30 - HEPA Filter Electrical Group (No. Amer. Only)	3- 54
Fig. 31 - Fire Extinguisher Kit	3- 55
Fig. 32 - Documentation Group (Online Only)	3- 56

Fig. 1 - Indoor Light Kit

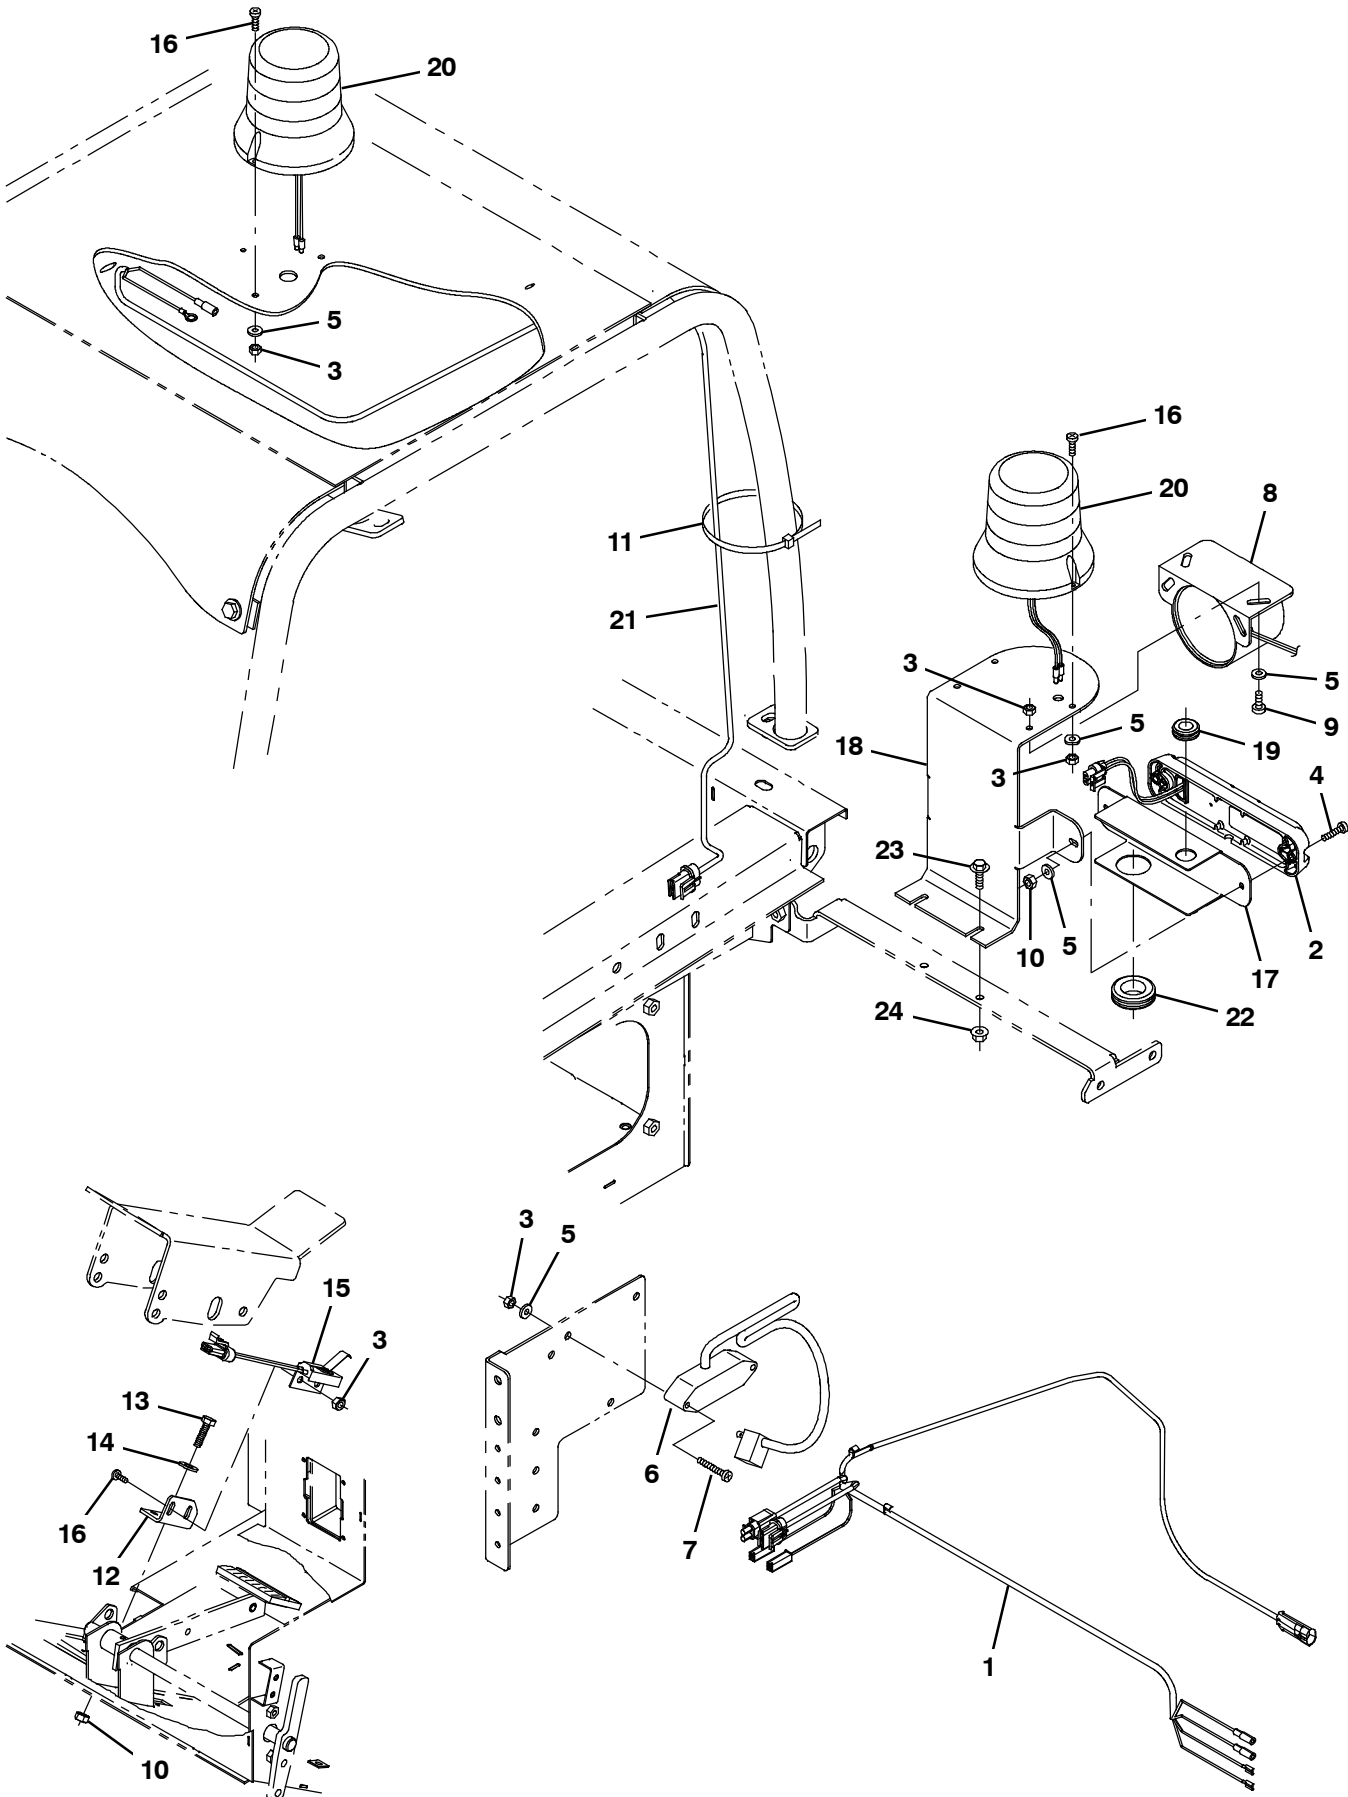


Fig. 1 - Indoor Light Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008199	(006501-	) Light Kit, Inside, Ci [S30]	1
▲	1	1034191	(006501-	) Harness, Backup, Rev [S30]	1
▲	2	1036173	(006501-	) Light, Led, White, 12- 24vdc	1
▲	3	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	6
▲	4	06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	2
▲	5	19066	(006501-	) Washer, Flat, 10	8
▲	6	1036985	(006501-	) Flasher, 12- 80vdc, 2a	1
▲	7	06938	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 40, 4.8	2
▲	8	9007131	(006501-	) Alarm Assy, Backup, 12- 24vdc 82- 107dba	1
▲	9	09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	2
▲	10	07785	(006501-	) Nut, Hex, Std, M6 X 1.00, Ss	4
▲	11	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4
▲	12	1036995	(006501-	) Bracket, Switch, Reverse	1
▲	13	08716	(006501-	) Screw, Hex, M6 X 1.00 X 20, Ss	2
▲	14	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	15	1039735	(006501-	) Switch, Snap, 15a No	1
▲	16	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	4
▲	17	1061203	(006501-	) Bracket, Light	1
▲	18	1061140	(006501-	) Bracket, Alarm, Backup	1
▲	19	10632- 9	(006501-	) Grommet, Rbr, 0.63id, F/0.8h, .12 Matl	1
▲	20	1075297	(006501-	) Light, Flsh, 12vdc, Amb, Rwk	1
▲	21	1030973	(006501-	) Harness, Ohg [S30]	1
▲	22	10632- 14	(006501-	) Grommet, Rbr, 1.00id, F/1.4h, .12 Matl	1
▲	23	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
▲	24	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2

Fig. 2 - Outdoor Light Kit

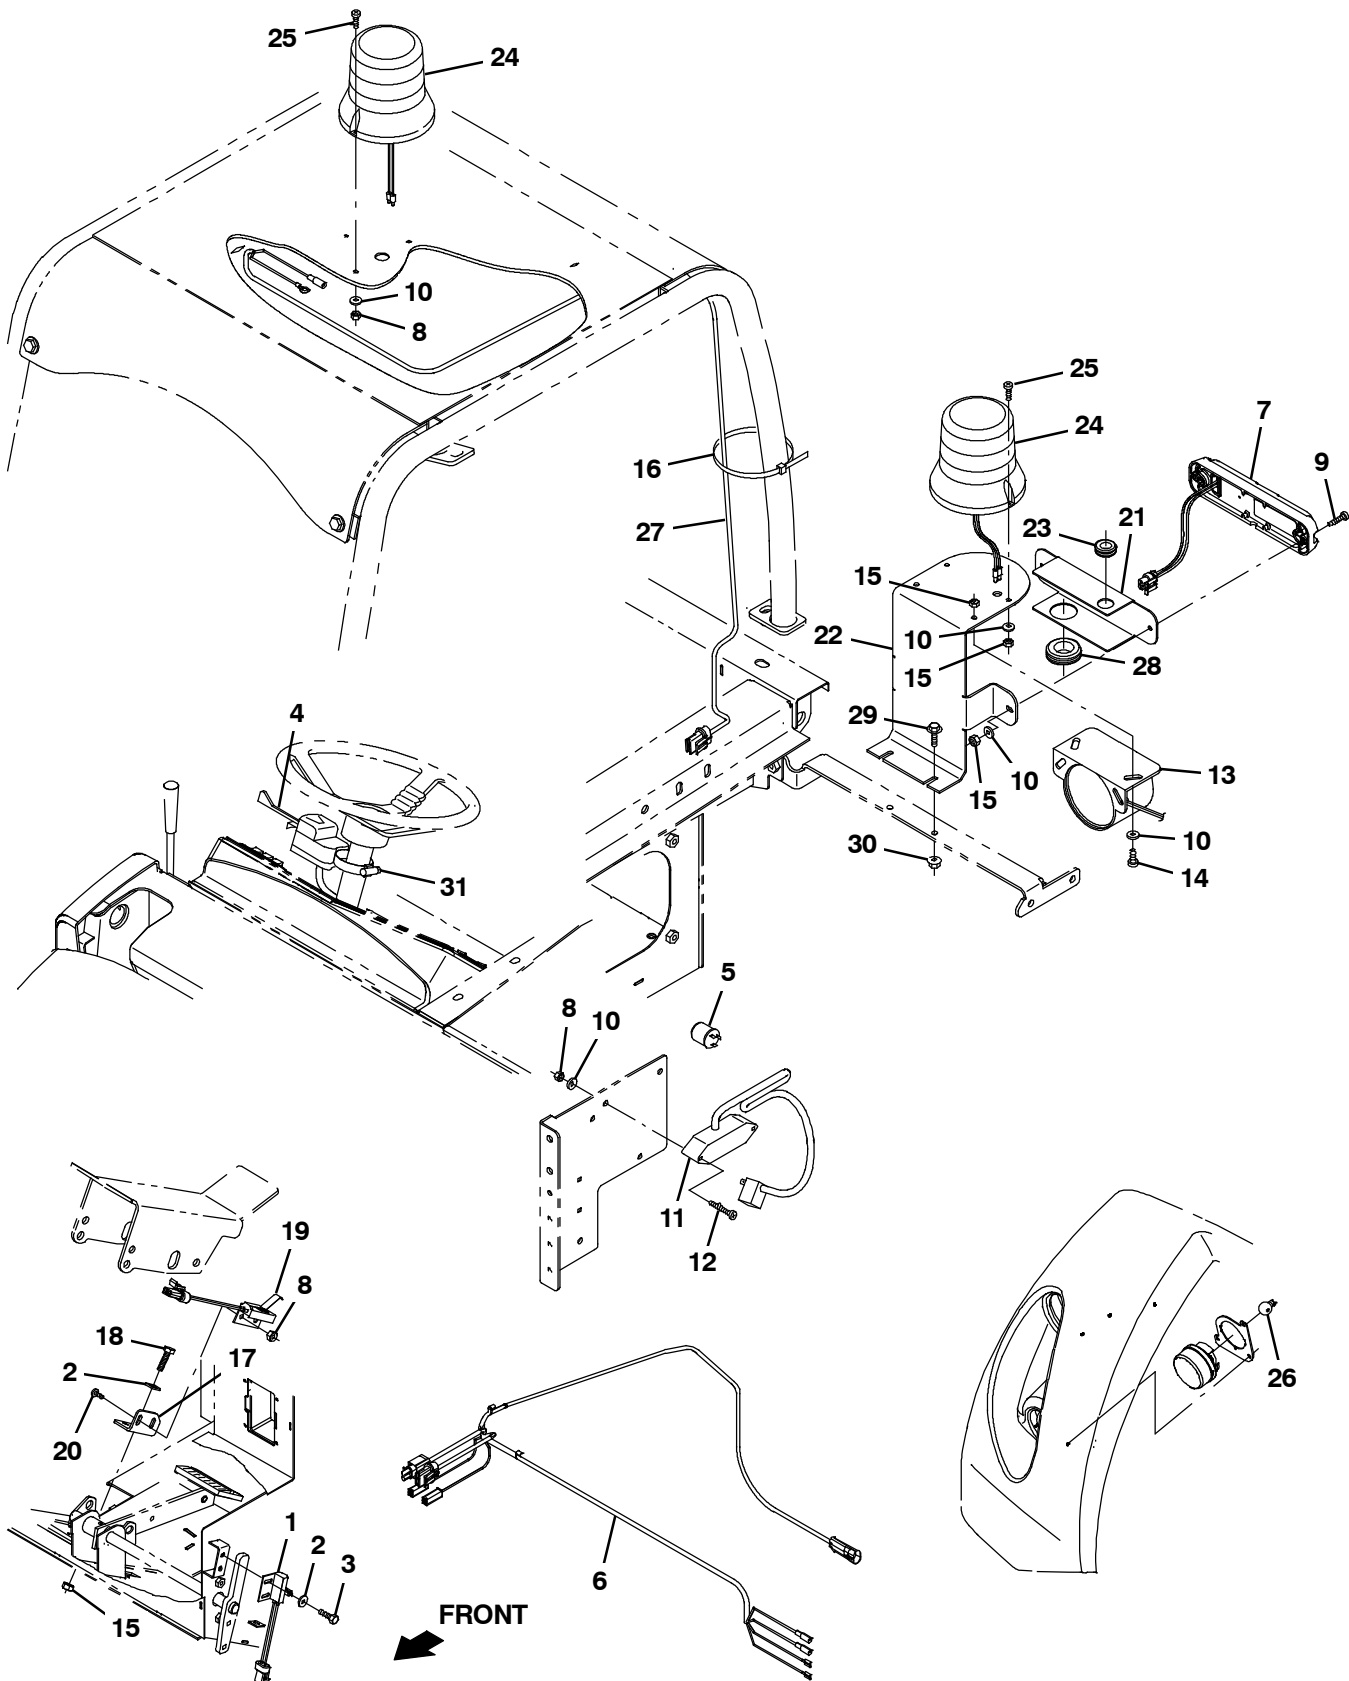


Fig. 2 - Outdoor Light Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008198	(006501-	) Light Kit, outdoor, Ci [S30]	1
▲	1	1040019	(006501-	) Switch, Limit, 15a, Nc	1
▲	2	32483	(006501-	) Washer, Flat, 0.25, Sae	4
▲	3	09244	(006501-	) Screw, Hex, M5 X 0.80 X 16, 8.8	2
▲	4	60751	(006501-	) Switch, Turn Signal	1
▲	5	31922	(006501-	) Flasher, Hd, 12vdc 25a [10- 57300]	1
▲	6	1034191	(006501-	) Harness, Backup, Rev [S30]	1
▲	7	1036173	(006501-	) Light, Led, White, 12- 24vdc	1
▲	8	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	8
▲	9	06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	2
▲	10	19066	(006501-	) Washer, Flat, 10	8
▲	11	1036985	(006501-	) Flasher, 12- 80vdc, 2a	1
▲	12	06938	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 40, 4.8	2
▲	13	9007131	(006501-	) Alarm Assy, Backup, 12- 24vdc 82- 107dba	1
▲	14	09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	2
▲	15	07785	(006501-	) Nut, Hex, Std, M6 X 1.00, Ss	4
▲	16	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4
▲	17	1036995	(006501-	) Bracket, Switch, Reverse	1
▲	18	08716	(006501-	) Screw, Hex, M6 X 1.00 X 20, Ss	2
▲	19	1039735	(006501-	) Switch, Snap, 15a No	1
▲	20	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
▲	21	1061203	(006501-	) Bracket, Light	1
▲	22	1061140	(006501-	) Bracket, Alarm, Backup	1
▲	23	10632- 9	(006501-	) Grommet, Rbr, 0.63id, F/0.8h, .12 Matl	1
▲	24	1075296	(006501-	) Light, Flsh, 12vdc, Amb, Rwk	1
▲	25	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
▲	26	1036183	(006501-	) Lamp, Clr, 12vdc [#3157 Series]	2
▲	27	1030973	(006501-	) Harness, Ohg [S30]	1
▲	28	10632- 14	(006501-	) Grommet, Rbr, 1.00id, F/1.4h, .12 Matl	1
▲	29	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
▲	30	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
▲	31	11531	(006501-	) Clamp, Hose, Wormdrive, 1.06- 2.00d, .56w	1

Fig. 3 - Left Hand Side Brush Kit, S30 XP

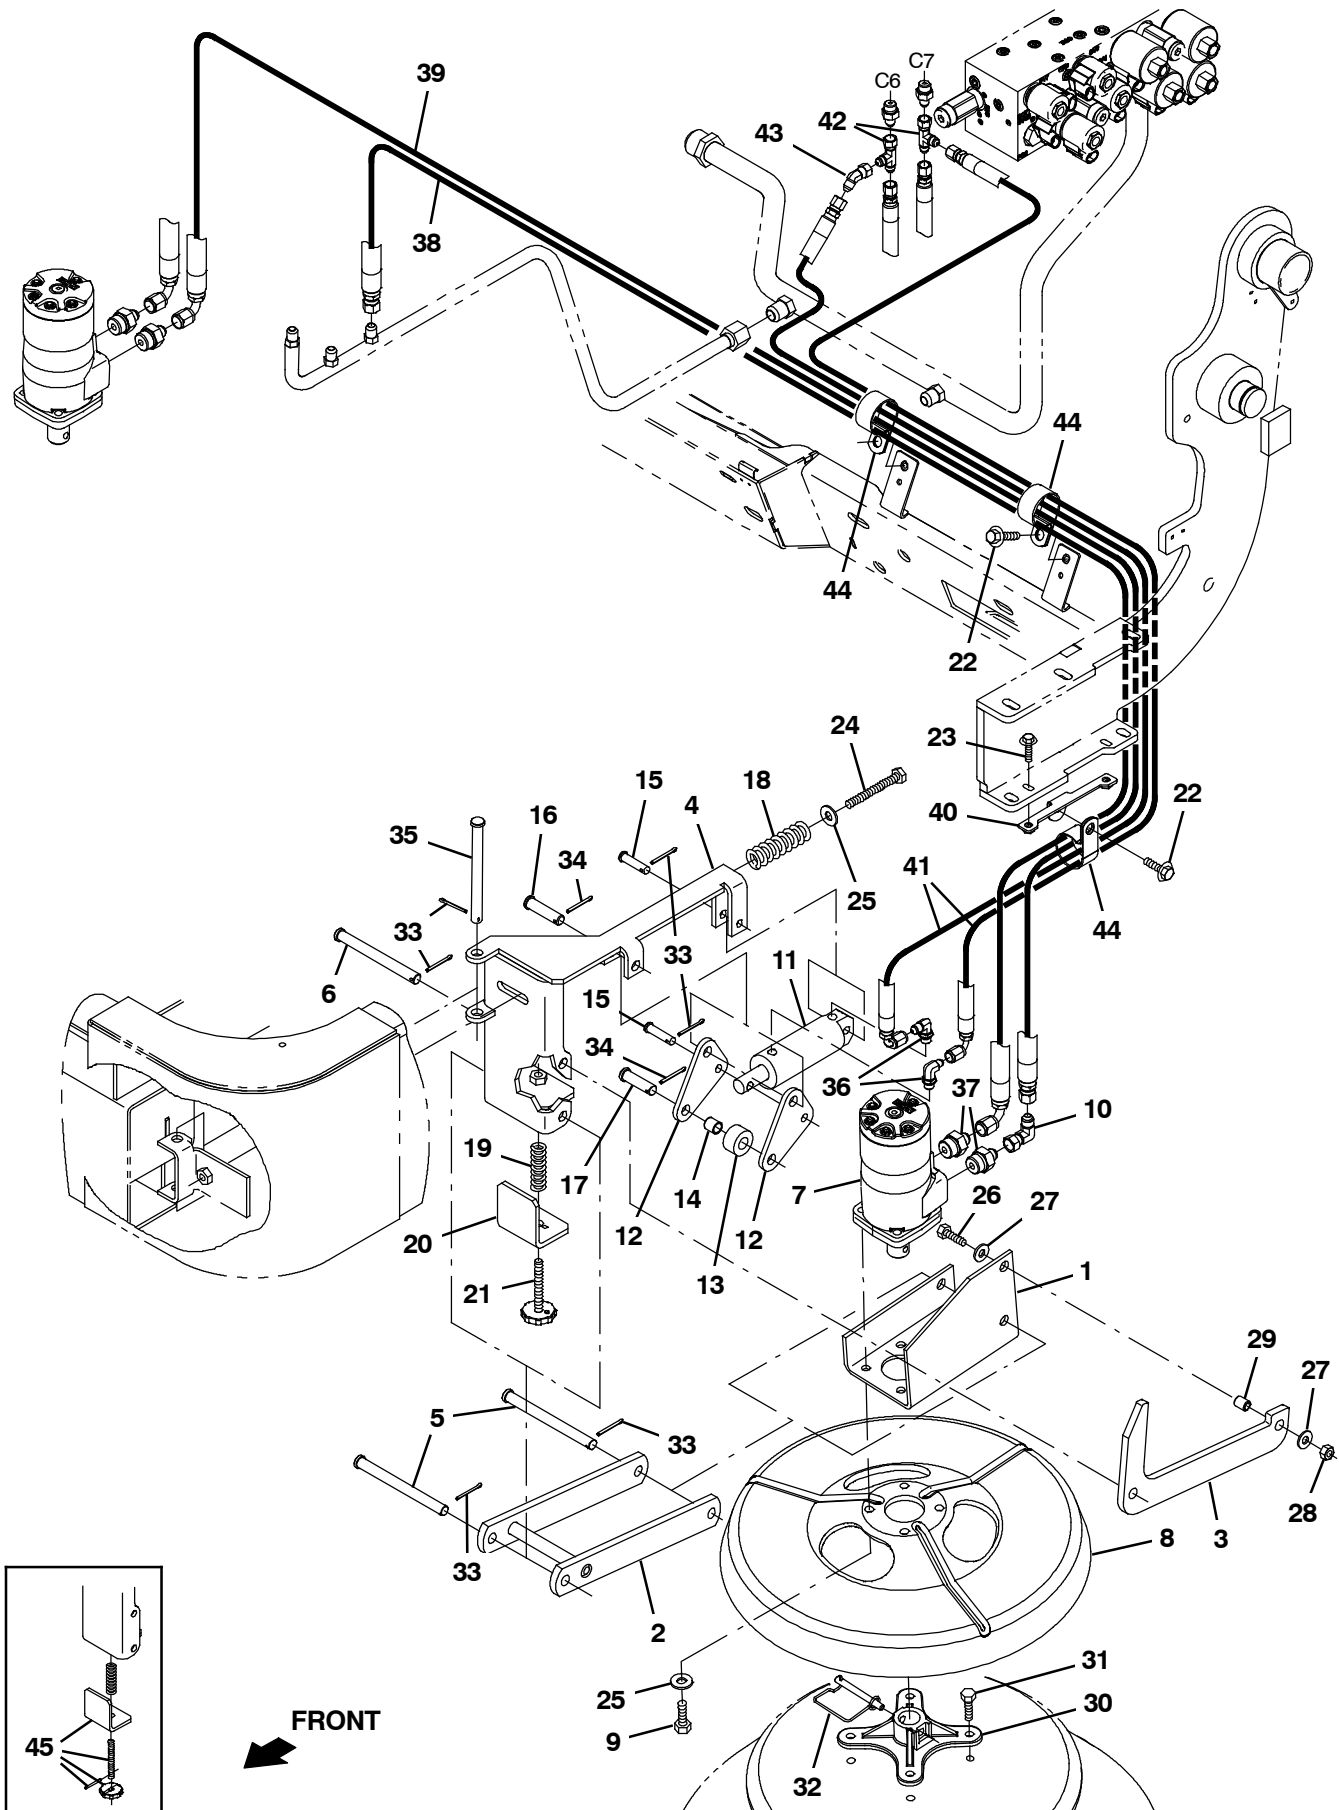


Fig. 3 - Left Hand Side Brush Kit, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
▽	9013113	(006501-	) Brush Kit, Side, Lh, Ci [S30]	1
▲	1 1031916	(006501-	) Bracket, Mtg, Motor, Side Brush	1
▲	2 1029682	(006501-	) Arm Wldt, Brush, Side	1
▲	3 1026459	(006501-	) Arm, Linkage, Side Brush	1
▲	4 1039649	(006501-	) Pivot Wldt, Brush, Side	1
▲	5 51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
▲	6 51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
▲	7 1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
▲	8 1054256	(006501-	) Guard, Brush	1
▲	9 46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
▲	10 1072195	(006501-	) Fitting, Hyd, E90, Ff06/Fm06	1
▲	11 1041034	(006501-	) Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500	1
▲	12 1026462	(006501-	) Lever, Lift, Brush	2
▲	13 1026525	(006501-	) Tube, 0.59id 1.25od 00.6l, Stl	1
▲	14 59634	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl	1
▲	15 29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	2
▲	16 51534	(006501-	) Pin, Clevis, 0.50d X 2.00l	1
▲	17 43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	1
▲	18 45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
▲	19 22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
▲	20 1075439	(008331-	) Angle	1
▲	21 1075444	(008331-	) Knob, Assy, Sb Xp	1
▲	22 1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
▲	23 1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
▲	24 06965	(006501-	) Screw, Hex, M10 X 1.5 X 80, 8.8	1
▲	25 32492	(006501-	) Washer, Flat, 0.38, Std	5
▲	26 76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
▲	27 32491	(006501-	) Washer, Flat, 0.31, Std	2
▲	28 08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
▲	29 80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
▲	30 47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
▲	31 39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
▲	32 84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
▲	33 08182	(006501-	) Pin, Cotter, .125 X 1.00	6
▲	34 39005	(006501-	) Pin, Cotter, .094 X 0.75	2
▲	35 222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
▲	36 762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
▲	37 762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
▲	38 1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
▲	39 1067105	(006501-	) Hose, Hyd, Tc08, Ff06e90/Ff06str, 134.0	1
▲	40 1213656	(006501-	) Bracket, Wldt, Mtg, Hyd	2
▲	41 1067088	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0	2
▲	42 767422	(006501-	) Fitting, Hyd, Tee, Ff04/Fm04/Fm04, Run	2
▲	43 1011123	(006501-	) Fitting, Hyd, E45, Ff04/Fm04	1
▲	44 53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	3
▲	45 9015652	(006501- 008330)	) Knob Kit, Repair Side Brush	1

Fig. 4 - Vacuum Wand Kit

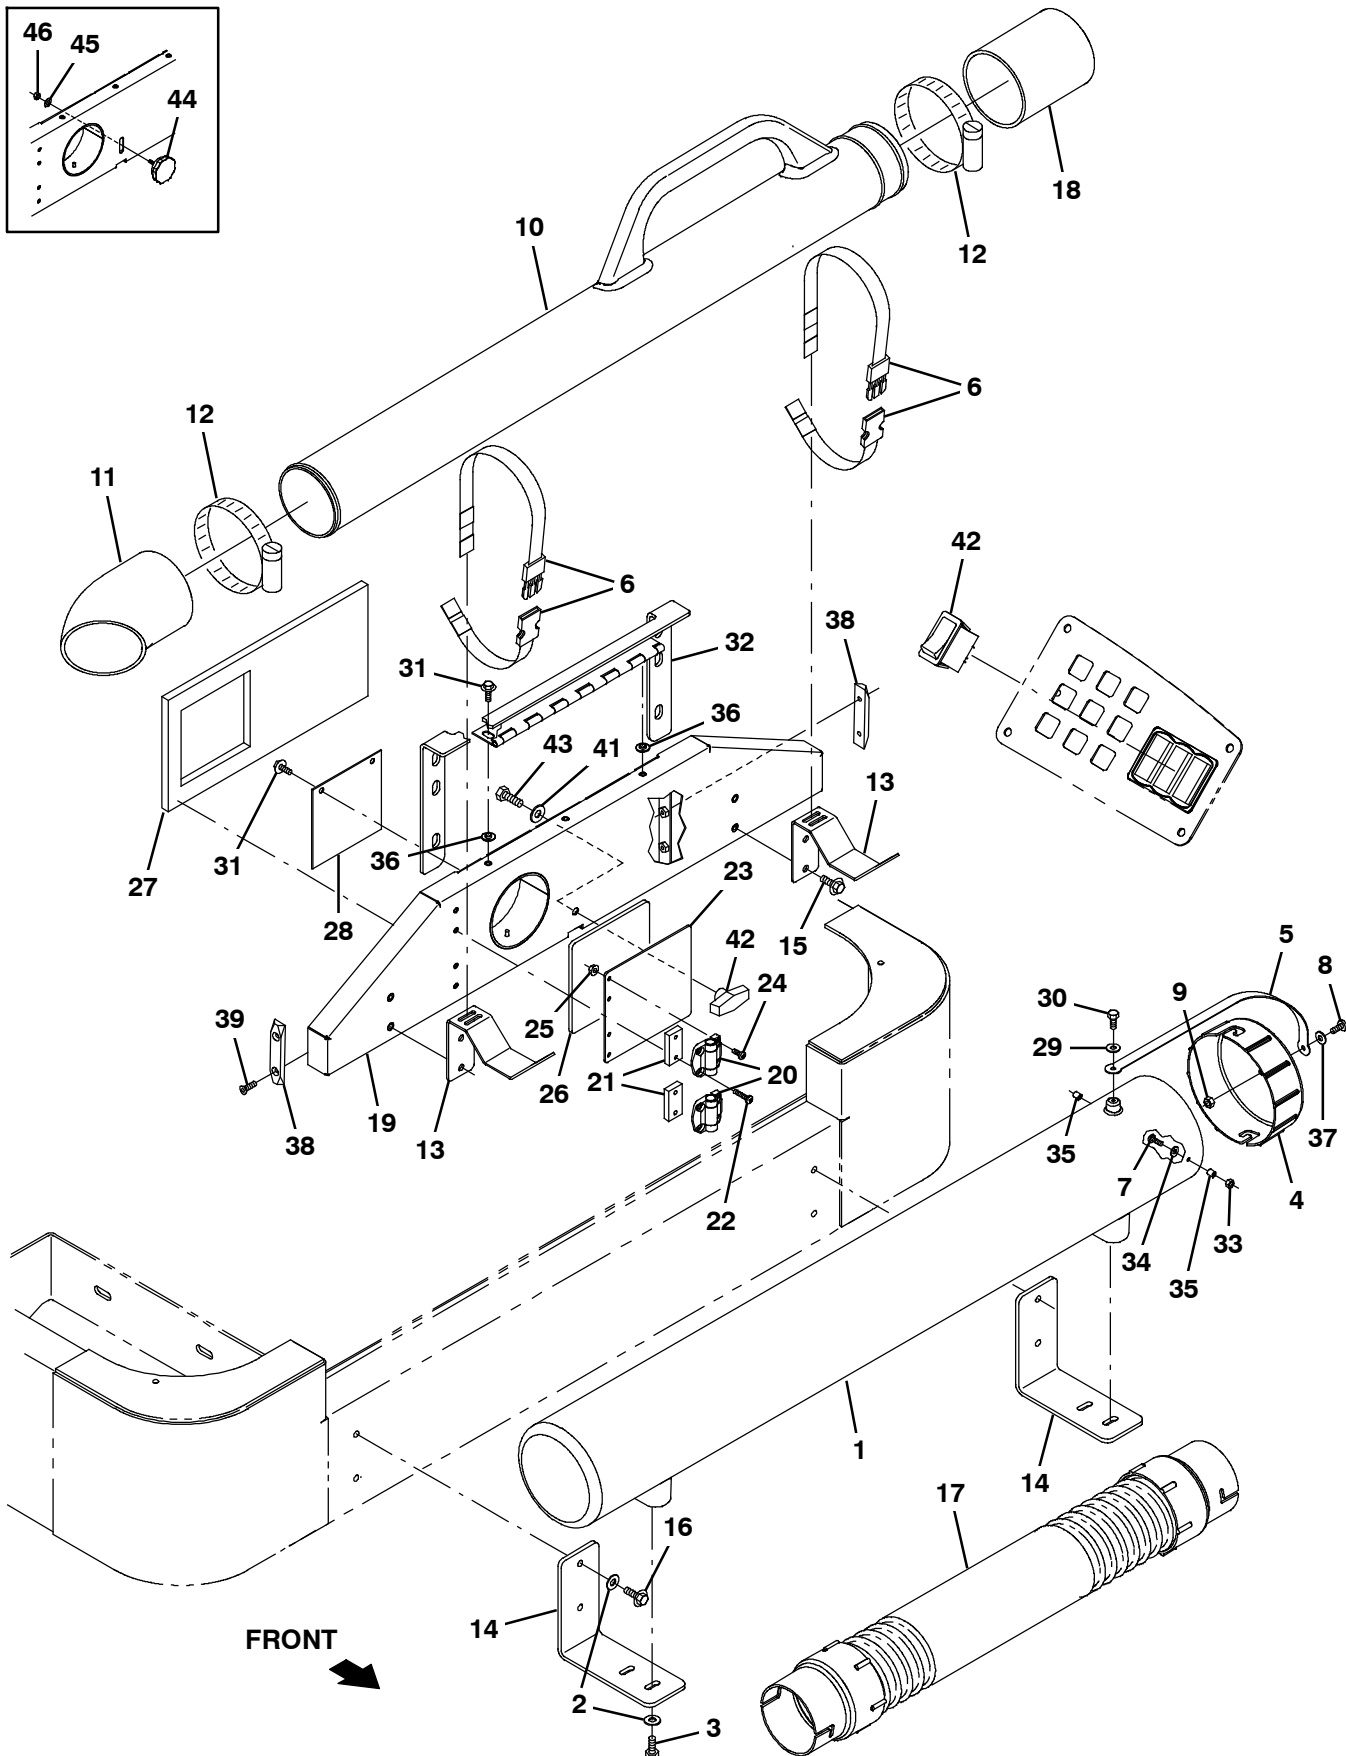


Fig. 4 - Vacuum Wand Kit

Ref.	Part No.	Serial Number	Description	Qty.
▽	9013873	(006501-	) Wand Kit, Vacuum, Ci [Roto. S30]	1
▲	1 1032752	(006501-	) Tube, Hose	1
▲	2 32491	(006501-	) Washer, Flat, 0.31, Std	8
▲	3 16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	4 1041473	(006501-	) Cap, Enclosure, Hose	1
▲	5 1041754	(006501-	) Strap, Cap, Enclosure	1
▲	6 367974	(006501-	) Strap, Pyp, 0.07 1.0w 18.5l, W/ Buckle	2
▲	7 06934	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 20, 4.8	2
▲	8 09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	1
▲	9 08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1
▲	10 1032584	(006501-	) Wand, Vacuum	1
▲	11 1032707	(006501-	) Hose, Nozzle, Floor	1
▲	12 79380	(006501-	) Clamp, Hose, Wormdrive, 3.75- 4.62d, .62w	2
▲	13 1214153	(006501-	) Bracket, Mtg, Wand	2
▲	14 1046993	(006501-	) Bracket, Mtg, Tube	2
▲	15 1020341	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss, Sems	4
▲	16 763045	(006501-	) Screw, Hex, M8 X 1.25 X 20, Fmg	4
▲	17 1042718	(006501-	) Hose Assy, W/2cuff, 4.0d 156l 4.0/4.0	1
▲	18 1041882	(006501-	) Hose, Rbr	1
▲	19 9013446	(006501-	) Door Wldt, Hprr, Vac- Wand, Replmt, Na	1
▲	19 9013447	(006501-	) Door Wldt, Hprr, Vac- Wand, Replmt, Ce	1
▲	19 9013448	(006501-	) Door Wldt, Hprr, Vac- Wand, Replmt, Jp	1
▲	20 367950	(006501-	) Hinge, .40pin 2.2w 02.0l, 4/0.21h	2
▲	21 1214152	(006501-	) Block, Spacer, Hinge	2
▲	22 06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	4
▲	23 1214258	(006501-	) Door , Vacuum	1
▲	24 06932	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 10, 4.8	4
▲	25 07789	(006501-	) Nut, Hex, Flng, M5 X 0.80	4
▲	26 1039007	(006501-	) Seal, Ure, .25, 06.0w 06.0l, Adh	1
▲	27 1035660	(006501-	) Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
▲	28 1039038	(006501-	) Flap, Wand, Vacuum	1
▲	29 01683	(006501-	) Washer, Flat, 10, Ss	1
▲	30 383000	(006501-	) Screw, Hex, 12- 16 X 0.75	1
▲	31 1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	4
▲	32 1214034	(006501-	) Bracket Wldt, Door, Front	1
▲	33 06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
▲	34 19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
▲	35 610943	(006501-	) Sleeve, P/M, 0.22b 0.32d 0.4l, Pl	2
▲	36 1213565	(006501-	) Sleeve, Flange	2
▲	37 01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	1
▲	38 1213971	(006501-	) Block, Nylon	2
▲	39 09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	40 04706	(006784-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
▲	41 32485	(006784-	) Washer, Flat, 0.38, Sae	1
▲	42 397889	(006501-	) Switch, Rocker, Dpst, On / None / On (S30 ONLY)	1
▲	43 21195	(006784-	) Screw, Hex, .38- 16 X 0.75, G5	1
	44 1047543	(006501- 006783)	Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1
	45 32490	(006501- 006783)	Washer, Flat, 0.25, Std	1
	46 08708	(006501- 006783)	Nut, Hex, Lock, M6 X 1.00, NI	1

Fig. 5 - Overhead Guard Kit

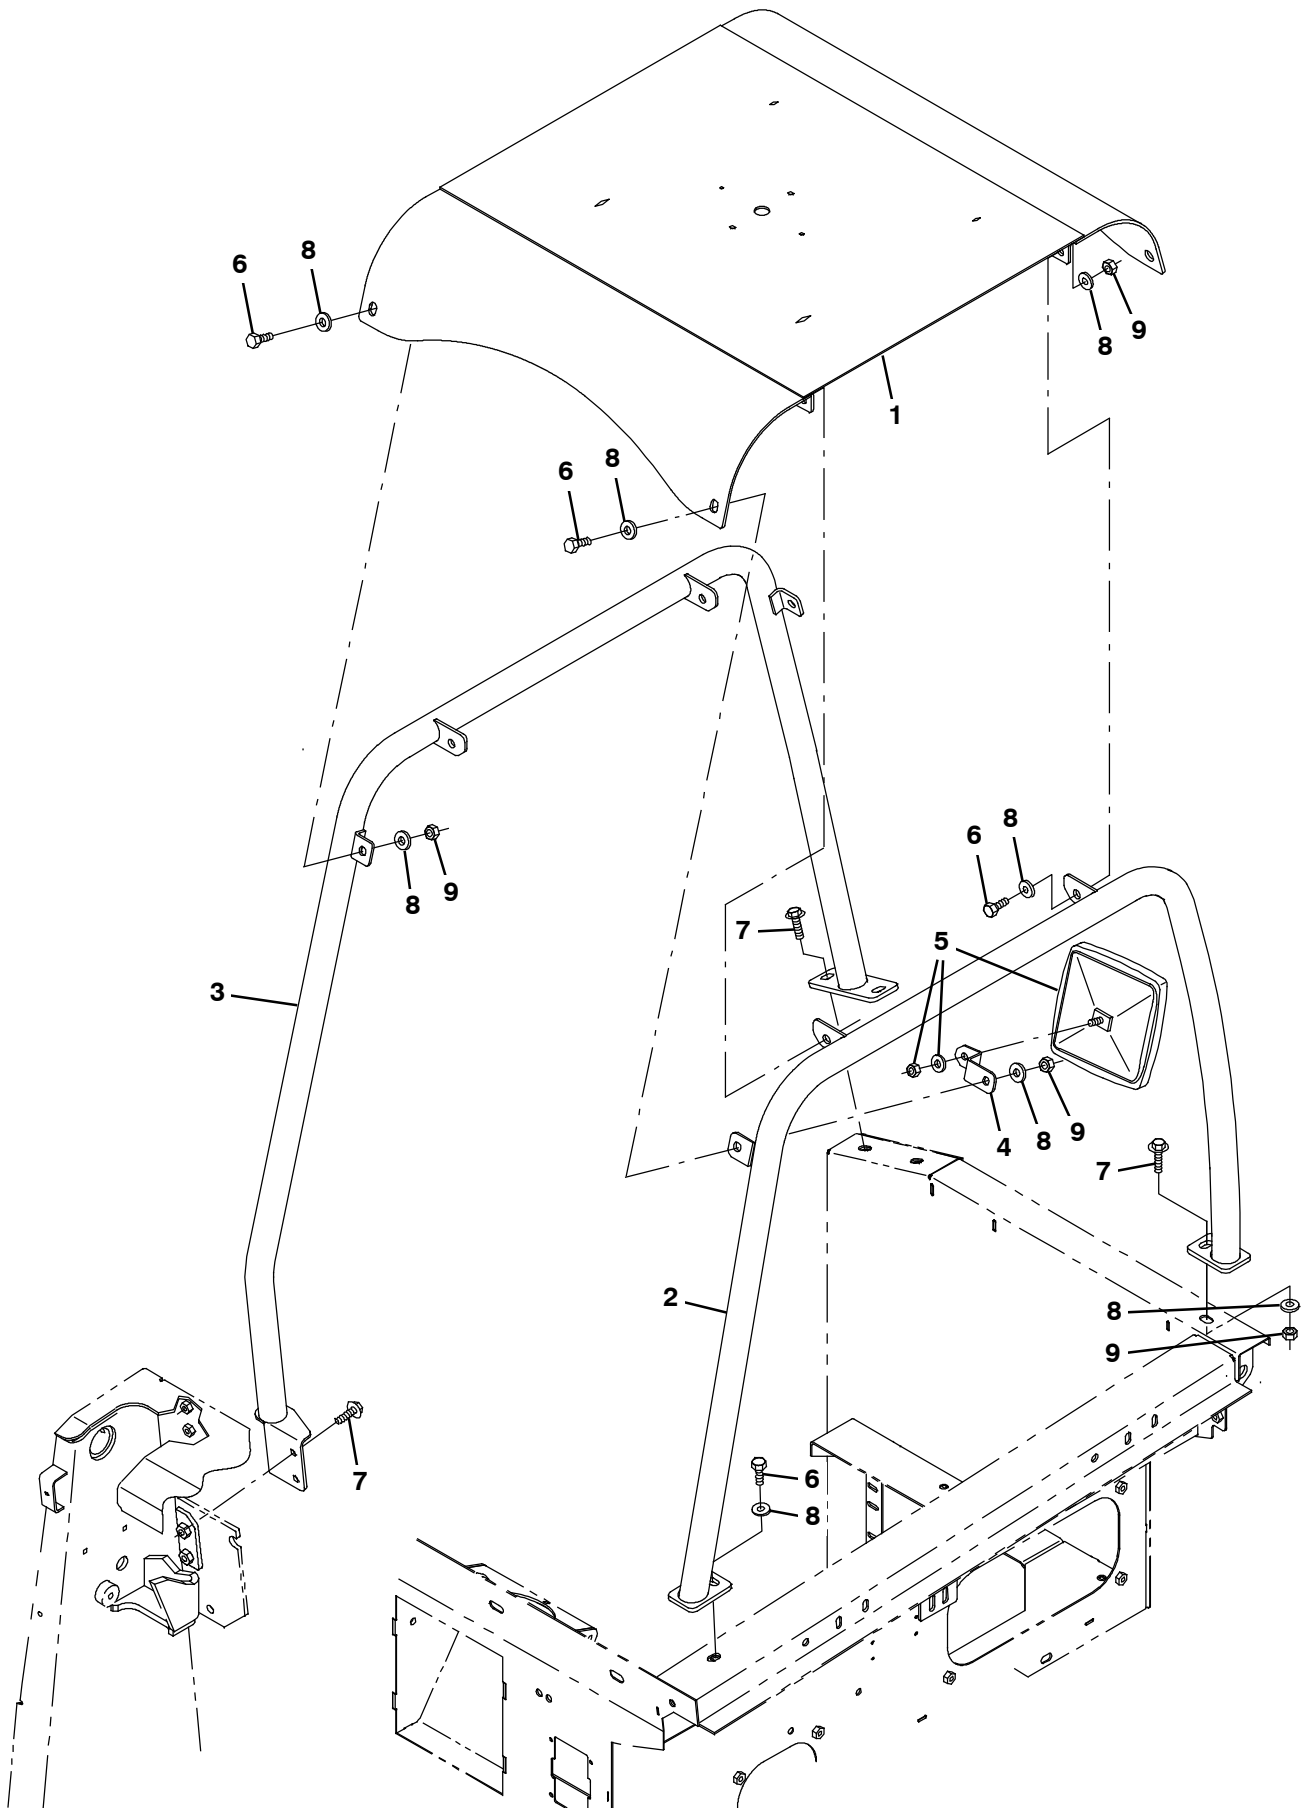


Fig. 5 - Overhead Guard Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008200	(006501-	) Ohg Kit, Ci [S30]	1
▲	1	1032262	(006501-	) Guard Wldt, Ohg, Top	1
▲	2	1032067	(006501-	) Leg Wldt, Guard, Lh	1
▲	3	1061016	(006501-	) Leg Wldt, Guard, Rh	1
▲	4	1032722	(006501-	) Bracket, Mtg, Mirror	1
▲	5	49034	(006501-	) Mirror, Convex, 06.7 X 06.2	1
▲	6	39283	(006501-	) Screw, Hex, M10 X 1.5 X 25, 8.8	8
▲	7	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	5
▲	8	32492	(006501-	) Washer, Flat, 0.38, Std	17
▲	9	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	9

Fig. 6 - Cab Group

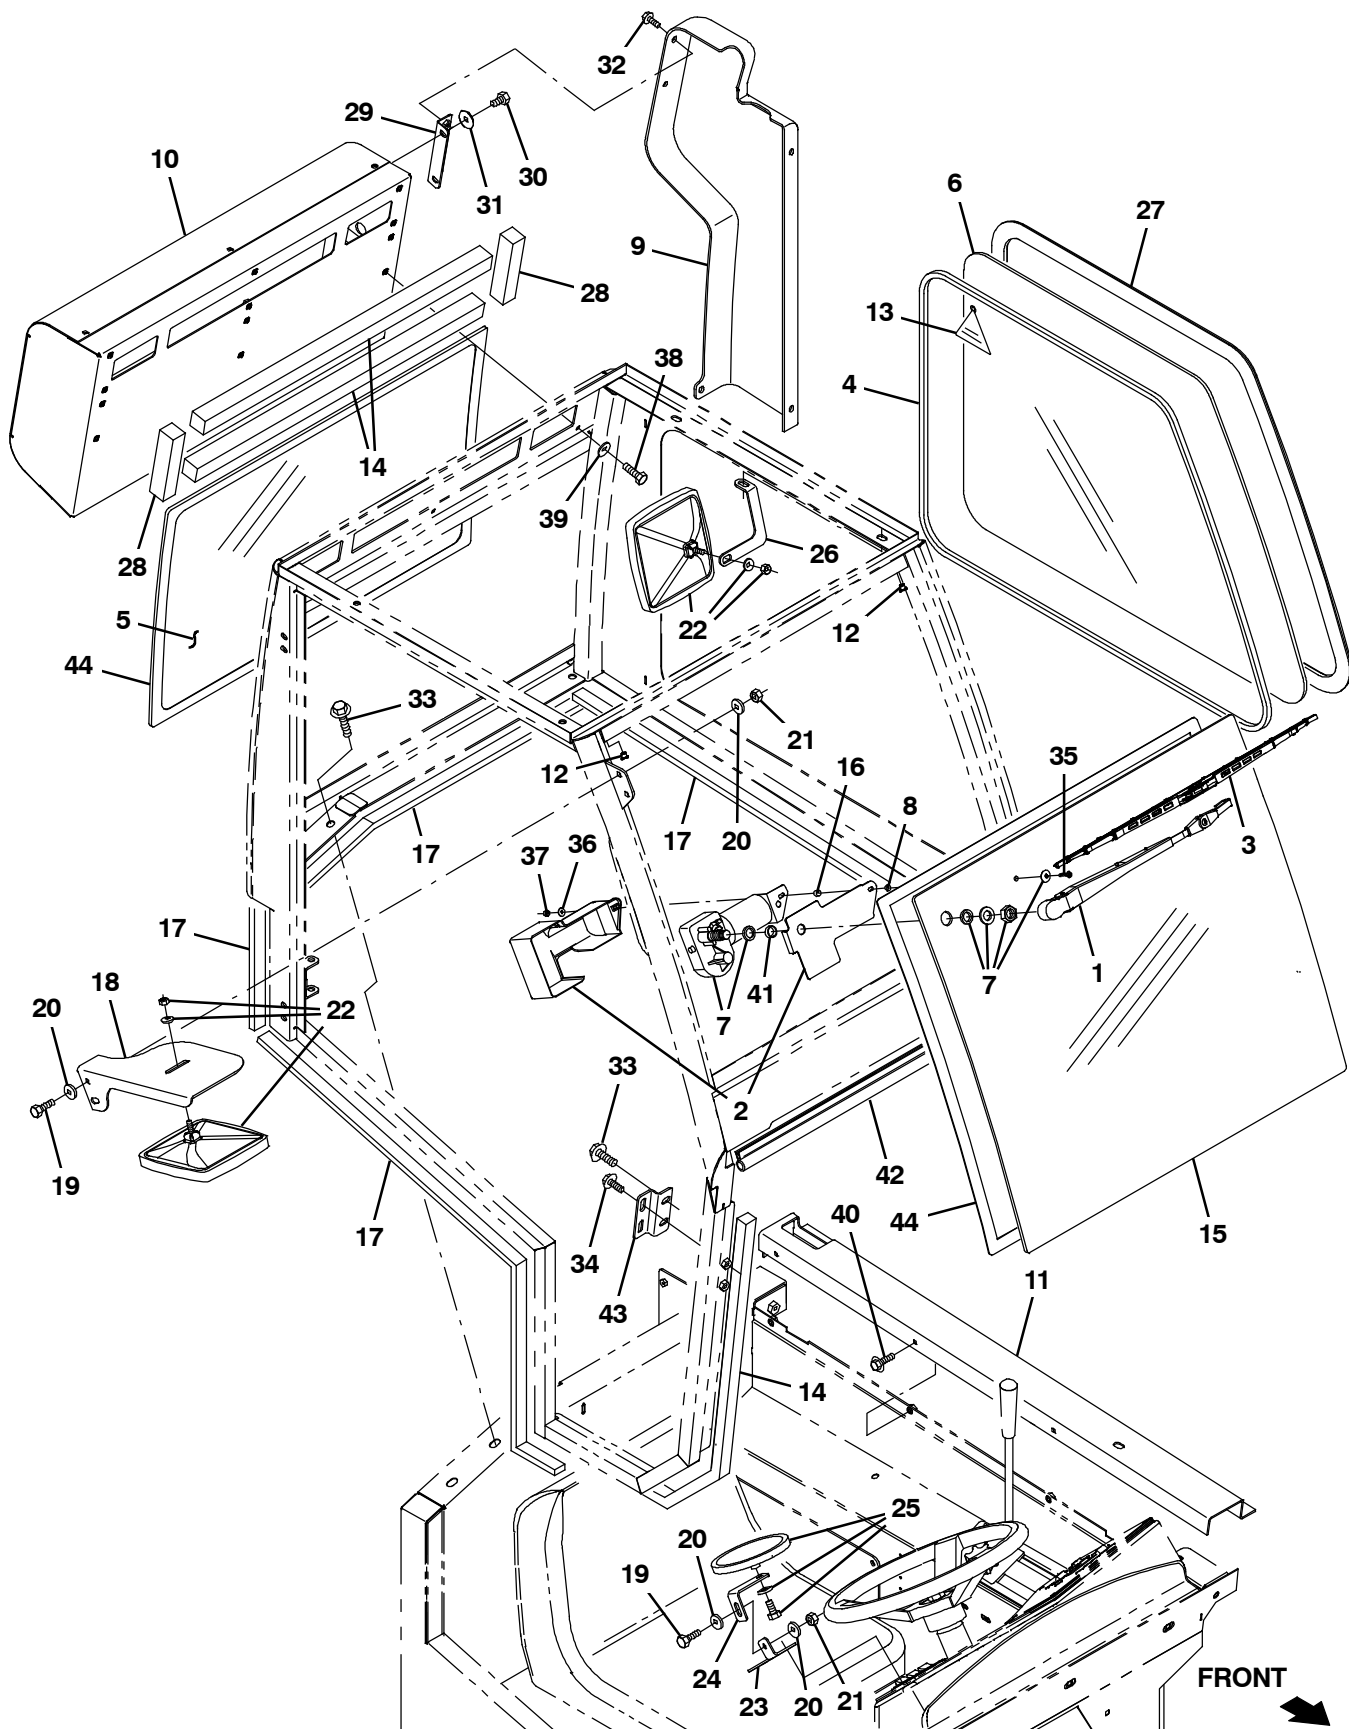


Fig. 6 - Cab Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1250704	(006501-	) Arm, Wiper, Windshield [280- 380mm ADJ]	1
2	1067891	(006501-	) Plate, Motor, Wiper, Cab	1
3	1250690	(006501-	) Blade, Wiper, Windshield, 20.0"	1
4	9009219	(006501-	) Seal, Afmkt, Rbr, Wndw, 10ft [Zipper]	1
5	1067875	(006501-	) Pane, Glass, Wndw, Rear	1
6	1067874	(006501-	) Pane, Glass, Wndw, Lh Side, Cab	1
7	1067872	(006501-	) Motor, Wiper, Cab	1
8	76426	(006501-	) Washer, Sealing, 0.28b 0.75d Ss, Neo	1
9	1067869	(006501-	) Cover, Hose, Plstc, Cab	1
10	1067918	(006501-	) Heater Unit, W/ A/C & Fan (See Breakdowns)	1
11	1060586	(006501-	) Lip Wldt, Oprtr Station / Cab	1
12	80061	(006501-	) Plug, Hole, Rnd, 0.30h 0.3l	2
13	1067911	(006501-	) Label, Info [Exit]	1
14	1069688	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 03ft	2
15	1067878	(006501-	) Pane, Glass, Wndw, Front	1
16	1069211	(006501-	) Spacer, Plstc, 0.18b 0.27d 0.27l	1
17	1069681	(006501-	) Seal, Foam, .50, 1.00w 72.00l, Adh	1
18	1049061	(006501-	) Bracket, Mtg, Mirror	1
19	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	3
20	39349	(006501-	) Washer, Flat, 0.31, Sae	6
21	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	3
22	49034	(006501-	) Mirror, Convex, 06.7 X 06.2	2
23	1048740	(006501-	) Bracket, Mtg, Mirror, Lower	1
24	1049017	(006501-	) Bracket, Mtg, Mirror, Upper	1
25	1050295	(006501-	) Mirror, Convex, 0.50d	1
26	1048743	(006501-	) Bracket, Mtg, Mirror	1
27	9009218	(006501-	) Seal, Afmkt, Rbr, Wndw, 10ft	1
28	1069687	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 01ft	2
29	1066952	(006501-	) Bracket, Mtg, Cover	1
30	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	2
31	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	2
32	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	5
33	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	6
34	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
35	1069316	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 20, Blk	1
36	1059252	(006501-	) Washer, Flat, 0.19b 0.50d .03, Stl, Blk	2
37	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	1
38	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	6
39	32491	(006501-	) Washer, Flat, 0.31, Std	6
40	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
41	1069210	(006501-	) Spacer, Plstc, 0.62b 0.75d 0.27l	1
42	1031616	(006501-	) Seal, Afmkt, Bulb, Str, .75d F/07ga 03ft	1
43	1069232	(006501-	) Bracket, Mtg, Cab	1
44	1227836	(006501-	) Molding, Afmkt, Trim, Wndw, Glass, 12ft	1

Fig. 7 - Cab Cover Group

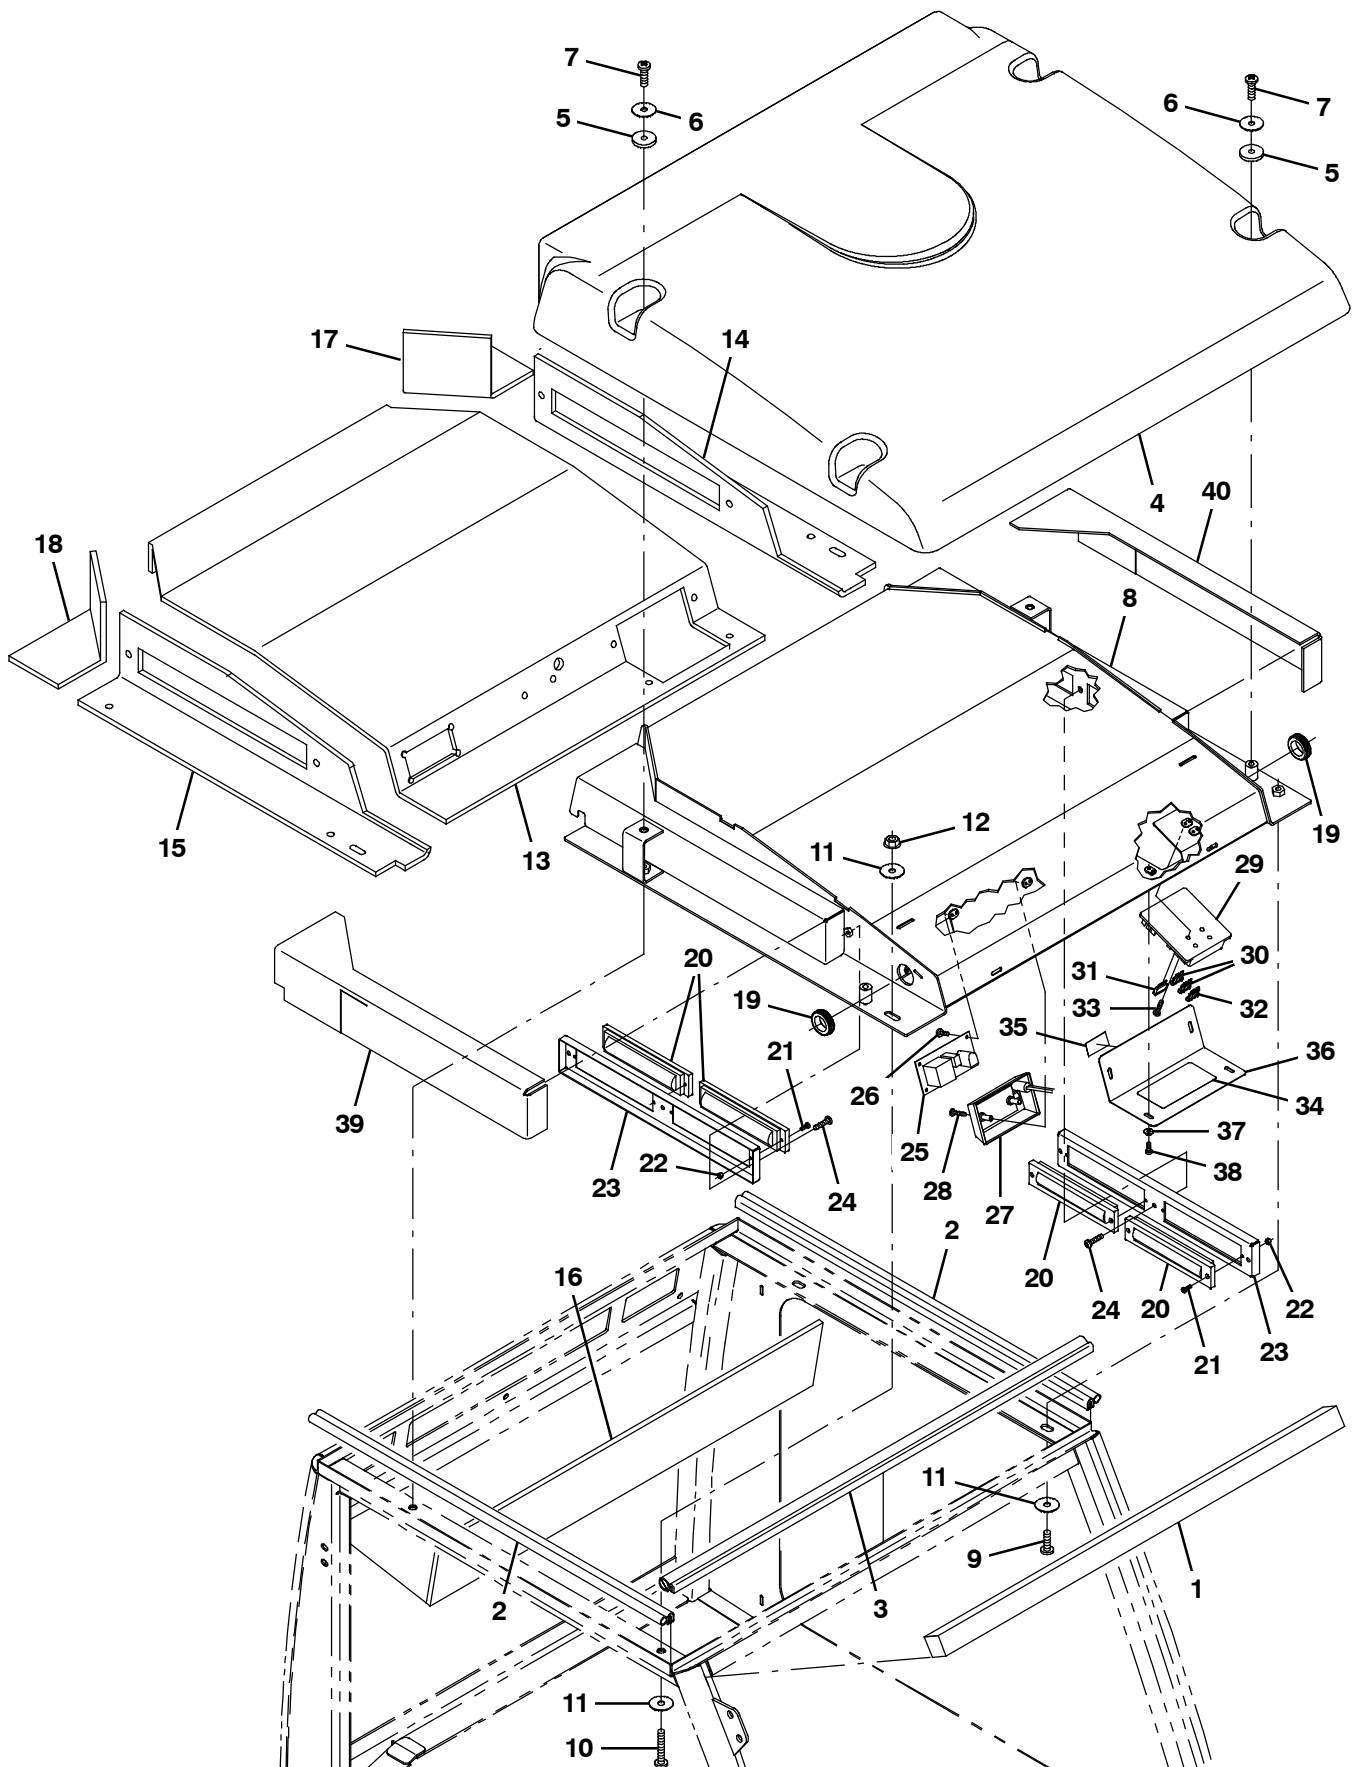


Fig. 7 - Cab Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1069688	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 03ft	1
2	1031207	(006501-	) Seal, Afmkt, Bulb, 90, 0.50d, 03ft	2
3	1030592	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 03ft	1
4	1067873	(006501-	) Panel, Roof, Plstc, Cab	1
5	1067887	(006501-	) Washer, Cab, Shld, Glass	4
6	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	4
7	1031665	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 25, Blk	4
8	1067217	(006501-	) Panel Wldt, Top, Cab	1
9	1069310	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 25, Blk	2
10	1069201	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 50, Blk	2
11	1060648	(006501-	) Washer, Flat, 0.31b 0.67d .07, Stl, Blk	5
12	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
13	1068687	(006501-	) Insulation, Sound, Liner, Top	1
14	1068690	(006501-	) Insulation, Sound, Liner, Lh	1
15	1068689	(006501-	) Insulation, Sound, Liner, Rh	1
16	1068688	(006501-	) Insulation, Sound, Liner	1
17	1069229	(006501-	) Insulation, Sound, Liner, Side, Lh	1
18	1069231	(006501-	) Insulation, Sound, Liner, Side, Rh	1
19	10632	(006501-	) Grommet, Rbr, 0.89id, F/1.2h, .14 Matl	2
20	1074108	(006501-	) Louver, Nozzle, Spindle, Blk	4
21	1069314	(006501-	) Screw, Pan, Phl, M3 X 0.50 X 12, Blk	8
22	01754	(006501-	) Nut, Hex, Std, M3 X 0	8
23	1066933	(006501-	) Plate, Vent	2
24	1069318	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, Blk	6
25	1068751	(006501-	) Controls, Ac/Heater [S30]	1
26	1069315	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Blk	4
27	1067886	(006501-	) Light, Dome, Cab	1
28	1069317	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 25, Blk	1
29	1067870	(006501-	) Fuseholder, Cab	1
30	1016029	(006501-	) Fuse, Blade, 005a, 32vdc	2
31	611140	(006501-	) Fuse, Blade, 020a, 32vdc	1
32	1067917	(006501-	) Fuse, Blade, 002a, 32vdc	1
33	1069317	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 25, Blk	4
34	1067910	(006501-	) Label [Fuse Block]	1
35	1069330	(006501-	) Label, Circuitbreaker [Fuse Box]	1
36	1066972	(006501-	) Cover, Fuse	1
37	1059252	(006501-	) Washer, Flat, 0.19b 0.50d .03, Stl, Blk	4
38	1069315	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Blk	4
39	1072046	(006501-	) Insulation, Heat, Liner, Rh	1
40	1072047	(006501-	) Insulation, Heat, Liner, Lh	1

Fig. 8 - Cab Door Group

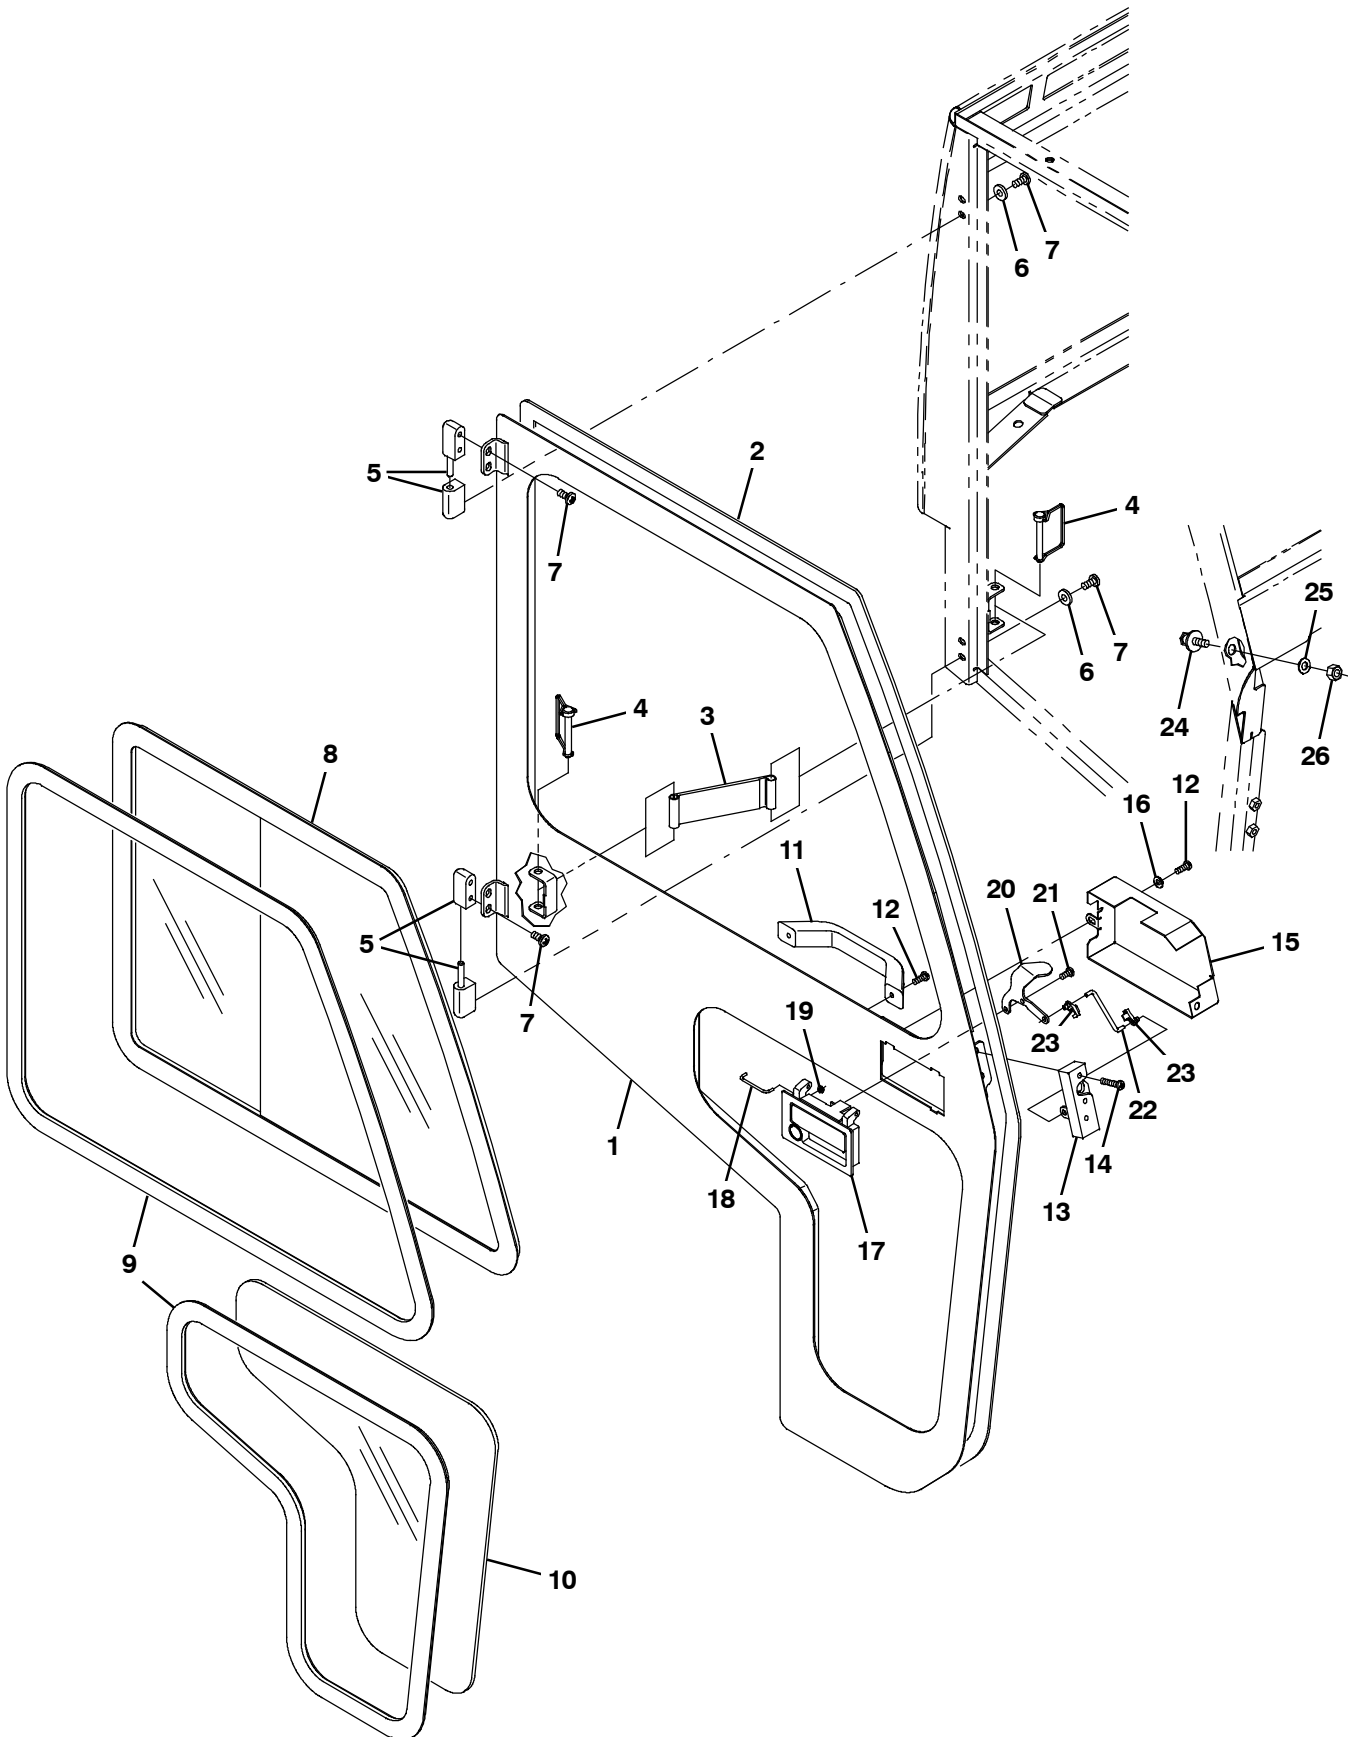


Fig. 8 - Cab Door Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9014656	(006501-	) Door Assy, Cab [S30]	1
▲	1	1067216	(006501-	) Door Wldt, Rh	1
▲	2	1030601	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 20ft	1
▲	3	1067895	(006501-	) Strap, Door, Cab	1
▲	4	1067881	(006501-	) Pin, Lock, Cab	2
▲	5	1067879	(006501-	) Hinge, Bracket, Door, Cab	2
▲	6	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	4
▲	7	1069311	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 16, Blk	8
▲	8	1067877	(006501-	) Pane, Wndw, Slide, Rh, Cab	1
▲	9	9009220	(006501-	) Seal, Afmkt, Rbr, Wndw, 08ft	2
▲	10	1067876	(006501-	) Pane, Wndw, Lower, Cab	1
▲	11	1067889	(006501-	) Handle, Door, Cab	1
▲	12	1069312	(006501-	) Screw, Pan, Phl, M6 X 1.0 X 16, Blk	4
▲	13	1067885	(006501-	) Latch, Cab	1
▲	14	1069313	(006501-	) Screw, Pan, Phl, M6 X 1.0 X 35, Blk	3
▲	15	1066980	(006501-	) Cover, Latch	1
▲	16	1069322	(006501-	) Washer, Flat, 0.25, Sae, Blk	2
▲▽	17	1067890	(006501-	) Handle, Locking, Cab	1
▲▲		1067919	(006501-	) Key, Latch, Door Assy	1
▲	18	1062944	(006501-	) Rod, Handle, Cab	1
▲	19	1067907	(006501-	) Retainer, Shaft, 0.12id .38od X .052	1
▲	20	1066957	(006501-	) Bracket, Handle, Latch	1
▲	21	74027	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 12, NI, PI	2
▲	22	1062952	(006501-	) Rod, Latch, Cab	1
▲	23	1067880	(006501-	) Clip, Rod, Cab	2
▲	24	1067884	(006501-	) Stud, Strike, Cab	1
▲	25	32492	(006501-	) Washer, Flat, 0.38, Std	1
▲	26	25014	(006501-	) Nut, Hex, Std, .38- 16	1

Fig. 9 - Cab Heater Group

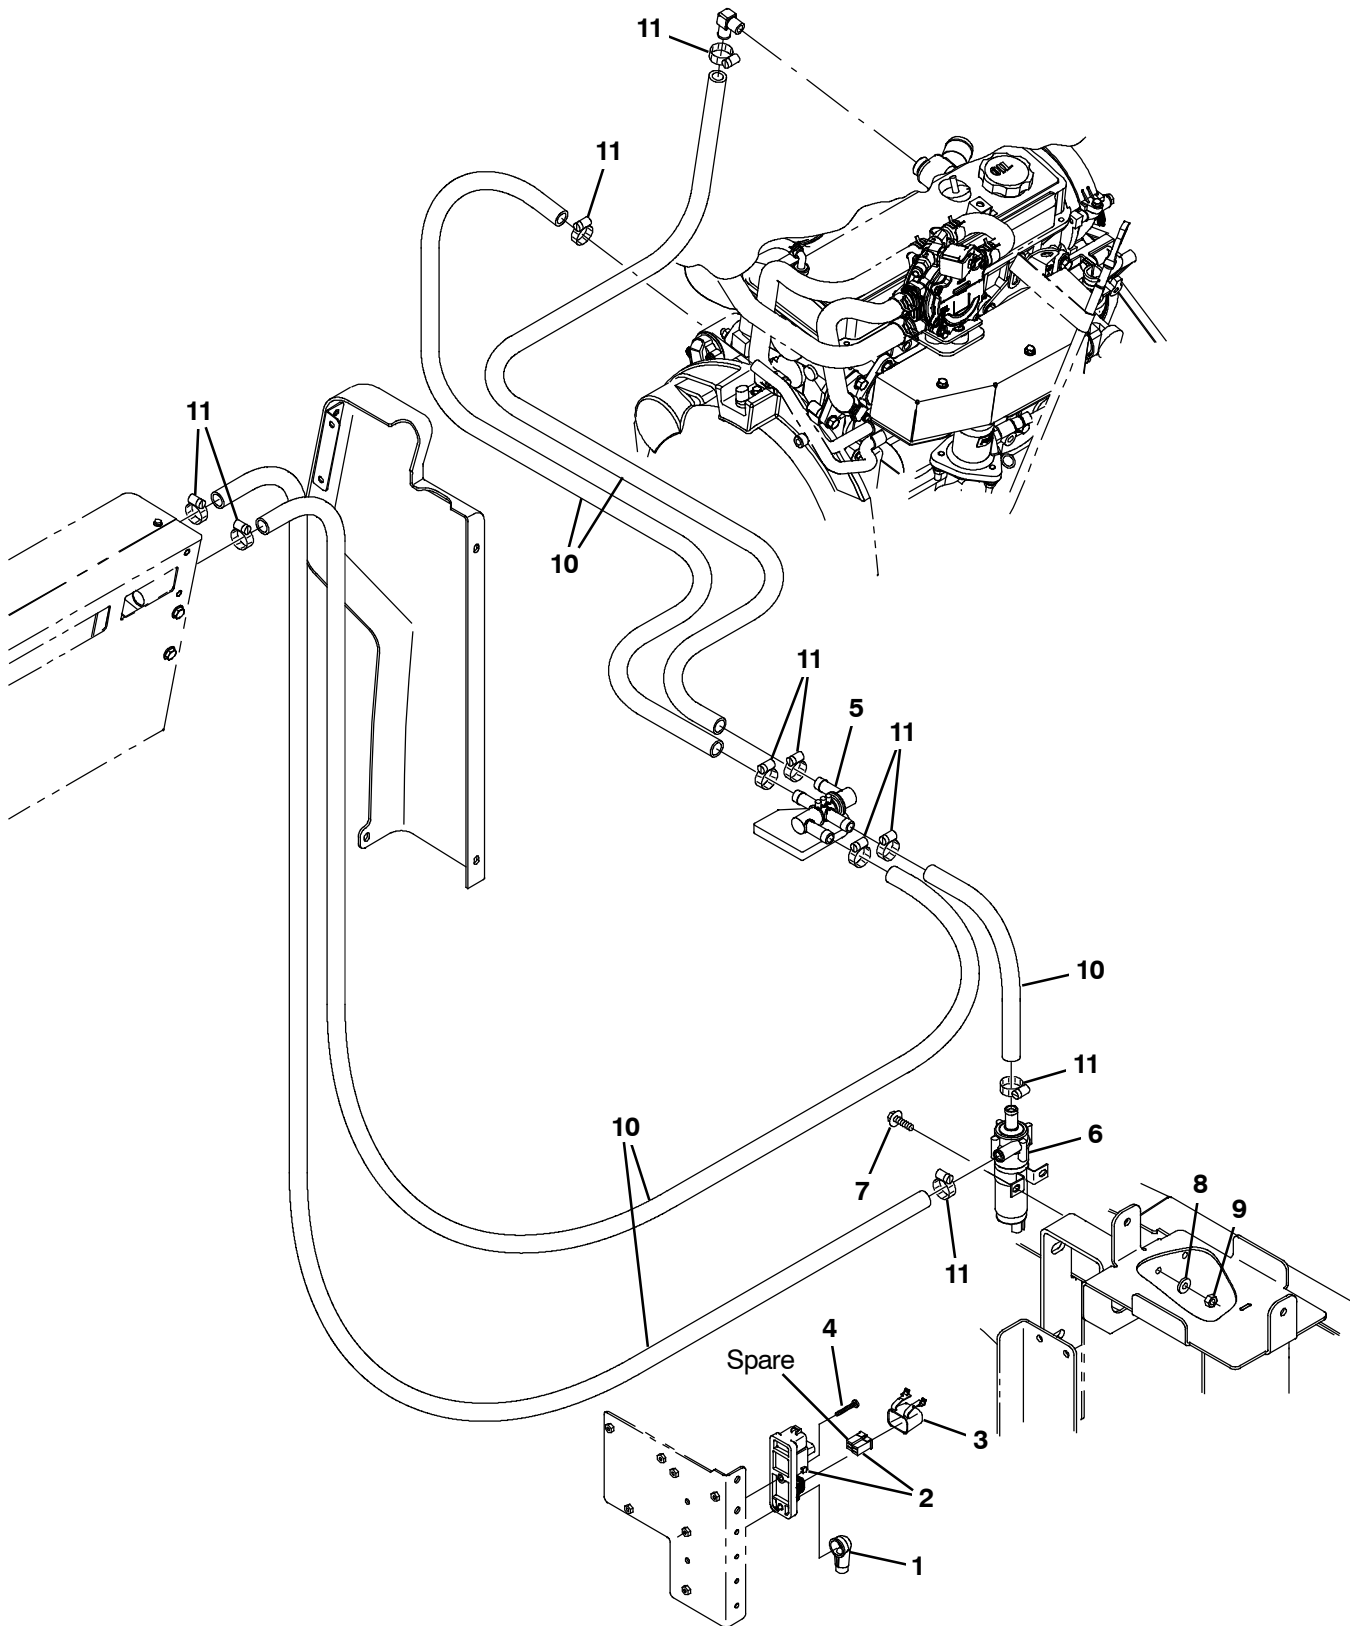


Fig. 9 - Cab Heater Group

	Ref.	Part No.	Serial Number	Description	Qty.
	1	1016314	(006501-	) Boot, 90deg .50id 1.00id 2.50l, Red	1
▽	2	1029105	(006501-	) Relay Assy, 12vdc [2f/1r]	1
▲	3	1036230	(006501-	) Fuse, 60a, 32vdc [Fem Maxi]	1
	4	06940	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 50, 4.8	1
	5	1045063	(006501-	) Valve, Heater	1
	6	1044279	(006501-	) Pump Assy, Water, 12vdc	1
	7	222159	(006501-	) Screw, Hex, M6 X 1.00 X 25, Fmg	2
	8	32490	(006501-	) Washer, Flat, 0.25, Std	2
	9	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
	10	1016563	(006501-	) Hose, Afmkt, Rbr, Heater, 0.62id, 20ft	1
	11	63810	(006501-	) Clamp, Hose, Wormdrive, 0.56- 1.06d, .56w	8

Fig. 10 - Cab Air Conditioner Group

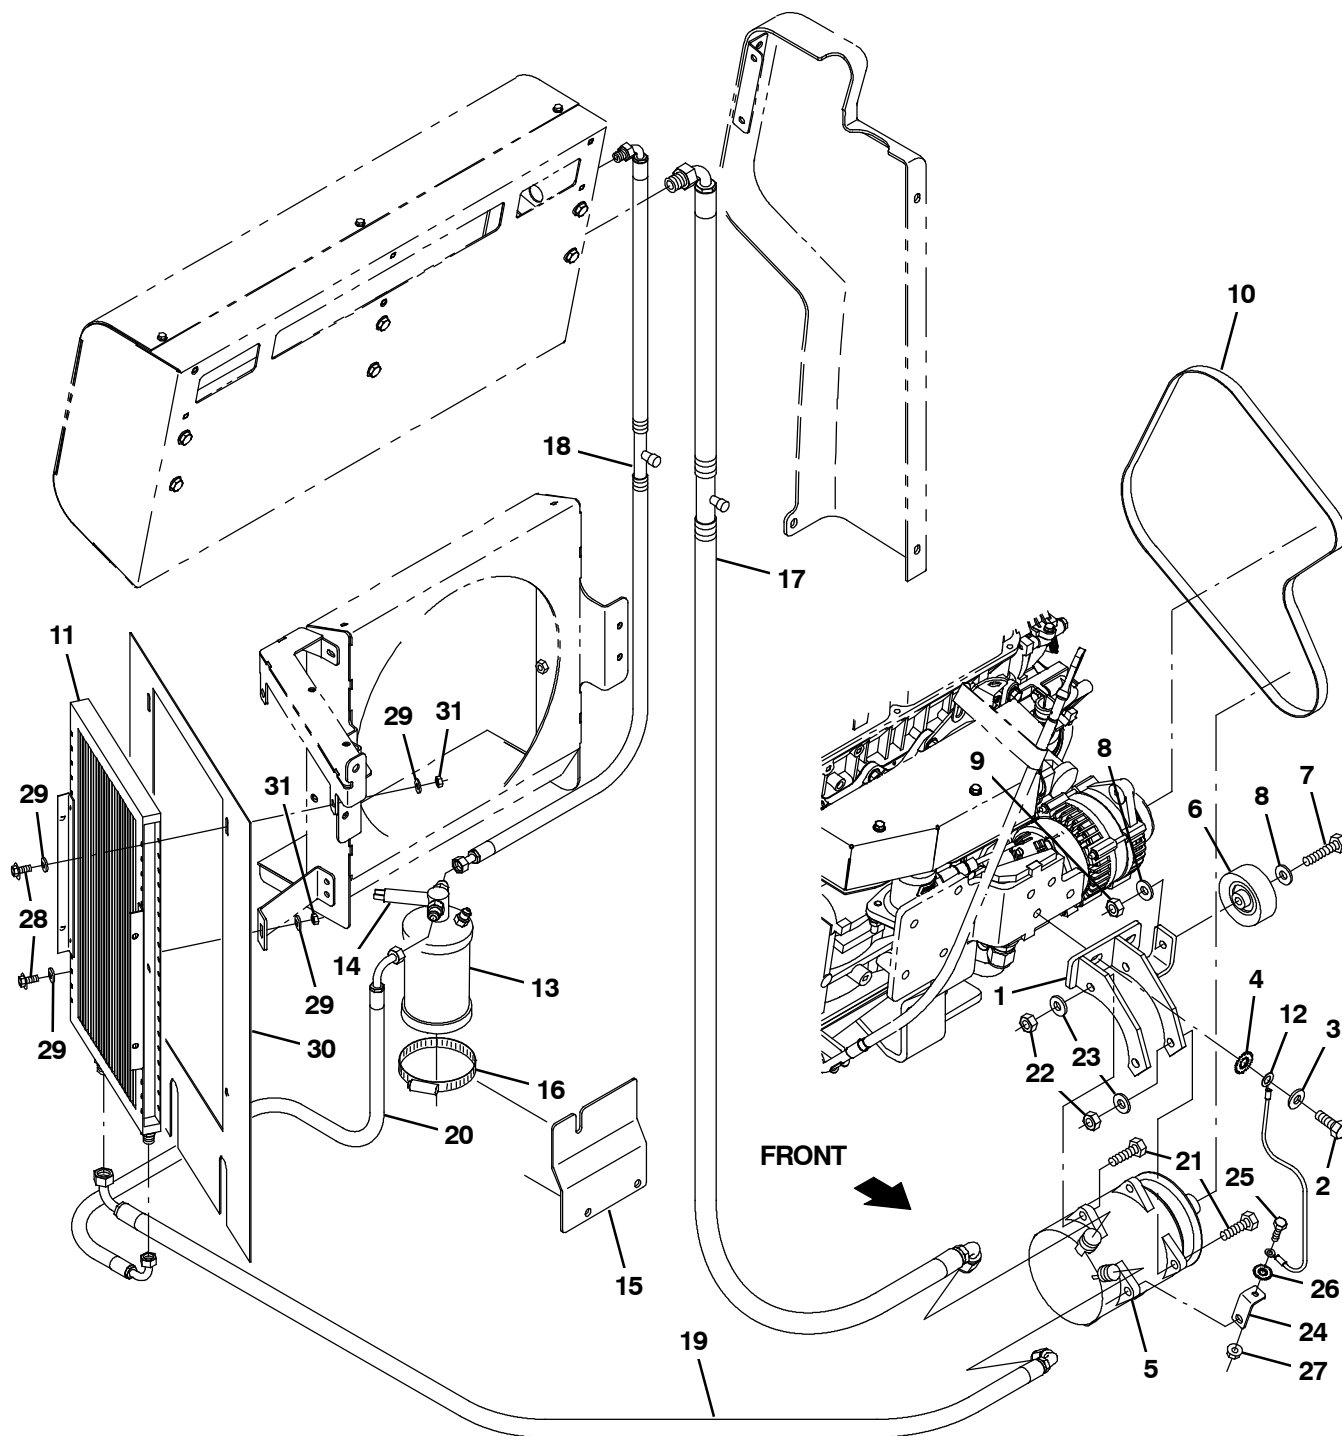


Fig. 10 - Cab Air Conditioner Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1071141	(006501-	) Bracket Wldt, Mtg, Compressor	1
2	39283	(006501-	) Screw, Hex, M10 X 1.50 X 25, 8.8	4
3	32492	(006501-	) Washer, Flat, 0.38, Std	3
4	41141	(006501-	) Washer, Lock, Int- Ext, 0.31	1
5	1045009	(006501-	) Compressor, A/C, 6v Pully [134, Tm- 08hd]	1
6	1030782	(006501-	) Pulley, Idler, Tens, Belt	1
7	27990	(006501-	) Screw, Hex, .38- 16 X 2.00, G5	1
8	32485	(006501-	) Washer, Flat, 0.38, Sae	2
9	50902	(006501-	) Nut, Hex, Lock, .38- 16, NI	1
10	1071681	(006501-	) Belt, Ribbed, Alternator, A/C, 51.125l	1
11	1041870	(006501-	) Condenser, Ac	1
12	31525	(006501-	) Wire, 10ga 16.0l Blk .25ring /.38ring	1
13	1045033	(006501-	) Dryer, A/C	1
14	1045203	(006501-	) Switch, A/C [Binary]	1
15	1045681	(006501-	) Bracket, Sppt	1
16	43555	(006501-	) Clamp, Hose, Wormdrive, 2.50- 3.50d, .50w	1
17	1071865	(006501-	) Hose, A/C, 10, E90/E90, 060.0l [R134]	1
18	1071864	(006501-	) Hose, A/C, 06, Str/E90, 052.0l [R134]	1
19	1071883	(006501-	) Hose, A/C, 08, E90/E90, 052.0l [R134]	1
20	1045156	(006501-	) Hose, A/C, 06, E90/E90, 043.0l [R134]	1
21	39284	(006501-	) Screw, Hex, M10 X 1.25 X 35, 8.8	4
22	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	4
23	41187	(006501-	) Washer, Flat, Belleville, .38	4
24	1047225	(006501-	) Angle, Mtg, Ground	1
25	87308	(006501-	) Screw, Hex, M6 X 1.00 X 12, 8.8	1
26	41140	(006501-	) Washer, Lock, Int- ext, 0.25	1
27	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	1
28	55845	(006501-	) Screw, Hex, M5 X 0.80 X 16, Fmg	4
29	19066	(006501-	) Washer, Flat, 10	8
30	1072054	(006501-	) Skirt, A/C	1
31	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	4

Fig. 11 - Cab Fuel Cover Group


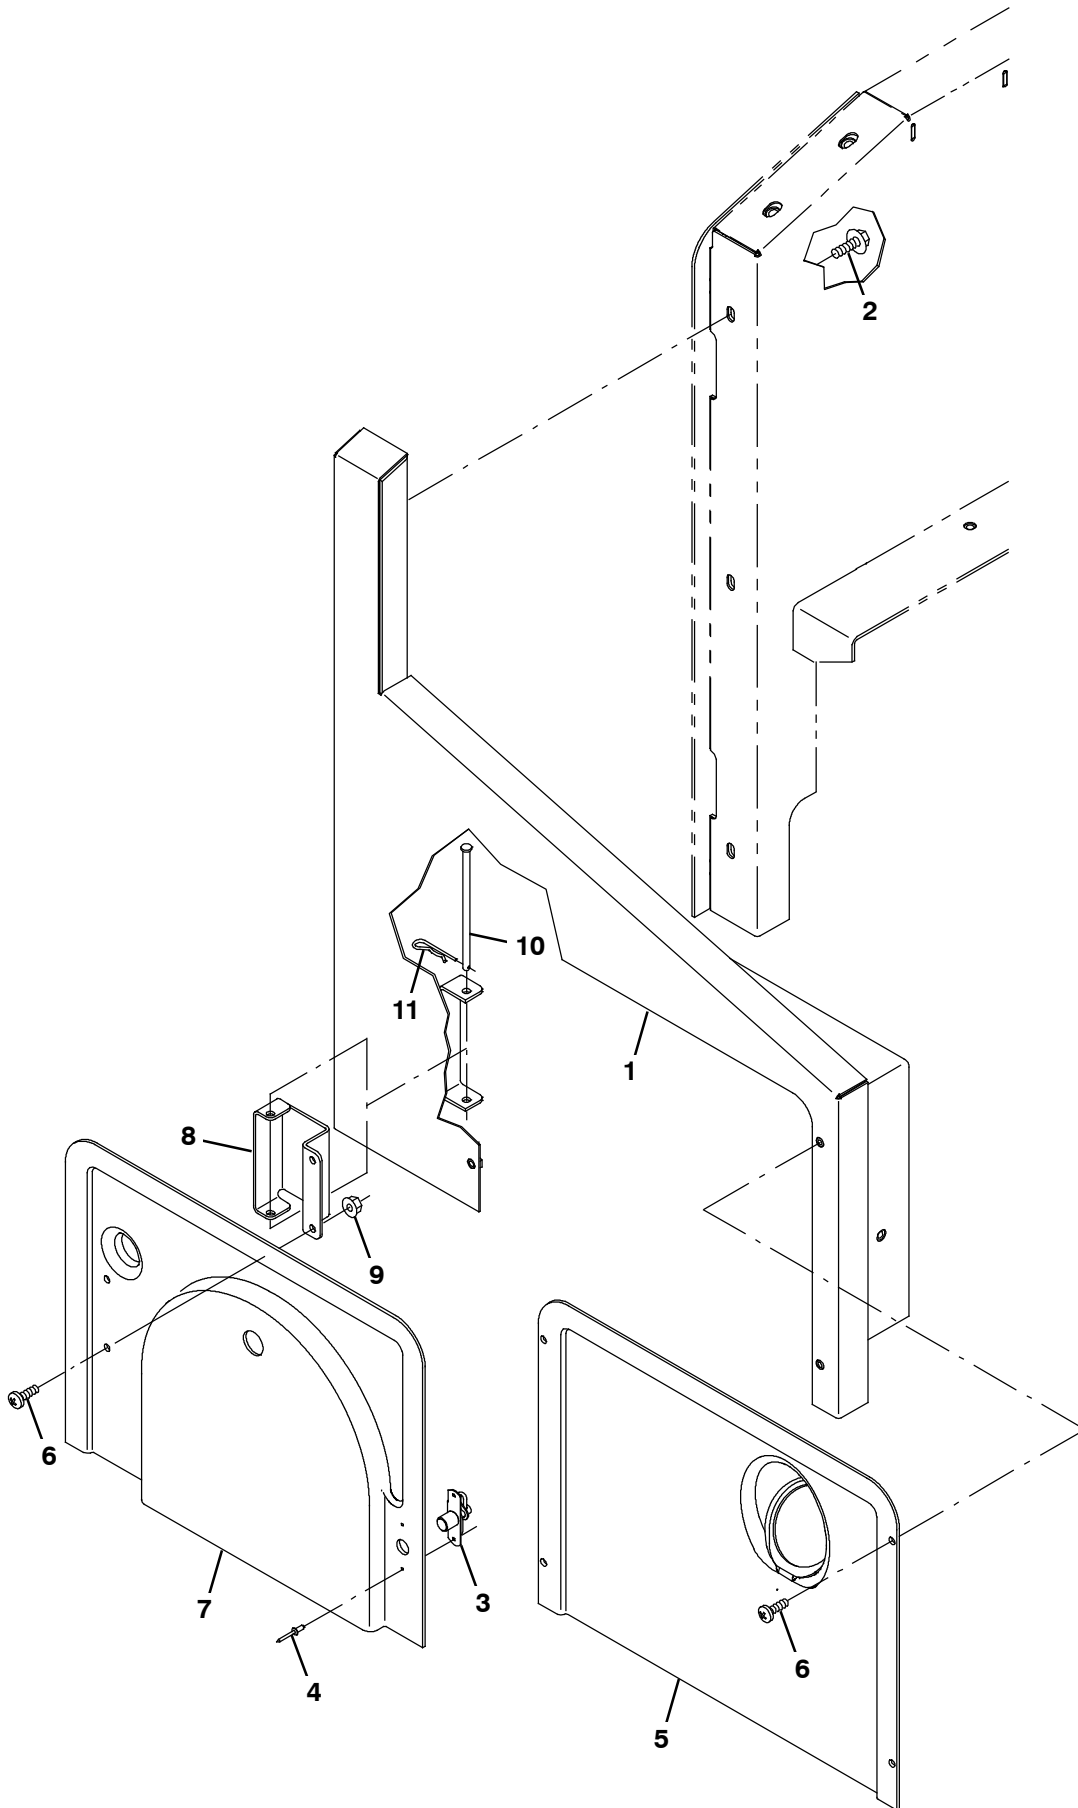


Fig. 11 - Cab Fuel Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1036608	(006501-	) Panel Wldt, Side	1
2	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
3	140962	(006501-	) Latch, Cmpr, Spring, Knurled Knob, Pl	1
4	87316	(006501-	) Rivet, Blind, .125d X 0.32 X .25d, Alm	2
5	9004524	(006501-	) Cover, Gas, W/ Label, Replmt	1
6	1045525	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 12, Blk	6
7	1040281	(006501-	) Cover, Lpg	1
8	1042073	(006501-	) Hinge	1
9	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1
10	1048950	(006501-	) Pin, Clevis, 0.25d X 5.25l	1
11	08085	(006501-	) Pin, Cotter, Hair, 0.31d .058 Wir	1

Fig. 12 - Cab Wire Harness Group

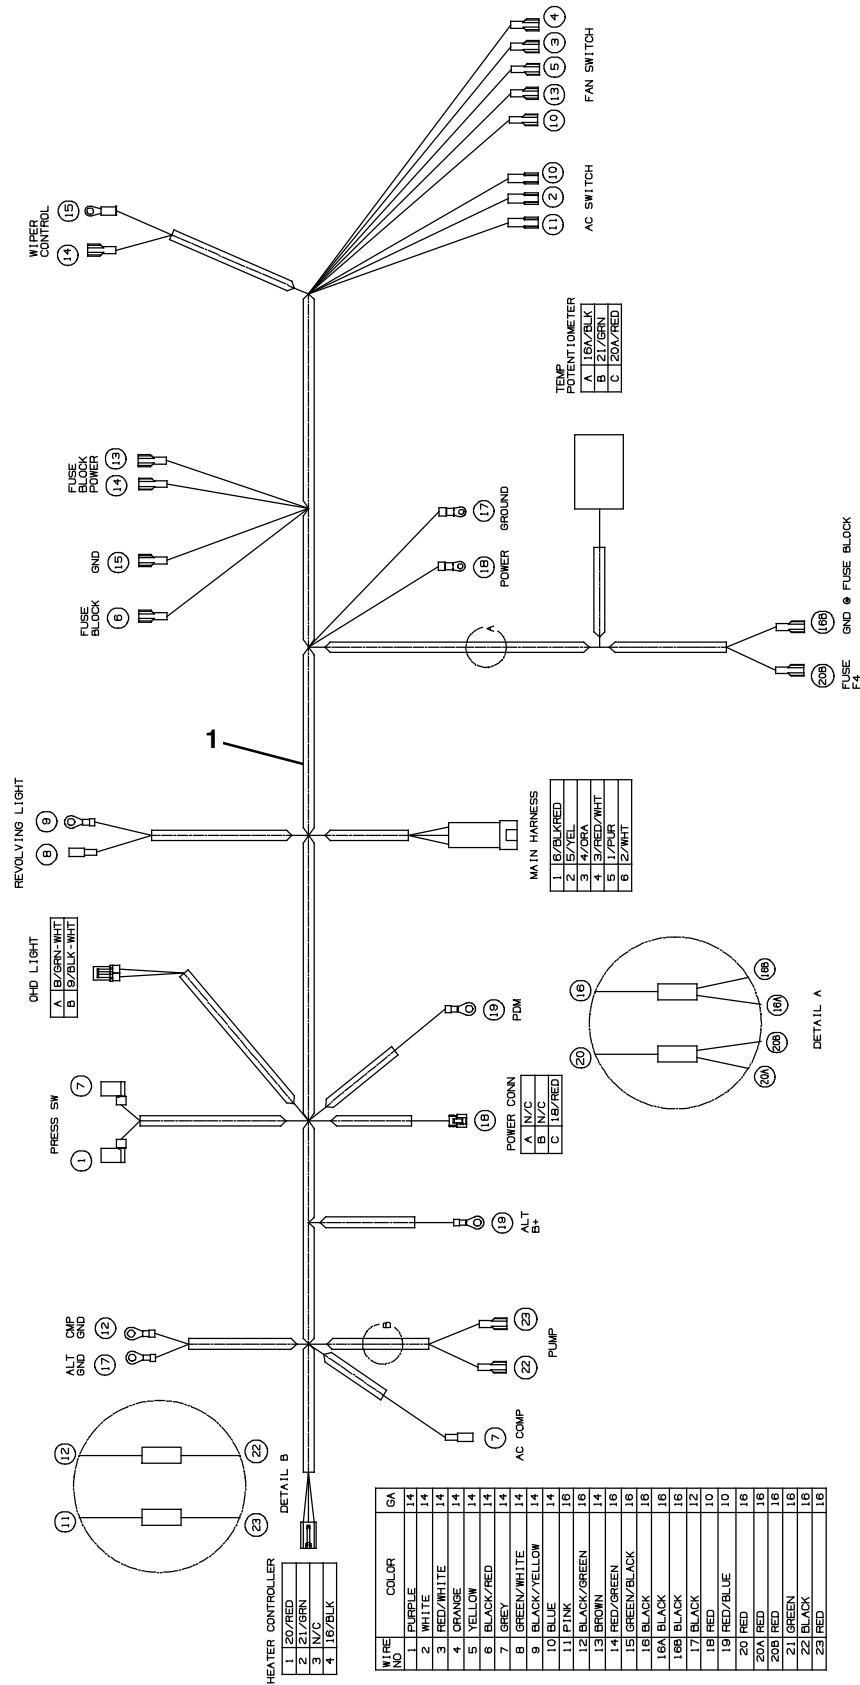

354761

Ref.	Part No.	Serial Number	Description	Qty.
1	1067912	(006501-)	Harness, Wire, Cab	1

Fig. 13 - Cab Wire Harness Electrical Schematic


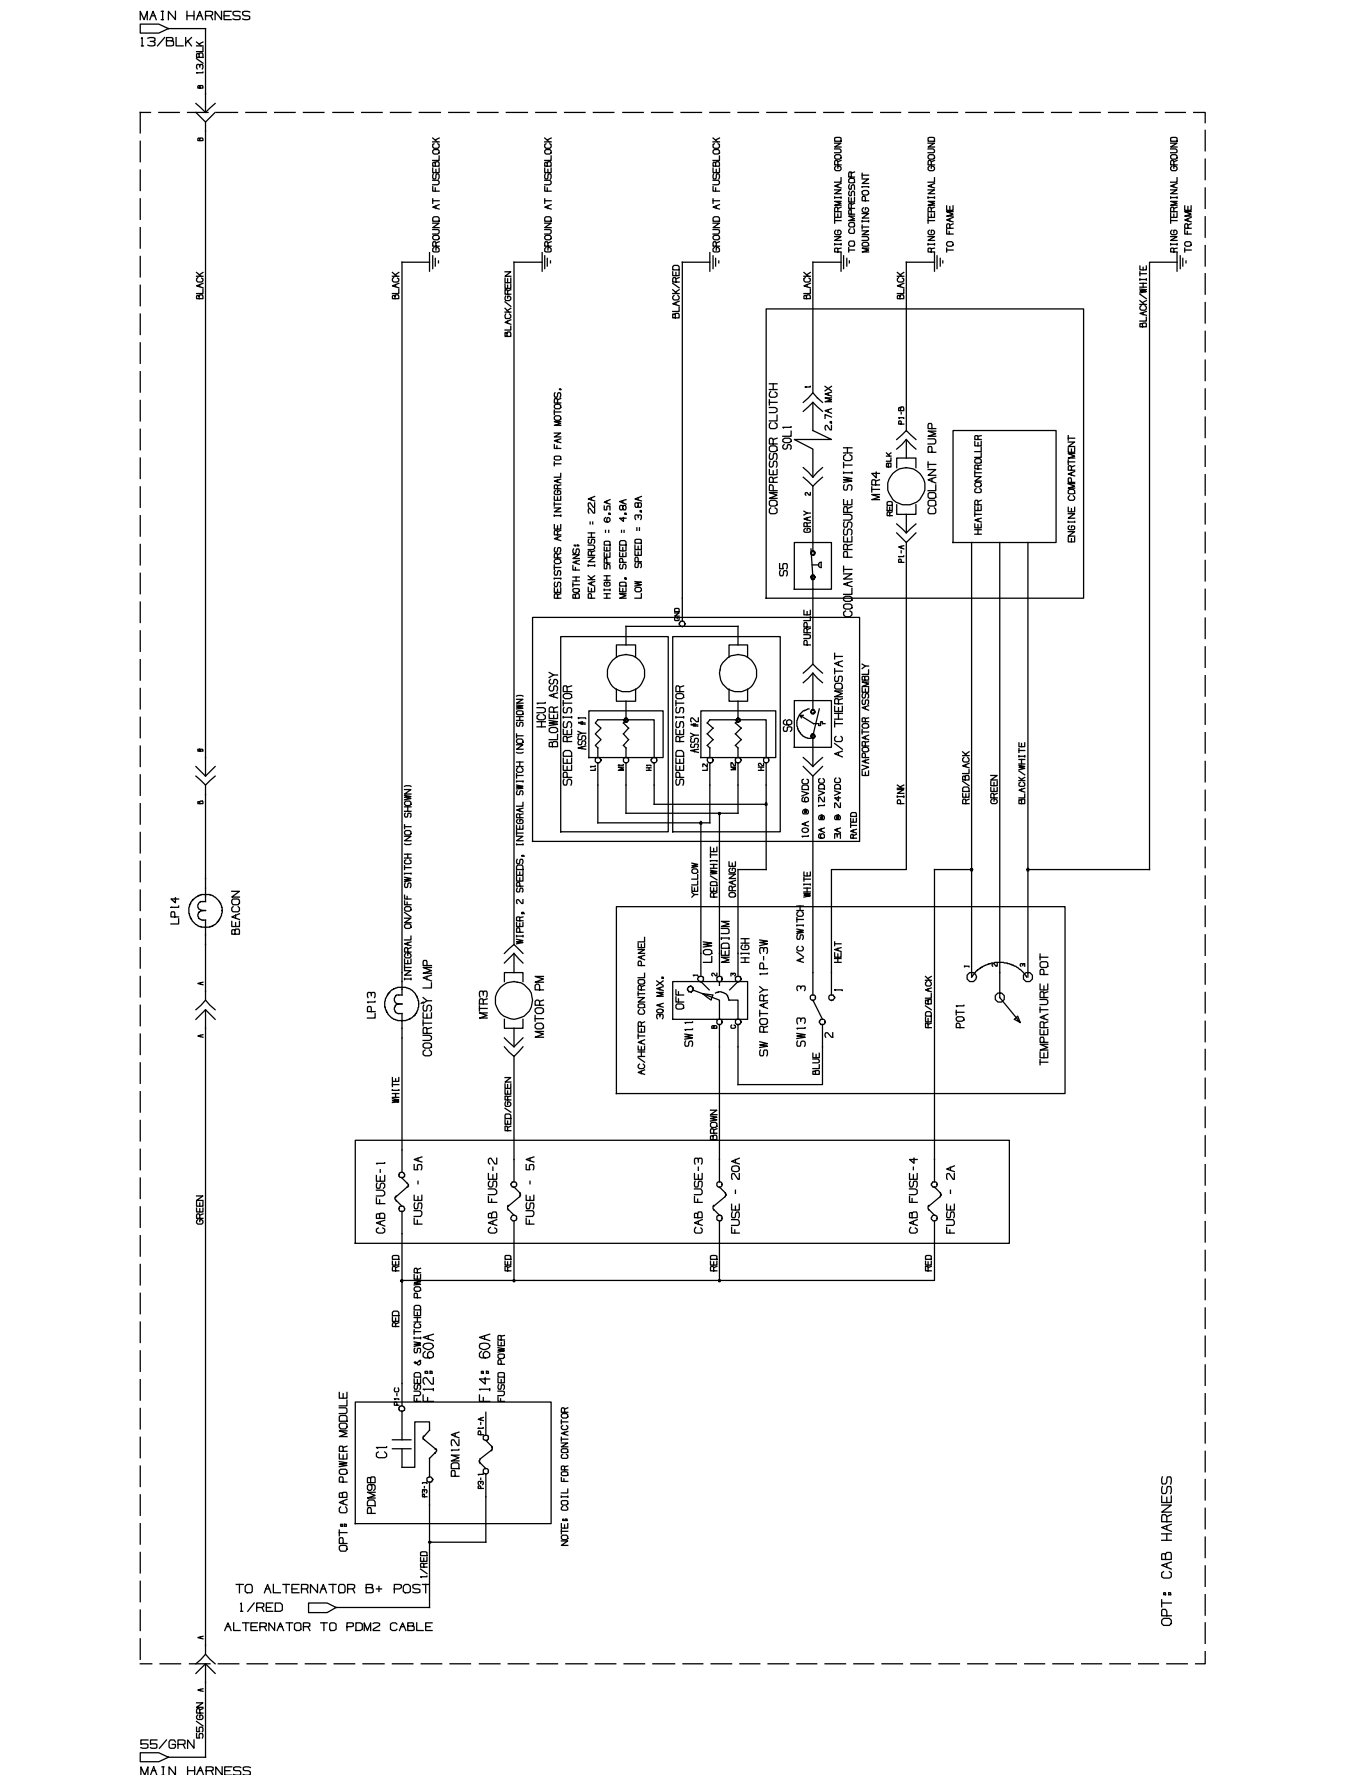



Fig. 14 - Corner Bumper Kit

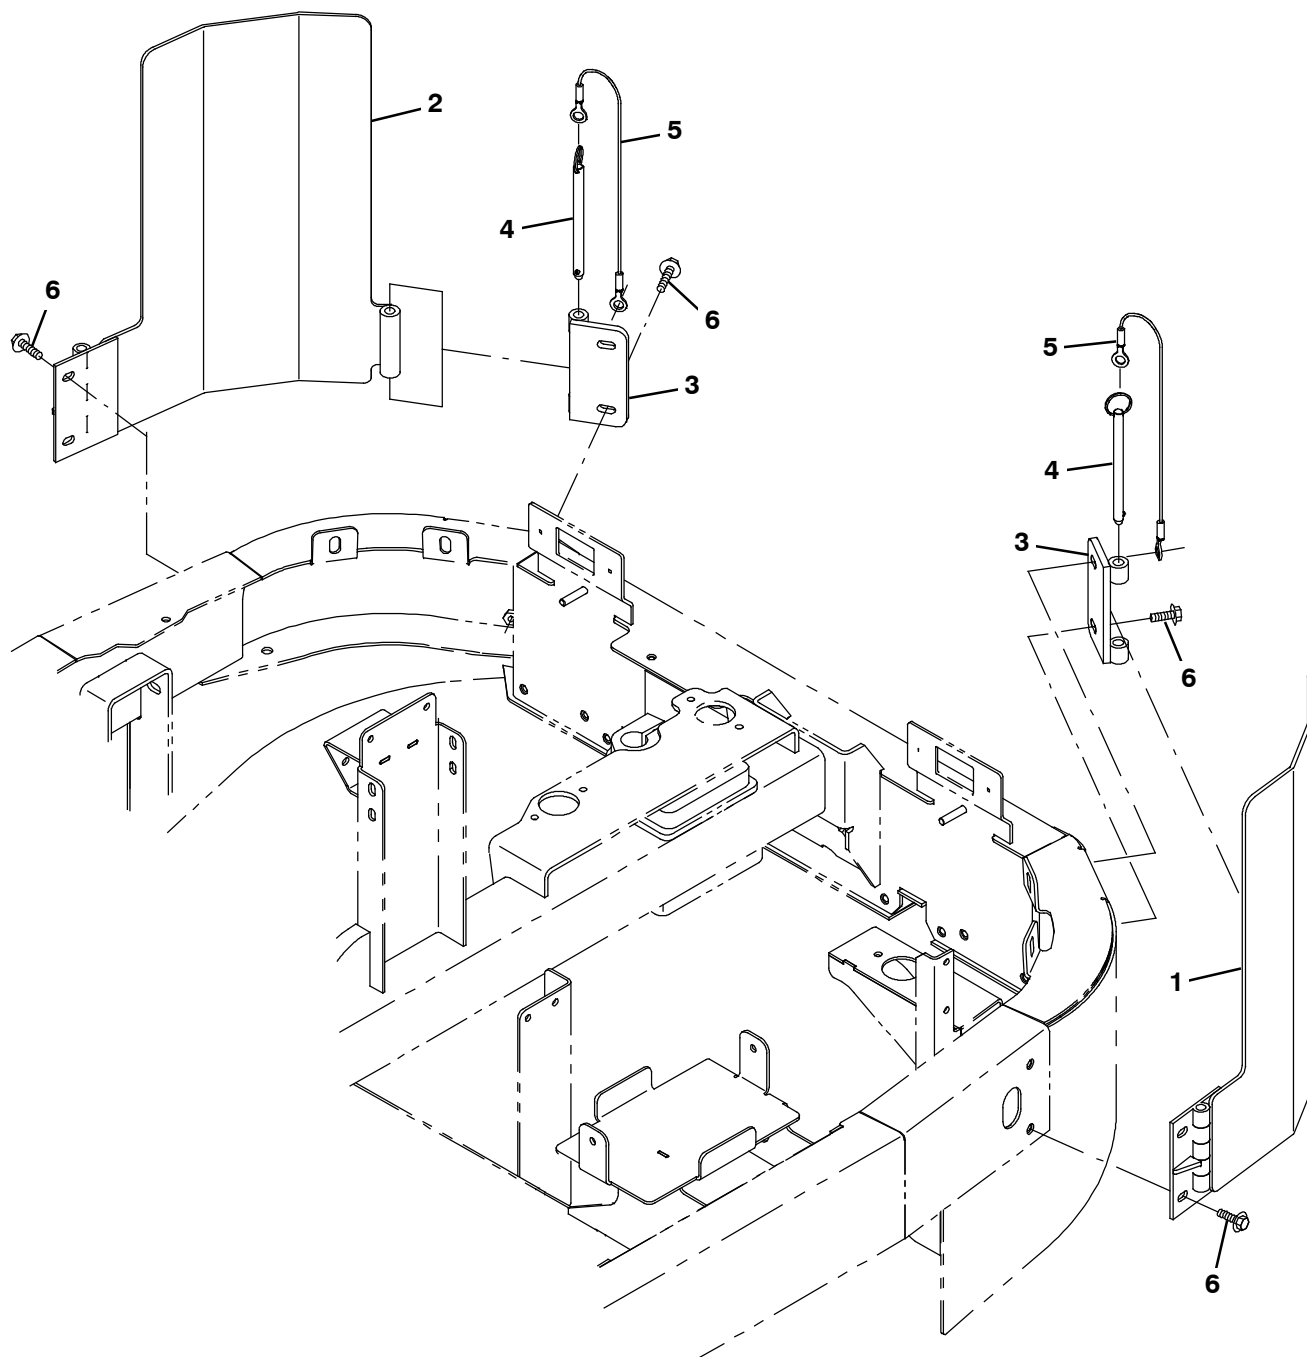

354746

Ref.	Part No.	Serial Number	Description	Qty.
▽	9008195	(006501-	) Bumper Kit, Corner, Ci, [S30]	1
▲	1 1060546	(006501-	) Angle Wldt, Bmpr, Tower, Lh	1
▲	2 1061162	(006501-	) Angle Wldt, Bmpr, Tower, Rh	1
▲	3 1061629	(006501-	) Bracket Wldt, Mtg, Bmpr	2
▲	4 1043176	(006501-	) Pin, Hitch, .500d X 6.00l, PI	2
▲	5 87172	(006501-	) Cable, Glv .13d 010.0l .52eye /.52eye	2
▲	6 1037358	(006501-	) Screw, Hex, M10 X 1.5 X 35, 9.8, Sems	8

Fig. 15 - Telemetry Group

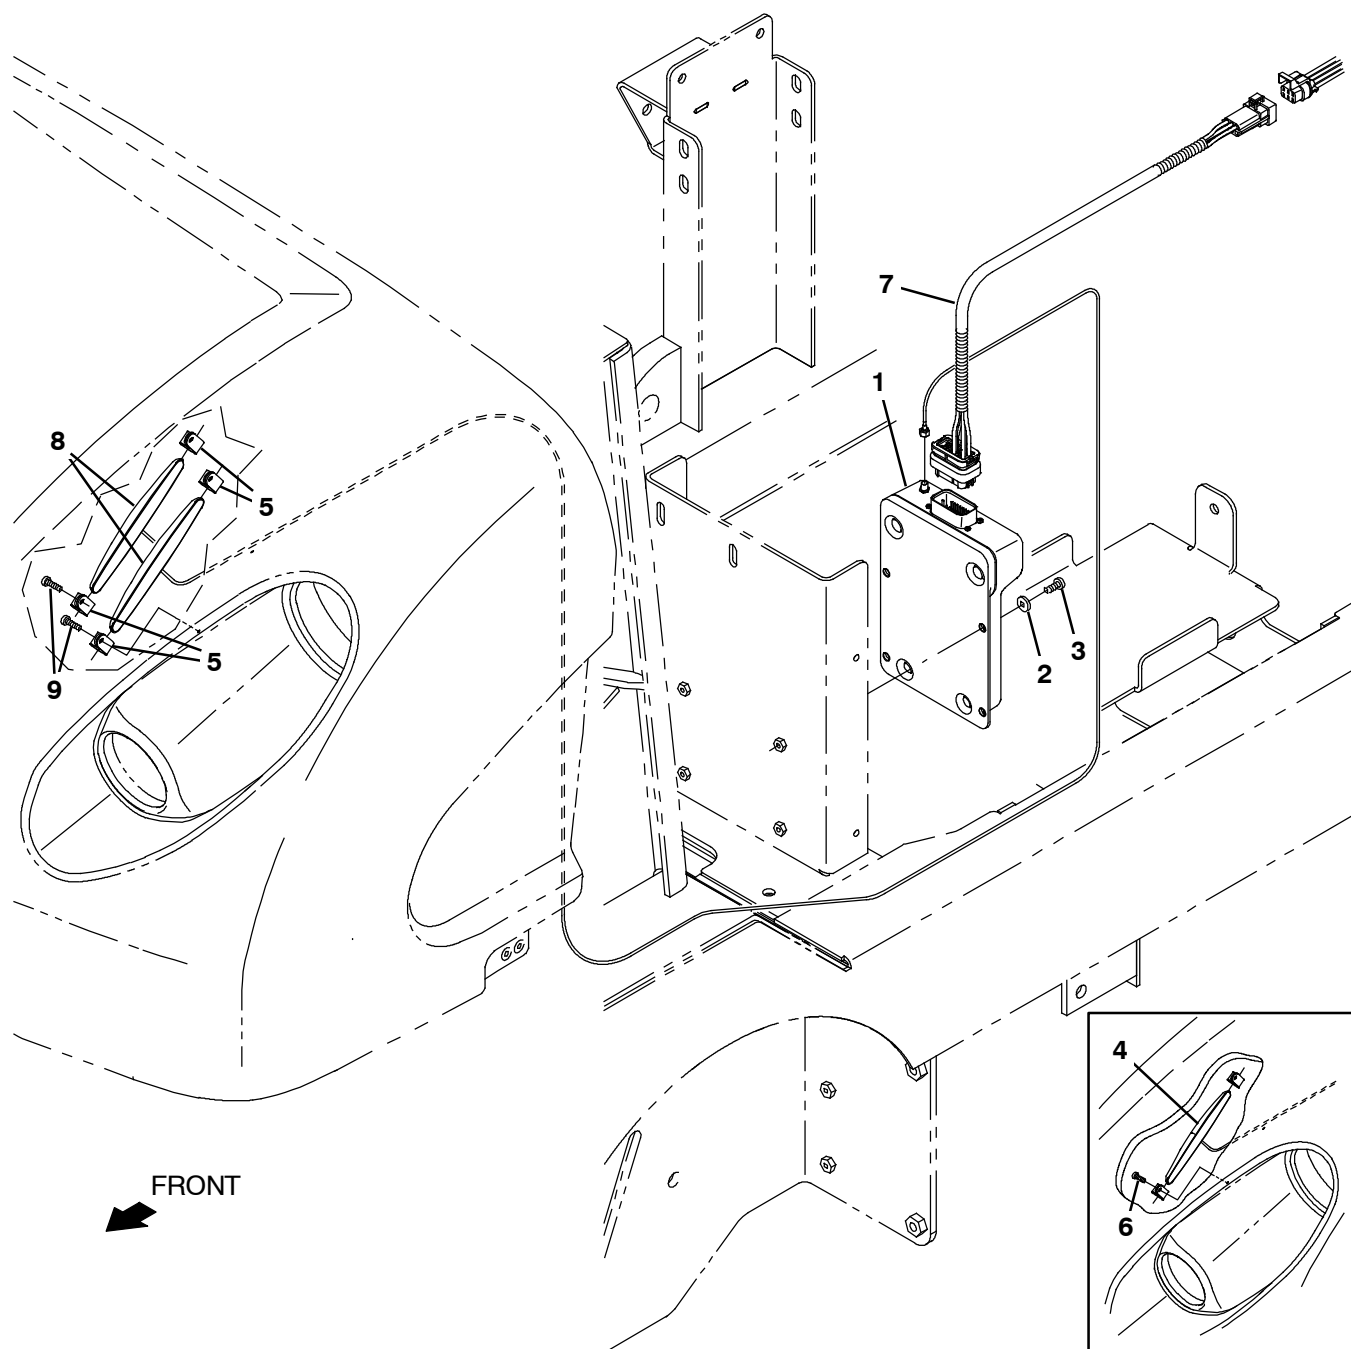

356548

Ref.	Part No.	Serial Number	Description	Qty.
1	9010085	(006501-)	Control Box Assy Kit, Replmt, Telem[Usa]	1
1	9010086	(006501-)	Control Box Assy Kit, Replmt, Telem[Intl]	1
2	19066	(006501-)	Washer, Flat, 0.25b 0.56d .05, Pl, 10	4
3	06933	(006501-)	Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	4
4	1070324	(006501-010214)	Antenna, Telem, 110 In [Gprs]	1
5	140916	(006501-)	Clamp, Cable, Nyl, 0.62d, Nat	4
6	360973	(006501-010214)	Screw, Pan, 12- 16 X 0.50, F/ Plstc	2
7	1071132	(006501-)	Harness, Ele [Extn, Telemetry]	1
8	1247568	(010215-)	Antenna, Telem, [4G, 108"]	2
9	382320	(010215-)	Screw, Pan, Phl, 12- 16 X 0.50, F/ Plstc	4
	1069580	(006501-)	Label, Opertnl, Telem [Fcc/lc]	1

Fig. 16 - Side and Rear Skirt Kit

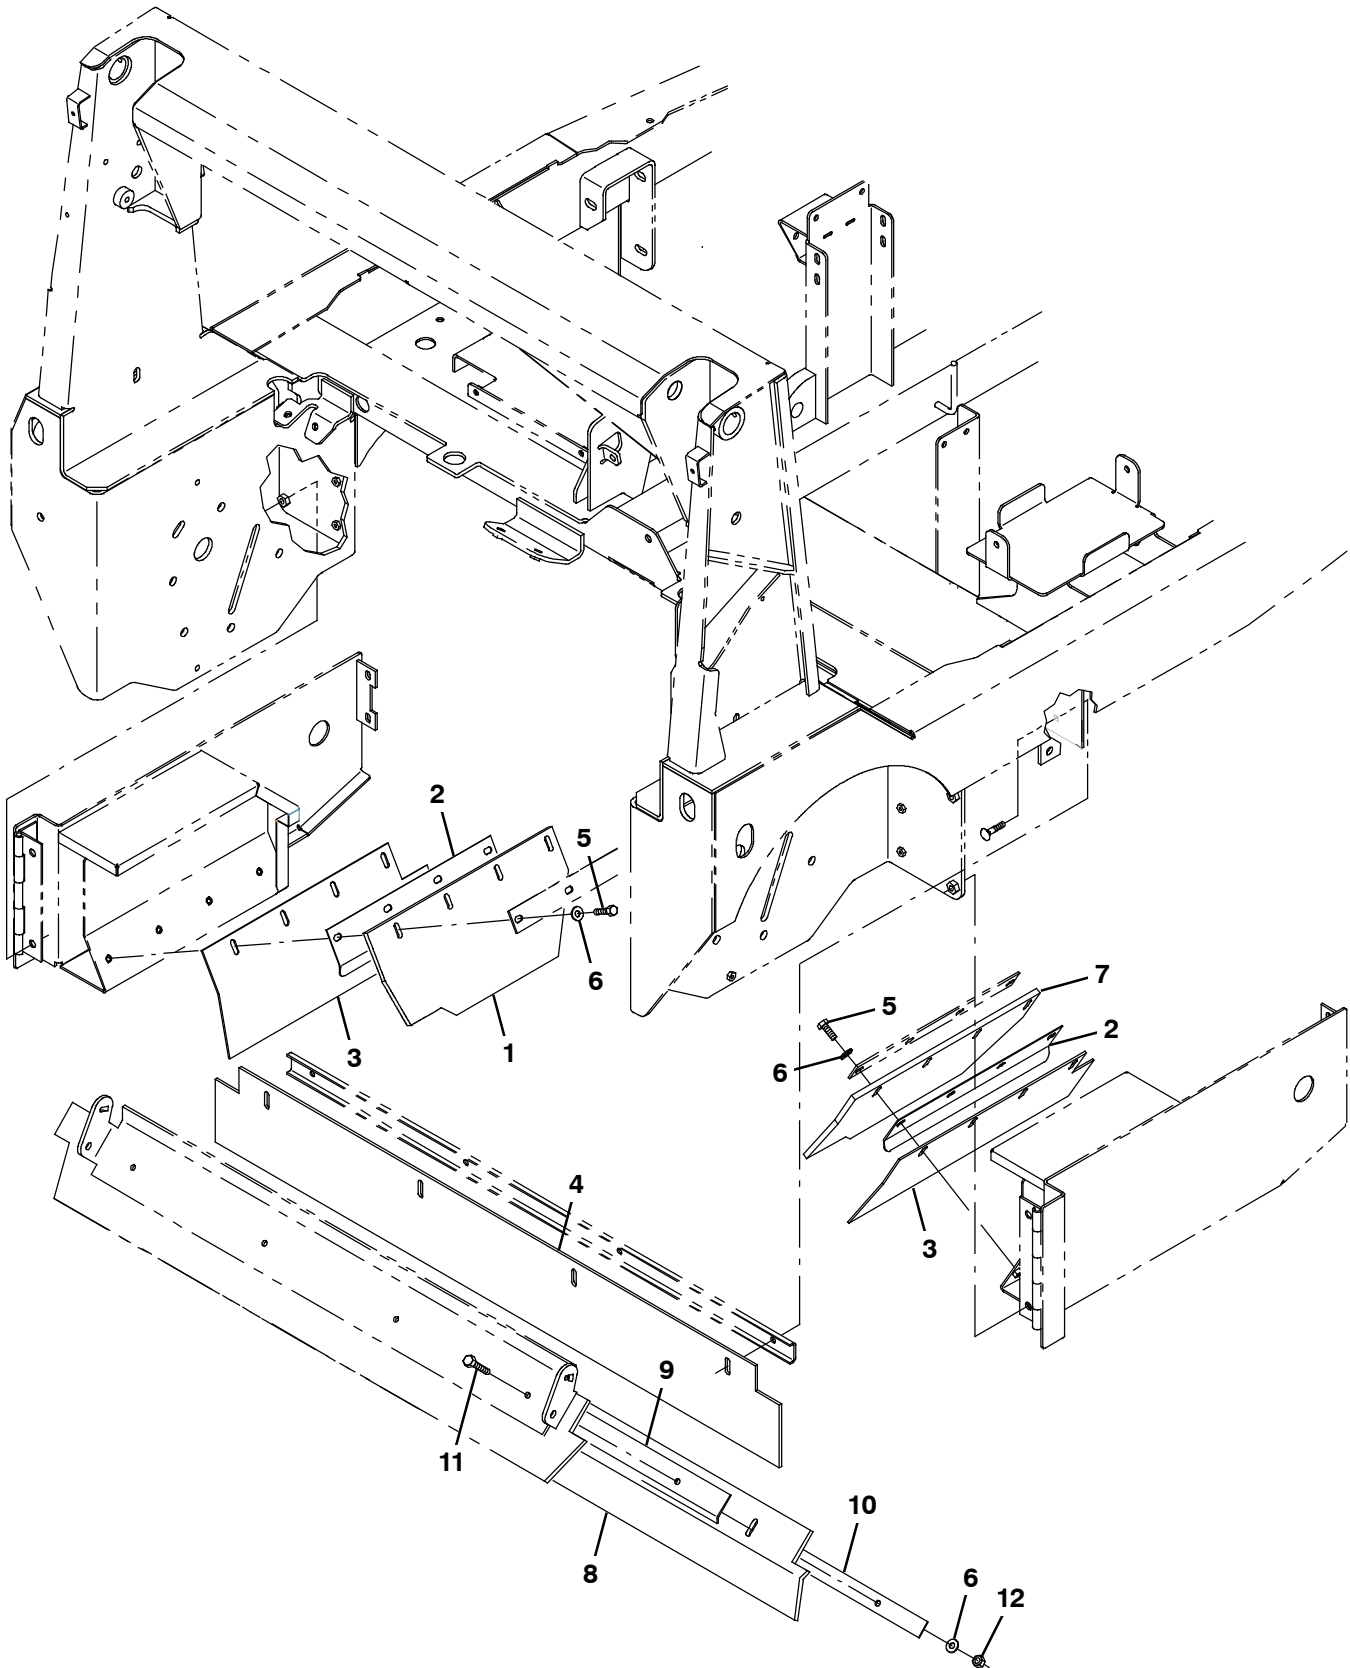


Fig. 16 - Side and Rear Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9013137	(006501-	) Skirt Kit, Side/ Rear [S30]	1
▲	1	1212911	(006501-	) Skirt Assy, Door, Brush, Rh	1
▲	2	1045352	(006501-	) Bracket, Skirt	2
▲	3	1212134	(006501-	) Skirt, Door, Brush	2
▲	4	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
▲	5	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	8
▲	6	32491	(006501-	) Washer, Flat, 0.31, Std	12
▲	7	1212910	(006501-	) Skirt Assy, Door, Brush, Lh	1
▲	8	1212912	(006501-	) Skirt, Neo, .18, 6.42w X 48.73l, 04/SI	1
▲	9	1212908	(006501-	) Retainer, Blade, Deflector	1
▲	10	1212959	(006501-	) Retainer, Blade, Deflector	1
▲	11	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	4
▲	12	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4

Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)

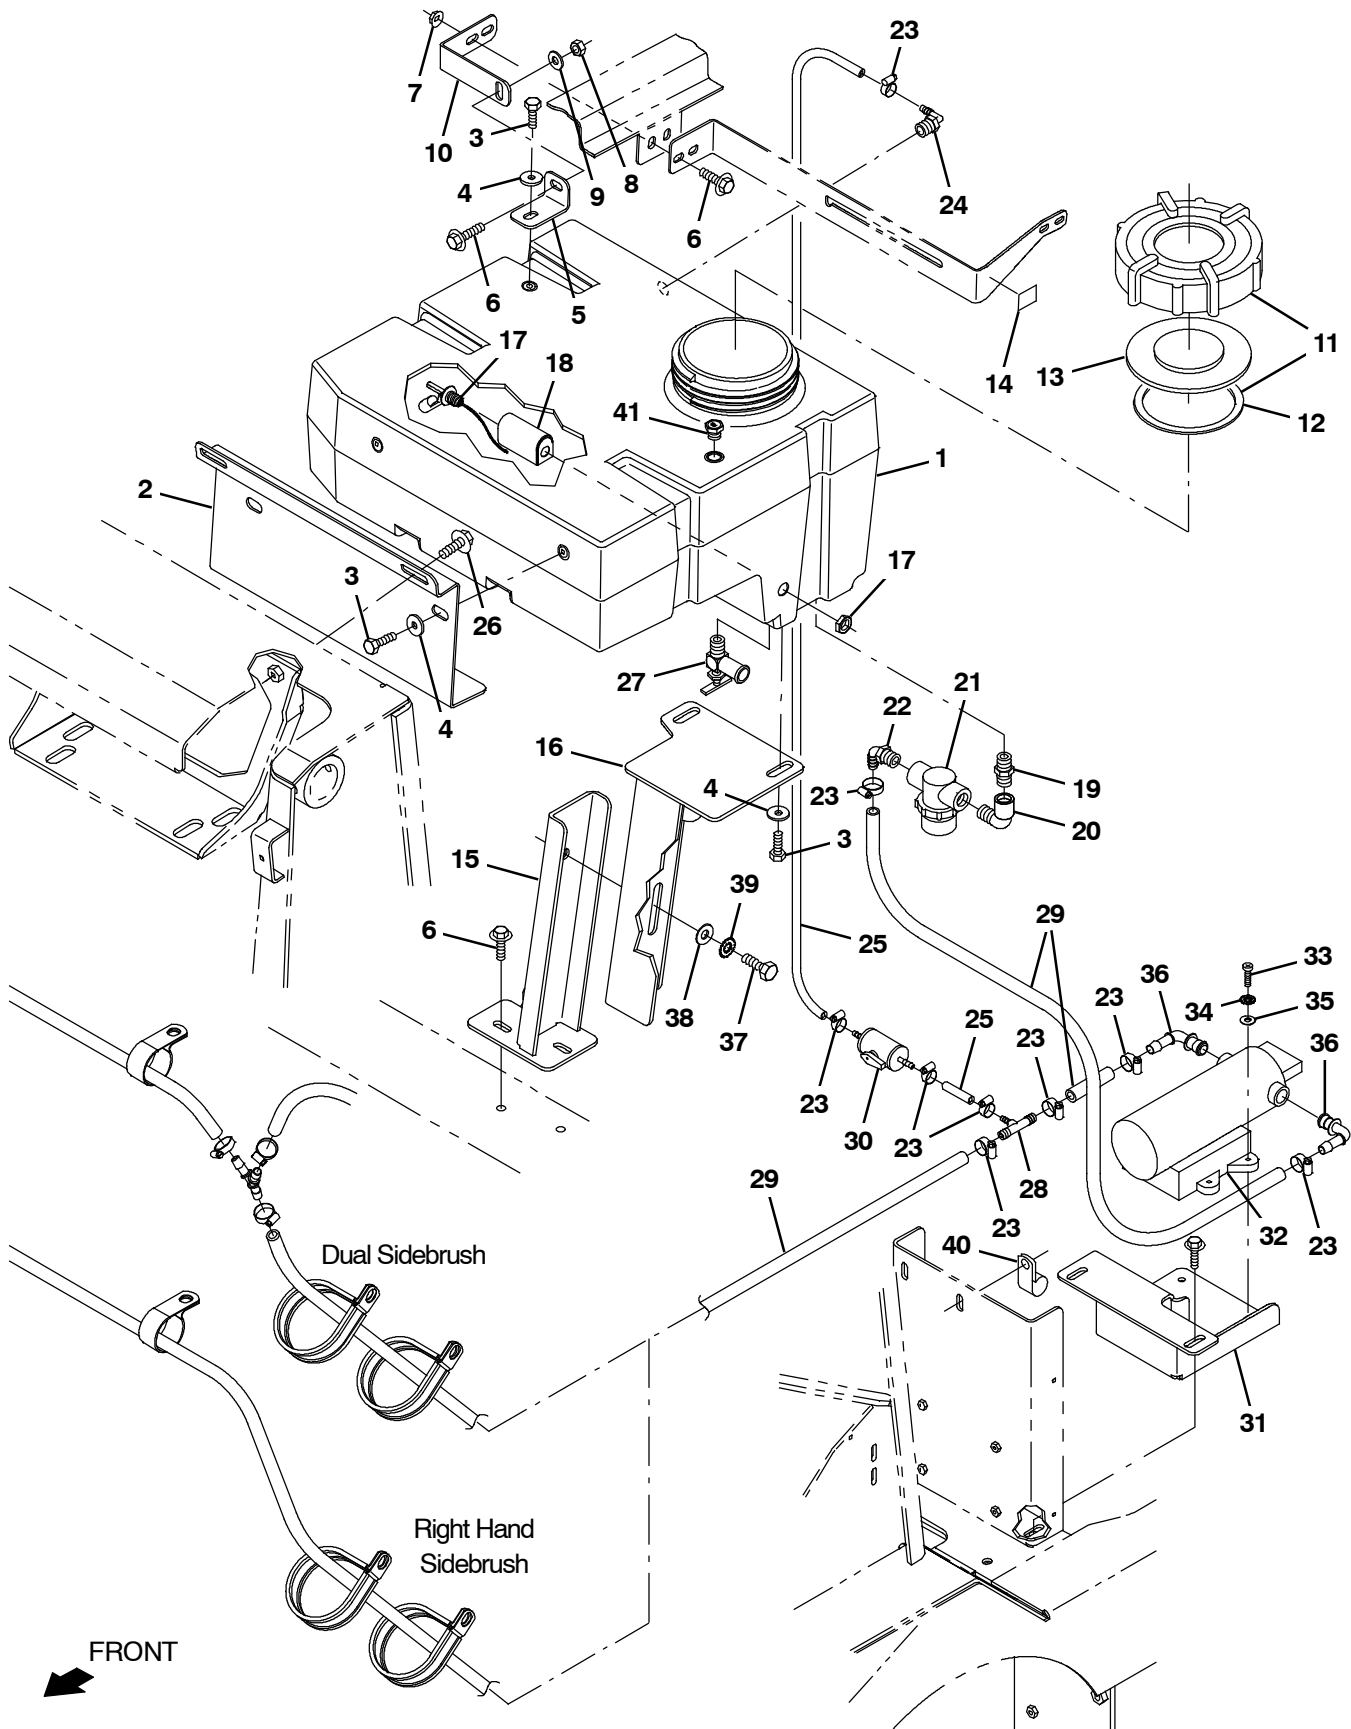


Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	9016474	(006501-	) Tank, Kit, Water, Afmkt [S30]	1
2	1232002	(006501-	) Bracket, Sppt, Rear, Tank [S30]	1
3	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	5
4	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	5
5	1232001	(006501-	) Bracket, Angle, Tank Sppt, Top [S30]	1
6	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	5
7	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
8	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	3
9	32491	(006501-	) Washer, Flat, 0.31, Std	1
10	1232000	(006501-	) Bracket, Angle, Tank Brace	1
▽	11	24358	(006501-) Cap Assy, Tank, Drain	1
▲	12	1031699	(006501-) Gasket, .19, 4.05id 5.29od [Buna]	1
	13	86636	(006501-) Plug, Cap, Nat	1
	14	1232023	(006501-) Label, Info, Water Only	1
	15	1231991	(006501-) Brace Wldt, Sppt, Water Tank	1
	16	1231994	(006501-) Bracket Wldt, Sppt, Top, Tank	1
	17	385685	(006501-) Sensor, Level, Liq, 14vdc 01a .62- 11	1
	18	1019285	(006501-) Bracket, Protector, Float Switch	1
	19	1232027	(006501-) Fitting, Plstc, Str, Pm06/Pm06	1
	20	1005318	(006501-) Fitting, Plstc, E90, Pf06/Pm06, Nyl	1
▽	21	1076437	(006501-) Filter, In- Line, Pf06/Pf06 60 Micron	1
▲		1005304	(006501-) Screen, Fltr, 60 Micron, Caged Ss	1
	22	150412	(006501-) Fitting, Plstc, E90, Bm06/Pm06	1
	23	43844	(006501-) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	9
	24	150417	(006501-) Fitting, Plstc, E90, Bm04/Pm06	1
	25	1014985	(006501-) Hose, Afmkt, Pvc, Clr, 0.25id, 08ft	1
	26	1036892	(006501-) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
	27	764183	(006501-) Fitting, Draincock, E90 Pm06	1
	28	61456	(006501-) Fitting, Plstc, Tee, Bm03/Bm06/Bm06, Br	1
	29	1014977	(006501-) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	1
	30	1232030	(006501-) Valve, Shutoff, Bm04/Bm04, Pvc	1
	31	1232051	(006501-) Bracket Wldt, Sppt, Pump Mtg	1
	32	1036801	(006501-) Pump, Soltn, 13.7vdc, 65psi [Fast li+]	1
	33	140293	(006501-) Screw, Pan, Phl, M5 X 0.80 X 30, Ss	1
	34	07514	(006501-) Washer, Lock, Int, 10, Ss	4
	35	01683	(006501-) Washer, Flat, 10, Ss	4
	36	1049259	(006501-) Fitting, Nyl, Qdc, E90, Bm06/ Qm10	2
	37	39283	(006501-) Screw, Hex, M10 X 1.50 X 25, 8.8	1
	38	32492	(006501-) Washer, Flat, 0.38, Std	1
	39	32988	(006501-) Washer, Lock, Int, 0.38	1
	40	46236	(006501-) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
	41	1241776	(006501-) Fitting, Brs, 3/8npt, Valve, Breather	1

Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

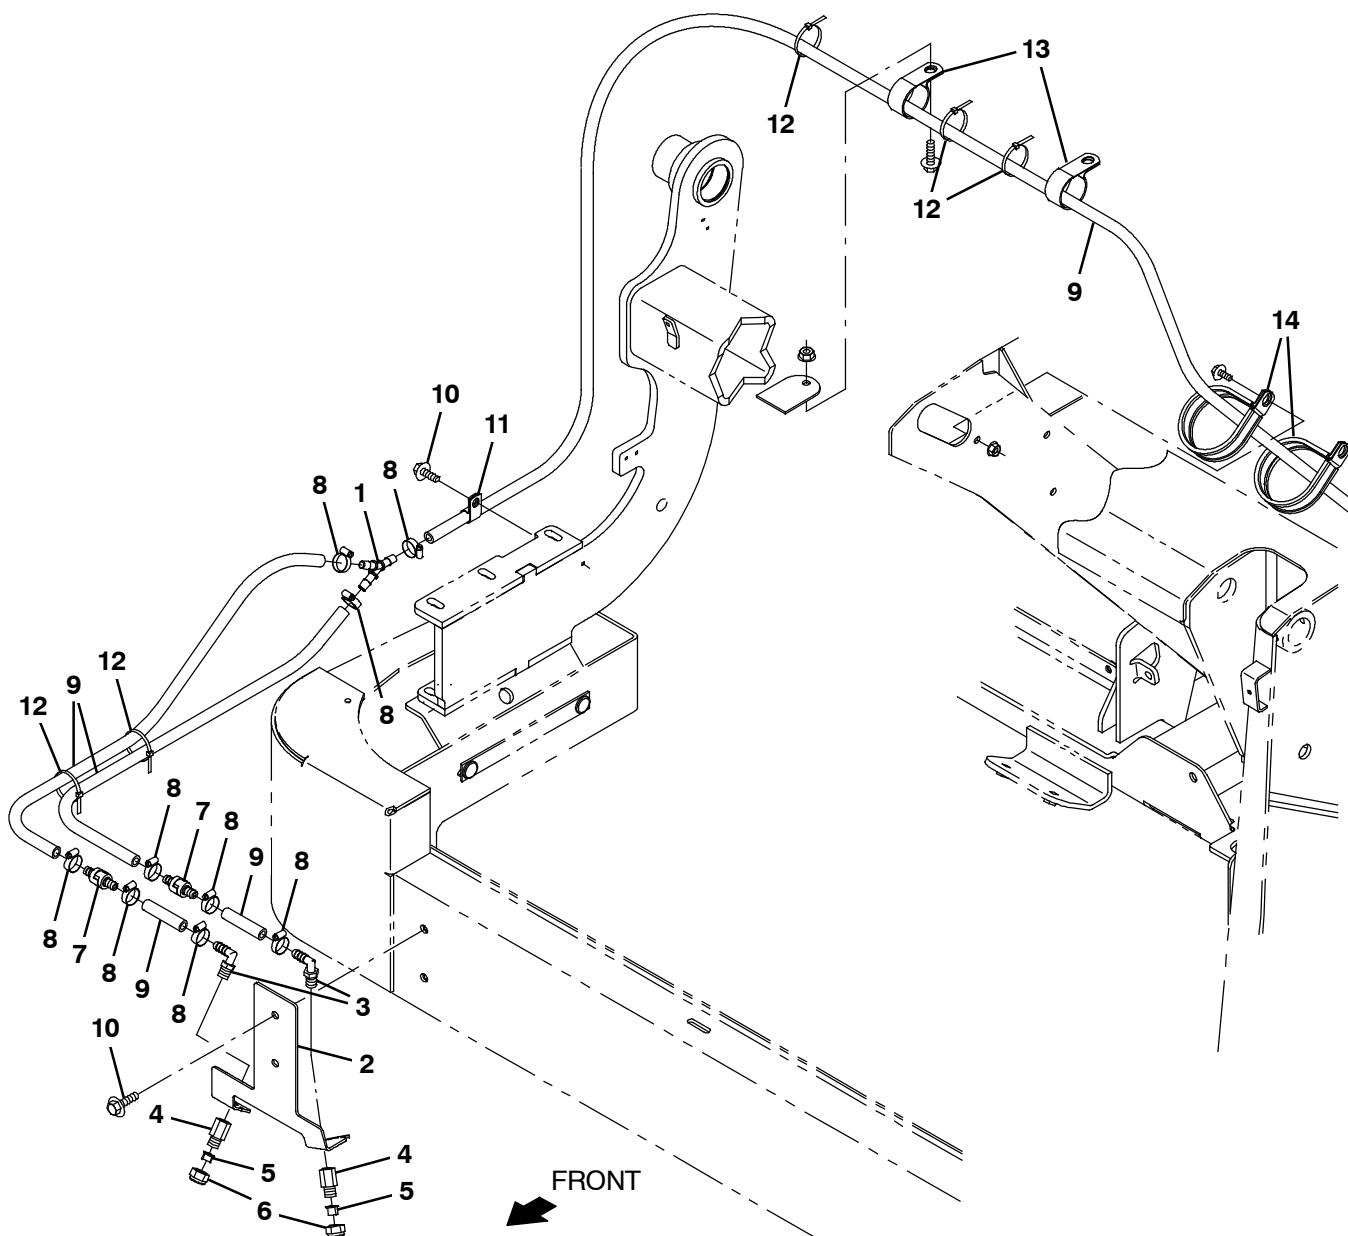


Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Cif S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Cif S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1017255	(006501-	) Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl	1
2	1232003	(006501-	) Bracket, Mtg, Dual Nozzle, Rh	1
3	57248	(006501-	) Fitting, Plstc, E90, Bm06/Pm04, Nyl	2
4	1232066	(006501-	) Fitting, Body, Nozzel, Brs	2
5	1232065	(006501-	) Nozzel, Spray, 110 Deg, 0.05 Gpm	2
6	769778	(006501-	) Fitting, Brs, Cap [Unijet]	2
7	1015455	(006501-	) Valve, Check, 0005psi Bm06/Bm06	2
8	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	9
9	1014977	(006501-	) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	1
10	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
11	82829	(006501-	) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	1
12	763114	(006501-	) Tie, Cable, 11.3l, 2.75d Max	6
13	41016	(006501-	) Clamp, Cable, Stl, 2.25d X 1.00w, 1hole	2
14	1207562	(006501-	) Clamp, Cable, Stl, 3.25d X 1.00w, 1hole	2

Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

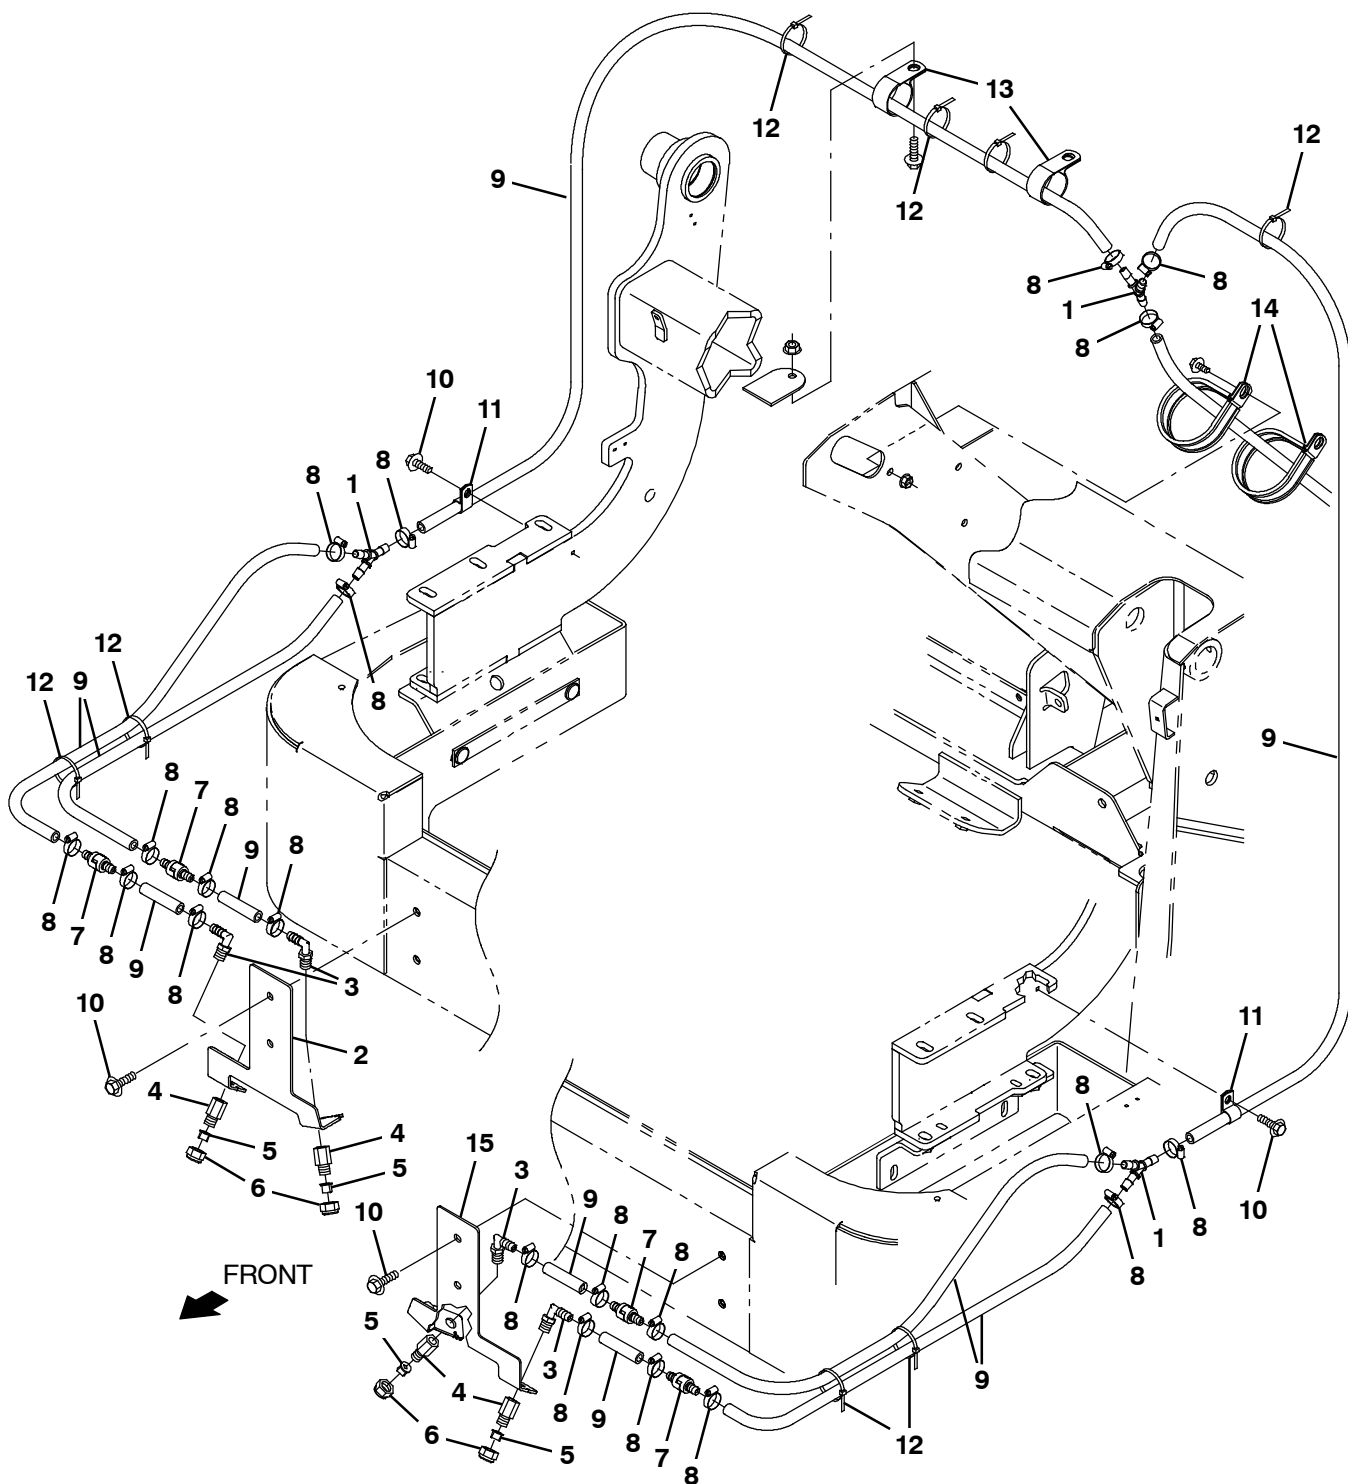


Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501- 008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1017255	(006501-	) Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl	3
2	1232003	(006501-	) Bracket, Mtg, Dual Nozzle, Rh	1
3	57248	(006501-	) Fitting, Plstc, E90, Bm06/Pm04, Nyl	4
4	1232066	(006501-	) Fitting, Body, Nozzel, Brs	4
5	1232065	(006501-	) Nozzel, Spray, 110 Deg, 0.05 Gpm	4
6	769778	(006501-	) Fitting, Brs, Cap [Unijet]	4
7	1015455	(006501-	) Valve, Check, 0005psi Bm06/Bm06	4
8	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	21
9	1014977	(006501-	) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	2
10	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
11	82829	(006501-	) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	2
12	763114	(006501-	) Tie, Cable, 11.3l, 2.75d Max	12
13	41016	(006501-	) Clamp, Cable, Stl, 2.25d X 1.00w, 1hole	2
14	1207562	(006501-	) Clamp, Cable, Stl, 3.25d X 1.00w, 1hole	2
15	1232004	(006501-	) Bracket, Mtg, Dual Nozzle, Lh	1

Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)

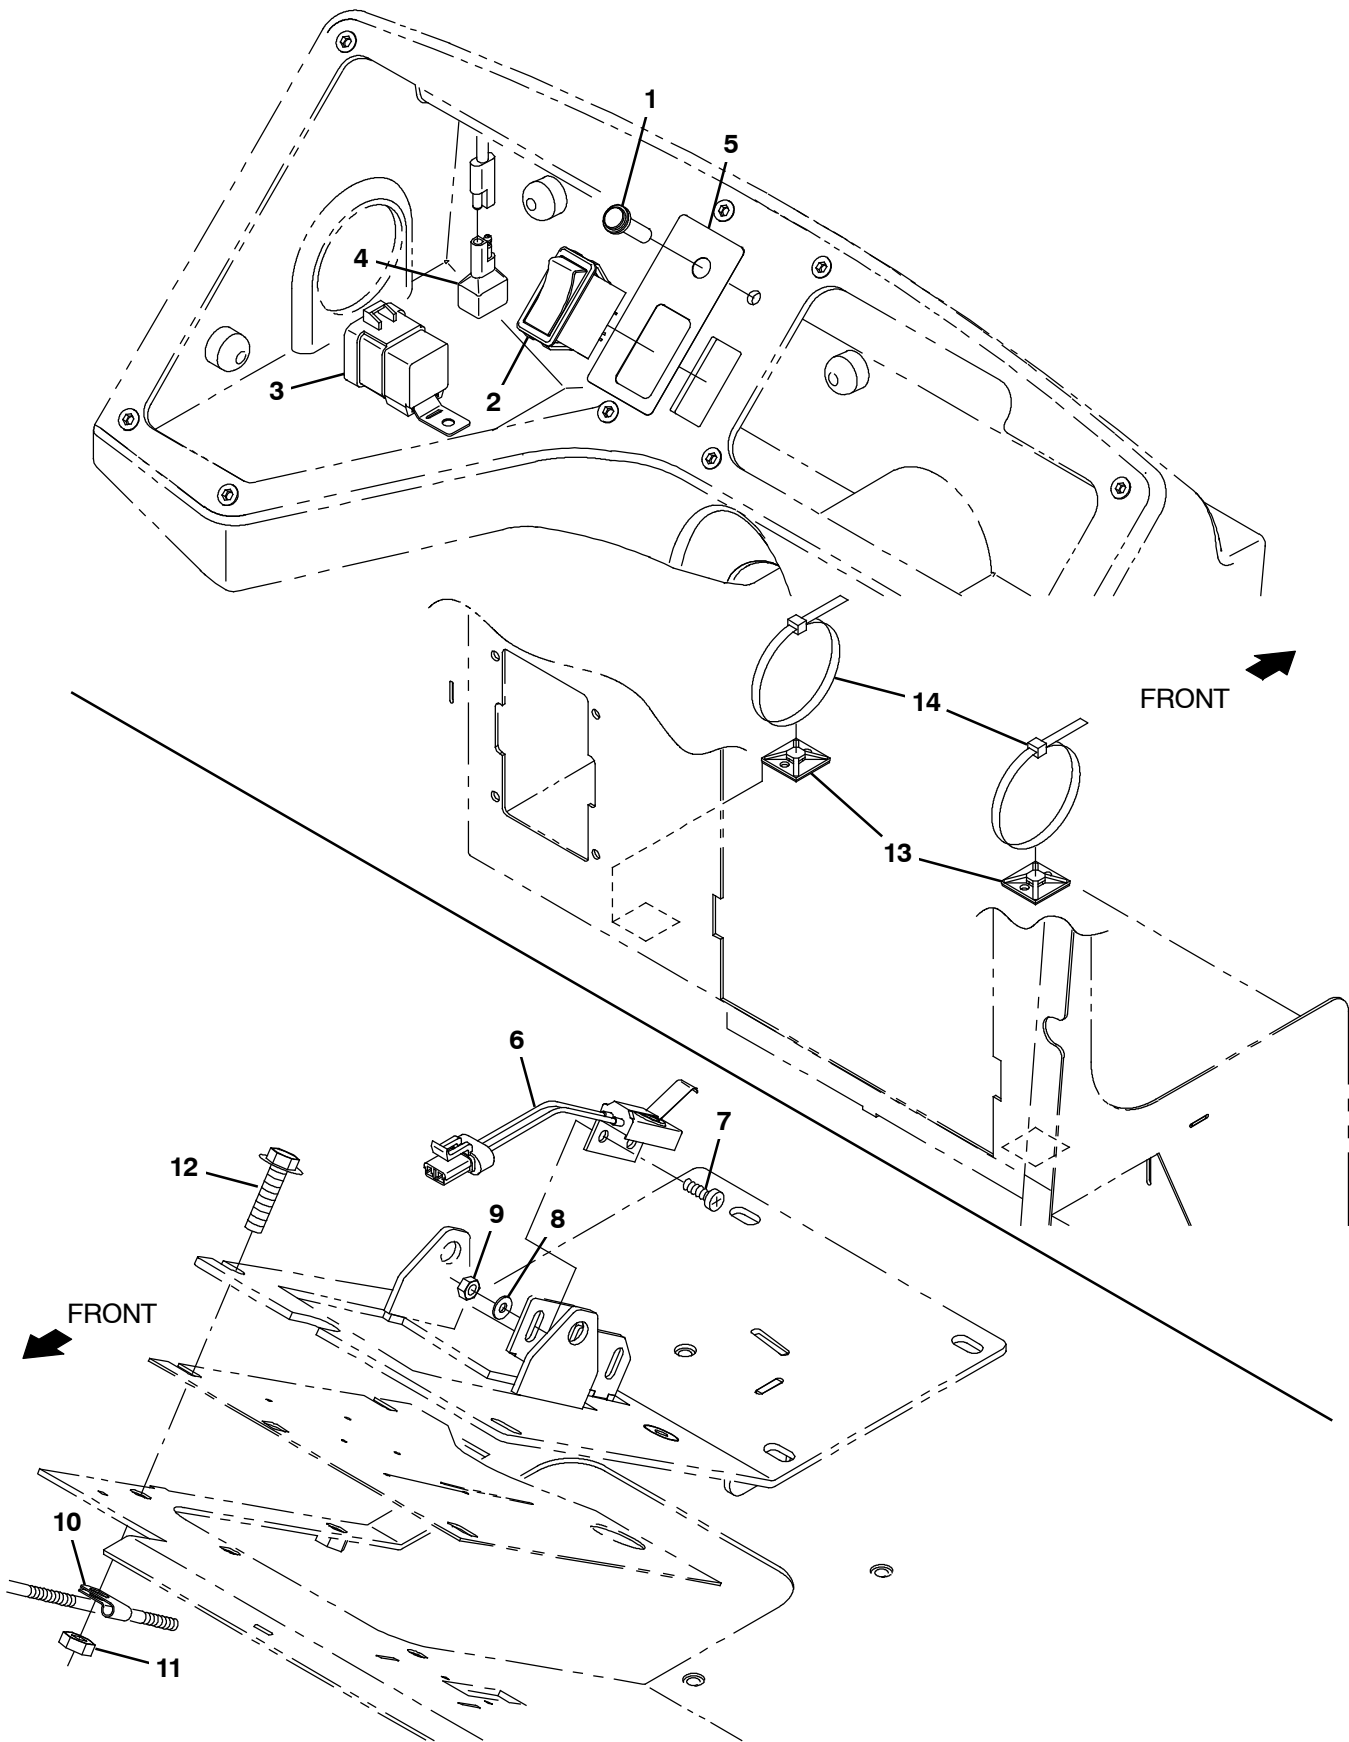


Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbd, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbd, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbd, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbd, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232342	(006501-	) Light, Led, .312d, 12 Vdc [Tri- Color]	1
2	398528	(006501-	) Switch, Rocker, Dpdt, On / Off / Mom	1
3	56186	(006501-	) Relay, 12vdc, 040a, Spdt No	1
4	222290	(006501-	) Diode, Ele, Plug	1
5	1232091	(006501-	) Label, Wet Dust Cntrl [S30]	1
6	1212400	(006501-	) Switch, Snap, 15a Nc	1
7	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
8	19324	(006501-	) Washer, Flat, 10, Sae	2
9	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
10	46236	(006501-	) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
12	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
13	55248	(006501-	) Mount, Cable Tie	4
14	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4

S30 Gas/LPG 9013316 (8-2019)

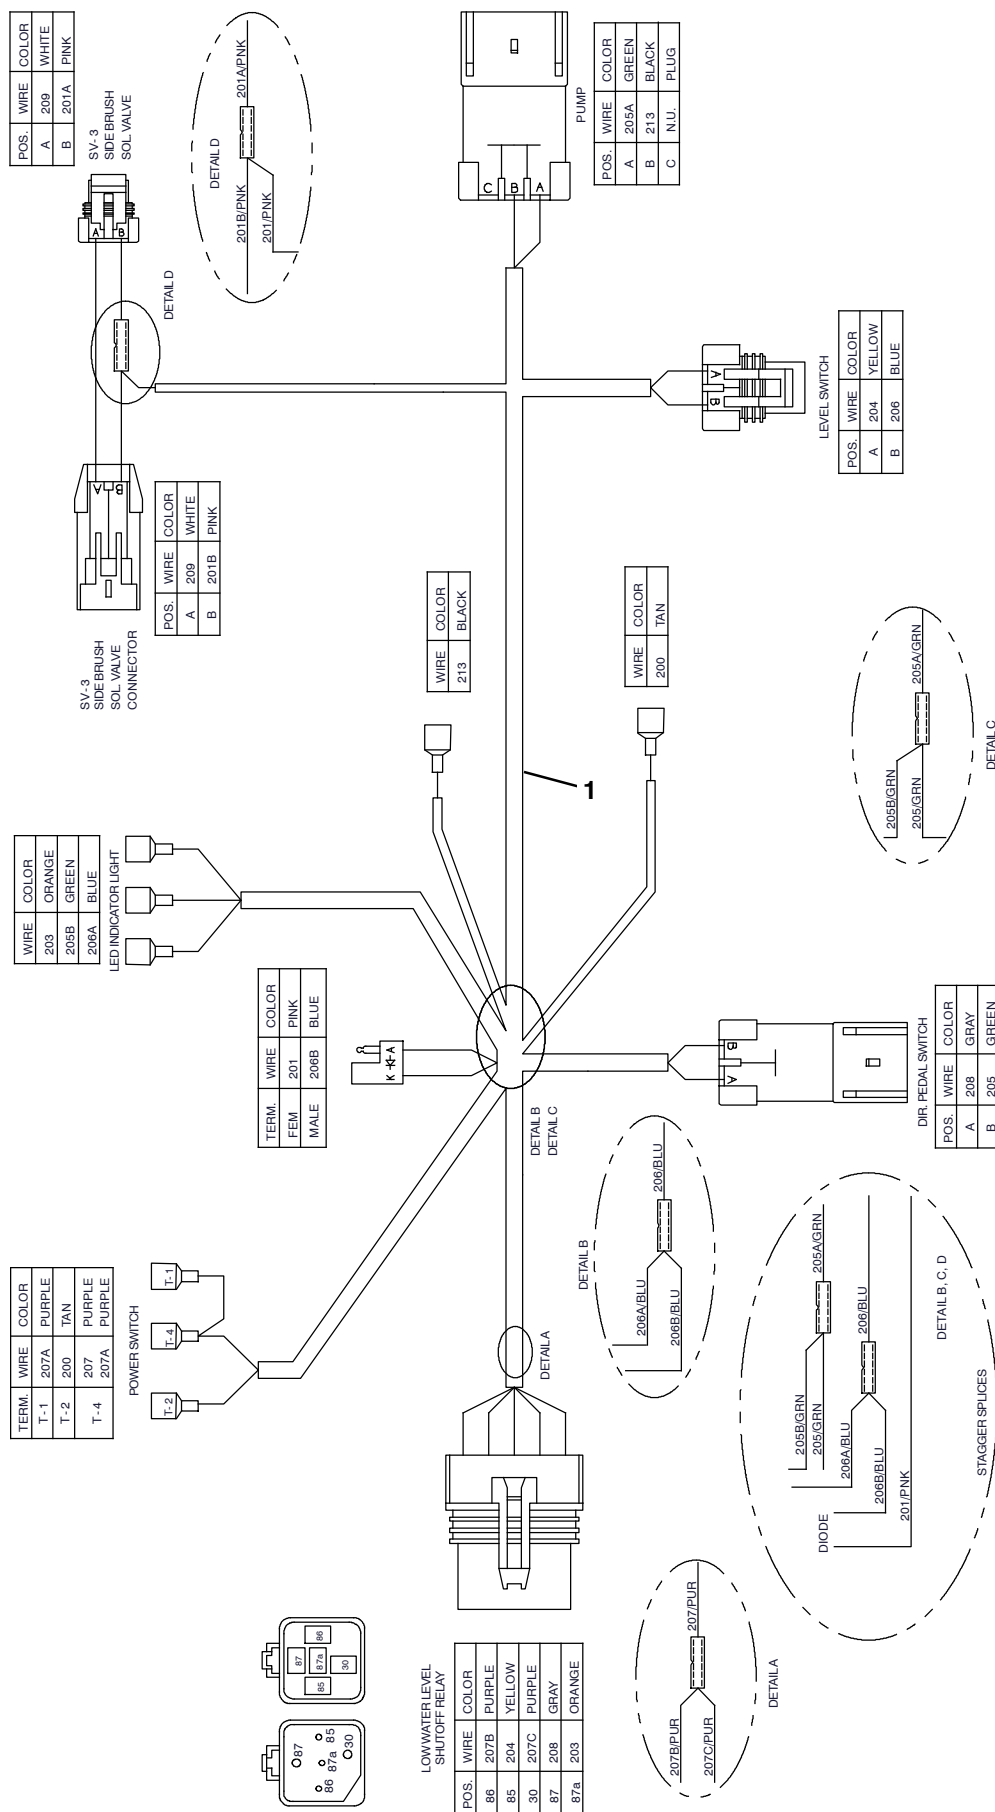


Fig. 21 - Wet Side Brush Dust Control Wire Harness Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232183	(006501-)	Harness, Cntrl, Wet Dust [S30]	1

Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501-008140) (No. Amer. Only)

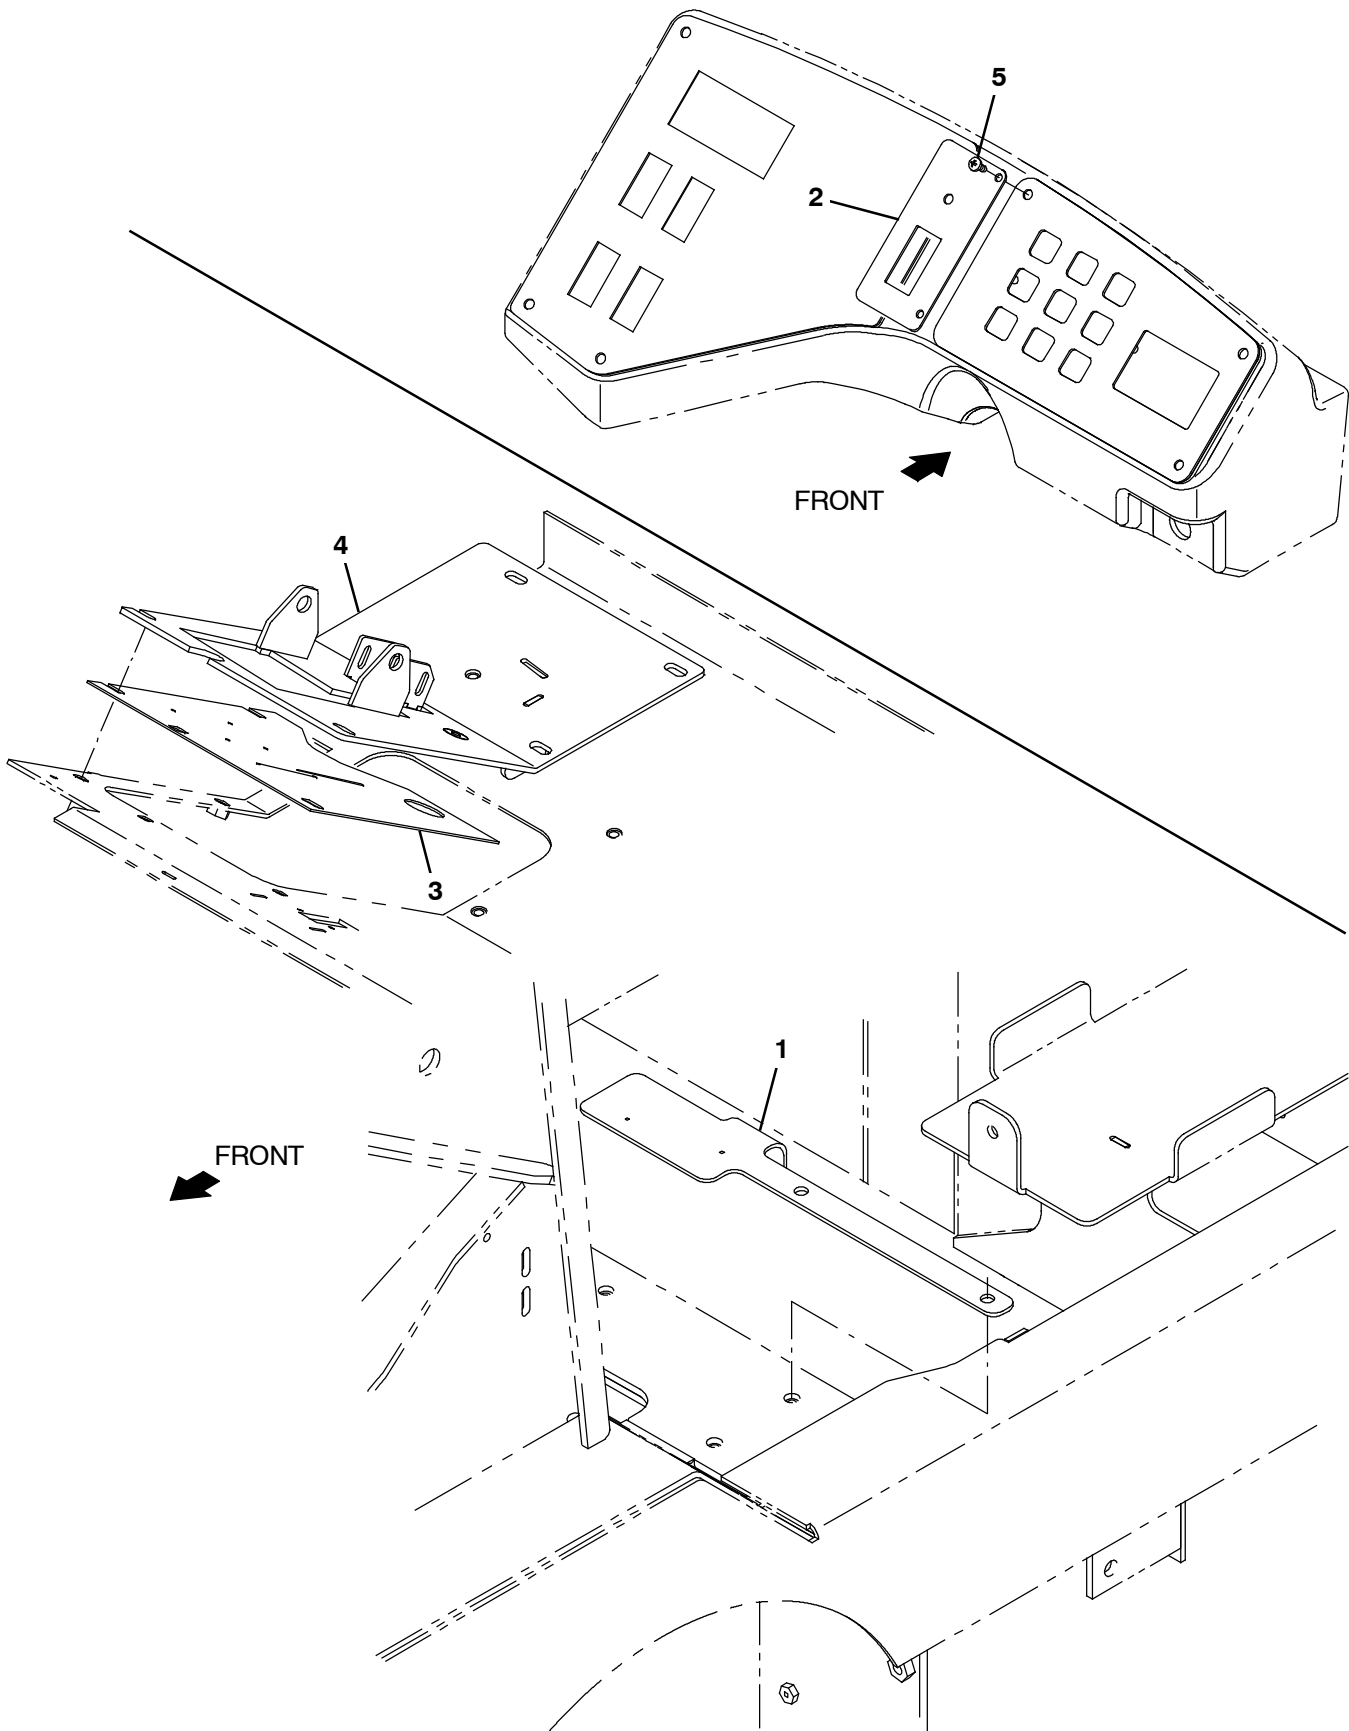


Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501-008140) (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232297	(006501-008140)	Drill Template, S30 Water Tank Sppt	1
2	1232549	(006501-008140)	Template, Drill, Cntrl Console[S30]	1
3	1026688	(006501-008140)	Panel Wldt, Access	1
4	1038360	(006501-008140)	Gasket, Rbr, Pedal, Propel	1
5	1045487	(006501-008140)	Screw, Pan, Phl, M5 X 0.80 X 16, Blk	2

S30 Gas/LPG 9013316 (8- 2019)



Fig. 24 - Wet Side Brush Dust Control Electrical Schematic, S30 XP (No. Amer. Only)

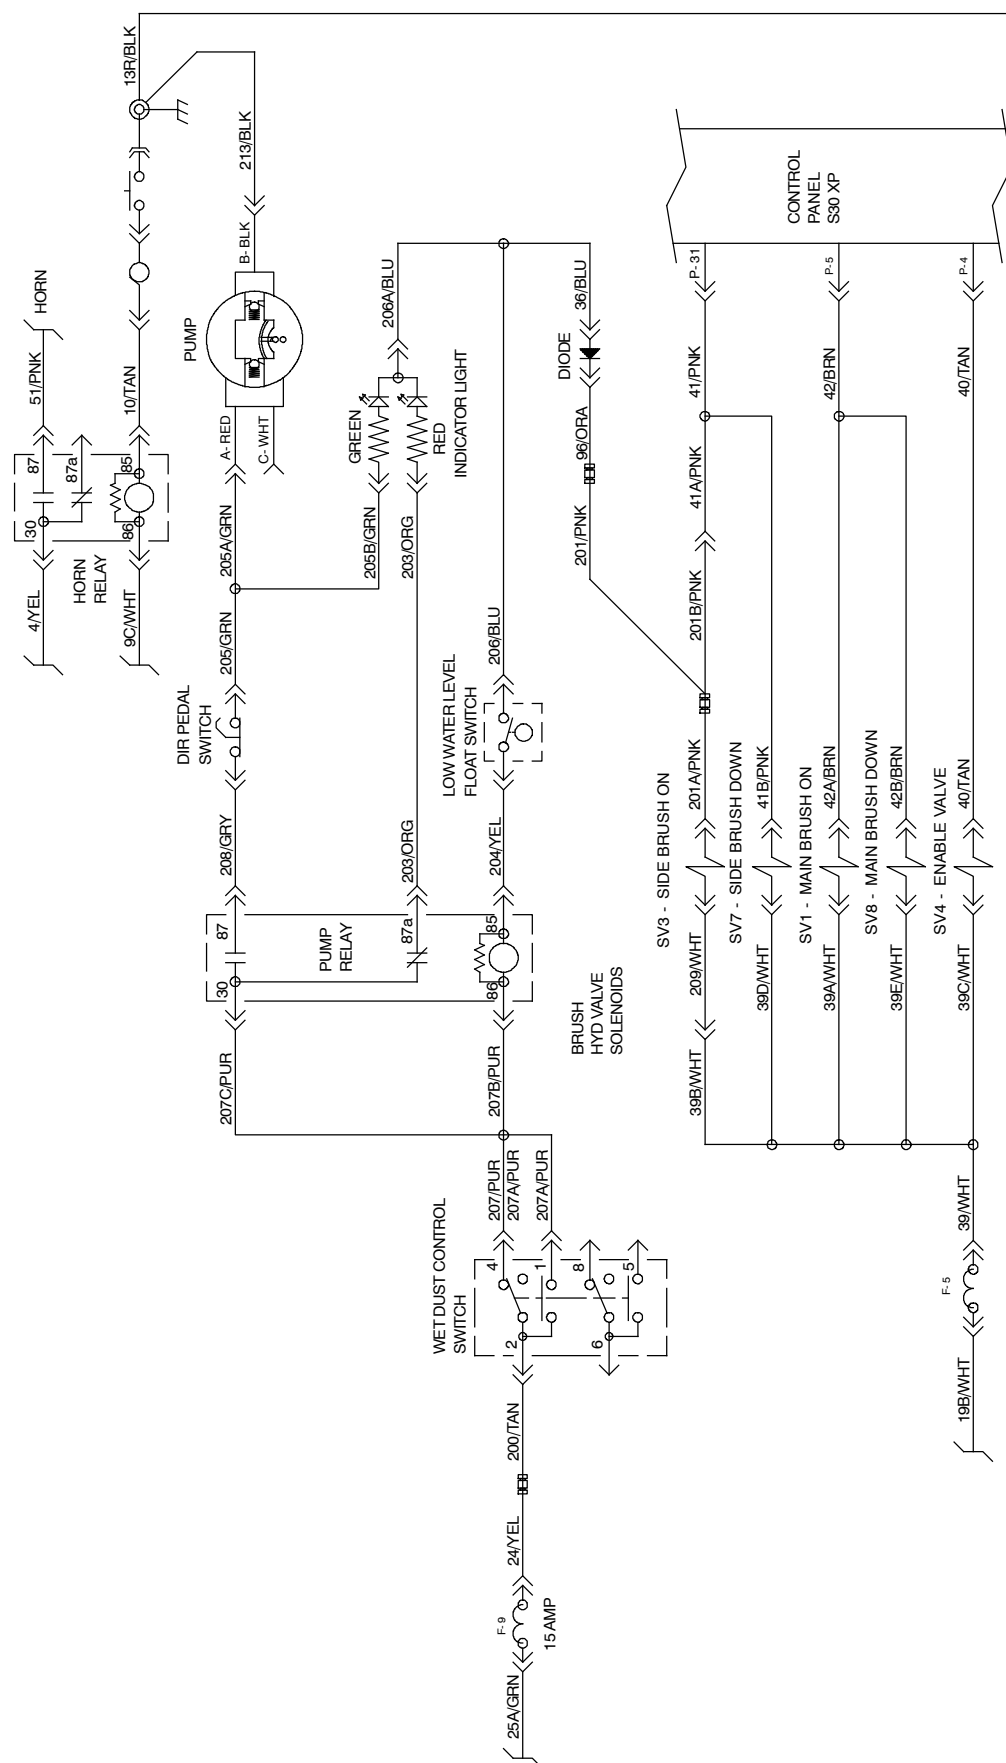


Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit

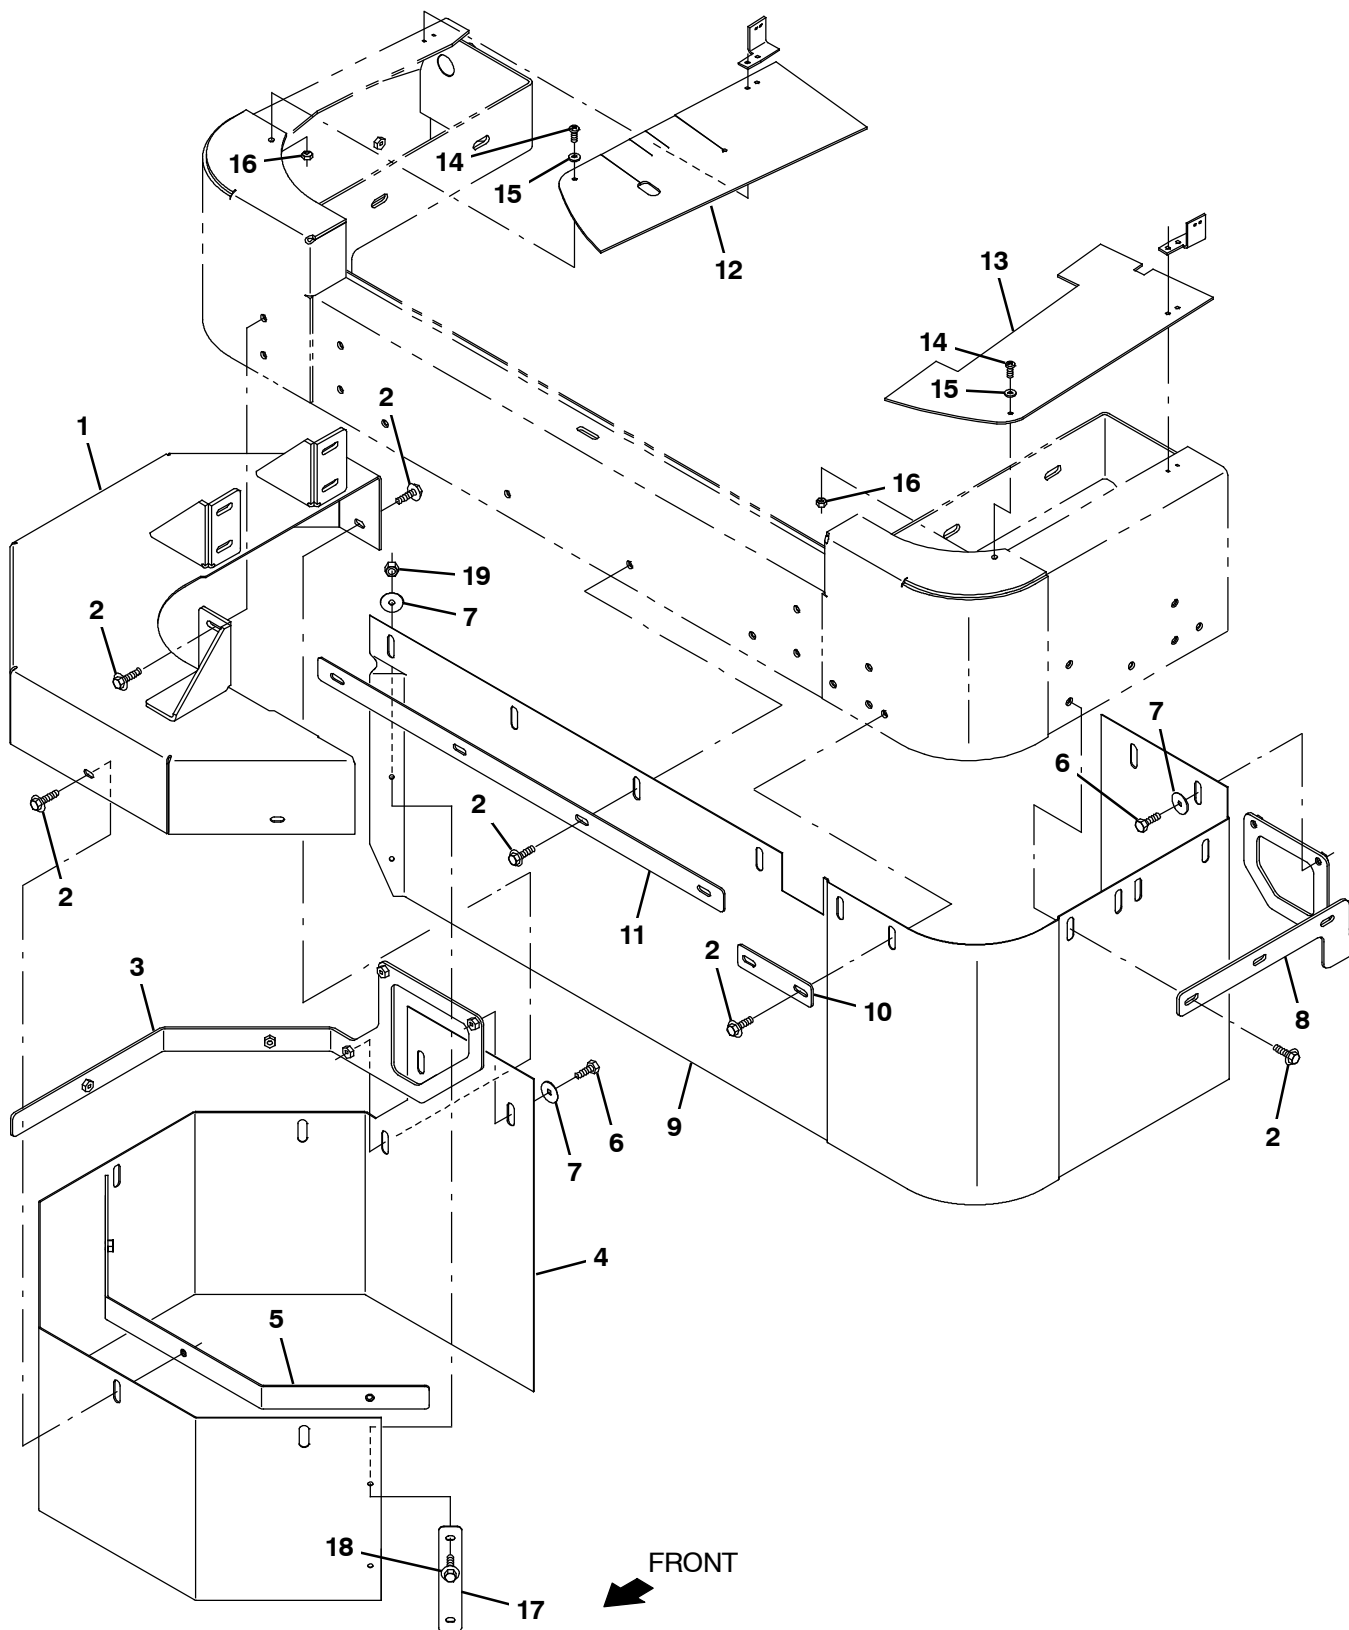


Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9017882	(006501-	) Dust Cntrl, Dry, Single Rh Sb, Ci [S30]	1
▲	1	1076396	(006501-	) Cover Wldt, Rh, Sbdc [S30]	1
▲	2	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	21
▲	3	1076400	(006501-	) Strip, Retainer, Wldt, Skirt, Rh, Sbdc	1
▲	4	1076408	(006501-	) Skirt, Side Shroud, Sbdc [S30]	1
▲	5	1076402	(006501-	) Strip, Retainer, Wldt, Sbdc [S30]	1
▲	6	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	7	30013	(006501-	) Washer, Flat, 0.31, Fendr	6
▲	8	1076406	(006501-	) Strip, Retainer, Wldt, Skirt, Lh, Sbdc	1
▲	9	1076407	(006501-	) Skirt, Lh, Single Sbdc [S30]	1
▲	10	1076404	(006501-	) Strip, Retainer, Lh, Skirt, Sbdc	1
▲	11	1076403	(006501-	) Strip, Retainer, Front, Sbdc	1
▲	12	1076411	(006501-	) Seal, Upper, Rh, Sbdc [S30]	1
▲	13	1076412	(006501-	) Seal, Upper, Lh, Sbdc [S30]	1
▲	14	09164	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 20, 4.8	2
▲	15	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	16	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
▲	17	1076292	(006501-	) Plate, Support, Skirt Sbdc	1
▲	18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
▲	19	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2

Fig. 26 - Dual Side Brush Dust Control Skirt Kit

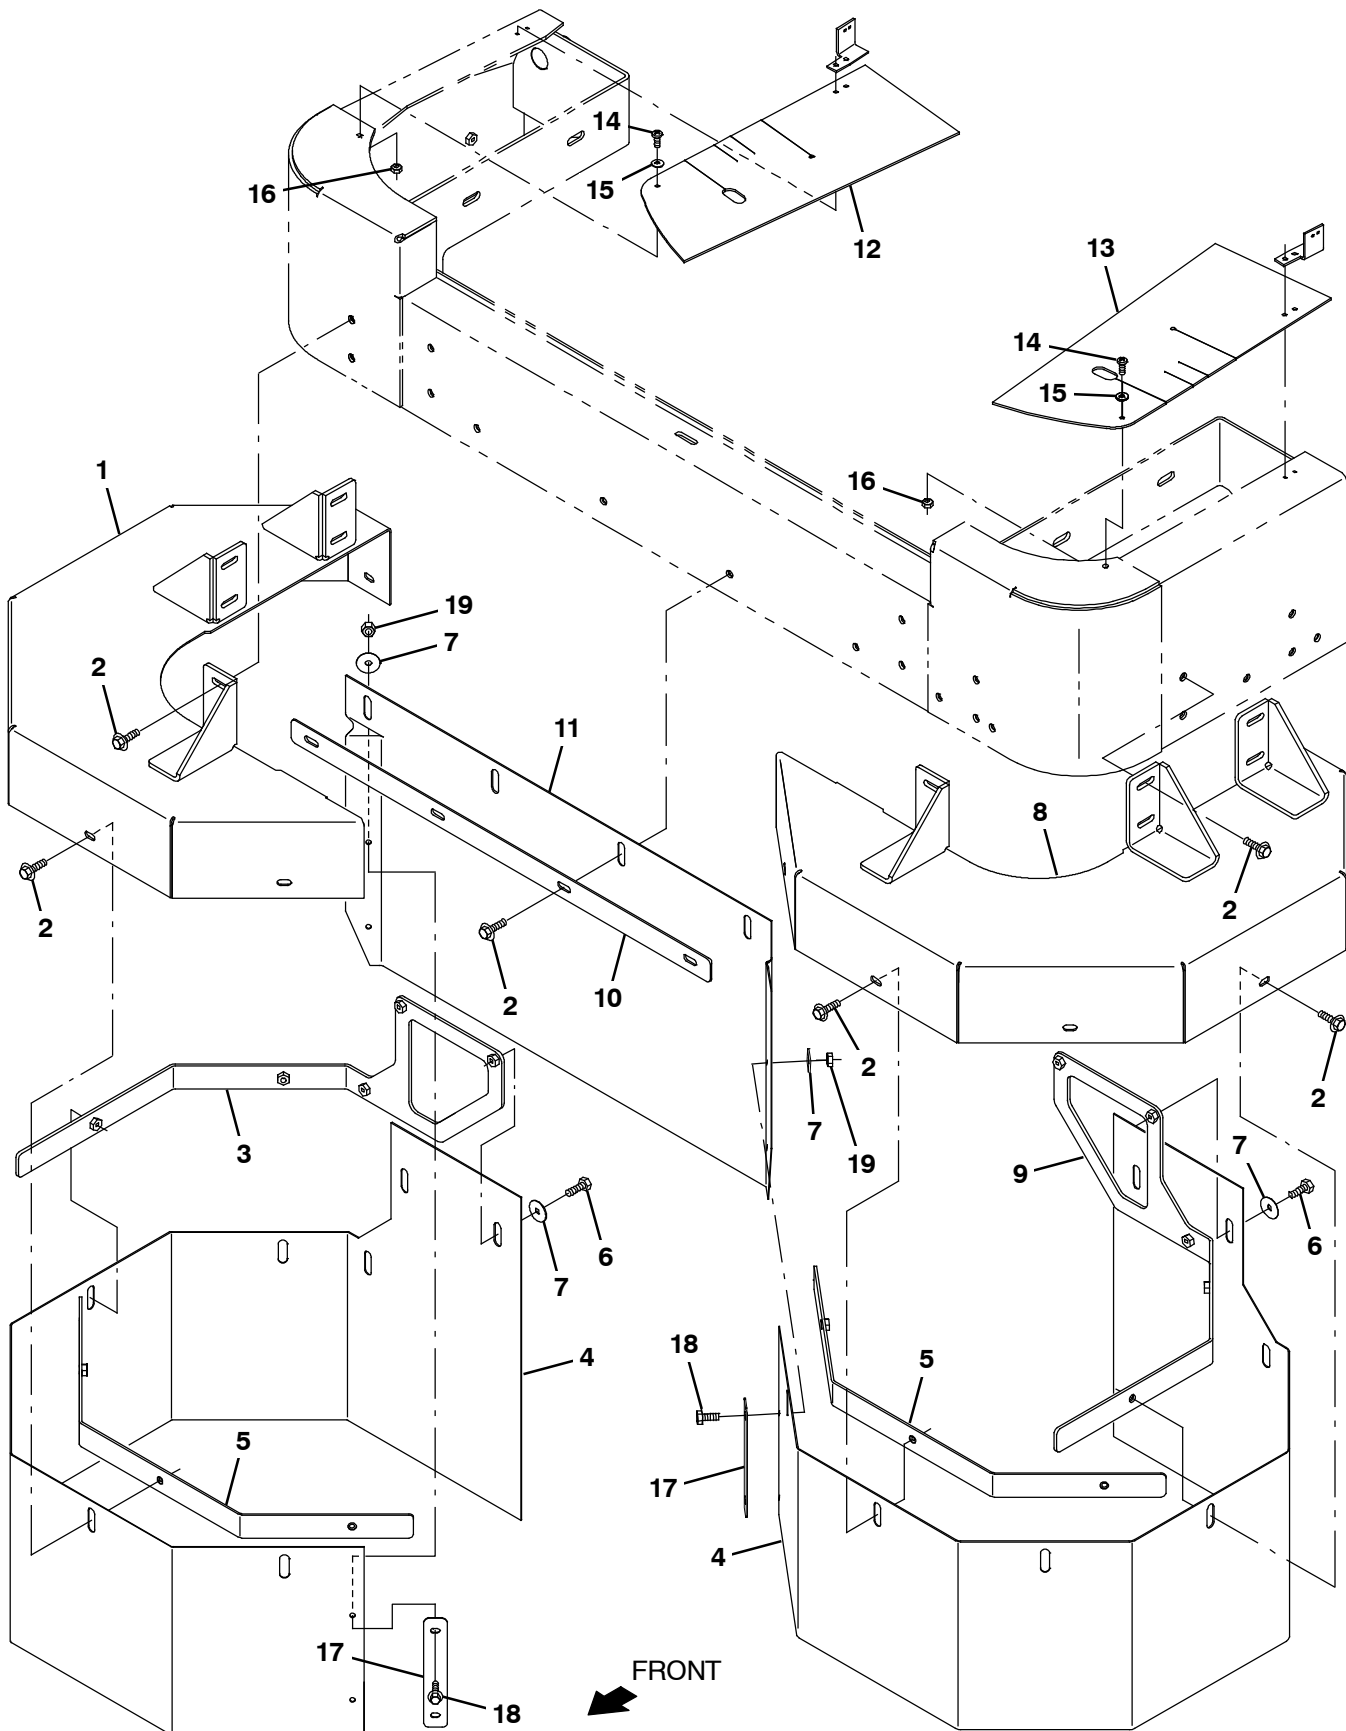


Fig. 26 - Dual Side Brush Dust Control Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9017883	(006501-	) Dust Cntrl, Dry, Dual Sb, Ci [S30]	1
▲	1	1076396	(006501-	) Cover Wldt, Rh, Sbdc [S30]	1
▲	2	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	28
▲	3	1076400	(006501-	) Strip, Retainer, Wldt, Skirt, Rh, Sbdc	1
▲	4	1076408	(006501-	) Skirt, Side Shroud, Sbdc [S30]	2
▲	5	1076402	(006501-	) Strip, Retainer, Wldt, Sbdc [S30]	2
▲	6	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	7	30013	(006501-	) Washer, Flat, 0.31, Fendr	6
▲	8	1076398	(006501-	) Cover Wldt, Lh, Sbdc [S30]	1
▲	9	1076410	(006501-	) Strip, Retainer, Wldt, Skirt, Lh, Sbdc	1
▲	10	1076403	(006501-	) Strip, Retainer, Front, Sbdc	1
▲	11	1076413	(006501-	) Skirt, Front, Dual Sbdc [S30]	1
▲	12	1076411	(006501-	) Seal, Upper, Rh, Sbdc [S30]	1
▲	13	1076412	(006501-	) Seal, Upper, Lh, Sbdc [S30]	1
▲	14	09164	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 20, 4.8	2
▲	15	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	16	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
▲	17	1076292	(006501-	) Plate, Support, Skirt Sbdc	2
▲	18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
▲	19	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4

Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)

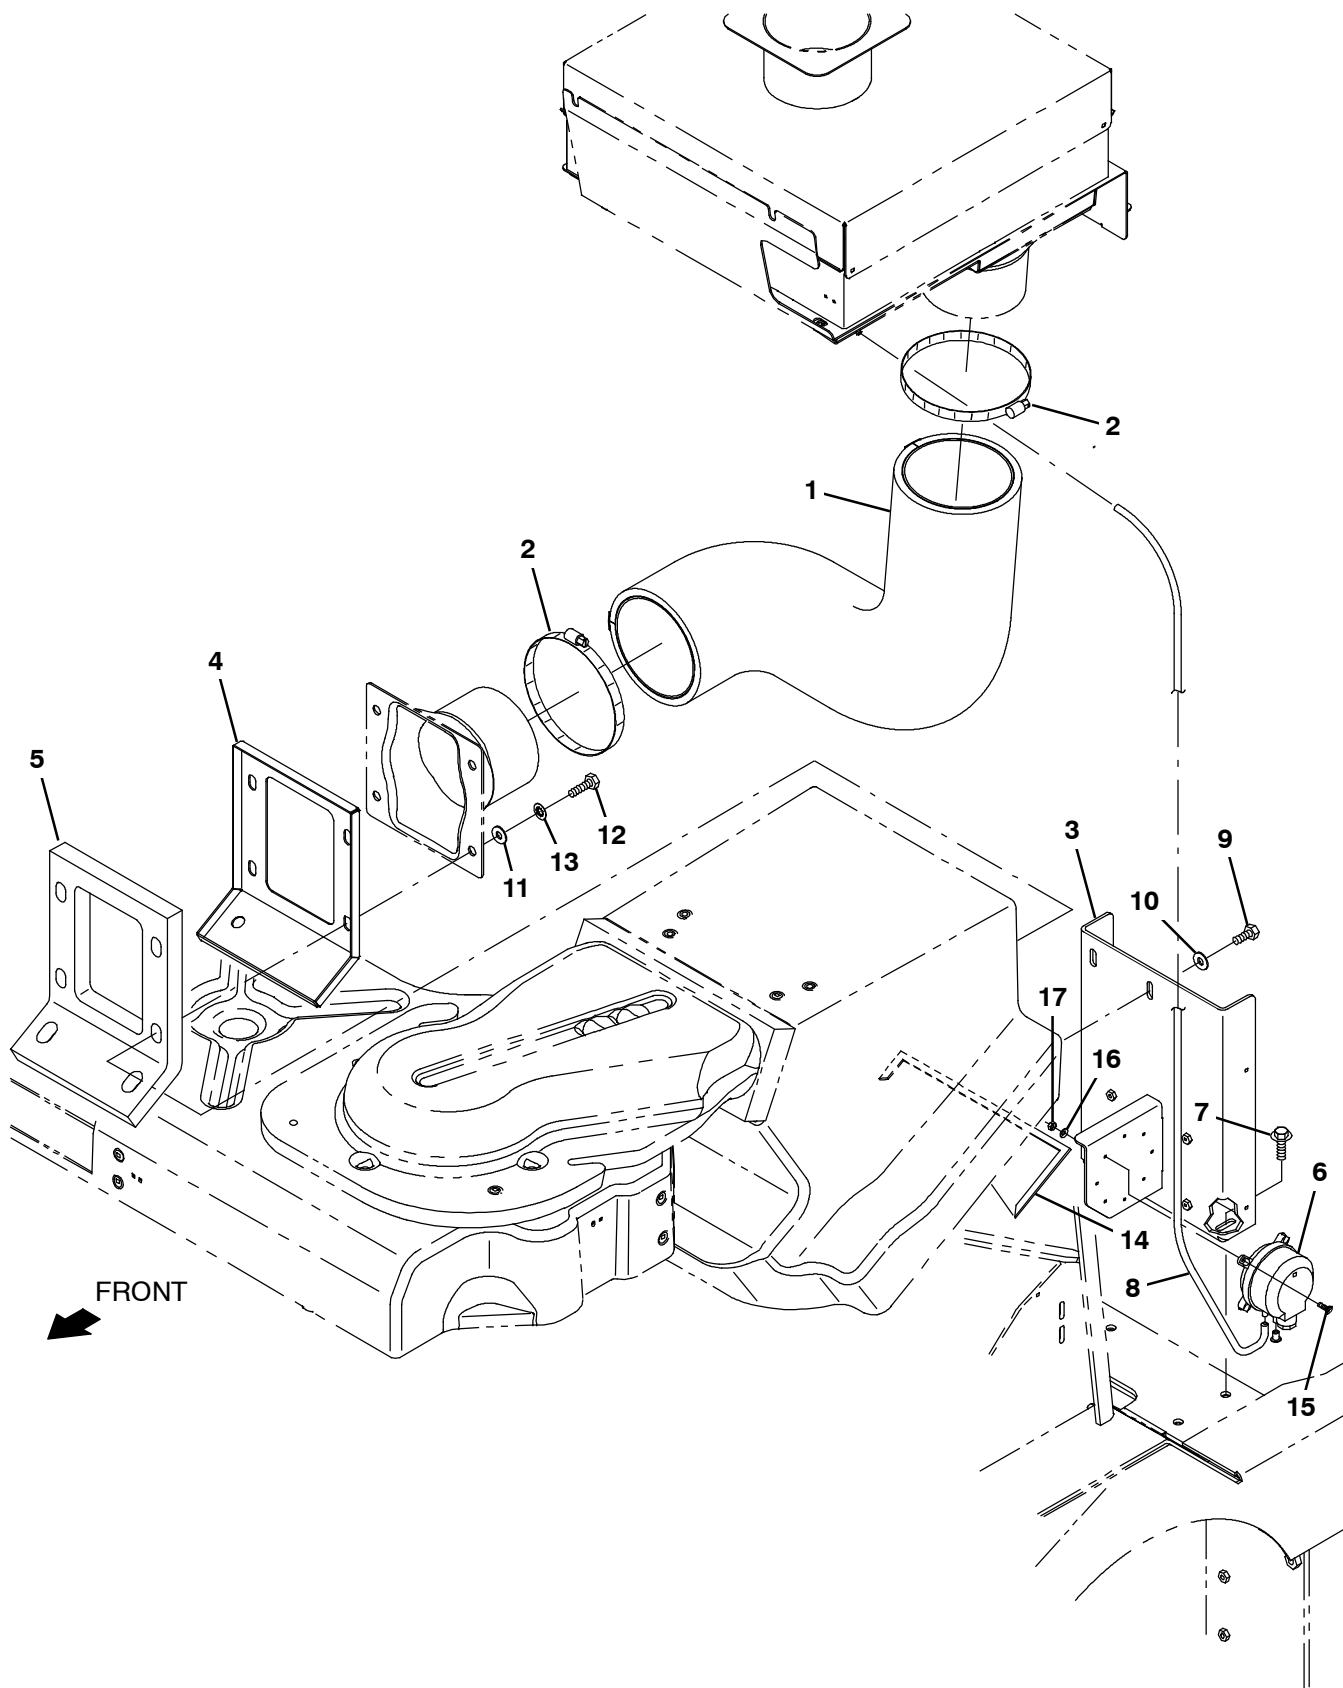


Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1042831	(006501-	) Hose, Exhaust, Vacuum, 5.0id, 40.0l	1
2	49891	(006501-	) Clamp, Hose, Wormdrive, 5.56- 6.50d, .56w	2
3	1236127	(006501-	) Bracket Wldt, Fan Mtg, Press Sw Mtg	1
4	1240478	(006501-	) Bracket, Seal, Flange, Vac	1
5	1240476	(006501-	) Seal, Flange, Rbr, Foam, Adh, 1.0th	1
6	1076268	(006501-	) Switch, Press, Adj [.80"- 4.0" Water]	1
7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
8	1031576	(006501-	) Hose, Afmkt, Vacuum, 0.16id, 08ft	1
9	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	2
10	32491	(006501-	) Washer, Flat, 0.31, Std	2
11	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	5
12	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	5
13	32984	(006501-	) Washer, Lock, Int, 0.31	5
14	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
15	24265	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2
16	19065	(006501-	) Washer, Flat, 0.19b 0.44d .05, Pl, 08	2
17	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2

Fig. 28 - HEPA Filter Box Group (No. Amer. Only)

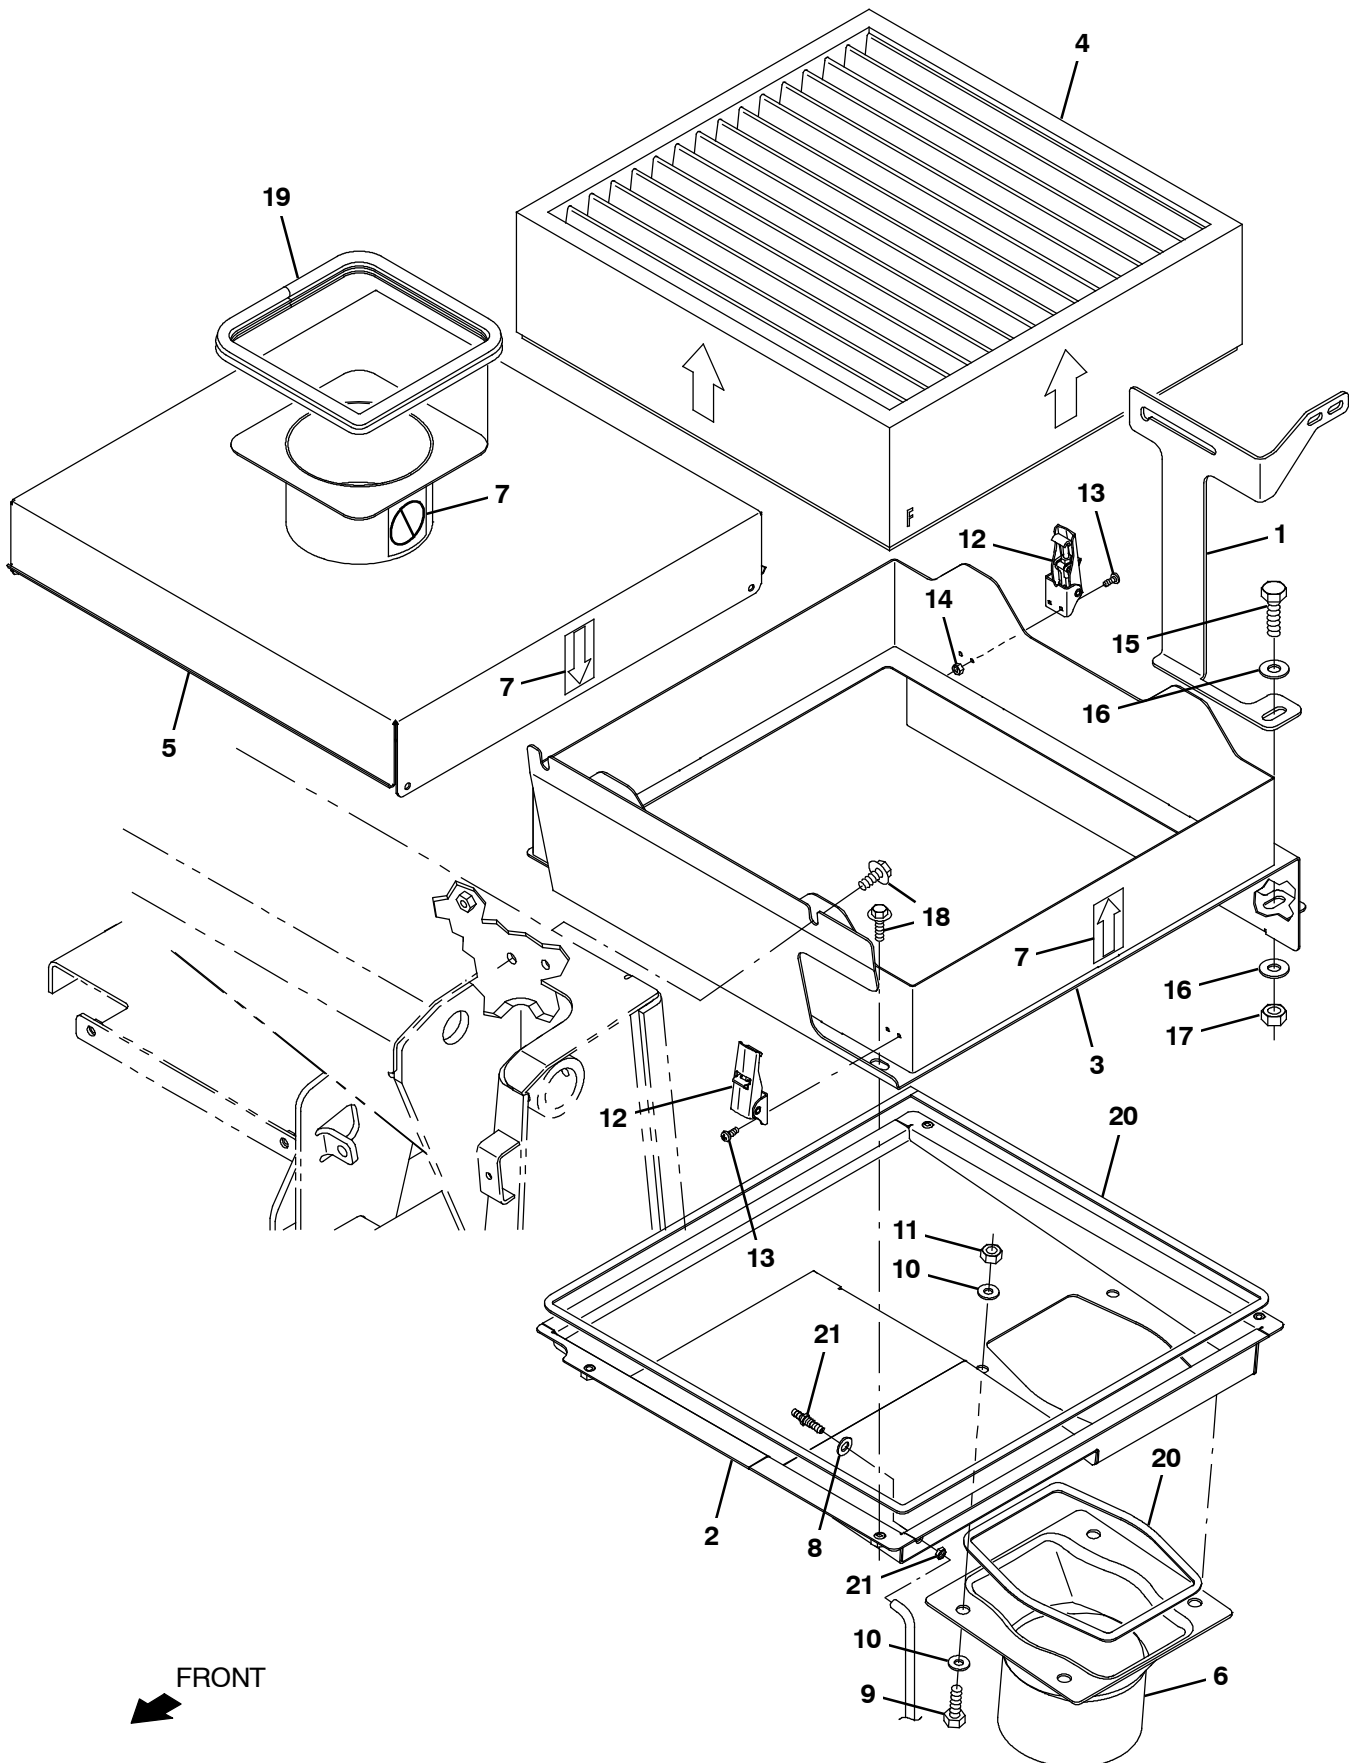


Fig. 28 - HEPA Filter Box Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1235597	(006501-	) Bracket, Sppt, Prop Rod, [Gen II S30]	1
2	1232268	(006501-	) Diverter Wldt, Fltr, Hepa [Gen II S30]	1
3	1232173	(006501-	) Bracket Wldt, Fltr Tray, Hepa [Gen II]	1
4	315396	(006501- 008626	) Element, Filter, Hepa, 25.0h 13.5w	1
4	1232166	(008627-	) Element, Fltr, Hepa, 18 X 17 X 5 [S30]	1
5	1234043	(006501-	) Cover Wldt, Hepa, [Gen II - S30]	1
6	1031122	(006501-	) Duct, Outlet, Vacuum	1
7	1237915	(006501-	) Label Set, Fltr, Hepa [S20&S30]	1
8	43454	(006501-	) Washer, Flat, 0.34b 0.69d .06, Nyl	1
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	4
10	32490	(006501-	) Washer, Flat, 0.25, Std	8
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
12	384418	(006501-	) Latch, Door [Southco 91- 562- 07]	2
13	49697	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Ss	4
14	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	4
15	03192	(006501-	) Screw, Hex, M10 X 1.50 X 30, 8.8	1
16	32492	(006501-	) Washer, Flat, 0.38, Std	2
17	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
18	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	6
19	1063864	(006501-	) Seal, Afmkt, Bulb, 90, 0.38, 03ft	1
20	1020287	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 12ft	1
21	39923	(006501-	) Fitting, Brs, Str, Bm03/Bm03, Bh	1

Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)



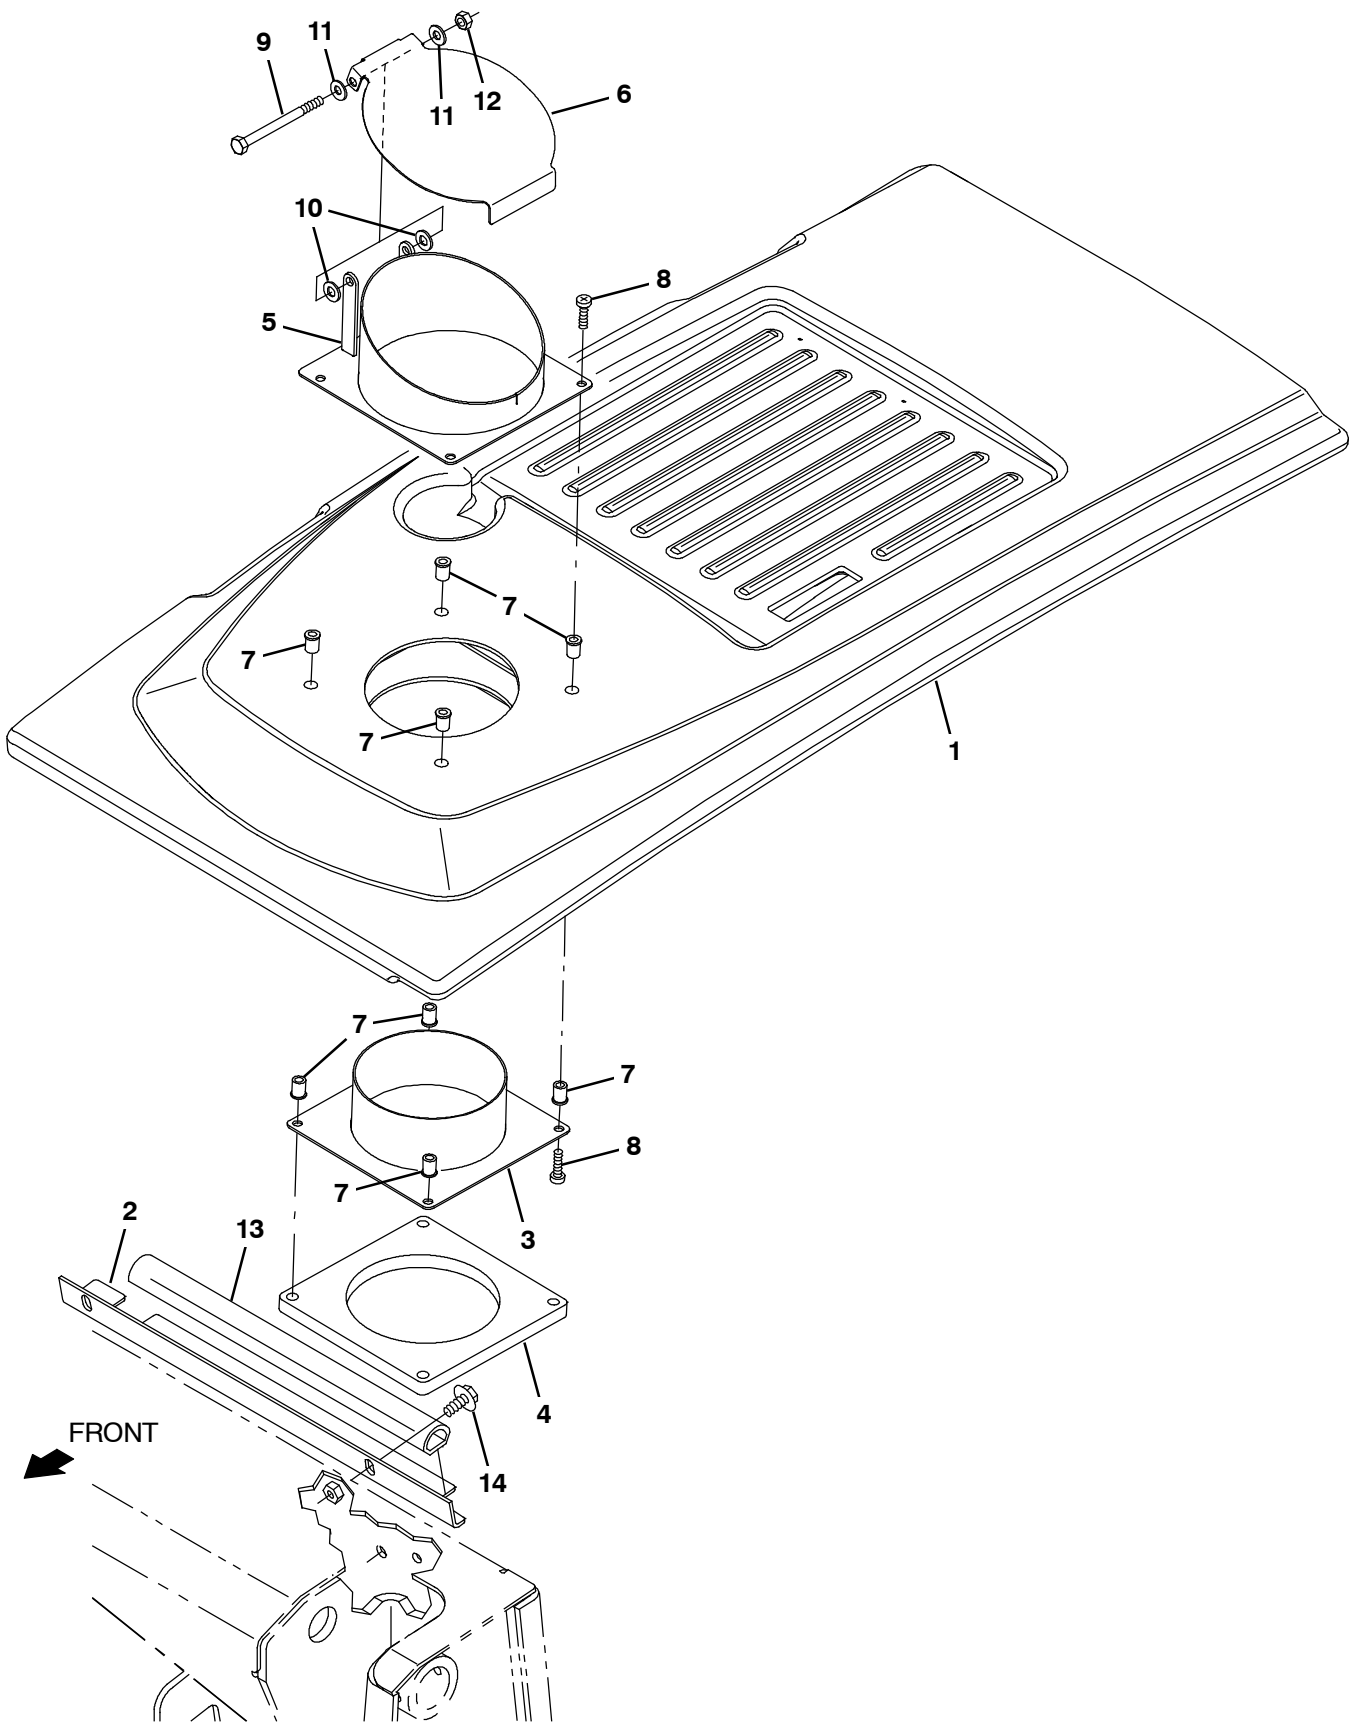


Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1239318	(006501-	) Cover, Rm- Cptl, Trimmed, Re- Work	1
2	1235750	(006501-	) Bracket, Angle, Lintel	1
3	1234409	(006501-	) Bracket Wldt, Tube Outlet [Gen li S30]	1
4	1234899	(006501-	) Gasket, Foam Seal, Hepa Exhaust [S30]	1
5	1235630	(006501-	) Bracket Wldt, Exhaust, Hepa [Gen li S30]	1
6	1235628	(006501-	) Flap, Outlet, Hepa, [Gen li S30]	1
7	314050	(006501-	) Nut, Isolator, 10- 32, .015- .192	8
8	140841	(006501-	) Screw, Pan, Phl, 10- 32 X 0.62, Ss	8
9	48419	(006501-	) Screw, Hex, .25- 20 X 3.50, G5	1
10	43454	(006501-	) Washer, Flat, 0.34b 0.69d .06, Nyl	2
11	01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	2
12	32981	(006501-	) Nut, Hex, Lock, .25- 20, NI	1
13	1015273	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft	1
14	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2


Fig. 30 - HEPA Filter Electrical Group (No. Amer. Only)

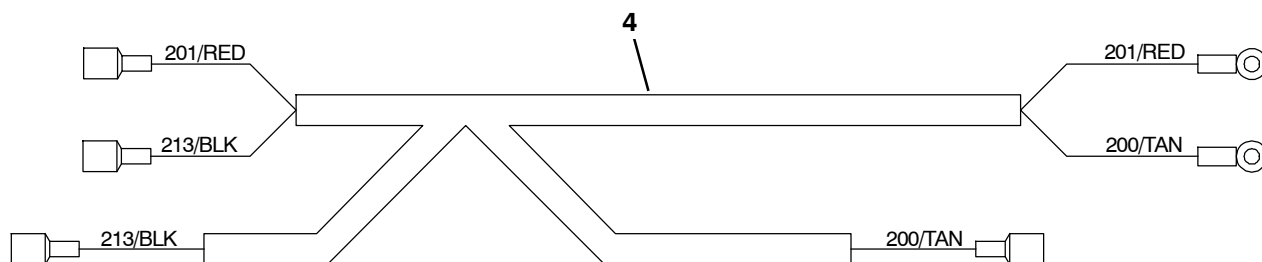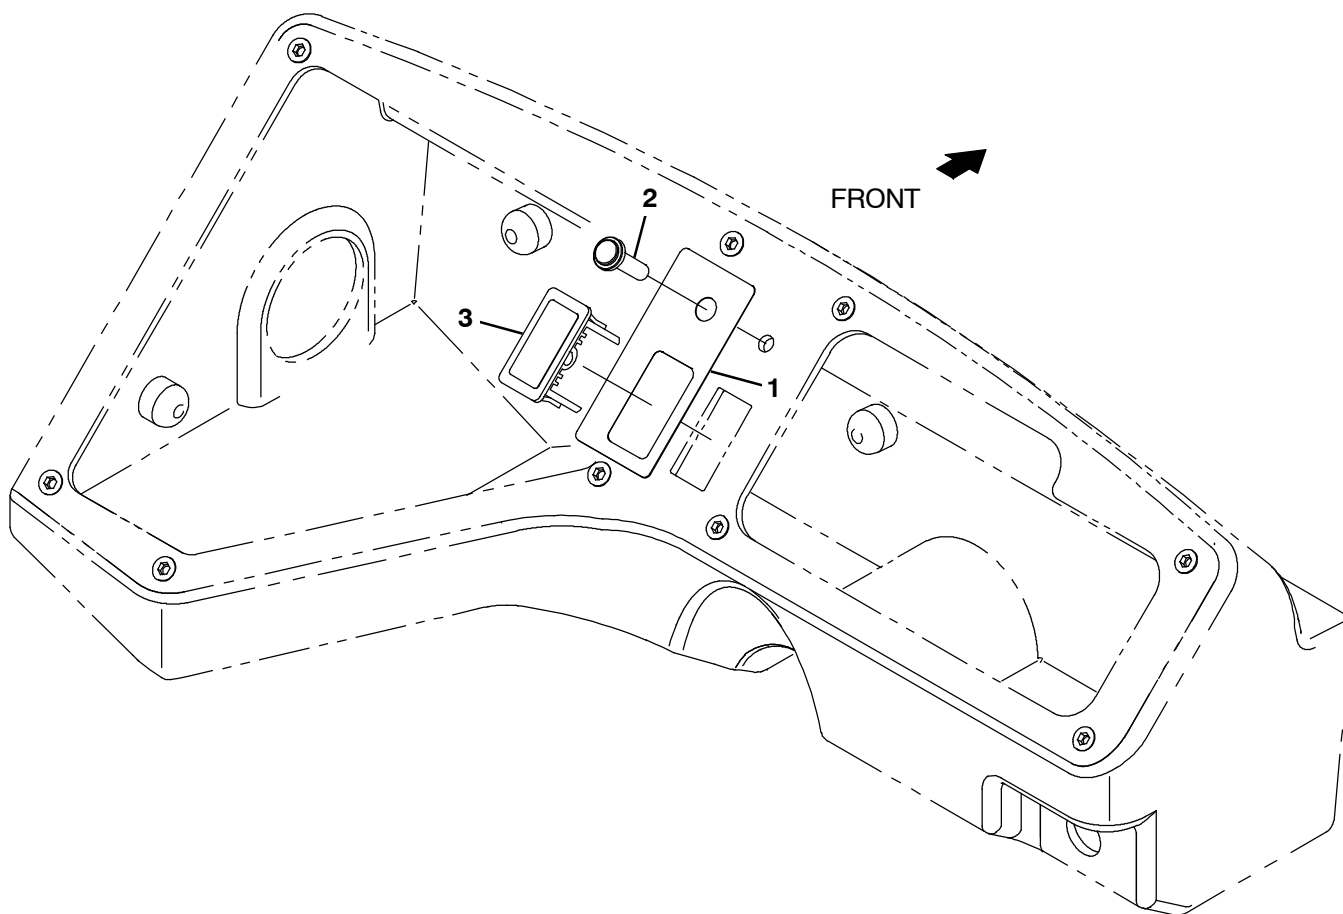

356801

Ref.	Part No.	Serial Number	Description	Qty.
1	1237915	(006501-	) Label Set, Fltr, Hepa [S20&S30]	1
2	1232342	(006501-	) Light, Led, .312d, 12 Vdc [Tri- Color]	1
3	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	1
4	1239358	(006501-	) Harness, Light, Ind, Hepa Filter [S30]	1

Fig. 31 - Fire Extinguisher Kit

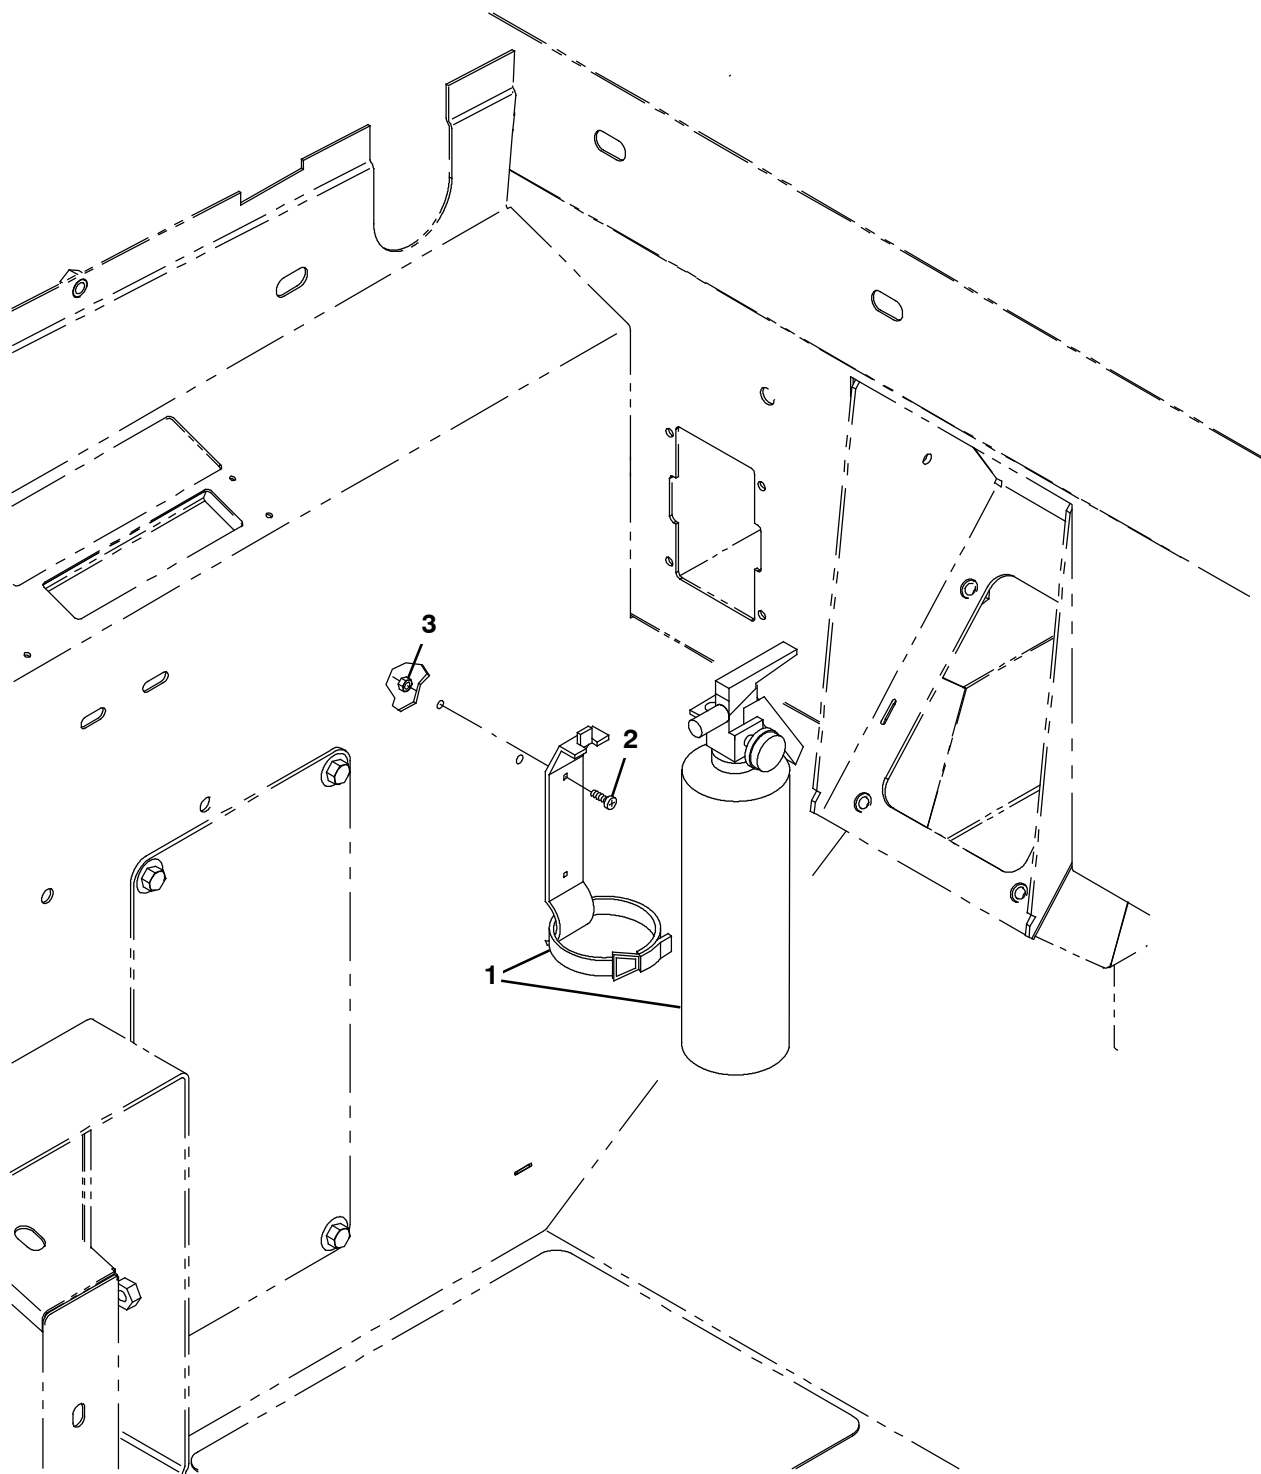

354747

Ref.	Part No.	Serial Number	Description	Qty.
▽	9003933	(006501-	) Extinguisher Kit, Fire, Ci [S30]	1
▲	1 25312	(006501-	) Extinguisher, Fire, 2.5 Lb Dry	1
▲	2 06933	(006501-	) Screw, Pan, M5 X 0.80 X 16, 4.8	2
▲	3 06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2

Fig. 32 - Documentation Group (Online Only)

Ref.	Part No.	Serial Number	Description	Qty.
	9004080	(006501-)	Manual, Oprtr [S30, Gas/Lpg EN Na]	1
	9004081	(006501-)	Manual, Oprtr [S30, Gas/Lpg ES Na]	1
	9004082	(006501-)	Manual, Oprtr [S30, Gas/Lpg FR Na]	1
	9004083	(006501-)	Manual, Oprtr [S30, Gas/Lpg JP]	1
	9004643	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Cn]	1
	9004669	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Pt, Br]	1
	9004621	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Cz, Ce]	1
	9004622	(006501-)	Manual, Oprtr [S30 Gas/Lpg, De, Ce]	1
	9004623	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Dk, Ce]	1
	9004624	(006501-)	Manual, Oprtr [S30 Gas/Lpg, En, Ce]	1
	9004625	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Es, Ce]	1
	9004626	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Fi, Ce]	1
	9004627	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Fr, Ce]	1
	9004628	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Gr, Ce]	1
	9004629	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Hu, Ce]	1
	9004630	(006501-)	Manual, Oprtr [S30 Gas/Lpg, It, Ce]	1
	9004631	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Nl, Ce]	1
	9004632	(006501-)	Manual, Oprtr [S30 Gas/Lpg, No, Ce]	1
	9004633	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Pl, Ce]	1
	9004634	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Pt, Ce]	1
	9004635	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Ru, Ce]	1
	9004636	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Se, Ce]	1
	9004637	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Tr, Ce]	1
	9004638	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Ee, Ce]	1
	9004639	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Lv, Ce]	1
	9004640	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Lt, Ce]	1
	9004641	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Sk, Ce]	1
	9004642	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Sl, Ce]	1
	9004729	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Bg, Ce]	1
	9004730	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Ro, Ce]	1
	9011490	(006501-)	Manual, Oprtr [S30 Gas/Lpg, Hr, Ce]	1
	9013316	(006501-)	Manual, Parts [S30, Gas/Lpg En]	1
	9004086	(006501-)	Manual, Service [S30 EN]	1
	372863	(006501-)	Manual, Service, Eng[Gm1.6l Em Cert]	1
	371790	(006501-)	Manual, Service, Eng [Gm1.6l]	1
	9013317	(006501-)	Instr, Use & Care, WallChart [S30] (ONLINE ONLY)	1
	9010635	(006501-)	Manual, Cd- Rom, Engine [Mit 2.0l]	1



To view, print, or download the latest Parts manual, other language Operator manuals, and Use and Care Guides (wall charts) visit:

www.tennantco.com/manual

SECTION 4

Contents	Page
Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260	4- 2
Fig. 2 - Hydraulic Valve Breakdown, 1040091	4- 4
Fig. 3 - Hydraulic Valve Breakdown, 1034671	4- 6
Fig. 4 - AC and Heater Box Breakdown, 1067918	4- 8
Fig. 5 - Hydraulic Motor Breakdown, 1054901	4- 10
Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905	4- 12
Fig. 7 - Seat Breakdown, 9018735	4- 14

Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260

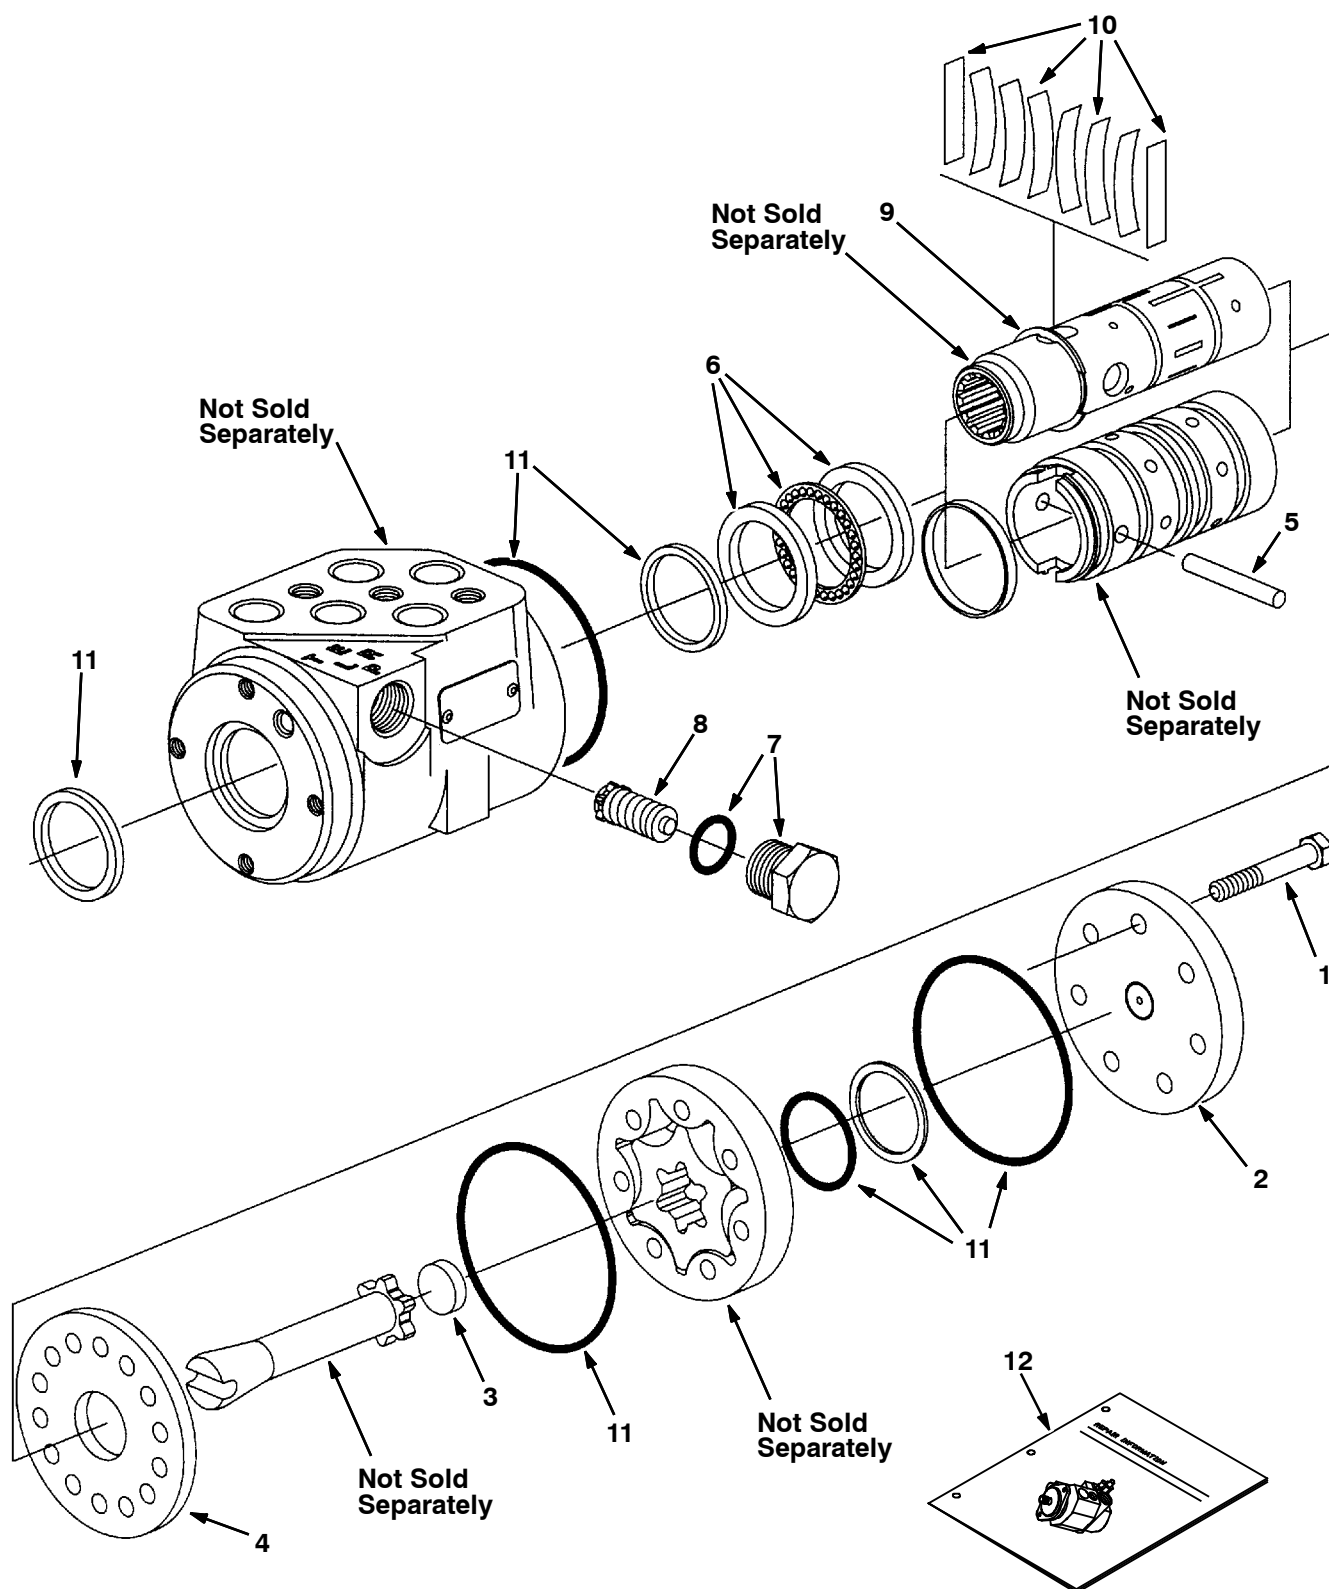


Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1024260	(000000-	) Steer- Control, Hyd05, 06.1 2030	1
▲	1	74183	(000000-	) Screw, Valve, Steering	7
▲	2	74185	(000000-	) Cap, End, Valve, Steering	1
▲	3	74193	(000000-	) Spacer, Valve, Steering	1
▲	4	74222	(000000-	) Plate, Wear, Steering Valve	1
▲	5	74232	(000000-	) Pin, Valve, Steering	1
▲	6	21935	(000000-	) Bearing Kit [CI]	1
▲	7	21933	(000000-	) Plug Assy [CI]	1
▲	8	21934	(000000-	) Valve Assy, Relief [CI]	1
▲	9	74243	(000000-	) Ring, Retainer, Steering Valve	1
▲	10	74196	(000000-	) Spring Kit, Scu [CI]	1
▲	11	74244	(000000-	) Seal Kit, Steering [CI]	1
▲	12	74245	(000000-	) Instr, Valve, Steering, Repair	1

Fig. 2 - Hydraulic Valve Breakdown, 1040091

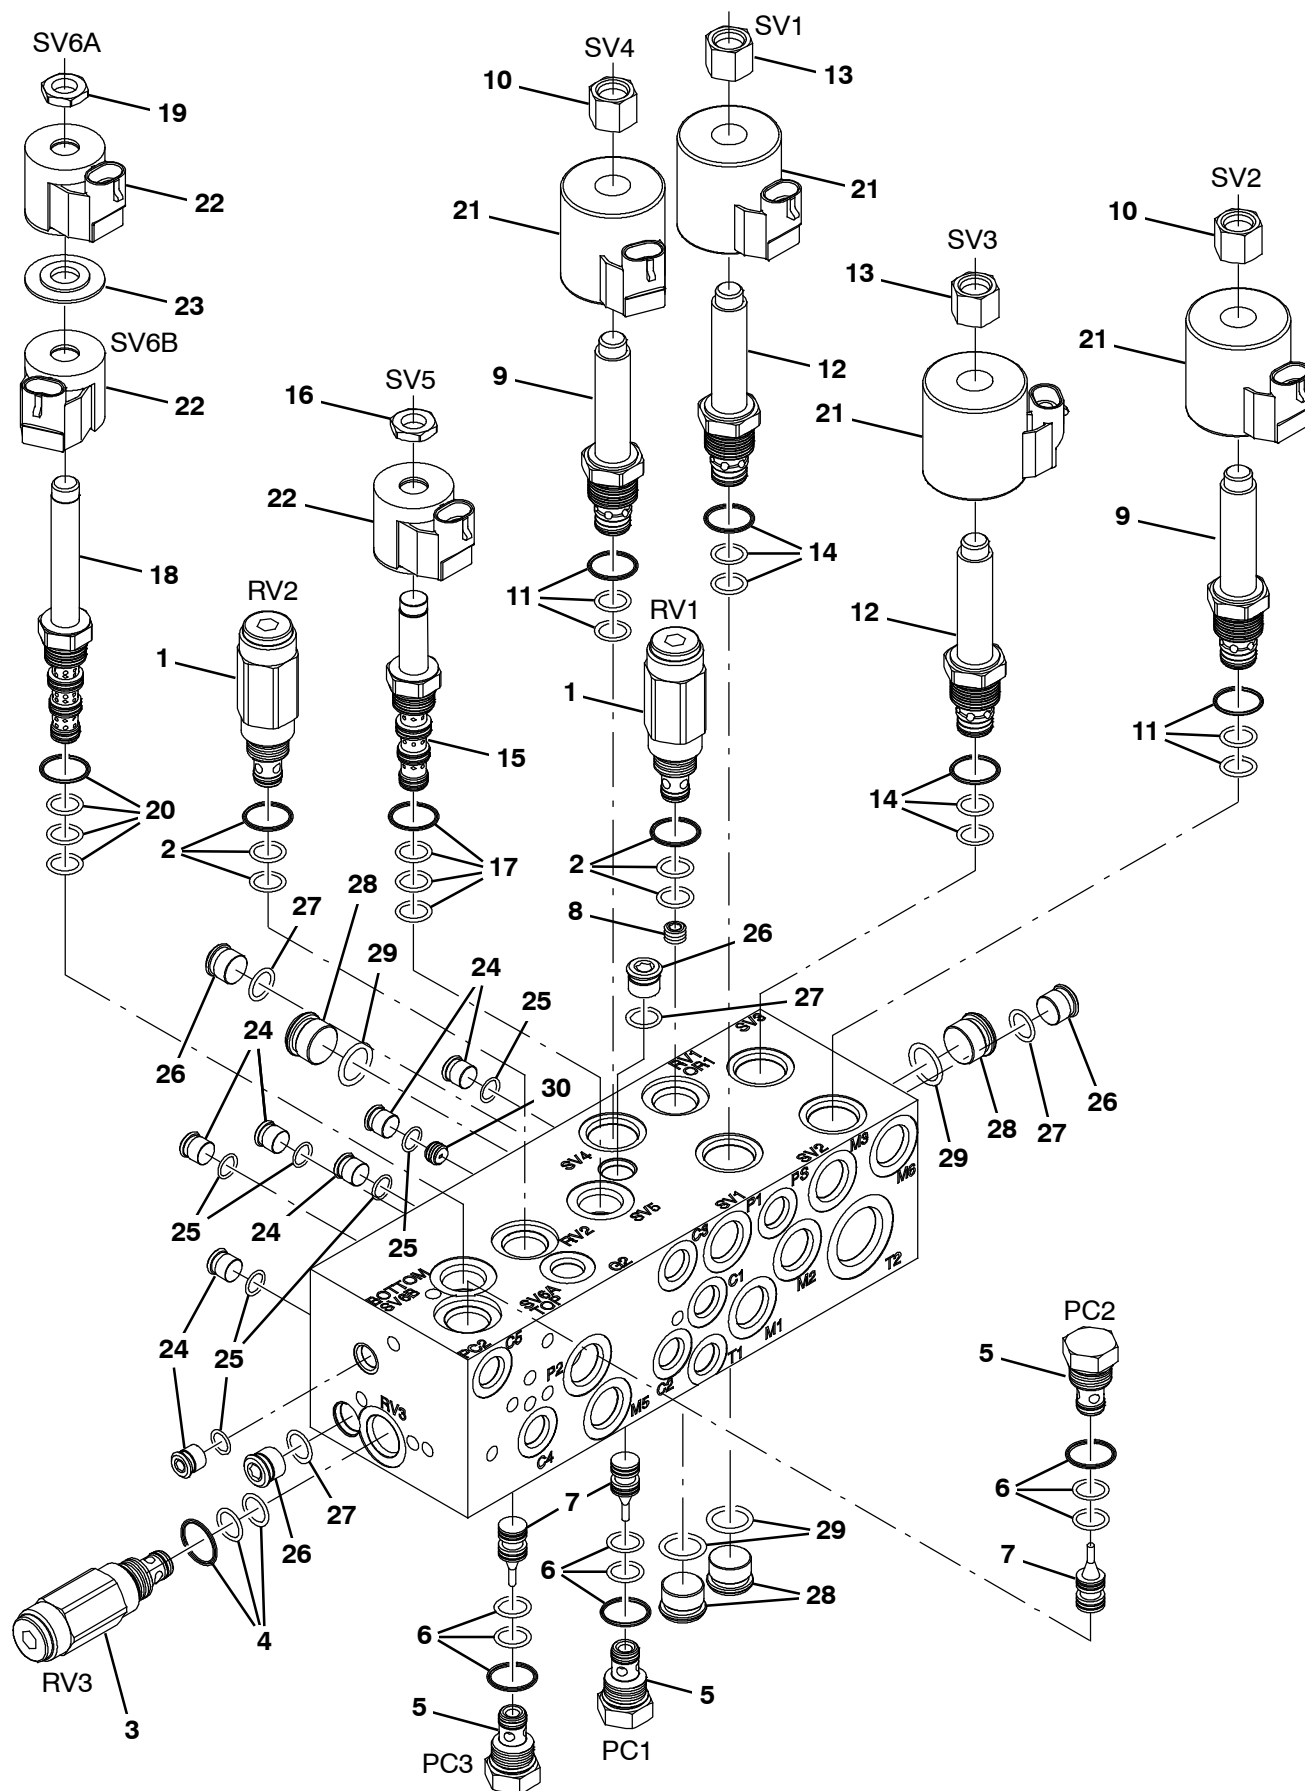


Fig. 2 - Hydraulic Valve Breakdown, 1040091

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1040091	(000000-	) Valve, Hyd, Solenoid, 12vdc [06s]	1
▲▽	1	373691	(000000-	) Valve, Relief	2
▲▲	2	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	3	373692	(000000-	) Valve, Relief	1
▲▲	4	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	5	373656	(000000-	) Valve, Check	3
▲▲	6	373647	(000000-	) Seal Kit, Cartridge	1
▲	7	373658	(000000-	) Spool, Pilot, Hyd	3
▲	8	373694	(000000-	) Plug, Orifice, Valve, Hyd, .040	1
▲▽	9	373663	(000000-	) Valve, Stem, No	2
▲▲	10	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	11	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	12	373690	(000000-	) Valve, Stem, No	2
▲▲	13	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	14	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	15	373657	(000000-	) Stem, Valve, Hyd [4w2p]	1
▲▲	16	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	17	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	18	373637	(000000-	) Valve, Cntrl, Solenoid	1
▲▲	19	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	20	373647	(000000-	) Seal Kit, Cartridge	1
▲	21	373642	(000000-	) Solenoid, #10, 12vdc	4
▲	22	373640	(000000-	) Solenoid, #8, 12vdc	3
▲	23	373639	(000000-	) Spacer, Coil, #8	1
▲▽	24	74098	(000000-	) Fitting, Hyd, Plug, Om04	7
▲▲	25	77003	(000000-	) Seal, Org, .072 X 00.35id #04	1
▲▽	26	13904	(000000-	) Fitting, Plug, Org, #6, Valve [Cec]	4
▲▲	27	77005	(000000-	) Seal, Org, .078 X 00.47id #06	1
▲▽	28	13907	(000000-	) Fitting, Hyd, Plug, Om08	4
▲▲	29	77006	(000000-	) Seal, Org, .087 X 00.64id #08	1
▲	30	373665	(000000-	) Plug, Orifice, Valve, Hyd, .046	1

Fig. 3 - Hydraulic Valve Breakdown, 1034671

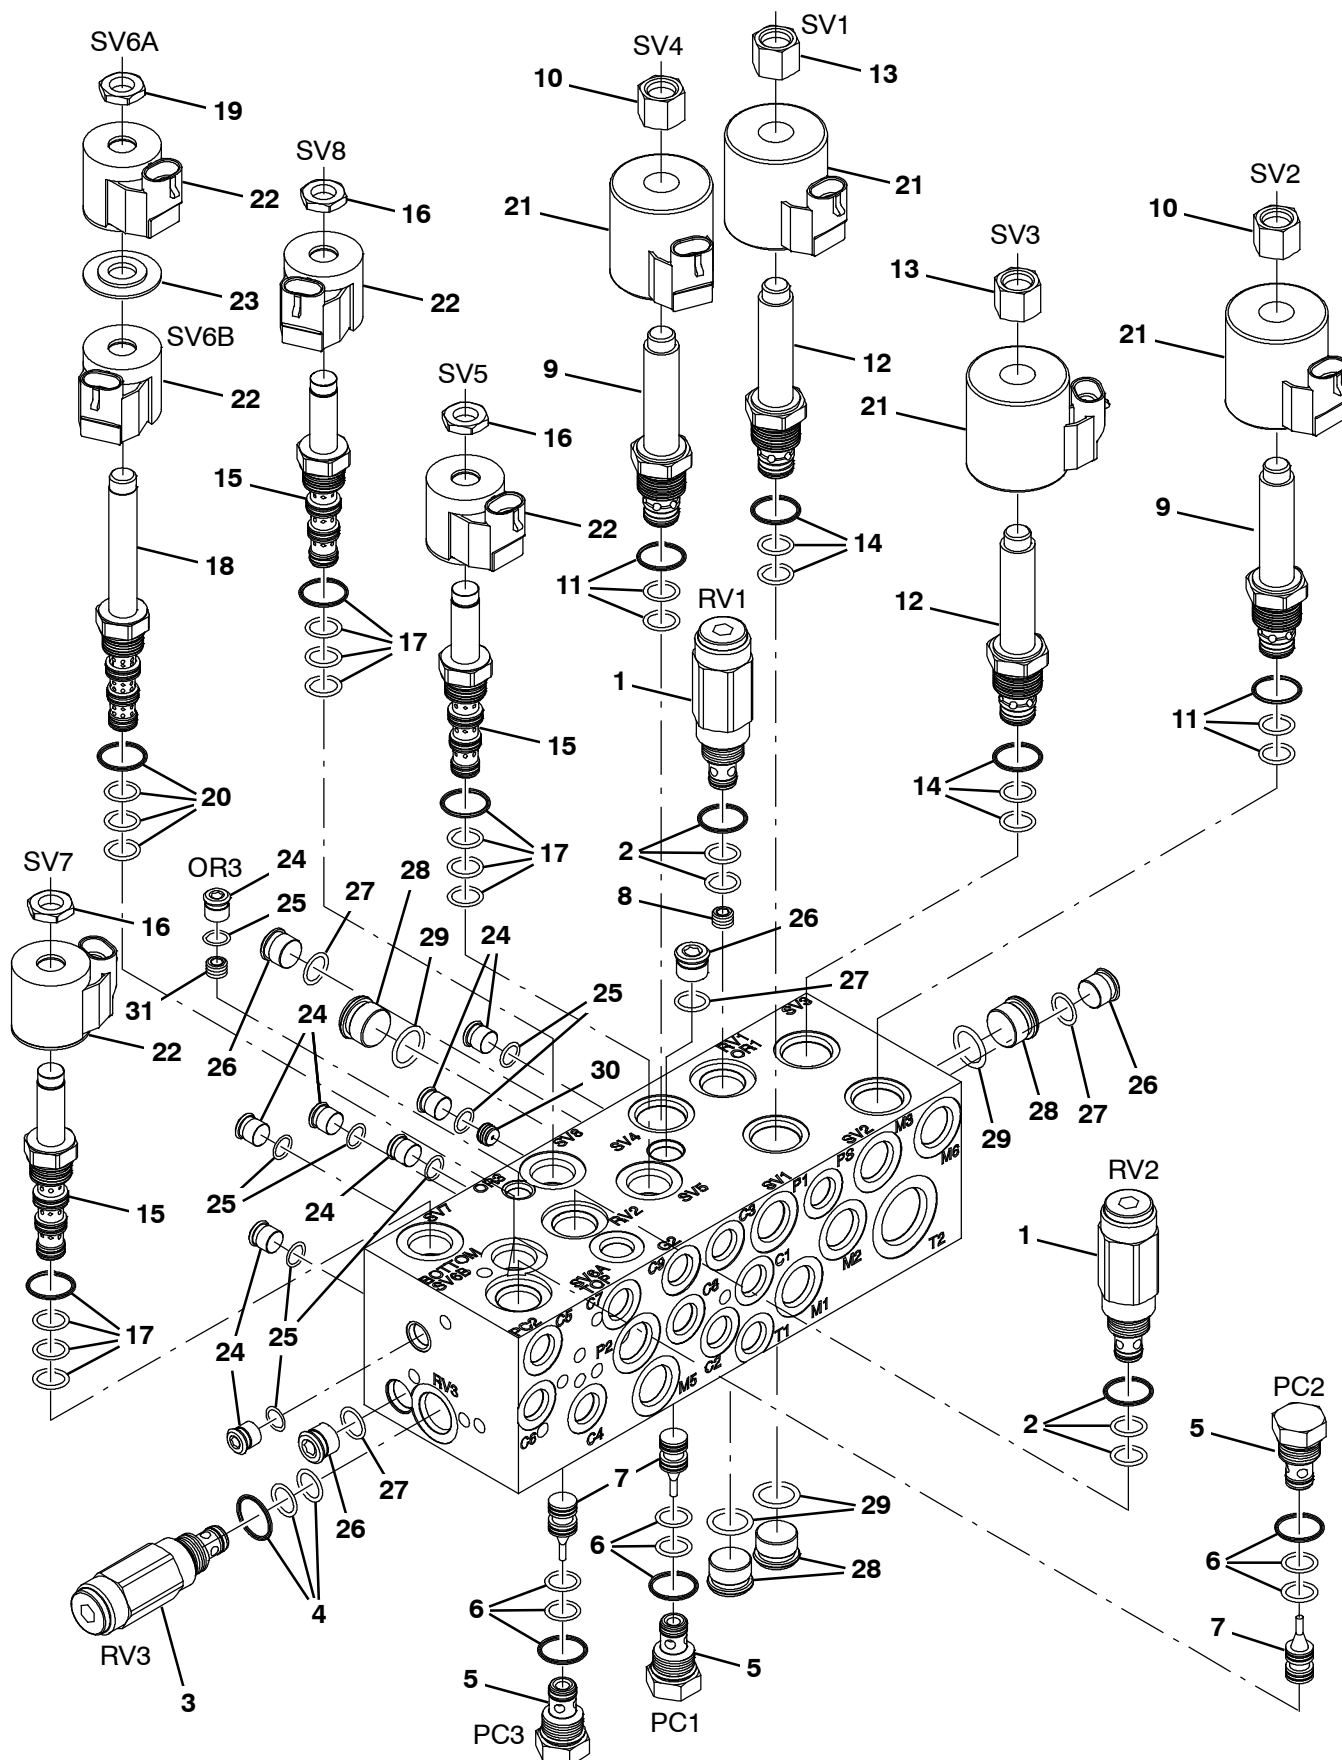


Fig. 3 - Hydraulic Valve Breakdown, 1034671

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1034671	(000000-	) Valve, Hyd, Solenoid, 12vdc [06s]	1
▲▽	1	373691	(000000-	) Valve, Relief	2
▲▲	2	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	3	373692	(000000-	) Valve, Relief	1
▲▲	4	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	5	373656	(000000-	) Valve, Check	3
▲▲	6	373647	(000000-	) Seal Kit, Cartridge	1
▲	7	373658	(000000-	) Spool, Pilot, Hyd	3
▲	8	373694	(000000-	) Plug, Orifice, Valve, Hyd, .040	1
▲▽	9	373663	(000000-	) Valve, Stem, No	2
▲▲	10	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	11	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	12	373690	(000000-	) Valve, Stem, No	2
▲▲	13	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	14	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	15	373657	(000000-	) Stem, Valve, Hyd [4w2p]	3
▲▲	16	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	17	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	18	373637	(000000-	) Valve, Cntrl, Solenoid	1
▲▲	19	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	20	373647	(000000-	) Seal Kit, Cartridge	1
▲	21	373642	(000000-	) Solenoid, #10, 12vdc	4
▲	22	373640	(000000-	) Solenoid, #8, 12vdc	5
▲	23	373639	(000000-	) Spacer, Coil, #8	1
▲▽	24	74098	(000000-	) Fitting, Hyd, Plug, Om04	8
▲▲	25	77003	(000000-	) Seal, Org, .072 X 00.35id #04	1
▲▽	26	13904	(000000-	) Fitting, Plug, Org, #6, Valve [Cec]	4
▲▲	27	77005	(000000-	) Seal, Org, .078 X 00.47id #06	1
▲▽	28	13907	(000000-	) Fitting, Hyd, Plug, Om08	4
▲▲	29	77006	(000000-	) Seal, Org, .087 X 00.64id #08	1
▲	30	373665	(000000-	) Plug, Orifice, Valve, Hyd, .046	1
▲	31	373693	(000000-	) Plug, Orifice, Valve, Hyd, .035	1

Fig. 4 - AC and Heater Box Breakdown, 1067918

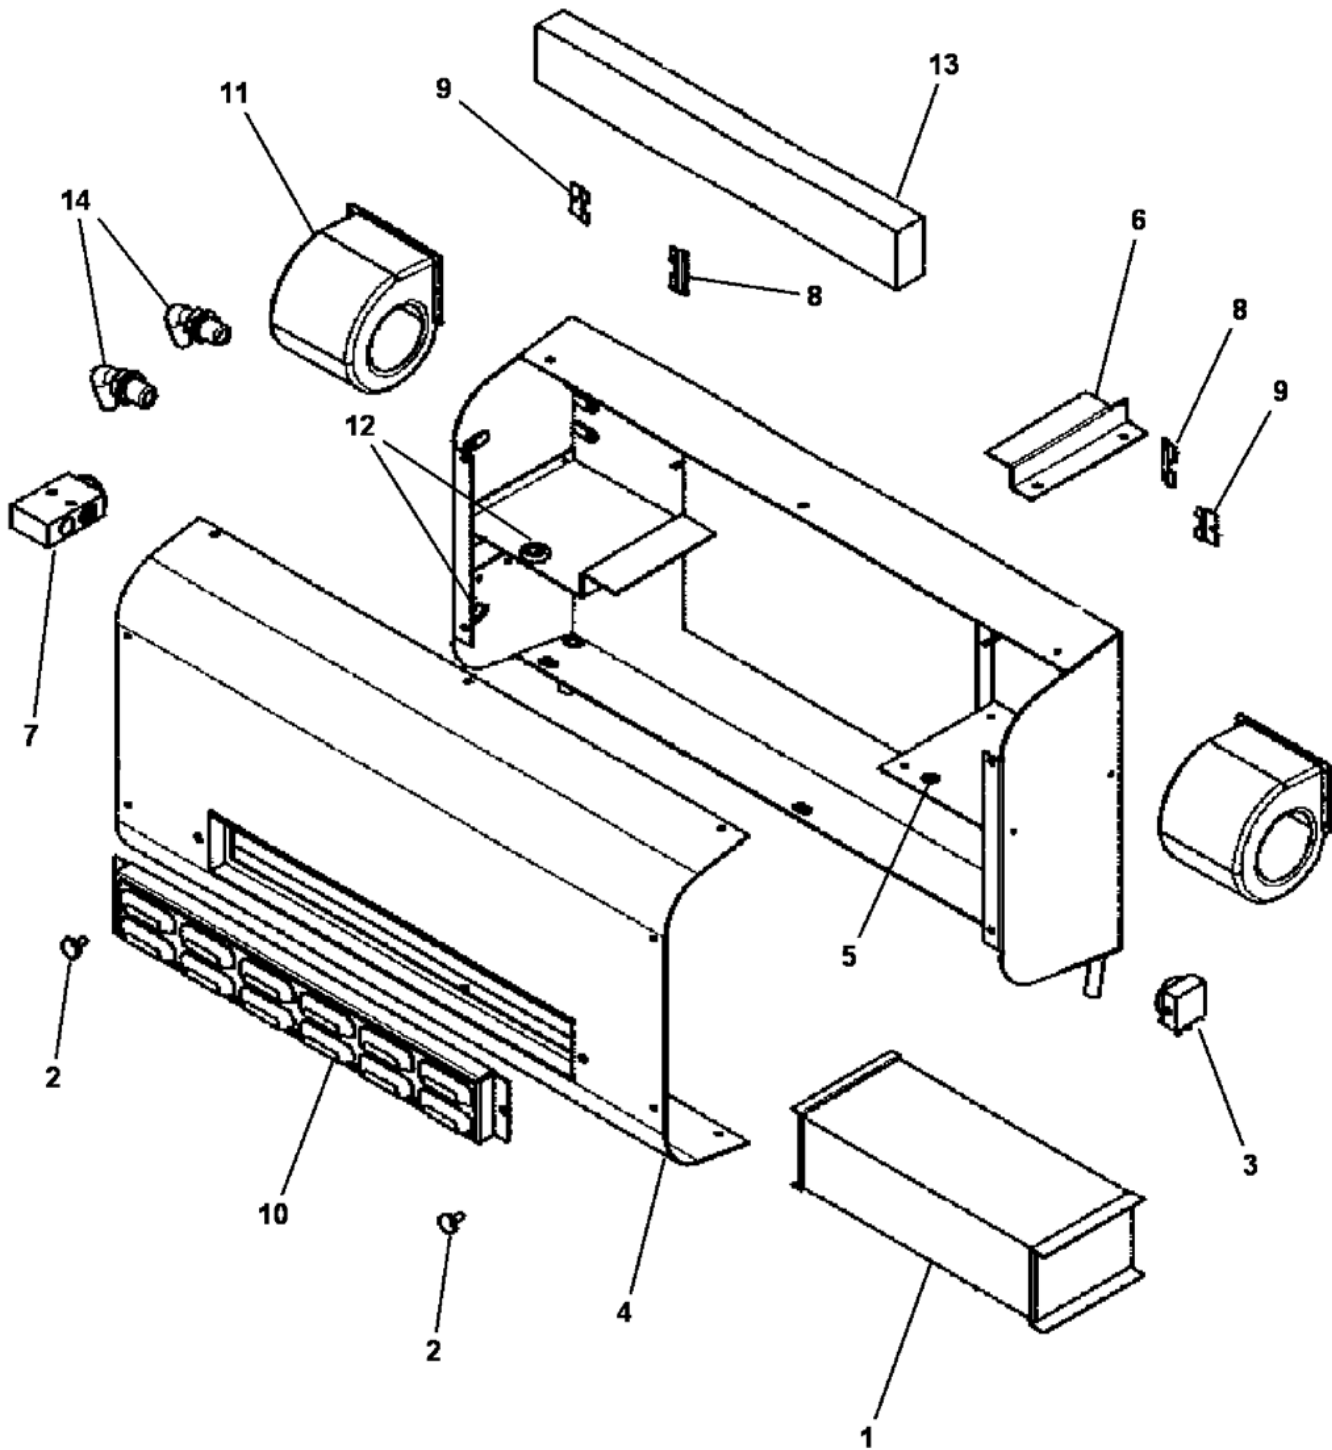


Fig. 4 - AC and Heater Box Breakdown, 1067918

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1067918	(000000-	) Heater & A/C Assy, W/Fan	1
▲	1	9004590	(000000-	) Coil, Heater / Evaporator	1
▲	2	9004591	(000000-	) Knob	2
▲	3	9004592	(000000-	) Thermostat, Heater/Air	1
▲	4	9004593	(000000-	) Cover	1
▲	5	9004594	(000000-	) Grommet, Rbr, .25Id .375Od	1
▲	6	9004595	(000000-	) Bracket, Coil, Mtg	1
▲	7	9004596	(000000-	) Valve, Expansion	1
▲	8	9004597	(000000-	) Clip, Keeper, Blower Mtg	2
▲	9	9004598	(000000-	) Clip, Keeper, Blower Mtg	2
▲	10	9004599	(000000-	) Cover, Access	1
▲	11	9004600	(000000-	) Blown, Fan, Motor	2
▲	12	9004601	(000000-	) Grommet, Rbr, .50Id 1.0Od	2
▲	13	9004602	(000000-	) Filter	1
▲	14	9004603	(000000-	) Fitting, E90, Bm10/Pm08	2

Fig. 5 - Hydraulic Motor Breakdown, 1054901

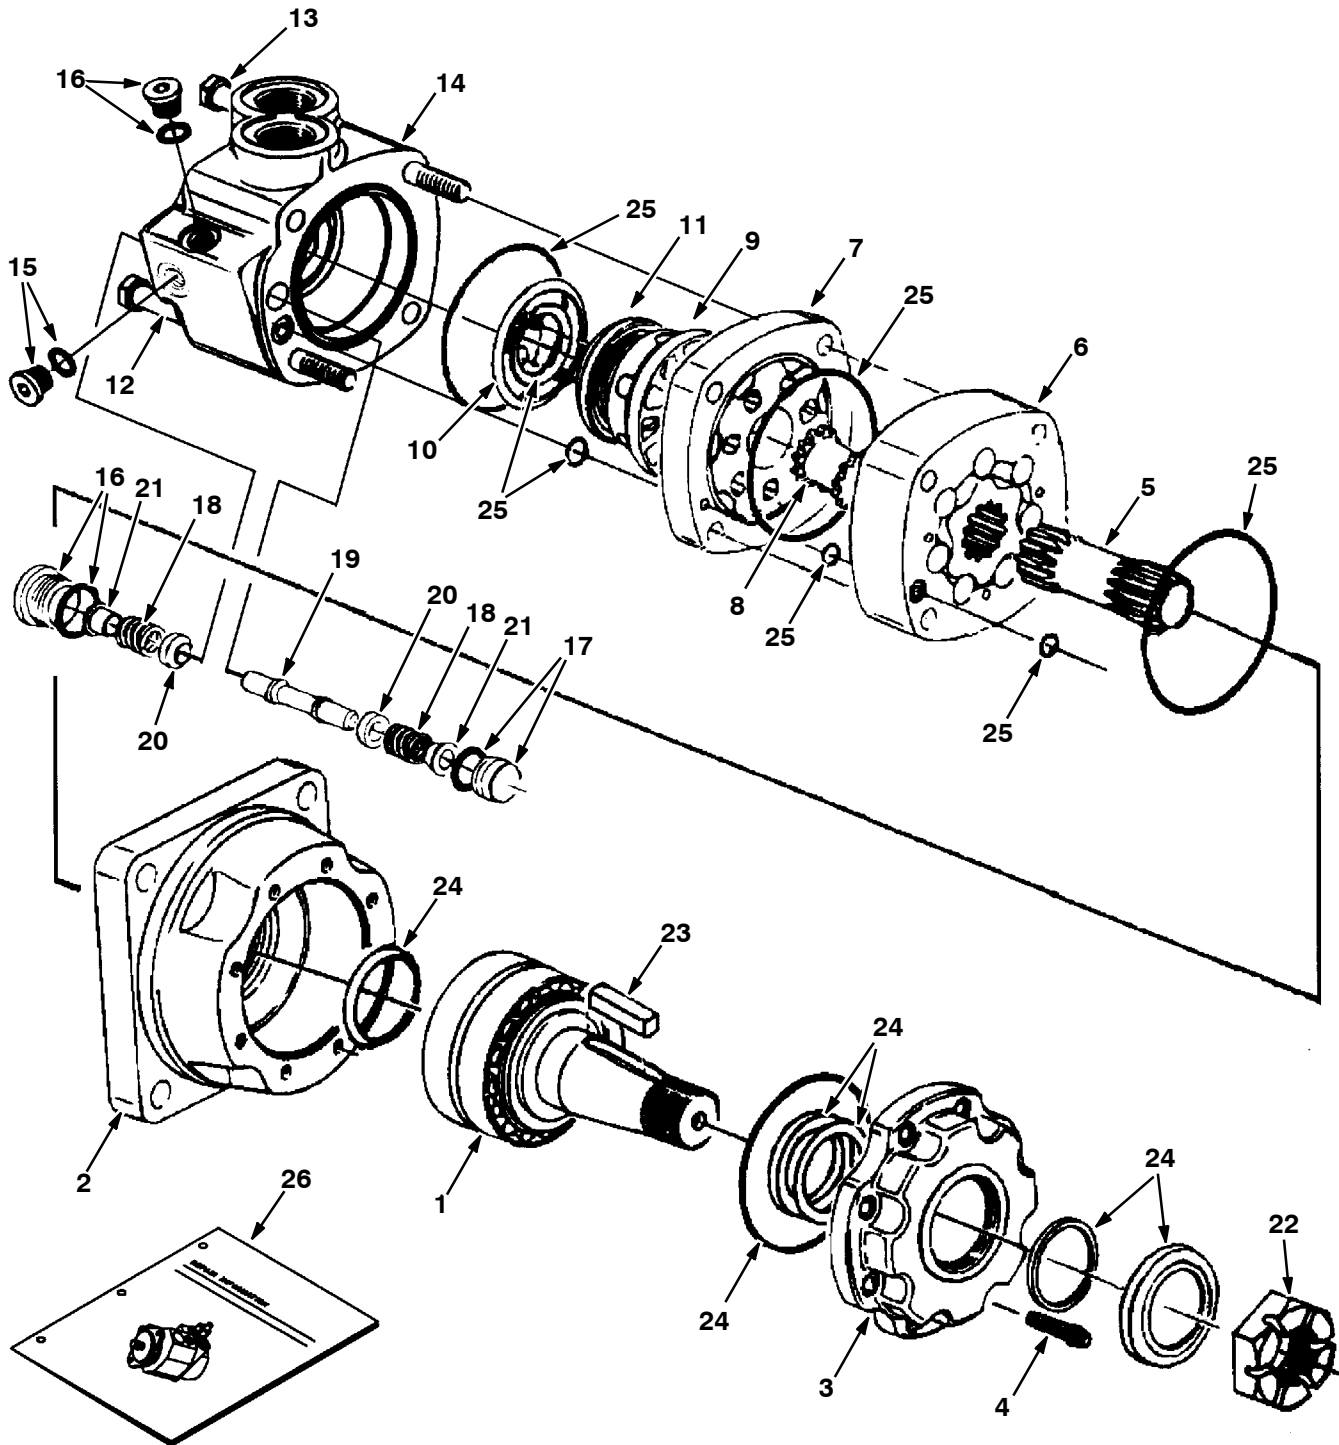


Fig. 5 - Hydraulic Motor Breakdown, 1054901

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1054901	(000000-	) Motor, Hyd, Gear, Int 17.1 Bi- dir 3000	1
▲	1	74165	(000000-	) Shaft, Motor, Hyd	1
▲	2	74166	(000000-	) Housing, Brg, Motor, Hyd	1
▲	3	74167	(000000-	) Retainer, Motor, Hyd	1
▲	4	74168	(000000-	) Screw, Cap, Motor, Hyd	8
▲	5	373435	(000000-	) Drive, Motor, Hyd	1
▲	6	373436	(000000-	) Geroler, Motor, Hyd	1
▲	7	74122	(000000-	) Plate, Valve, Motor, Hyd	1
▲	8	52405	(000000-	) Valve, Motor, Hyd	1
▲	9	74123	(000000-	) Valve, Motor, Hyd	1
▲	10	34178	(000000-	) Spring, Motor, Hyd	2
▲	11	38968	(000000-	) Ring, Motor, Hyd	1
▲	12	373437	(000000-	) Bolt, Motor, Hyd	3
▲	13	373438	(000000-	) Bolt, Motor, Hyd	1
▲	14	373297	(000000-	) Housing, Valve	1
▲	15	373298	(000000-	) Plug	1
▲	16	373545	(000000-	) Plug, Pump, Hyd, Gear	2
▲	17	373299	(000000-	) Plug	1
▲	18	373291	(000000-	) Spring	2
▲	19	373543	(000000-	) Piston, Pump, Hyd, Gear	1
▲	20	373226	(000000-	) Poppet, Pump, Hyd, Gear	2
▲	21	373236	(000000-	) Sleeve, Dashpo, Pump, Hyd, Gear	2
▲	22	45622	(000000-	) Nut, Motor, Hyd	1
▲	23	45623	(000000-	) Key, Motor, Hyd	1
▲	24	79828	(000000-	) Seal Kit, Shaft [CI]	1
▲	25	33580	(000000-	) Seal Kit, Rear [CI]	1
	26	74249	(000000-	) Instr, Repair, Motor, Hyd, Gear	1

Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905

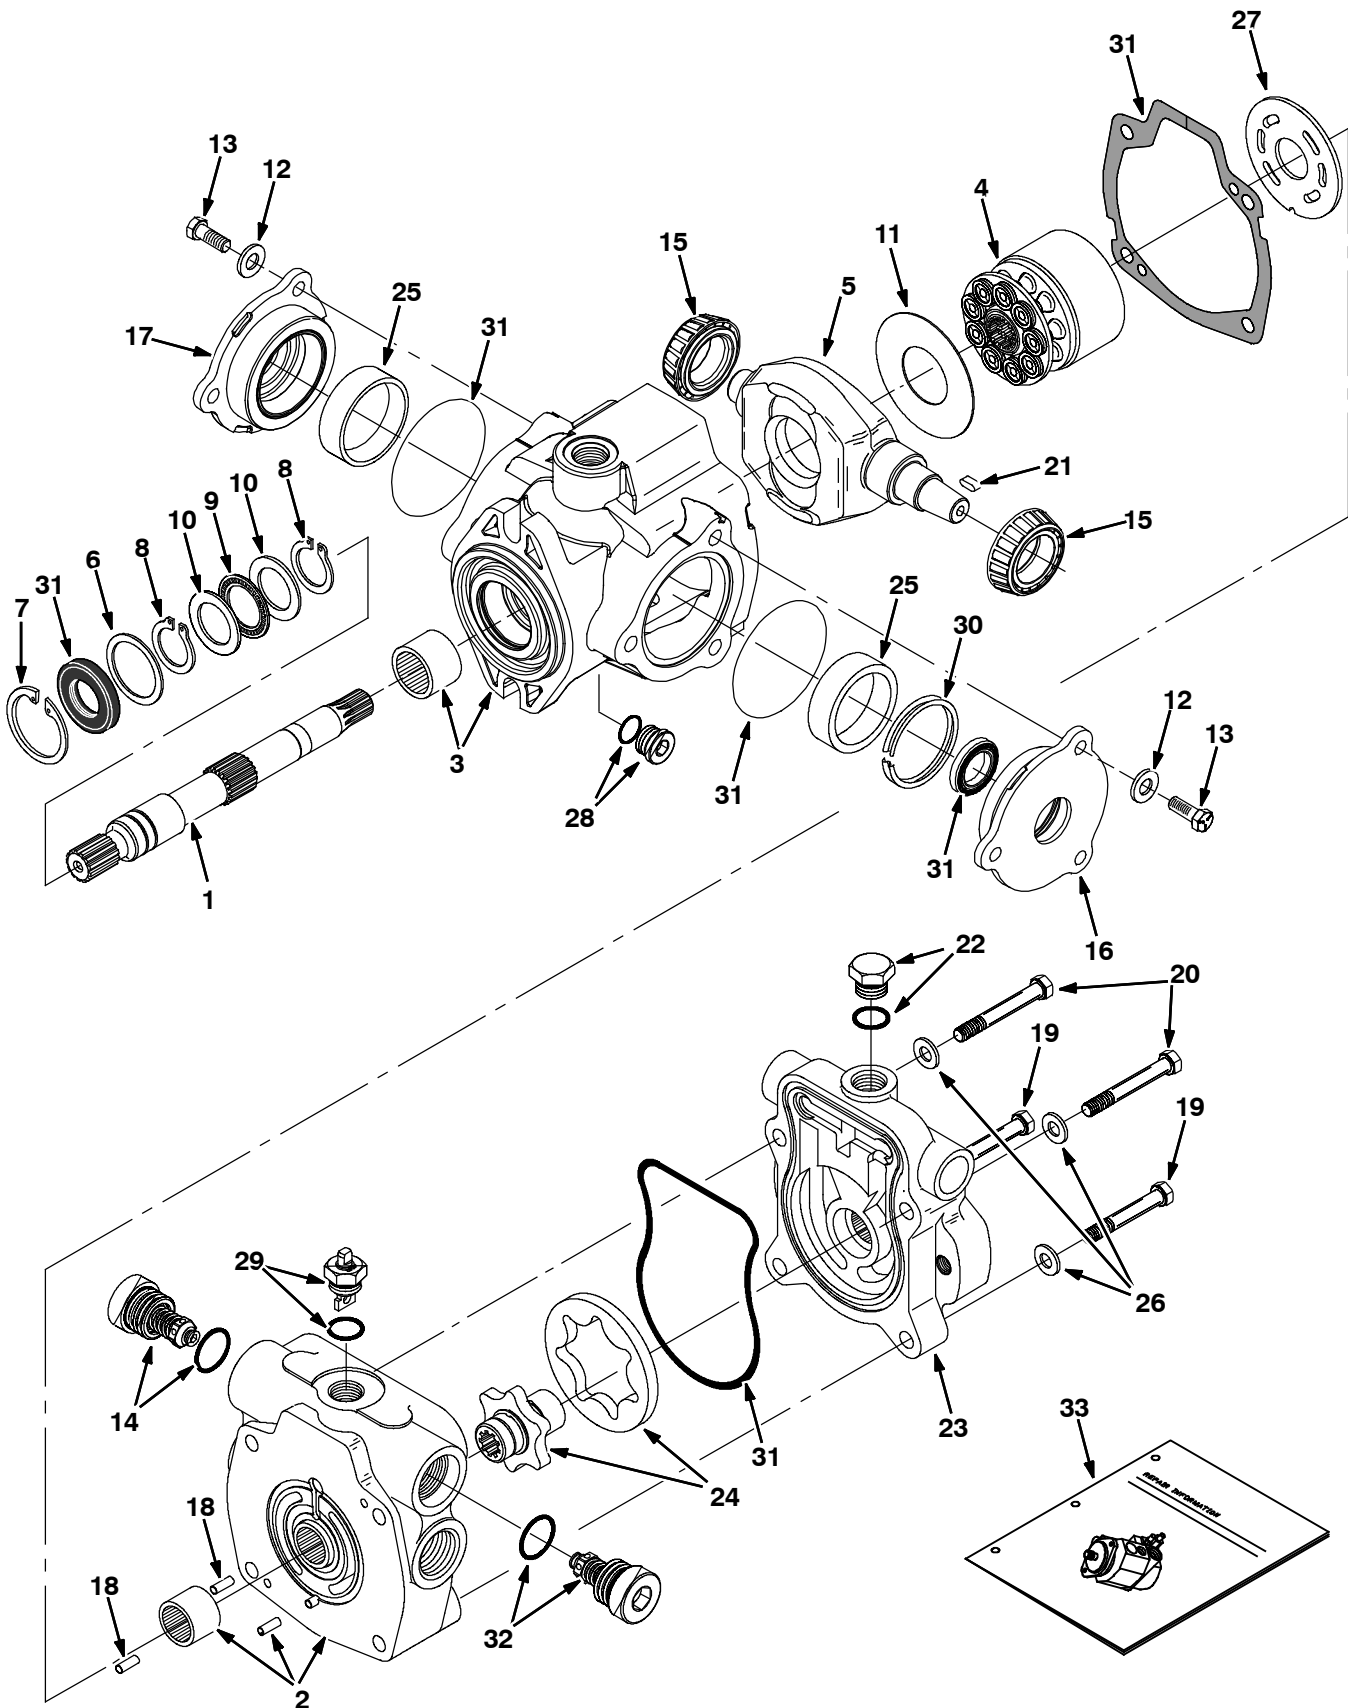


Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1054905	(000000-	) Pump, Hyd, Piston, Var, 1.24 4500, Cw	1
▲	1	373699	(000000-	) Driveshaft, Pump, Hyd	1
▲	2	373430	(000000-	) Cover, End	1
▲	3	373389	(000000-	) Housing	1
▲	4	02706	(000000-	) Kit, Rotating, Pump, Hyd	1
▲	5	373493	(000000-	) Cam	1
▲	6	70096	(000000-	) Washer, Flt, Pump, Hyd	1
▲	7	55926	(000000-	) Ring, Retaining, Pump, Hyd	1
▲	8	373434	(000000-	) Ring, Retaining	2
▲	9	74225	(000000-	) Bearing, Thrust, Pump, Hyd	1
▲	10	74226	(000000-	) Race, Bearing, Pump, Hyd	2
▲	11	373327	(000000-	) Insert, Plate, Cam, Pump, Hyd	1
▲	12	373391	(000000-	) Washer, Pump, Hyd	6
▲	13	373346	(000000-	) Screw, Cap	6
▲	14	74259	(000000-	) Valve, Relief, Pump	1
▲	15	373317	(000000-	) Bearing, Cone, Pump, Hyd	2
▲	16	373393	(000000-	) Plate, Cover	1
▲	17	373394	(000000-	) Plate, Cover	1
▲	18	70100	(000000-	) Pin, Dowel, Pump, Hyd	2
▲	19	373336	(000000-	) Screw, Cap, Pump, Hyd	2
▲	20	373337	(000000-	) Screw, Cap, Pump, Hyd	2
▲	21	74237	(000000-	) Key, Shaft, Pump, Hyd	1
▲	22	13907	(000000-	) Fitting, Plug, O- Ring	1
▲	23	373700	(000000-	) Adaptor Assy, Pump, Hyd	1
▲	24	373701	(000000-	) Gerotor, Pump, Hyd	1
▲	25	373395	(000000-	) Bearing, Cup	2
▲	26	373396	(000000-	) Washer	4
▲	27	74180	(000000-	) Plate, Valve, Pump, Hyd	1
▲	28	13907	(000000-	) Fitting, Plug, O- Ring	1
▲	29	373413	(000000-	) Actuator, Valve, Bypass	1
▲	30	373402	(000000-	) Kit, Shim	1
▲	31	373398	(000000-	) Kit, Seal, Hyd, Pump	1
▲	32	373431	(000000-	) Valve, Relief, 3500psi	1
	33	373429	(000000-	) Instr, Repair, Pump	1

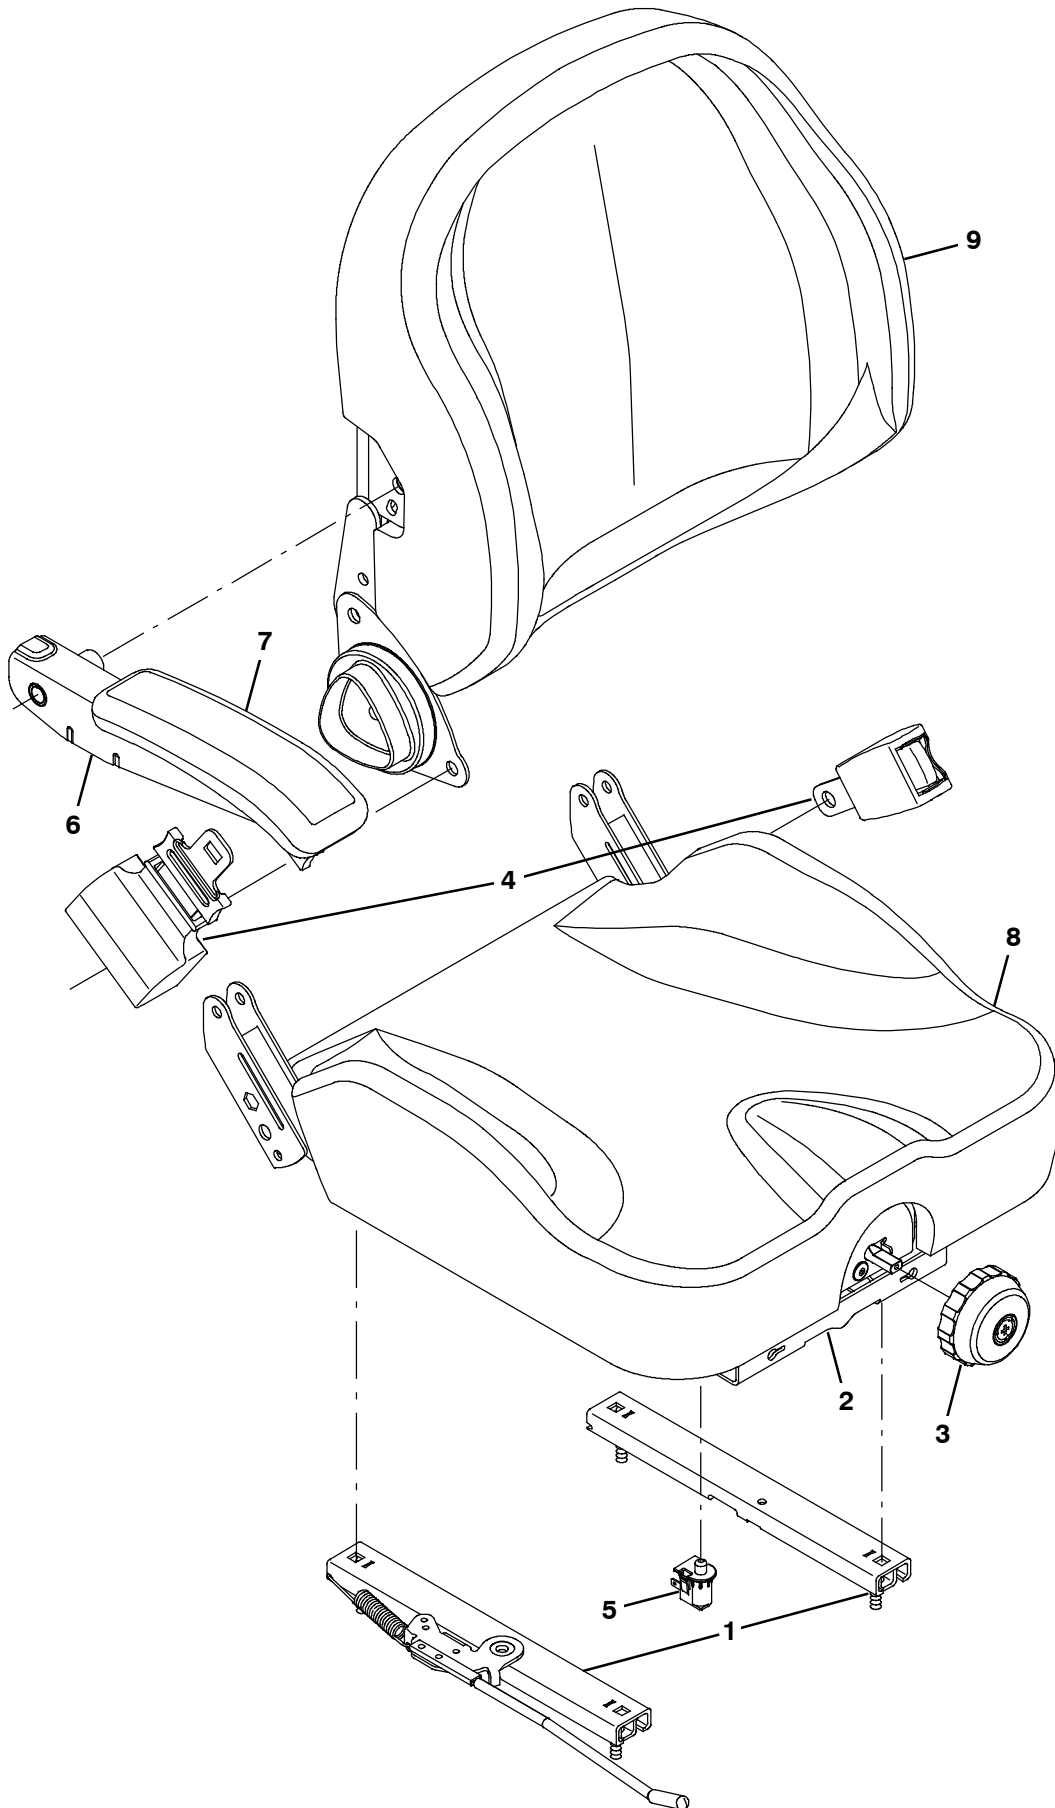
Fig. 7 - Seat Breakdown, 9018735

Fig. 7 - Seat Breakdown, 9018735

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9018735	(000000-	) Seat, Deluxe, Replmt [S30]	1
▲	1	9012585	(000000-	) Track Assy, Slide	1
▲	2	9012587	(000000-	) Bellows, Seat	1
▲	3	9012589	(000000-	) Knobs, Adjmt, Weight	1
▲	4	9018734	(000000-	) Seatbelt, Retract, Orange, Replmt	1
▲	5	9012591	(000000-	) Switch, Seat	1
▲	6	9012592	(000000-	) Armrest	1
▲	7	9012593	(000000-	) Pad, Armrest	1
▲	8	9012594	(000000-	) Cover, Cushion	1
▲	9	9012595	(000000-	) Cover, Backrest	1

SECTION 5

Contents	Page
Fig. 1 - Cylinder Block Group	5- 2
Fig. 2 - Rocker Cover Group	5- 4
Fig. 3 - Cylinder Head Group	5- 5
Fig. 4 - Front Cover and Oil Pan Group	5- 6
Fig. 5 - Camshaft and Valve Group	5- 8
Fig. 6 - Piston and Crankshaft Group	5- 10
Fig. 7 - Balancer Group	5- 11
Fig. 8 - Oil Pump and Pressure Switch Group	5- 12
Fig. 9 - Water Pump Group	5- 13
Fig. 10 - Intake Manifold Gasket Group	5- 14
Fig. 11 - Exhaust Manifold Gasket Group	5- 16
Fig. 12 - Fan Tensioner and Pump Mount Group	5- 17
Fig. 13 - Flywheel Group	5- 18
Fig. 14 - Ignition Coil and Spark Plug Group	5- 19
Fig. 15 - Starter / Alternator Group	5- 20
Fig. 16 - Remote Oil Filter Group	5- 21
Fig. 17 - Coolant Group	5- 22
Fig. 18 - DSR Coolant Group, LPG Engine ...	5- 23
Fig. 19 - Electrical Group	5- 24
Fig. 20 - Fuel Rail Group, Gasoline Engine ...	5- 26
Fig. 21 - Throttle Body Group, Gasoline Engine	5- 27
Fig. 22 - Throttle Body Group, LPG Engine ...	5- 28
Fig. 23 - Vaporizer Group, LPG Engine	5- 29
Fig. 24 - Electronic Pressure Regulator (EPR) Group, LPG Engine	5- 30

Fig. 1 - Cylinder Block Group

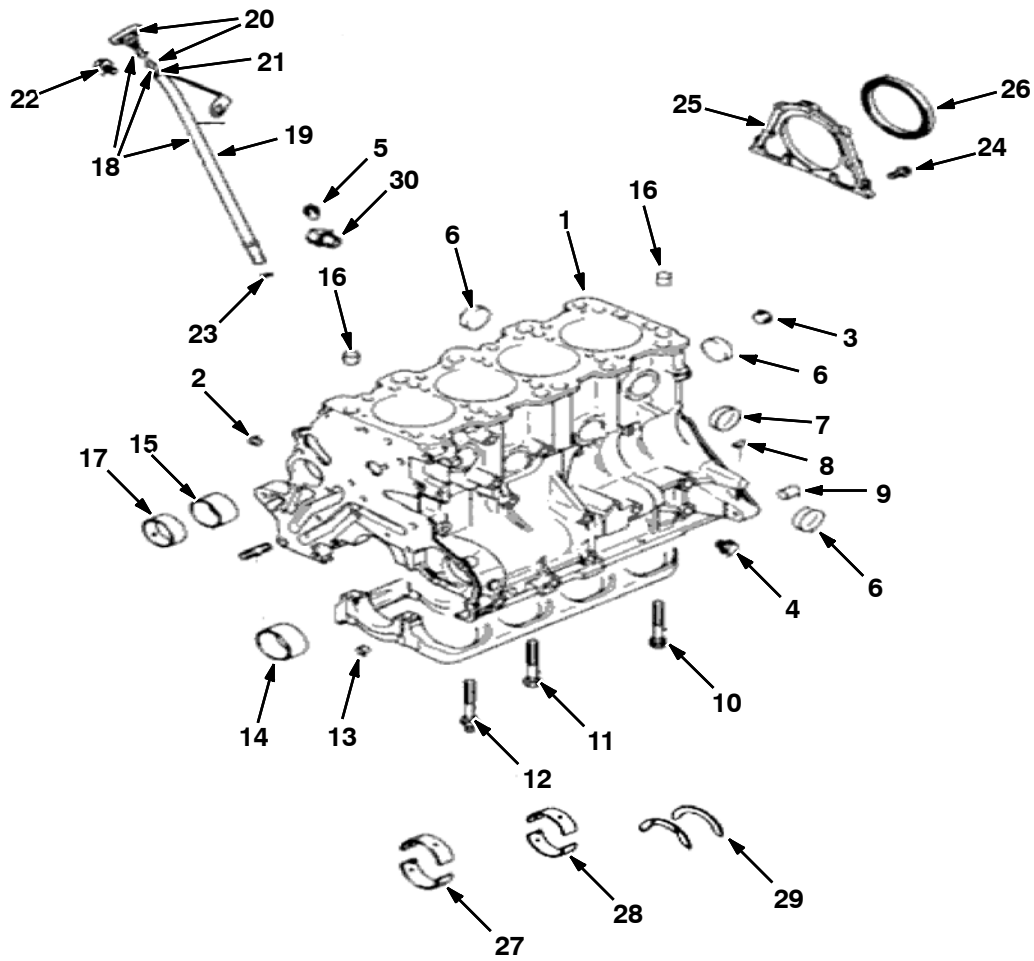
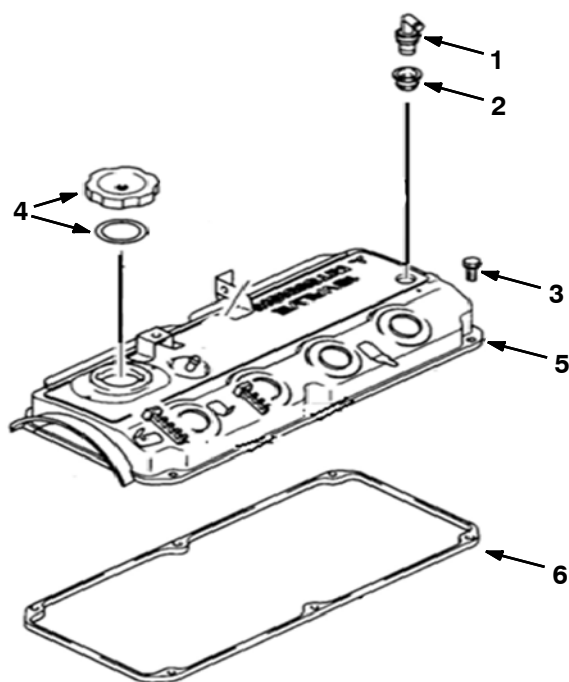



Fig. 1 - Cylinder Block Group

	Ref.	Part No.	Description	Qty.
▽	1	9010419	Block Assy, Cylinder	1
▲	2	9010420	Plug, Taper	2
▲	3	9010421	Plug, Taper	1
▲	4	9010422	Plug	1
▲	5	9010423	Plug, Taper	1
▲	6	9010424	Cap, Seal	7
▲	7	9010425	Cap, Seal	2
▲	8	9010426	Pin, Dowel	2
▲	9	9010427	Bushing, Knock	2
▲	10	9010428	Bolt, Cap, Bearing	2
▲	11	9010429	Bolt, Cap, Bearing	7
▲	12	9010430	Bolt, Cap, Bearing	1
▲	13	9010431	Bushing	2
▲	14	9010432	Bearing, Std, Balancer	1
▲	14	9010433	Bearing, Oversize [1.0]	1
▲	15	9010434	Bearing, Std, Balancer	1
▲	15	9010435	Bearing, Oversize [1.0]	1
▲	16	9010436	Bushing, Knock	2
▲	17	9010458	Bearing, Shaft, Std, Balancer	1
▲	17	9010459	Bearing, Shaft, Balancer [Ovrsl]	1
▽	18	9010439	Dipstick Assy, Gauge	1
▲	19	9010440	Dipstick, Gauge, Guide	1
▲▽	20	9015866	Dipstick, Oil	1
▲▲	21	9010438	O- Ring	1
	22	9010441	Bolt, Flange	1
	23	9010442	O- Ring	1
	24	9010444	Bolt, Flange	5
	25	9010445	Seal, Case, Oil, Rear	1
	26	9010446	Seal, Oil	1
	27	9010447	Bearing, Cshft [Green Std 1,2,4,5]	4
	27	9010448	Bearing, Cshft [Yellow Std 1,2,4,5]	4
	27	9010449	Bearing, Cshft[No Color Std 1,2,4,5]	4
	27	9010450	Bearing, Cshft [Lan Std 1,2,4,5]	4
	27	9010451	Bearing, Cshft [Red Std 1,2,4,5]	4
	28	9010452	Bearing, Cshft [Green Std 3]	1
	28	9010453	Bearing, Cshft [Yellow Std 3]	1
	28	9010454	Bearing, Cshft [No Color Std 3]	1
	28	9010455	Bearing, Cshft [Lan Std 3]	1
	28	9010456	Bearing, Cshft [Black Std 3]	1
	29	9010457	Bearing, Thrust, Cshft	1
	30	9010443	Drain, Water, Joint	1

Fig. 2 - Rocker Cover Group


Ref.	Part No.	Description	Qty.
1	9010460	Valve, Pcv	1
2	9010461	Valve, Gasket, Pcv	1
3	9010462	Bolt, Rocker, Cover	6
4	9010464	Cap, Oil, Filler	1
5	9010466	Cover Assy, Rocker	1
6	9010465	Gasket, Cover, Rocker	1

Fig. 3 - Cylinder Head Group

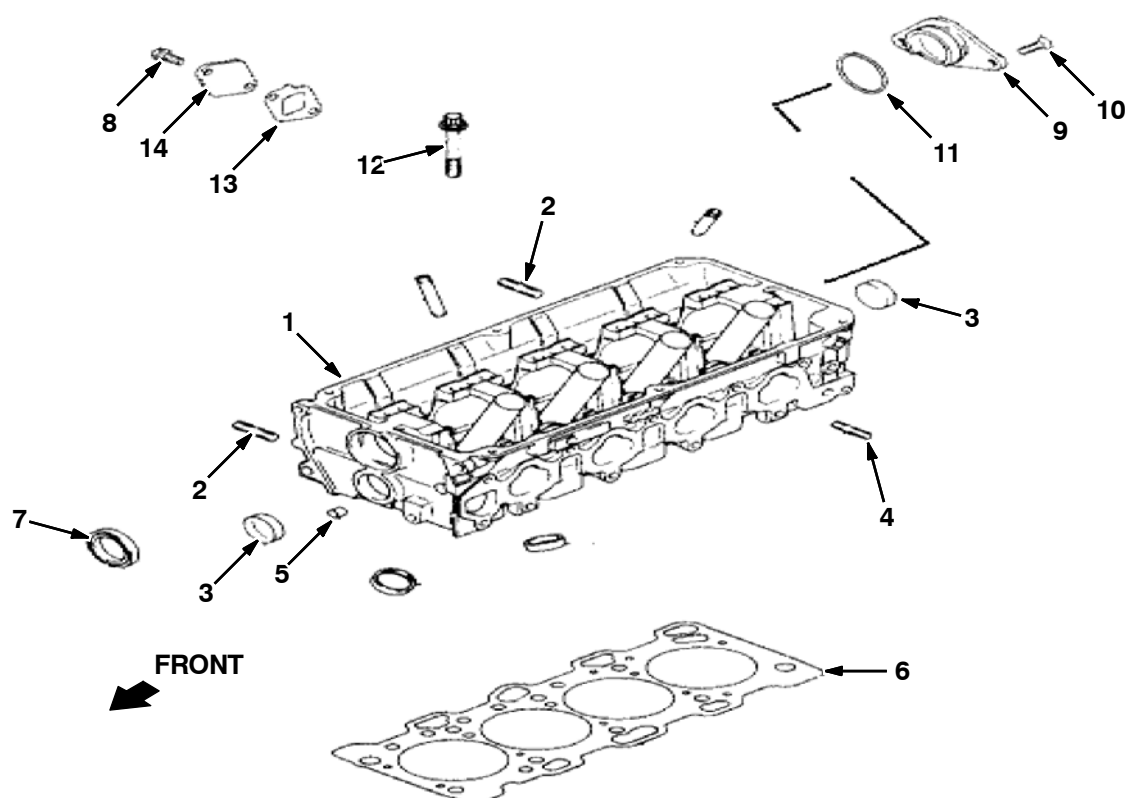

	Ref.	Part No.	Description	Qty.
▽	1	9010467	① Head Assy, Cylinder	1
▲	2	9010473	Stud	2
▲	3	9010469	Seal, Cap	2
▲	4	9010470	Stud	3
▲	5	9010431	Bushing	2
▽	1	9014162	② Head Kit, Cyl [Mitsubishi 2015 12mm]	1
▲	2	9010473	Stud	2
▲	3	9010469	Seal, Cap	2
▲	4	9010470	Stud	3
▲	5	9010431	Bushing	2
▲	6	9010468	Gasket, Cylinder, Head	1
▲		9010465	Gasket, Cover, Rocker	1
▲		9014160	Plug, Spark [Mitsubishi 2015 12mm]	4
	7	9010471	Seal, Cam Shaft, Front	1
	8	9010441	Bolt, Flange	2
	9	9010480	Thurst, Case	1
	10	9010481	Screw	2
	11	9010482	O- Ring	1
	12	9010484	Cylinder Assy, Head, Bolt	10
	13	9010483	Gasket	1
	14	9010485	Cover	1

① Serial Number (006501- 007105)

② Serial Number (007106-)

Fig. 4 - Front Cover and Oil Pan Group

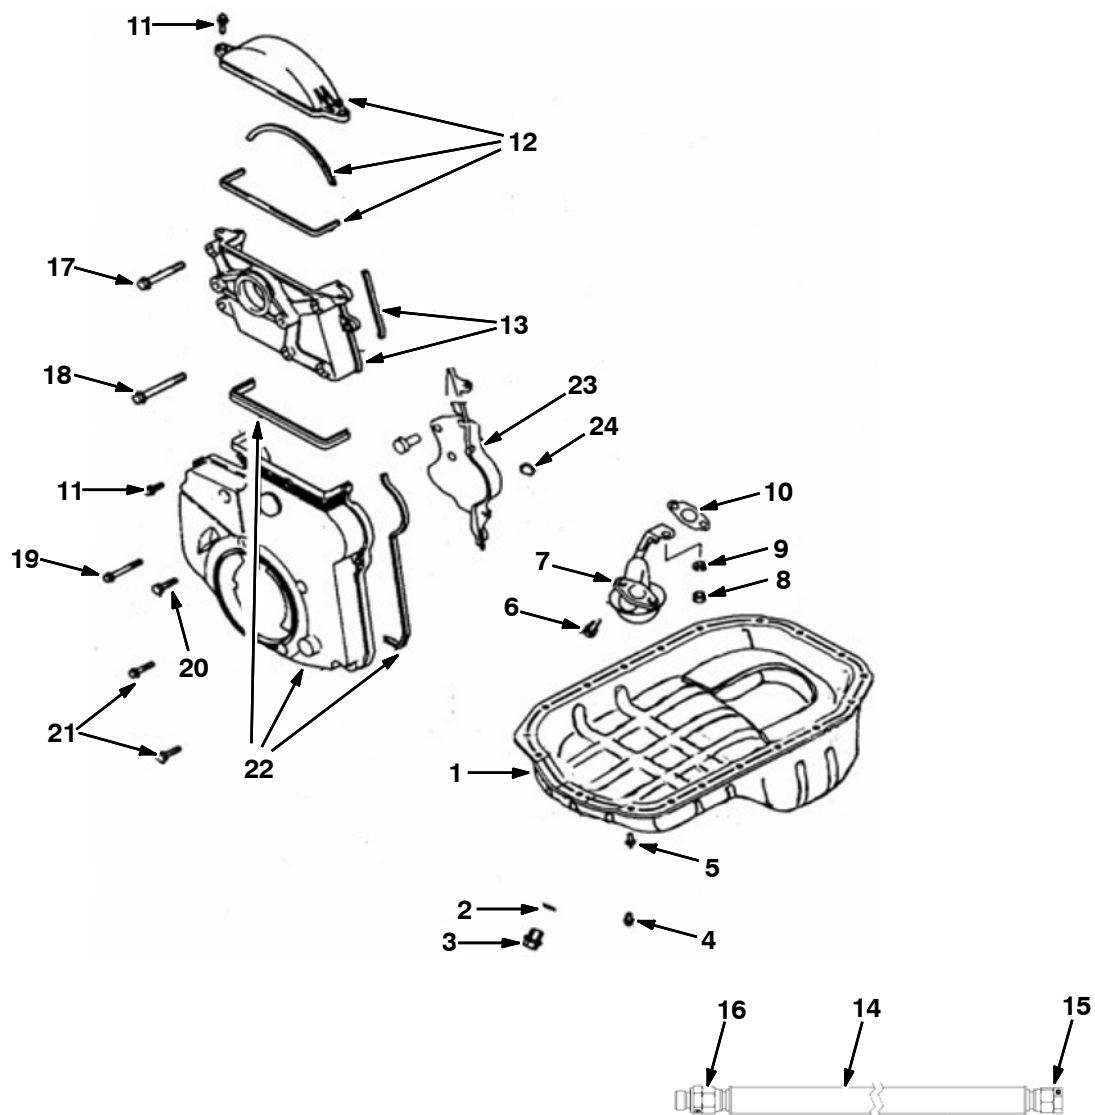


Fig. 4 - Front Cover and Oil Pan Group

	Ref.	Part No.	Description	Qty.
▽	1	9010487	Pan, Oil	1
▲	2	9010488	Gasket, Plug, Drain, Oil	1
▲	3	9010489	Plug, Oil, Drain	1
	4	9010490	Bolt, Flange	17
	5	9010491	Bolt, Flange	2
	6	9010492	Washer, Bolt	2
	7	9010493	Screen, Oil	1
	8	9010494	Nut, Strainer	1
	9	9010495	Washer, Strainer	1
	10	9010496	Gasket, Screen	1
	11	9010497	Bolt, Flange	8
	12	9010498	Cover Assy, Front, Upper [T- Belt]	1
	13	9010502	Bracket Assy, Coil, Ignition	1
	14	9010311	Hose, Drain, Oil [Mit 20/24m]	1
	15	9010312	Plug, Flare, 37deg [Mit]	1
	16	9010313	Fitting, 37deg [Mit]	1
	17	9010503	Bolt, Flange	3
	18	9010504	Bolt, Flange	1
	19	9010505	Bolt, Flange	1
	20	9010506	Bolt	2
	21	9010507	Bolt	2
	22	9010508	Cover, Lower, Front [T- Belt]	1
	23	9010511	Cover, Rear [T- Belt]	1
	24	9010512	Plug, Rubber	1

Fig. 5 - Camshaft and Valve Group

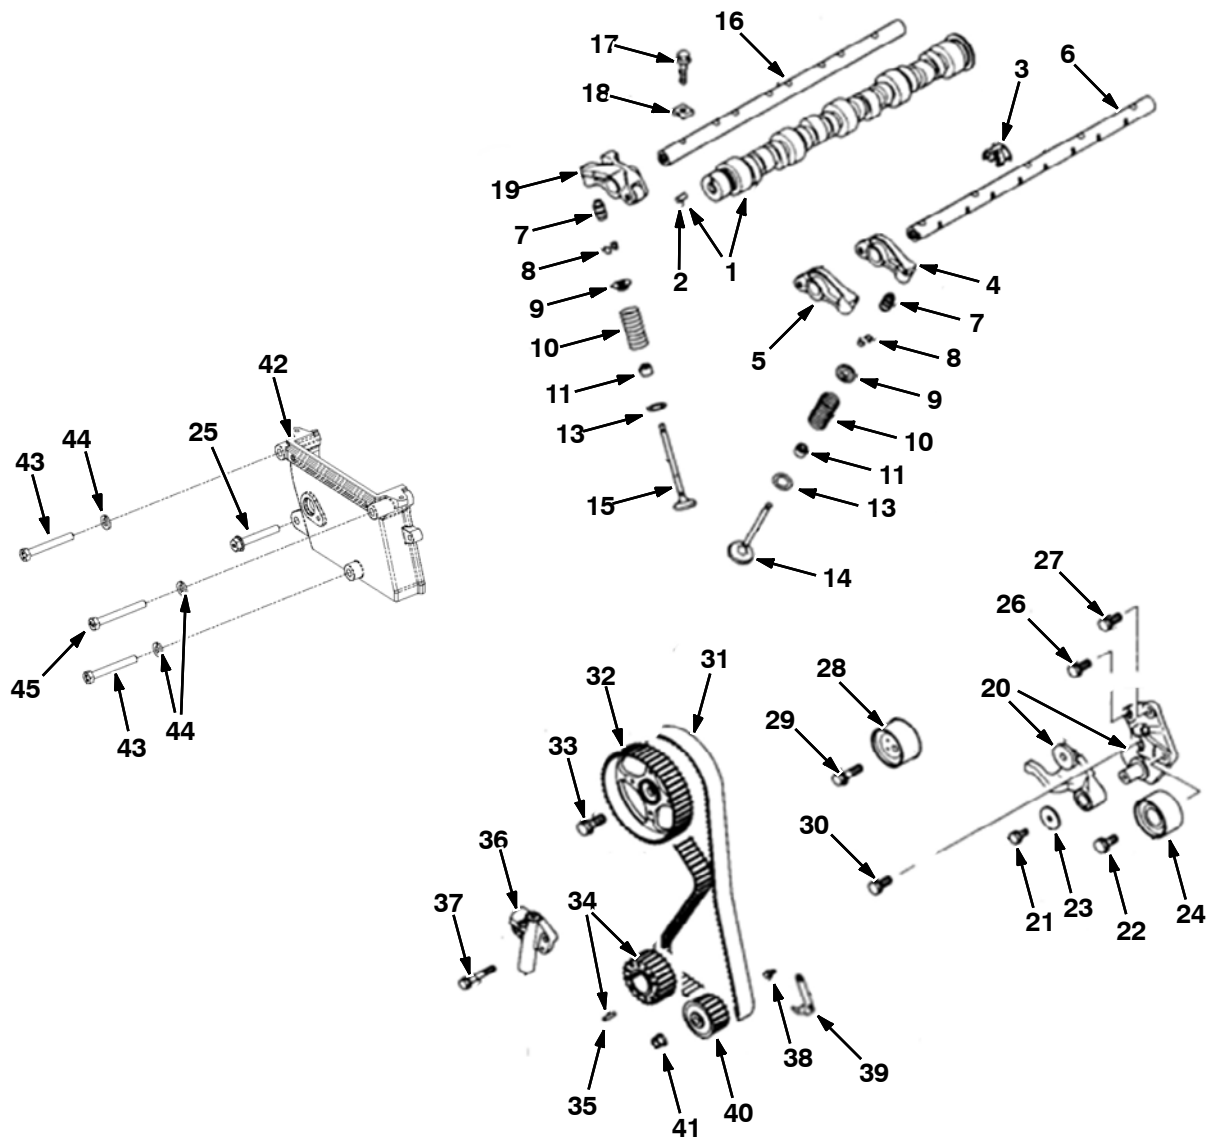
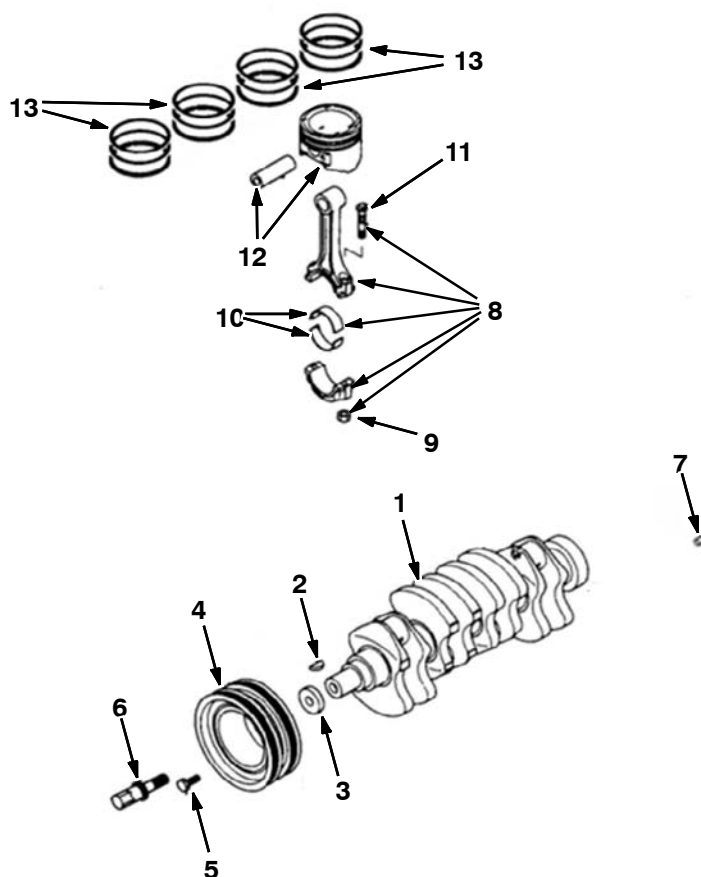



Fig. 5 - Camshaft and Valve Group

	Ref.	Part No.	Description	Qty.
▽	1	9010530	Camshaft Assy	1
▲	2	9010535	Pin, Dowel	1
	3	9010532	Shaft, Spring, Rocker	4
	4	9010533	Arm Assy, Rocker [B]	4
	5	9010534	Arm Assy, Rocker [A]	4
	6	9010531	Shaft, Arm , Rocker	1
	7	9010536	Adjuster Assy, Lash	16
	8	9010537	Valve, Spring, Lock	32
	9	9010538	Valve, Spring, Retainer	16
	10	9010539	Valve, Spring	16
	11	9010540	Valve, Seal, Stem	16
	12	9010254	Bolt, M8- 1.25 X 55 Fl Hd [Mit]	1
	13	9010541	Valve, Spring, Seat	16
	14	9010542	Valve, Inlet	8
	15	9010543	Valve, Exhaust	8
	16	9010544	Shaft, Arm, Rocker	1
	17	9010545	Bolt, Flange	13
	18	9010546	Shaft, Cap, Rocker	13
	19	9010547	Arm Assy, Rocker [C]	4
▽	20	9010548	Bracket, Pulley, Tensioner	1
▲	21	9010549	Bolt, Washer	1
▲	22	9010550	Bolt, Washer	1
▲	23	9010551	Washer	1
▲	24	9010552	Pulley, Idler	1
	25	9010253	Bolt, M8- 1.25 X 70 Hxhd [Mit]	1
	26	9010554	Bolt, Seal	1
	27	9010555	Bolt, Washer	1
	28	9010556	Pulley, Tensioner	1
	29	9010557	Bolt, Washer	1
	30	9010550	Bolt, Washer	1
	31	9010559	Belt, Timing	1
	32	9010560	Sprocket, Camshaft	1
	33	9010561	Bolt, Flange	1
▽	34	9010562	Sprocket Assy, Cshft	1
▲	35	9010563	Pin, Spring	1
	36	9010564	Tensioner	1
	37	9010565	Bolt, Flange	2
	38	9010491	Bolt, Flange	2
	39	9010567	Bracket, Indicator, Timing	1
	40	9010568	Sprocket, Pump, Oil	1
	41	9010569	Nut	1
	42	9010250	Cover, Timing, Gear [Mit 2.0/2.4l]	1
	43	9010251	Bolt, M8- 1.25 X 65 Hxhd [Mit]	2
	44	9010252	Washer, Lock, M8 [Mit]	3


Fig. 6 - Piston and Crankshaft Group


Ref.	Part No.	Description	Qty.
1	9010513	Crankshaft Assy	1
2	9010514	Key	1
3	9010515	Washer, Special	1
4	9010516	Pulley Assy, Damper, Torsional	1
5	9010517	Bolt, Washer	4
6	9010518	Bolt, Sprocket, Cshft	1
7	9010519	Pin, Dowel	1
▽ 8	9010520	Rod Assy, Connecting	4
▲ 9	9010521	Nut	8
▲ 10	9010522	Bearing, Rod, Connect [Yellow Std]	4
▲ 10	9010523	Bearing, Rod, Connect [No Color Std]	4
▲ 10	9010524	Bearing, Rod, Connect [Lan Std]	4
▲ 11	9010525	Bolt, Connecting	8
12	9010526	Piston, Pin [Std A]	4
12	9010527	Piston, Pin [Std B]	4
12	9010528	Piston, Pin [Std C]	4
13	9010529	Piston Set, Ring	1

Fig. 7 - Balancer Group

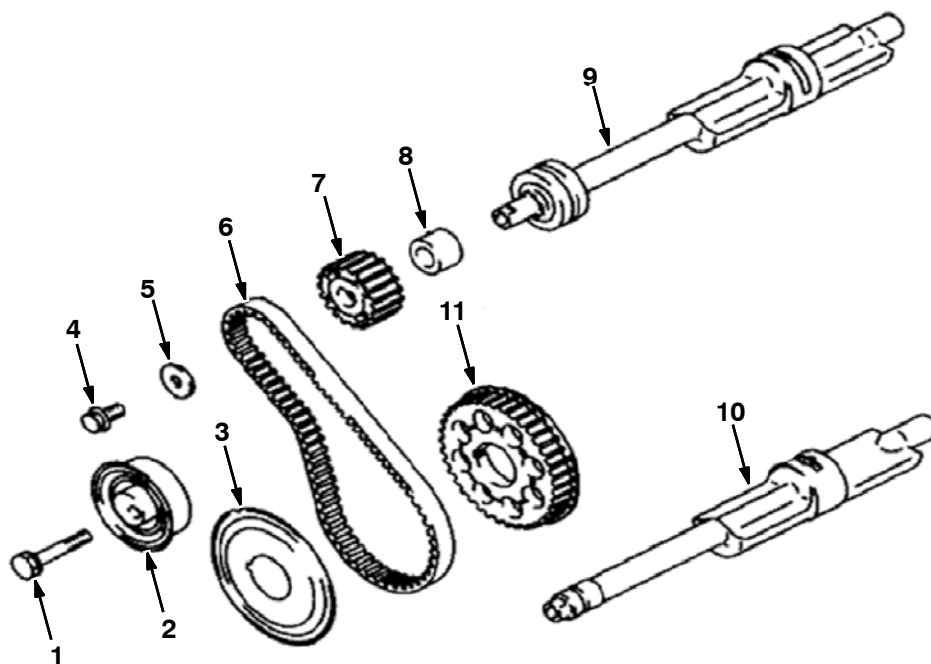


Ref.	Part No.	Description	Qty.
1	9010570	Bolt, Belt, Balancer, Train	1
2	9010571	Tensioner, Timing, Belt	1
3	9010572	Flange, Sprocket, Cshft	1
4	9010600	Bolt, Flange	1
5	9010574	Washer, Belt, Balancer, Train	1
6	9010575	Belt, Timing	1
7	9010576	Sprocket, Shaft, Balancer	1
8	9010577	Spacer, Belt, Balancer, Train	1
9	9010578	Shaft, Right, Balancer	1
10	9010579	Shaft, Left, Balancer	1
11	9010580	Sprocket, Cshft	1

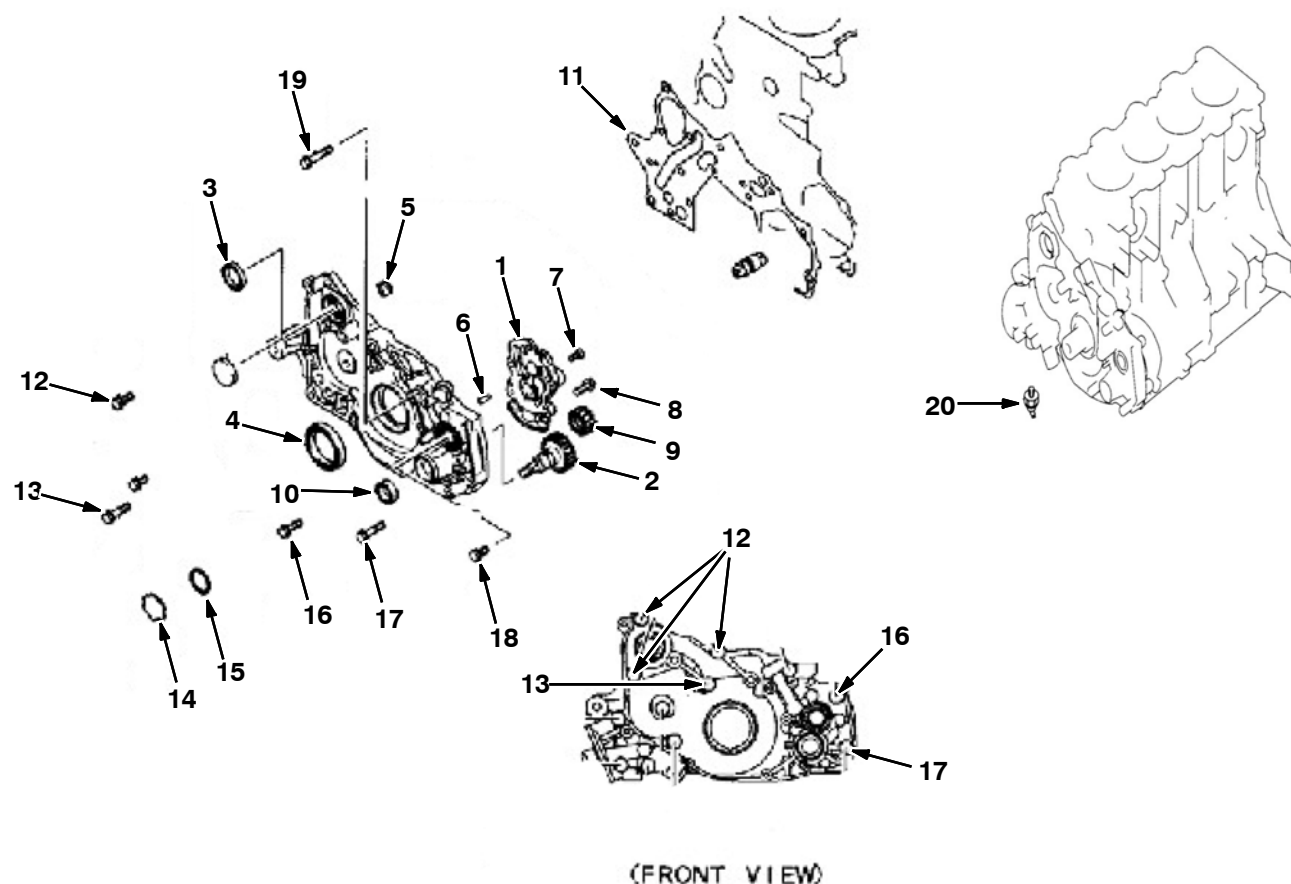Fig. 8 - Oil Pump and Pressure Switch Group


Ref.	Part No.	Description	Qty.
▽	1	9010582 Pump, Oil	1
▲	2	9010592 Pump, Gear, Drive, Oil	1
▲	3	9010585 Seal, Oil	1
▲	4	9010586 Seal, Oil	1
▲	5	9010587 Plug, Tapper	1
▲	6	9010426 Pin, Dowel	2
▲	7	9010589 Screw	1
▲	8	9010590 Bolt, Flange	4
▲	9	9010591 Pump, Gear, Oil	1
▲	10	9010601 Seal, Oil	1
	11	9010593 Gasket, Case, Front	1
	12	9010594 Bolt, Washer	3
	13	9010595 Bolt, Washer	1
	14	9010596 Plug, Cap	1
	15	9010597 O- Ring	1
	16	9010598 Bolt, Flange	1
	17	9010599 Bolt, Flange	1
	18	9010600 Bolt, Flange	1
	19	9010583 Bolt, Flange	1
	20	9010259 Sender, Oil, Press [Mit]	1

Fig. 9 - Water Pump Group

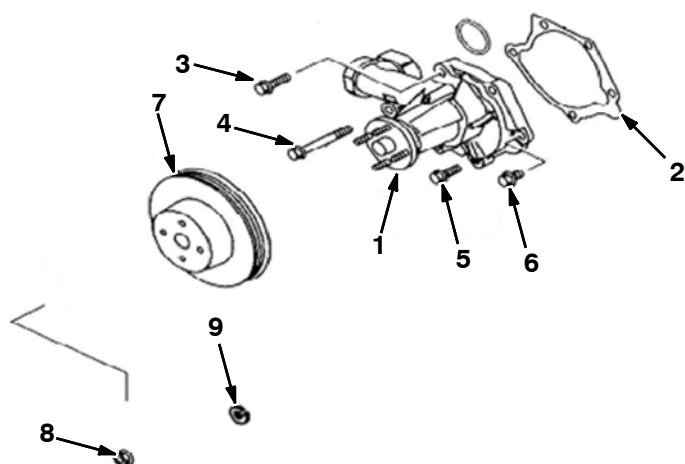

Ref.	Part No.	Description	Qty.
1	9010602	Pump, Water	1
2	9010603	Gasket, Pump, Water	1
3	9010604	Bolt, Flange	1
4	9010503	Bolt, Flange	1
5	9010606	Bolt, Flange	2
6	9010607	Bolt, Flange	1
7	9010612	Pulley, Pump, Water	1
8	9010609	Nut, Flange	4
9	9010610	Washer, Spring	4

Fig. 10 - Intake Manifold Gasket Group

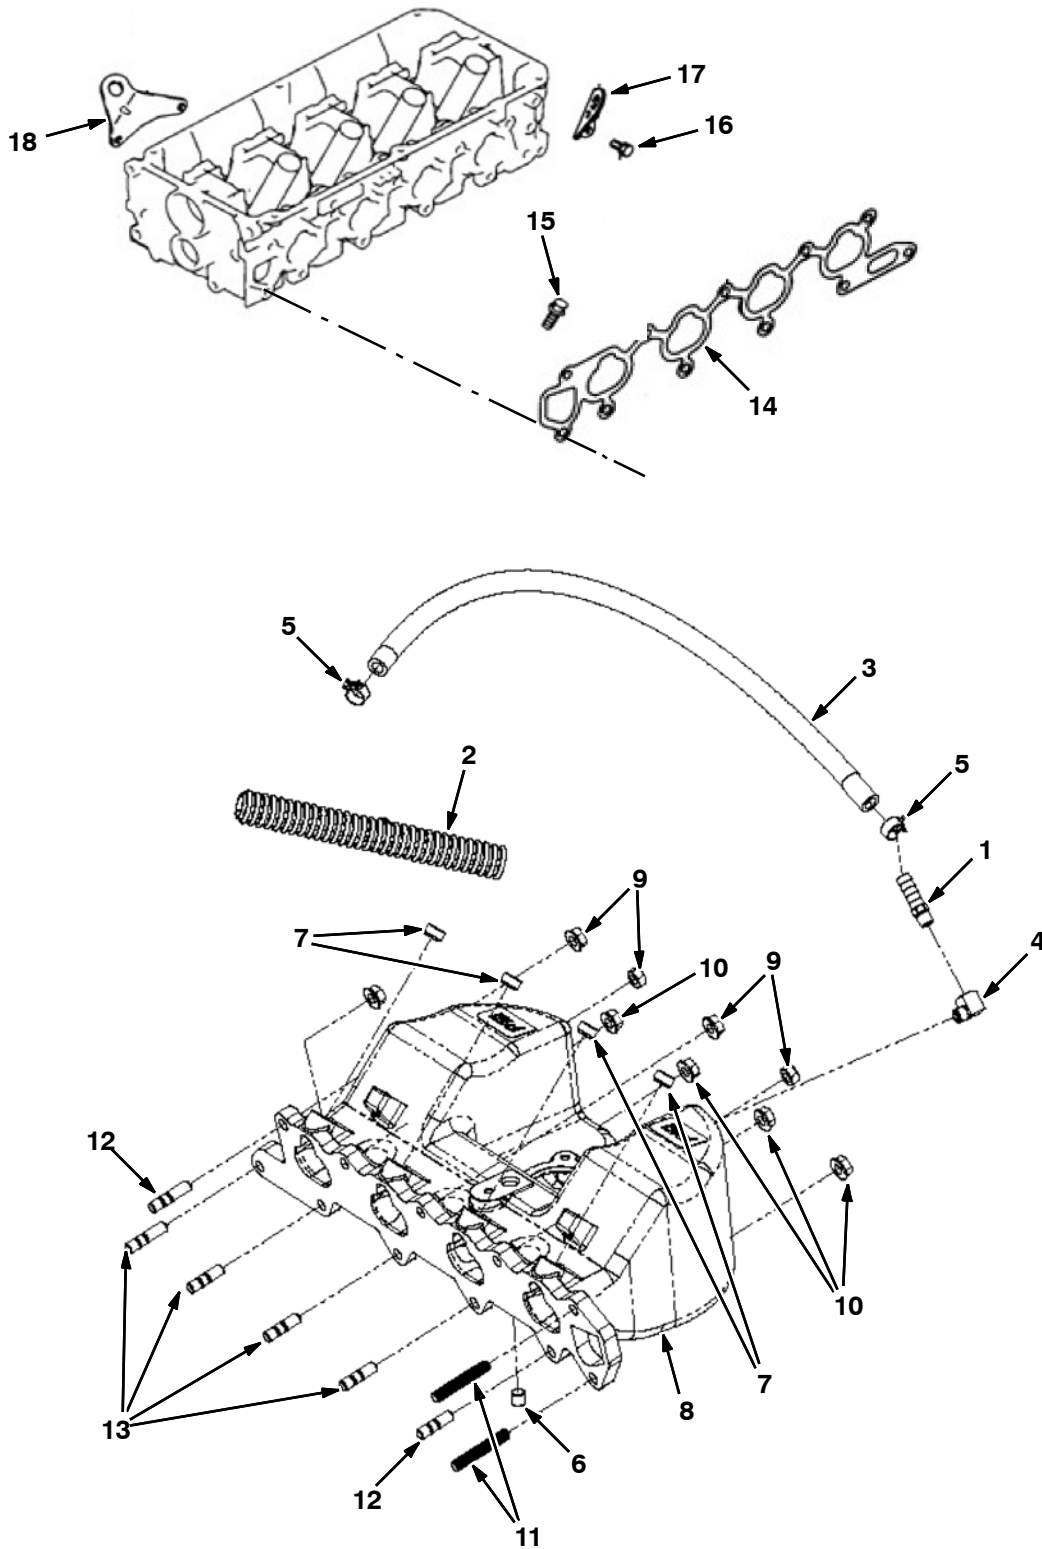
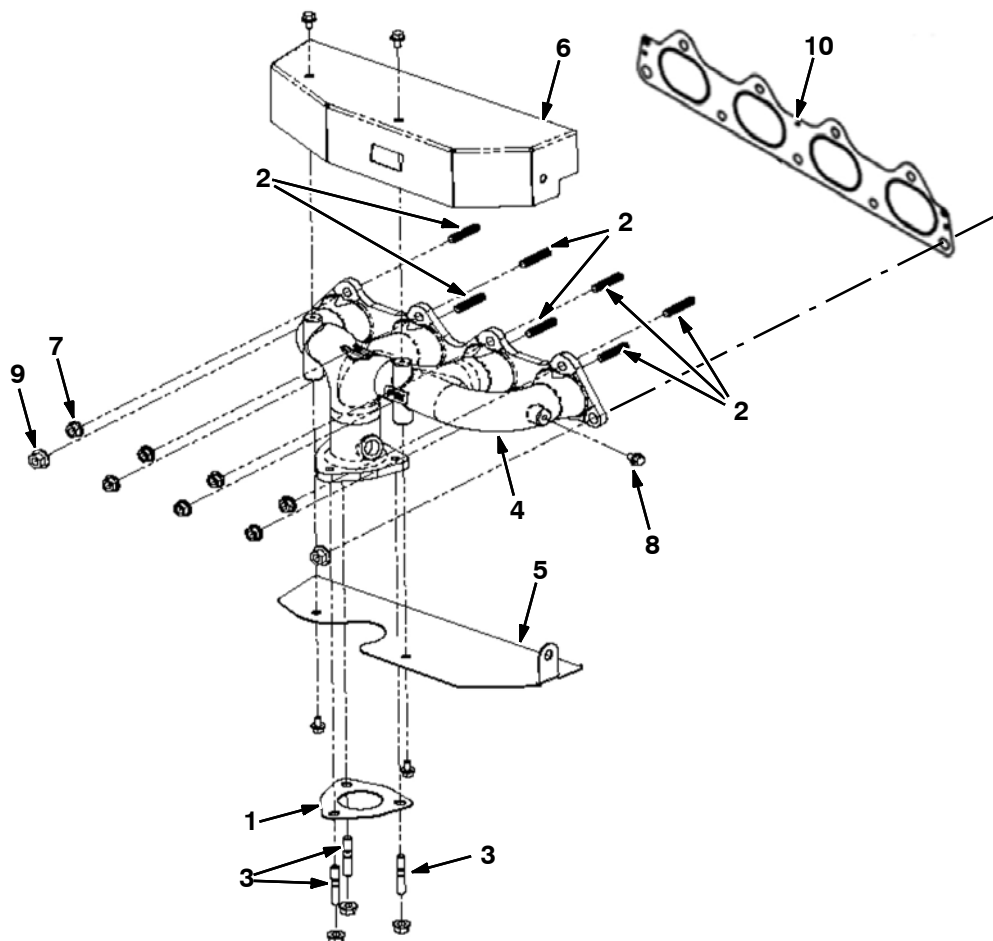
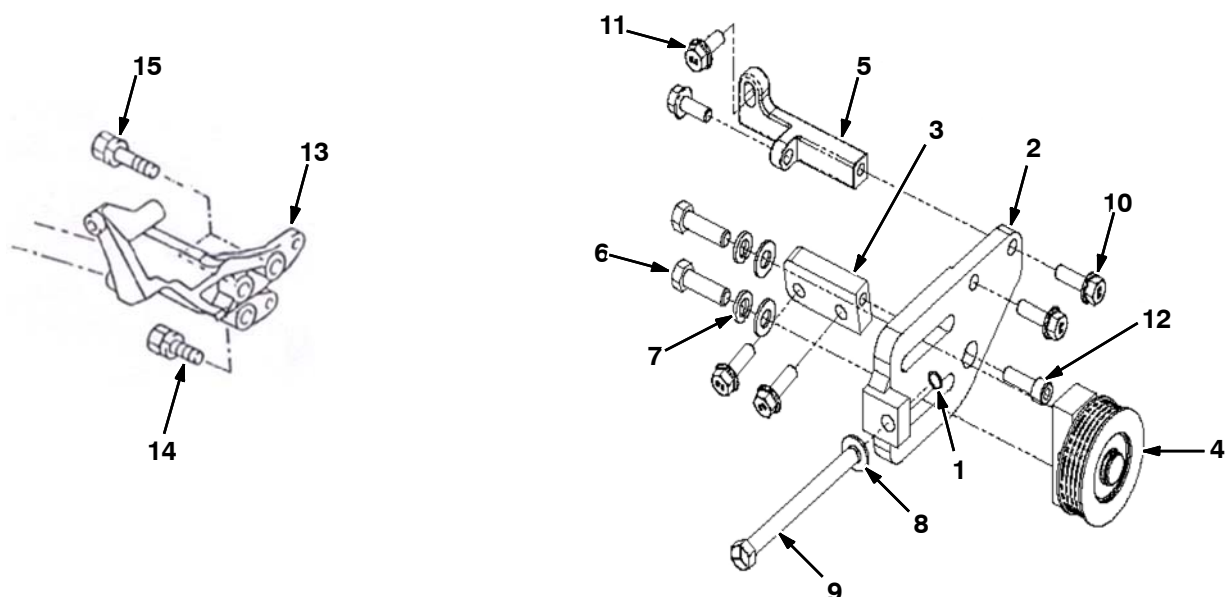


Fig. 10 - Intake Manifold Gasket Group

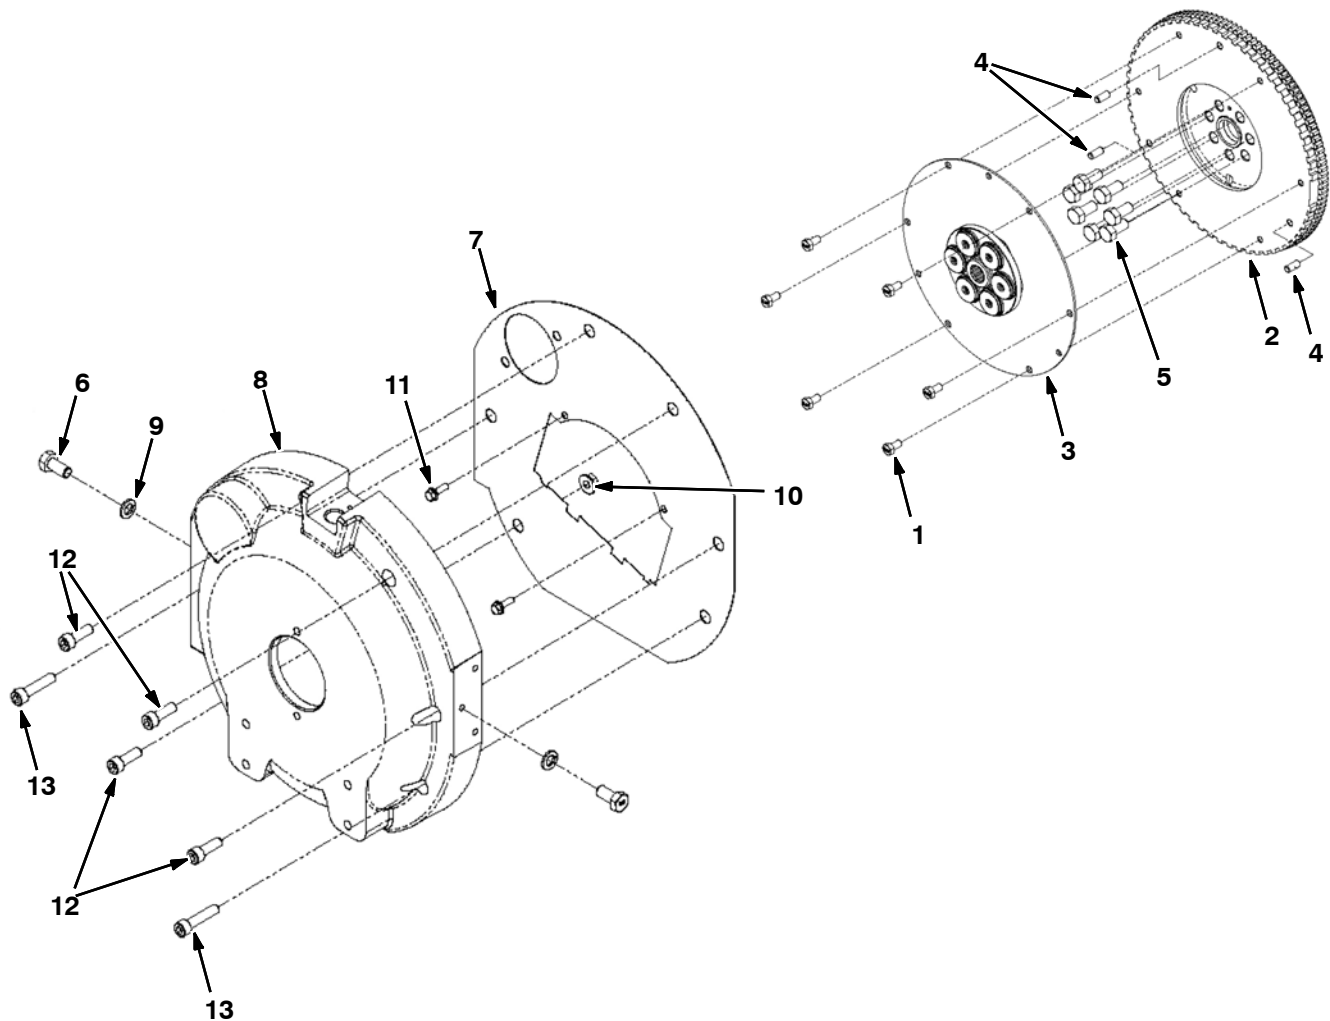
Ref.	Part No.	Description	Qty.
1	9010382	Fitting, 1/8 Mpt X 3/8 Hb [Mit]	1
2	9010281	Loom, Convolute, Split 5/8 [Mit]	17"
3	385001	Hose, Fuel, .38d, Rbr[16"L]	20"
4	9010383	Elbow, 1/8m X 1/8f, 90 [Mit]	1
5	9010282	Clamp, 3/8id [Mit Olive Green]	2
6	9010283	Plug, 1/8 Npt, Brs, Skt Hd [Mit]	1
7	9010284	Plug, Injector [Mit]	4
8	9010285	Manifold, Intake [Mit 20/24m Tilt]	1
9	9010286	Nut, M8- 1.25 [Mit]	2
10	385015	Nut, Flng, M8	7
11	9010287	Stud, M8- 1.25 X 50 Full Thrd [Mit]	2
12	9010288	Stud, M8- 1.25 X 35 [Mit Double End]	2
13	9010384	Stud, M8- 1.25 X 30 [Mit Double End]	4
14	9010613	Gasket, Manifold, Intake	1
15	9010606	Bolt, Flange	2
16	9010615	Bolt, Manifold, Inlet	1
17	9010617	Hanger, Engine	1
18	9010618	Hanger, Engine	1

Fig. 11 - Exhaust Manifold Gasket Group


Ref.	Part No.	Description	Qty.
1	9010296	Gasket, Manifold, Exh [Mit]	1
2	9010297	Stud, M8- 1.25 X 40 [Mit]	7
3	372020	Stud, Manifold, Intake, M8 X 28	3
4	9010298	Manifold, Exhaust [Mit 2.0/2.4]	1
5	9010302	Shield, Heat, Lower [Mit 20/24m]	1
6	9010303	Shield, Heat, Upper [Mit 20/24m]	1
7	9015915	Nut [2.4l Mit]	10
8	9010262	Bolt, M6- 1.0 X 10 Fl Hd [Mit]	5
9	9015916	Nut [2.4l Mit]	2
10	9010619	Gasket, Manifold, Exhaust	1


Fig. 12 - Fan Tensioner and Pump Mount Group


Ref.	Part No.	Description	Qty.
1	371562	Ring, Retaining	1
2	9010222	Plate, Tensioner, Adj [Mit 2.0/2.4]	1
3	9010223	Bar, Tensioner, Mtg [Mit 2.0/2.4]	1
4	9010224	Pulley, Tensioner, Assy[Mit2.0/2.4]	1
5	9010225	Bracket, Tensioner, [Mit 2.0/2.4]	1
6	9010226	Bolt, 3/8- 16 X 1 1/4 Hxhd [Mit]	2
7	371509	Washer, Lock, 0.38	2
8	9010227	Washer, Flat 3/8, Sae	3
9	9010228	Bolt, 3/8- 16 X 4.5 [Mit]	1
10	9010229	Bolt, M8- 1.25 X 25 [Mit]	4
11	9010230	Bolt, M8- 1.25 X 20 Fl Hd [Mit]	2
12	9010231	Bolt, M8- 1.25 X 25 Soc Hd [Mit]	1
13	9010623	Bracket, Pump, Mtg	1
14	9010624	Bolt, Washer	1
15	9010625	Bolt, Washer	2

Fig. 13 - Flywheel Group


Ref.	Part No.	Description	Qty.
1	9010232	Bolt, M8- 1.25 X 15, Hx Hd [Mit]	6
2	9010233	Flywheel, Flatface [Mit 20/24m]	1
3	9010234	Coupling, Flywheel [Mit20/24m]	1
4	9010235	Pin, Flywheel [Mit 20/20m]	3
5	9010236	Bolt, Flywheel [Mit 20/24m]	7
6	9010359	Bolt, M12- 1.75 X 25, Hex Hd [Mit]	2
7	9010237	Cover, Dust [Mit 2.0l]	1
8	9010238	Housing, Flywheel [Mit 2.0l]	1
9	9010360	Washer, Lock, M12 [Mit]	2
10	9010239	Nut, M10- 1.25 Flg [Mit]	1
11	9010240	Bolt, M6- 1.0 X 20 FI Hd [Mit]	2
12	9010241	Bolt, M10- 1.25 X 30 Soc Hd [Mit]	4
13	9010242	Bolt, M10- 1.25 X 45 Soc Hd [Mit]	2

Fig. 14 - Ignition Coil and Spark Plug Group

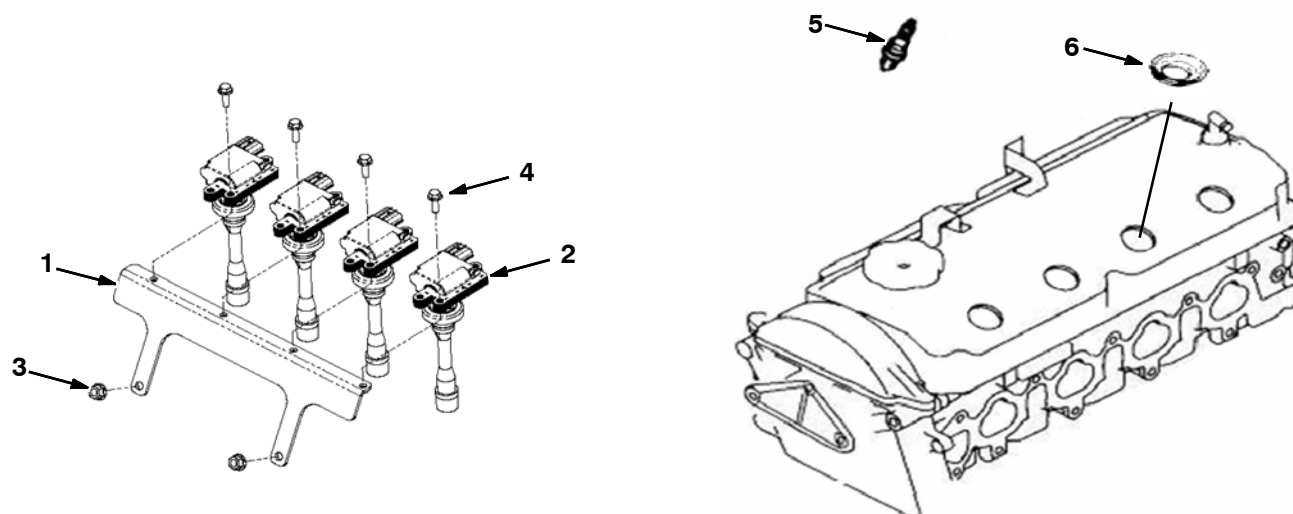


Ref.	Part No.	Description	Qty.
1	9010243	Bracket, Coil [Mit 2.0/2.4l]	1
2	9010244	Coil, Ignition [Mit 2.0/2.4l]	4
3	385015	Nut, Flng, M8	2
4	9010240	Bolt, M6- 1.0 X 20 Fl Hd [Mit]	4
5	9010622	① Plug, Spark [Torch K6rf- 11 14mm]	4
5	9014160	② Plug, Spark [Mitsubishi 2015 12mm]	4
6	9010479	Seal, Oil	4

① Serial Number (006501- 007105)


② Serial Number (007106-)

Fig. 15 - Starter / Alternator Group

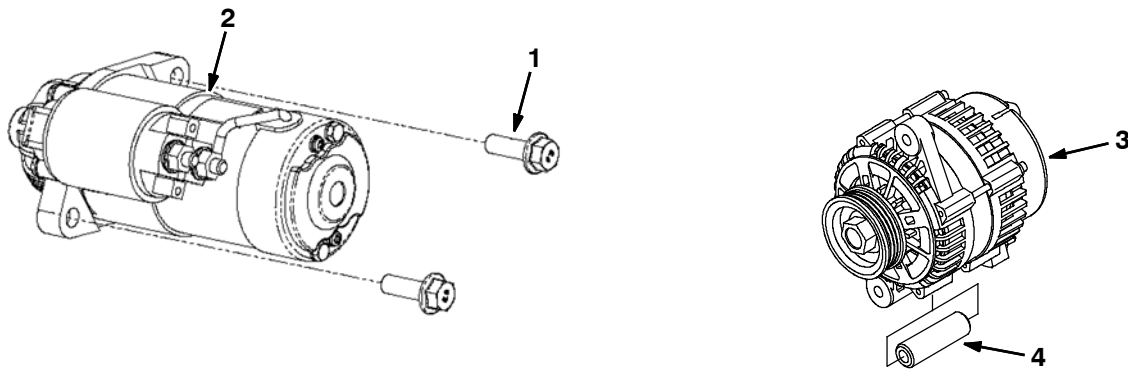


Ref.	Part No.	Description	Qty.
1	9010245	Bolt, M10- 1.50 X 30 [Mit]	2
2	9010246	Starter, Motor [Mit 2.0/2.4l]	1
3	9010217	Alternator, 7si [Mit Df Sur- Belt]	1
4	9010219	Spacer, Alternator [Mit 2.0/2.4l]	1

Fig. 16 - Remote Oil Filter Group

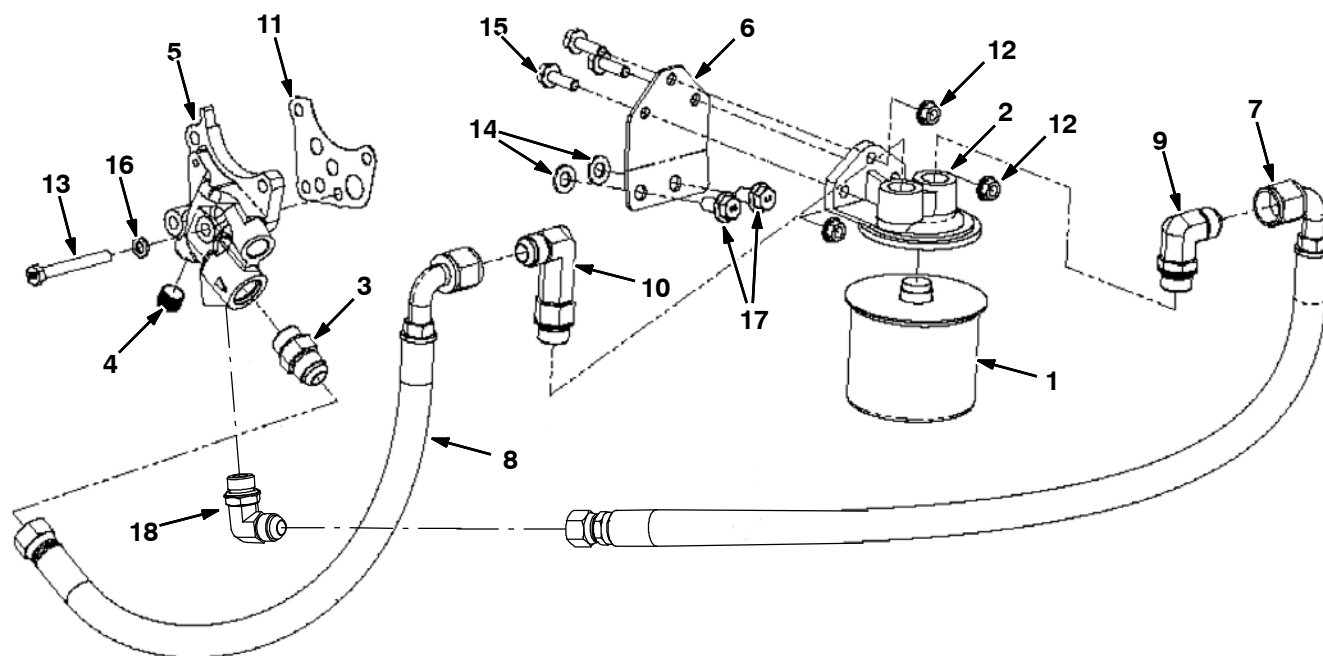


Ref.	Part No.	Description	Qty.
1	393982	Element, Fltr, Oil, Spin- On (Mits)	1
2	371503	Mount, Fltr, Remote	1
3	9010371	Fitting, Str, 10- 10 Orb, 37fi [Mit]	1
4	9010372	Plug, 3/8npt X 5/16, Brs [Mit]	1
5	9010373	Adapter, Filter, Oil, Remote [Mit]	1
6	9010374	Bracket, Filter, Oil, Remote [Mit]	1
7	9010376	Hose, 90xstr,Fltr, Oil, Remote[Mit]	1
8	9010376	Hose, 90xstr,Fltr, Oil, Remote[Mit]	1
9	9010628	Elbow	1
10	9010629	Elbow	1
11	9010377	Gasket, Oil, Adapter [Mit 2.0/2.4]	1
12	385015	Nut, Flng, M8	3
13	9010253	Bolt, M8- 1.25 X 70 Hxhd [Mit]	1
14	9010630	Washer	2
15	9010229	Bolt, M8- 1.25 X 25 [Mit]	3
16	9010380	Washer, Lock, M8 [Mit]	1
17	9010631	Bolt	2
18	9010628	Elbow	1

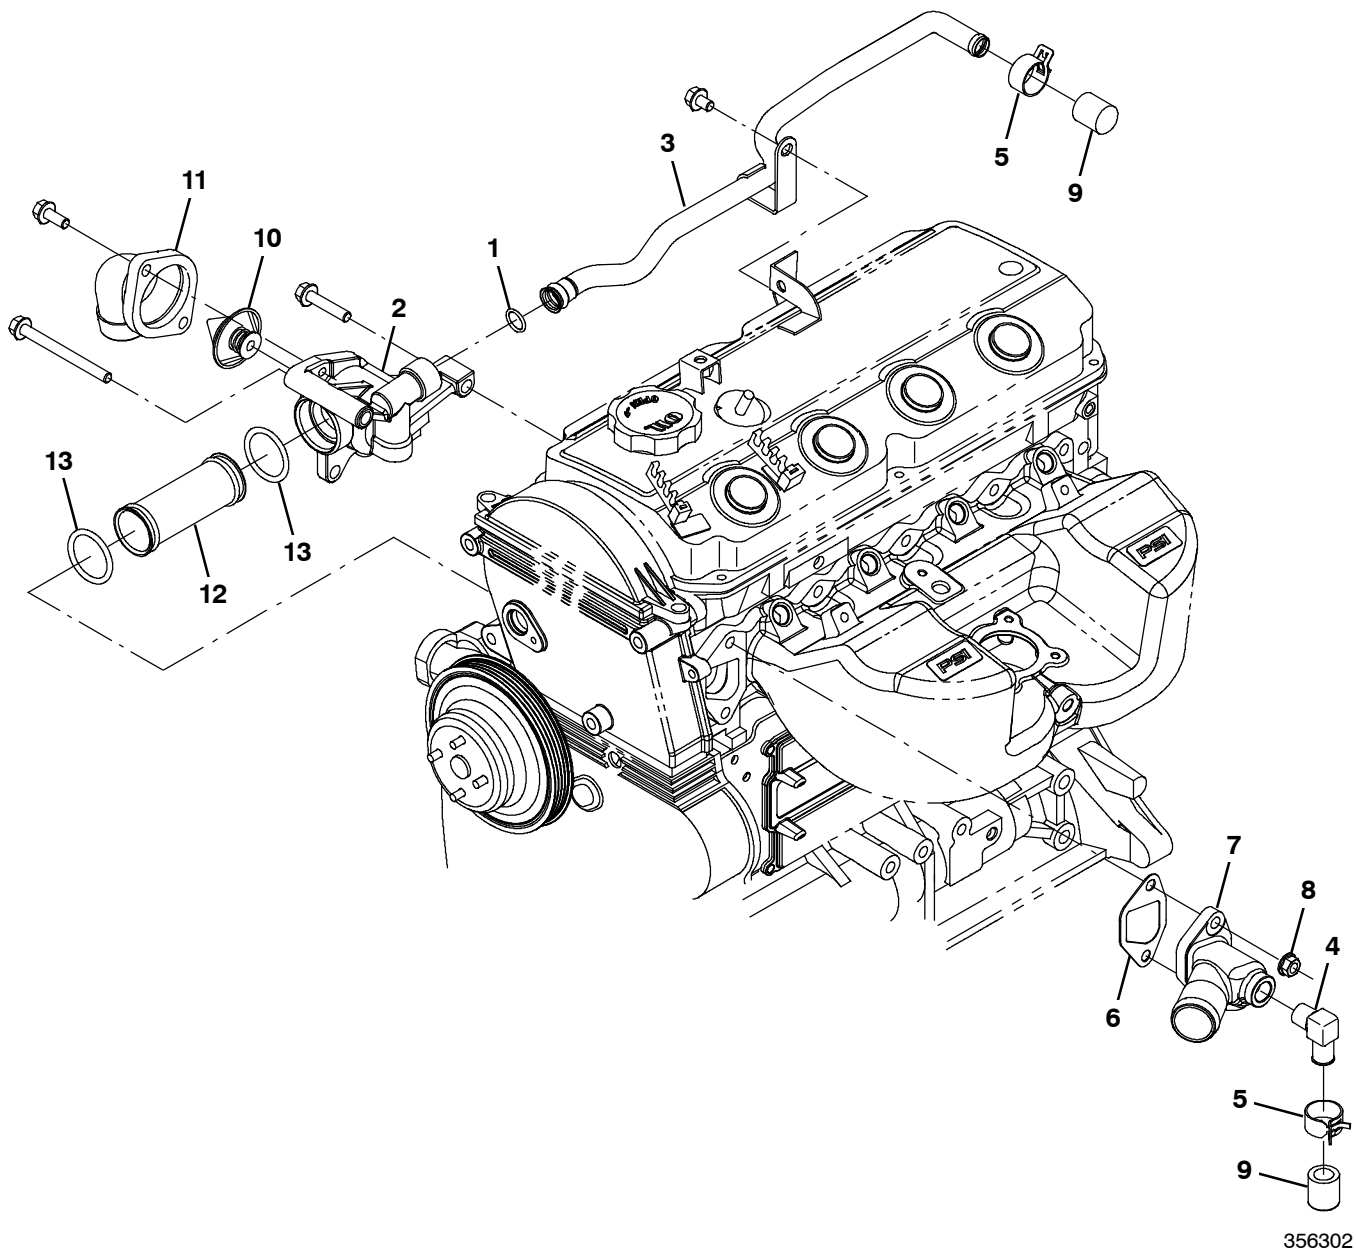Fig. 17 - Coolant Group


356302

Ref.	Part No.	Description	Qty.
1	9010289	O- Ring [Mit 208 Buna- N]	1
2	9010290	Housing, T- Stat, 2 Holes [Mit]	1
3	9010291	Tube, Water, Line [Mit]	1
4	385011	Fitting, E90	1
5	384979	Clamp, Hose, Spring, 0.62d	2
6	9010632	Gasket, Outlet	1
7	9010294	Outlet, Water, W/Plug [Mit 2.0/2.4l]	1
8	385015	Nut, Flng, M8	2
9	9010295	Cap, Rubber, 5/8id [Mit 2.0/2.4l]	2
10	9010633	Thermostat	1
11	9010215	Housing, Thermostat	1
12	9010910	Tube, Pump, Water	1
13	9013530	Seal, Tube, Water [Mit 2.0l]	2

Fig. 18 - DSR Coolant Group, LPG Engine

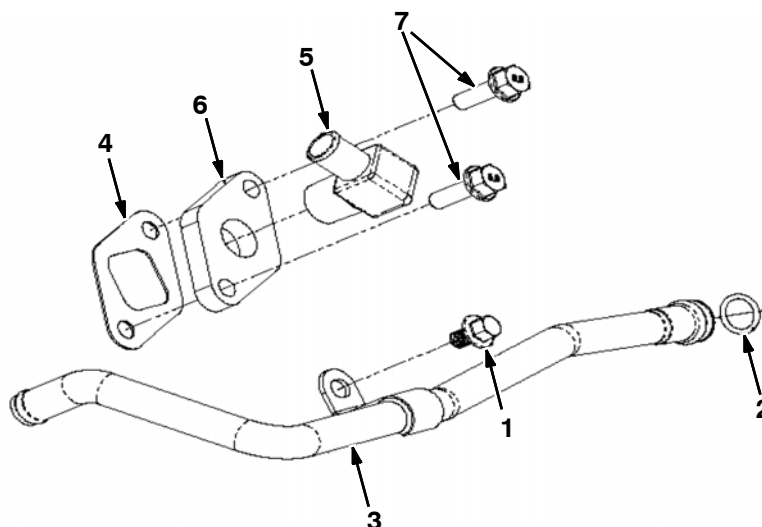

Ref.	Part No.	Description	Qty.
1	9010305	Bolt, M8- 1.25 X 12 [Mit]	1
2	9010289	O- Ring [Mit 208 Buna- N]	1
3	9010306	Tube, Cooling, Line [Mit]	1
4	9010307	Gasket, Water Supply [Mit 2.0/2.4]	1
5	9010308	Fitting, 1/2 Mpt X 5/8bh 90deg [Mit]	1
6	9010309	Plate, Water, Outlet [Mit Bypass]	1
7	9010310	Bolt, M8- 1.25 X 25 Flg Hd [Mit]	2

Fig. 19 - Electrical Group


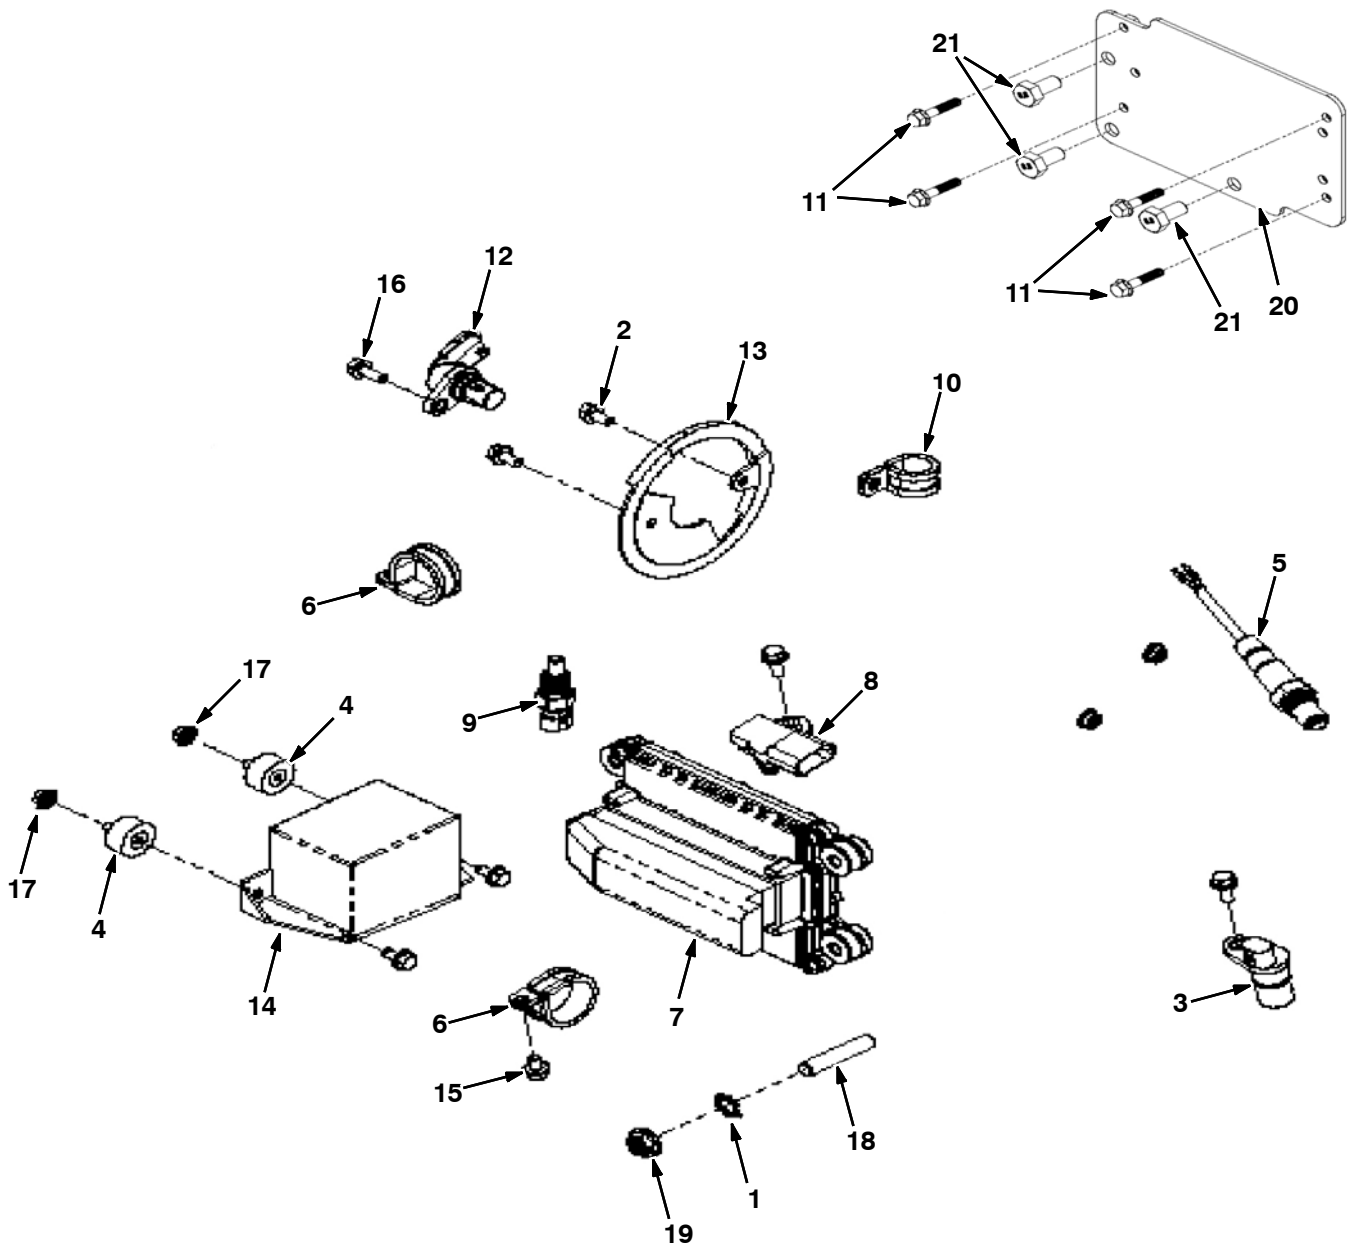


Fig. 19 - Electrical Group


Ref.	Part No.	Description	Qty.
1	9010255	Washer, Star, M10 [Mit]	1
2	9010256	Bolt, M6- 1.0 X 12 FI Hd PI [Mit]	2
3	372492	Sensor, Spd, Timing Wheel [3.0l]	1
4	9008805	Isolator	2
5	1028558	Sensor, Exhaust, Tailpipe	1
6	9010257	Clamp, 1/4 Hole [Mit #20]	2
7	1071397	Module, Ecu, Gas [Mit 2.0l 2013]	1
7	1071398	Module, Ecu, Lpg [Mit 2.0l 2013]	1
8	372493	Sensor [Tmap]	1
9	372891	Sensor, Temp, Coolant	1
10	9010258	Clamp, 0.75d [Mit]	1
11	9010249	Bolt, M6- 1.0 X 30 FI Hd [Mit]	4
12	9010260	Sensor, Camshaft [Mit]	1
13	9010261	Cam, Sensor, Wheel [Mit 2.0/2.4l]	1
14	1071653	Harness, Wire, Eng, Gas [Mit, 2.0l]	1
14	1071654	Harness, Wire, Eng, Lpg [Mit, 2.0l]	1
15	9010262	Bolt, M6- 1.0 X 10 FI Hd [Mit]	3
16	9010263	Bolt, M6- 1.0 X 16 FI Hd [Mit]	3
17	9010264	Nut, M6- 1.0 Flange [Mit]	4
18	9010366	Stud, M10- 1.25 X 50, Full Thrd [Mit]	1
19	9010367	Nut, M10- 1.25, Hx Flg [Mit]	1
20	9010247	Plate, Mtg, Ecu [Mit 2.0/2.4l]	1
21	9010248	Bolt, M10- 1.25 X 20 Hxhd [Mit]	3

Fig. 20 - Fuel Rail Group, Gasoline Engine

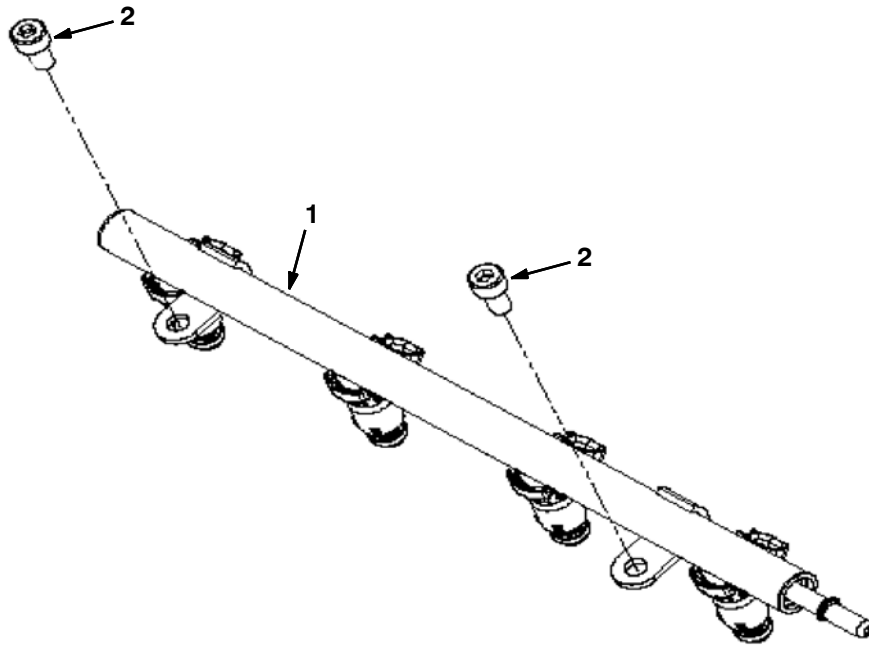


Ref.	Part No.	Description	Qty.
1	9015878	Manifold, Fuel [2.4L Mit]	1
2	9010327	Bolt, M8- 1.25 X 16, Soc Hd [Mit]	2


Fig. 21 - Throttle Body Group, Gasoline Engine

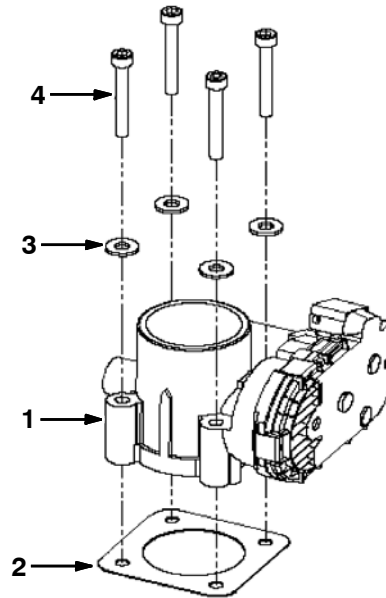


Ref.	Part No.	Description	Qty.
1	9010266	Throttle Body [Mit , Bosch]	1
2	9010268	Gasket, Throttle [Mit 40mm]	1
3	9010330	Washer, 1/4 Flat [Mit]	4
4	9010331	Bolt, M6- 1.0 X 45, Skt Hd [Mit]	4

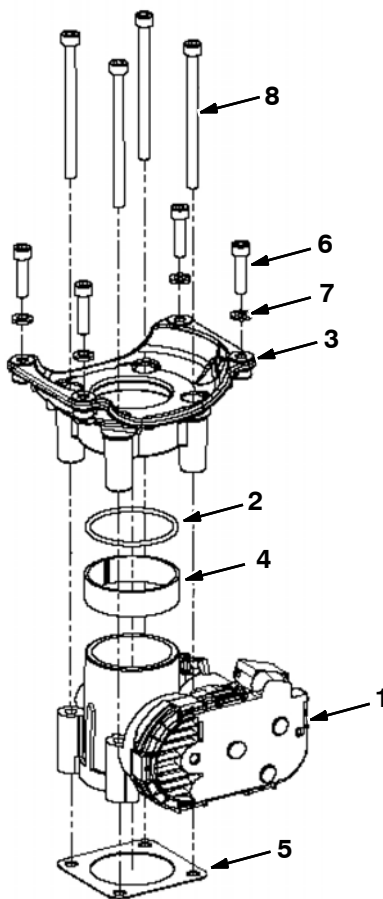Fig. 22 - Throttle Body Group, LPG Engine


Ref.	Part No.	Description	Qty.
1	9010266	Throttle Body [Mit , Bosch]	1
2	1037311	Seal, Org, Lpg	1
3	9006619	Adapter	1
4	9010267	Spacer, Ring, Throttle [Mit 40mm]	1
5	9010268	Gasket, Throttle [Mit 40mm]	1
6	9010269	Bolt, M6- 1.0 X 25 Soc Hd [Mit]	4
7	9010270	Washer, Lock, M6 [Mit]	4
8	9010271	Bolt, M6- 1.0 X 85 Soc Hd [Mit]	4

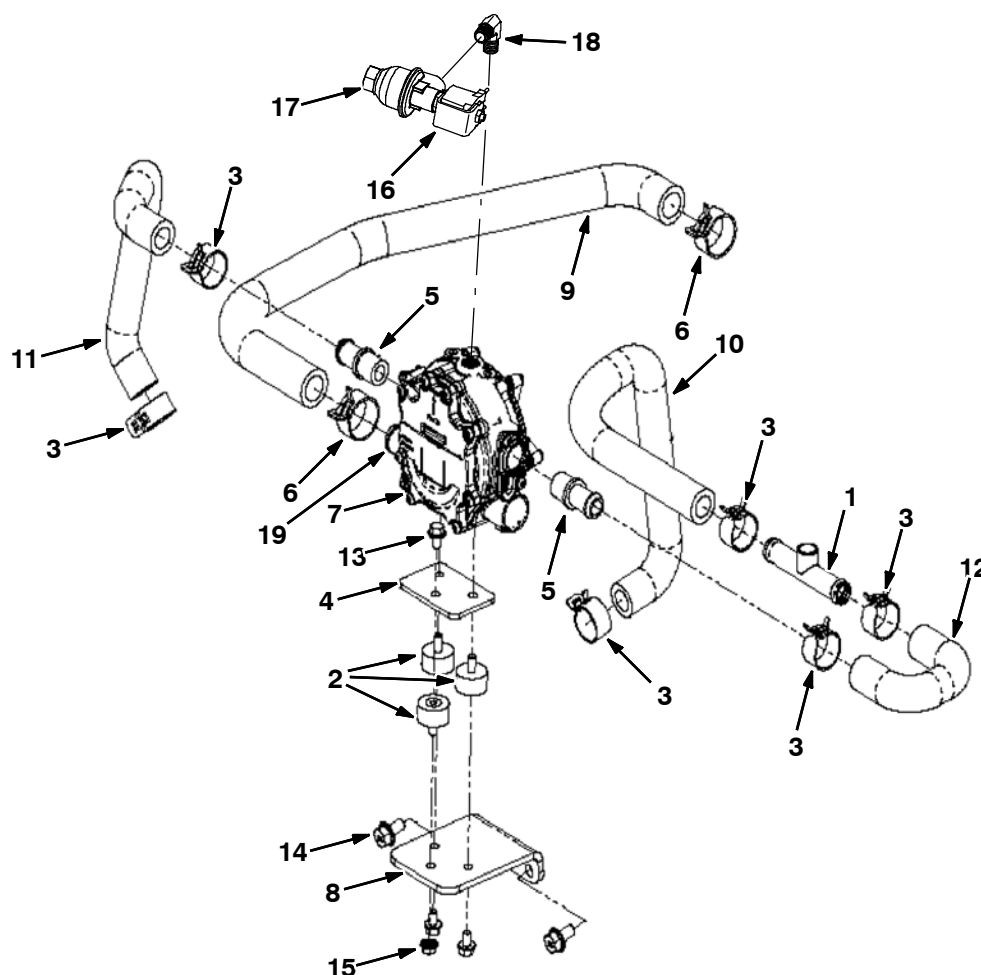Fig. 23 - Vaporizer Group, LPG Engine


Ref.	Part No.	Description	Qty.	
	1	9010272	Hose Assy, Upper, Tap [Mit]	1
	2	9008805	Isolator	3
	3	384979	Clamp, Hose, Spring, 0.62d	6
	4	9008804	Plate, Mtg [Epr]	1
	5	9010273	Fitting, 1/2 X 5/8 Hose,Plastic[Mit]	2
	6	9010274	Clamp, Tension [Mit #29]	2
▽	7	9008193	Regulator	1
▲		9010626	Repair Kit, Vaporizer	1
	8	9010275	Bracket, Vaporizer [Mit 20/24m Tilt]	1
	9	9010276	Hose, Fuel, Molded [Mit 20/24m]	1
	10	9010277	Hose, Coolant, Molded [Mit 20/24m]	1
	11	9010278	Hose, Coolant, Molded [Mit 20/24m]	1
	12	9010279	Hose, Coolant, Molded [Mit 20/24m]	1
	13	9010262	Bolt, M6- 1.0 X 10 Fl Hd [Mit]	3
	14	9010280	Bolt, M8- 1.25 X 16 Fl Hd [Mit]	2
	15	9010264	Nut, M6- 1.0 Flange [Mit]	1
▽	16	9006620	Lock- Off, 12v, Lpg [Mit]	1
▲	17	9007380	Filter Kit, Fuelock, Lpg	1
	18	9010317	Fitting, 1/4mpt X 1/4mpt, 90deg[Mit]	1
	19	PSI#106817	Fitting, Hose, Plastic	1

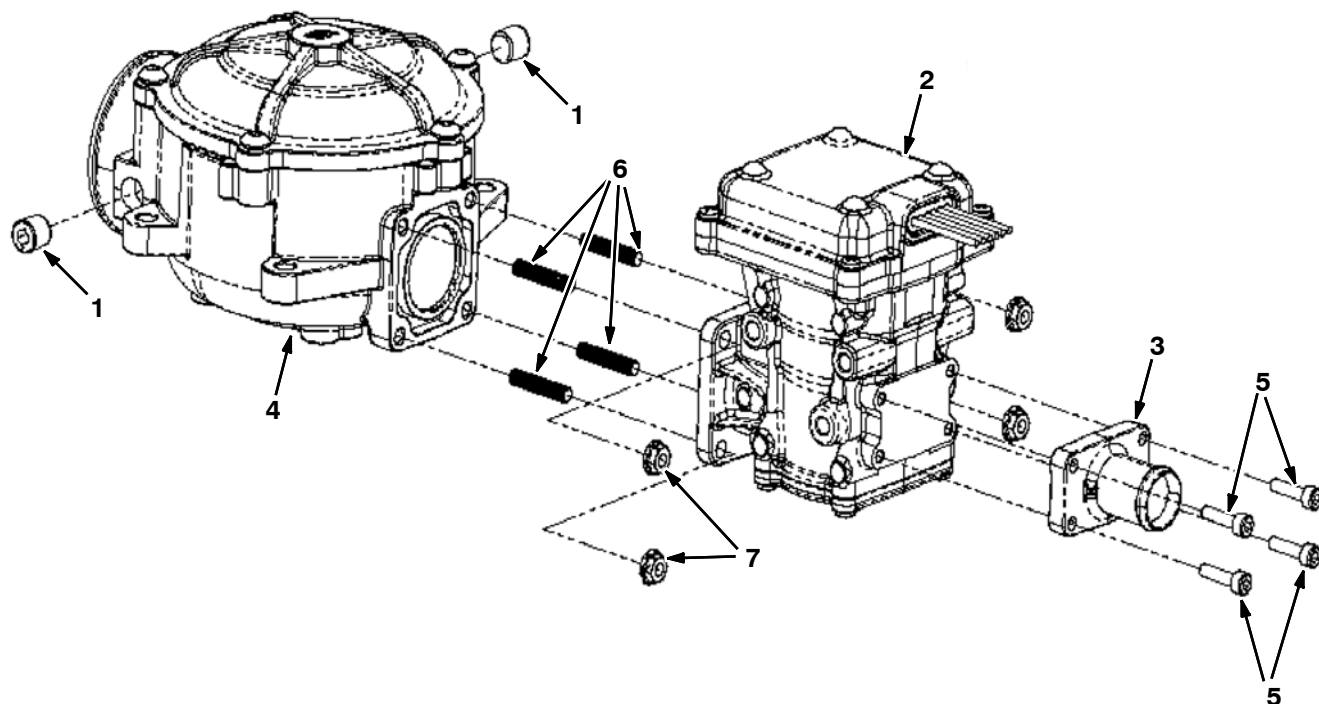Fig. 24 - Electronic Pressure Regulator (EPR) Group, LPG Engine


Ref.	Part No.	Description	Qty.
1	9010314	Plug, 1/8npt, Brs [Mit]	2
2	9008806	Regulator, Press, Electronic [Epr]	1
3	9008807	Fitting, Barb, 3/4" [Epr]	1
▽ 4	9006618	Mixer	1
▲	9010634	Repair Kit, Mixer	1
5	9008808	Screw, Soc, M4 X 0.70 X 16	4
6	9007424	Stud, M05- 0.8	4
7	9007423	Nut, Flng, M05- 0.8	4

SECTION 6

CONTENTS	PAGE
PART NUMBER TO PAGE NUMBER CROSS REFERENCE LIST	6-2
PART DESCRIPTION TO PAGE NUMBER CROSS REFERENCE LIST	6-13

CROSS REFERENCE

PART NUMBER TO PAGE NUMBER CROSS REFERENCE LIST

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
C460919	2-137	07790	2-11, 2-15, 2-17, 2-19, 2-49, 2-67, 3-3, 3-5, 3-21	1005229	1-1, 2-55
CD001	2-17			1005304	3-31
PSI#106817	5-29			1005318	3-31
00960	2-83	07791	2-5, 2-15, 2-17, 2-27, 2-29, 2-43, 2-45, 2-47, 2-53, 2-63, 2-89, 2-91, 2-107, 2-111, 3-15, 3-31	1005740	2-97
01314	2-97			1007220	2-97
01683	2-81, 3-9, 3-31			1007807	2-99
01684	2-63, 2-67, 2-69, 2-99, 3-9, 3-53			1007953	2-111
01685	2-41, 2-75, 2-81, 2-85, 2-87	07792	2-11	1011107	2-45
01686	2-71, 2-77	07805	2-99	1011123	3-7
01754	3-15	07810	2-97	1011216	2-43
01762	2-99	08085	3-23	1011895	2-45
02351	2-45	08165	2-43	1012248	2-45
02706	4-13	08175	2-89, 2-99	1012615	2-21, 2-23
02850	2-5, 2-13, 2-15, 2-75, 2-81, 3-13, 3-49, 3-51	08178	2-63	1013031	2-43
		08179	2-87, 2-95	1013086	2-45
03026	2-35, 2-37	08182	2-57, 2-63, 2-87, 2-89, 2-93, 2-97, 3-7	1013117	2-43
03192	3-51	08202	2-57, 2-59	1013509	2-45
03193	2-79	08236	2-71, 2-73	1013588	2-31, 2-33
04706	2-25, 2-67, 2-69, 3-9	08329	2-53	10137	2-41
06548	2-45	08708	2-21, 2-23, 2-25, 2-65, 2-67, 2-69, 2-77, 2-111, 3-9, 3-19, 3-21, 3-23, 3-45, 3-47	1014295	2-27, 2-29
06549	2-77, 2-87, 3-3, 3-5, 3-9, 3-37, 3-55			1014563	2-49
06925	2-81			1014843	2-49
06927	2-15, 2-75, 2-81	08709	2-5, 2-17, 2-27, 2-29, 2-35, 2-37, 2-39, 2-43, 2-47, 2-49, 2-61, 2-65, 2-77, 2-83, 2-87, 2-89, 2-93, 2-95, 2-97, 2-99, 2-107, 3-7, 3-29, 3-31, 3-37, 3-45, 3-47, 3-51	1014977	3-31, 3-33, 3-35
06928	2-13			1014985	3-31
06932	3-9			1015205	2-49
06933	2-13, 2-27, 2-29, 2-31, 2-33, 3-3, 3-5, 3-27, 3-37, 3-55			1015273	2-17, 3-53
06934	3-9			1015274	2-15
06935	3-3, 3-5, 3-9			1015314	2-49
06938	3-3, 3-5			1015455	3-33, 3-35
06940	3-19			1015547	2-31, 2-33
06942	2-45	08711	2-57, 2-59, 2-69, 2-71, 2-99	1015815	2-33
06944	2-77, 2-111			1016029	3-15
06945	2-65	08712	1-2, 2-63, 2-71, 2-73	1016314	2-41, 3-19
06946	1-2, 2-71, 2-73	08713	1-2, 2-67, 2-69, 2-71, 2-73, 2-87, 3-13	1016563	3-19
06955	2-17, 2-39, 2-61, 2-97			1017141	2-137
06961	2-25, 2-85	08714	2-79	1017218	2-19, 2-67, 2-83, 3-31, 3-49
06962	2-49, 2-97	08716	3-3, 3-5	1017255	3-33, 3-35
06963	2-27, 2-29, 2-93	09007	2-63	1018289	2-107
06965	2-89, 3-7	09010	2-63, 2-99	1019285	3-31
06969	2-57, 2-59	09011	2-53	1019939	2-45
06975	2-99	09062	2-67, 2-69, 2-71, 2-73, 3-9	1020287	3-51
06977	2-99			1020341	2-67, 2-69, 3-9
07259	2-77	09088	2-57	1020434	2-137
07299	2-27, 2-29	09120	2-99	1021265	2-25
07450	2-95	09145	2-67, 3-3, 3-5, 3-9	1021579	1-1, 2-107
07471	2-111	09164	3-45, 3-47	1024260	2-25, 4-3
07514	3-31	09200	2-11, 2-81	1024478	2-25
07785	3-3, 3-5	09244	2-95, 3-5	1025101	2-137
07788	2-7, 2-9	09252	2-77	1025132	2-107
07789	2-13, 2-77, 3-9	09740	2-47, 2-53, 2-75, 3-13, 3-31	1025133	2-107
				1026459	2-93, 3-7
				1026462	2-93, 3-7
				1026525	2-93, 3-7
				1026605	2-61
				1026610	2-61
				1026688	2-63, 3-41
				1026798	1-2, 2-67, 2-69

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1026825	2-11	1032012	1-1	1036270	2-47
1026841	2-59	1032067	3-11	1036489	2-13
1026856	2-59	1032112	2-45	1036500	2-13
1027380	2-3	1032119	2-35, 2-37	1036502	2-13
1027531	2-65	1032262	3-11	1036608	3-23
1027533	2-65	1032315	2-11	1036702	2-87
1027589	2-49	1032429	2-97	1036801	3-31
1027651	2-65	1032432	2-97	1036819	2-5
1028129	2-47	1032449	2-97	1036892	2-7, 2-9, 2-11, 2-15, 2-17, 2-19, 2-39, 2-49, 3-3, 3-5, 3-31, 3-51, 3-53
1028146	2-59	1032488	2-59	1036913	2-5
1028159	2-59	1032515	1-1, 2-59	1036985	3-3, 3-5
1028201	2-11	1032584	3-9	1036995	3-3, 3-5
1028246	2-65	1032707	3-9	1037265	2-87
1028252	2-5	1032722	3-11	1037311	5-28
1028492	2-53	1032752	3-9	1037345	1-2, 2-7, 2-9, 2-45, 2-71, 2-73, 2-89, 2-91, 3-7
1028558	2-43, 5-25	1032812	2-45	1037346	2-5, 2-11, 2-13, 2-15, 2-17, 2-35, 2-37, 2-39, 2-43, 2-45, 2-47, 2-49, 2-63, 2-75, 2-81, 2-83, 2-85, 2-89, 2-91, 2-95, 2-107, 3-7, 3-13, 3-23, 3-33, 3-35, 3-45, 3-47, 3-49
1028750	2-21	1032915	2-107	1037354	2-27, 2-29, 2-47, 2-59, 2-71, 2-73, 2-87, 2-93, 2-95, 2-107, 3-31, 3-45, 3-47
1028790	2-21, 2-23	1032962	2-15	1037355	2-35, 2-37, 2-45, 2-49, 2-57, 2-59, 2-67, 2-71, 2-73, 2-81, 2-89, 2-95, 3-37
1028832	2-21, 2-23	1033237	2-65	1037358	2-11, 2-87, 2-95, 2-97, 3-11, 3-13, 3-26
1028924	2-45	1033286	2-11	1037476	2-87
1029018	2-27, 2-29	1033287	2-11	1037998	2-47
1029105	3-19	1033288	2-11	1038037	1-2, 2-67
1029238	2-75	1033291	2-13	1038060	2-87
1029293	2-45	1033343	2-7, 2-9	1038101	2-87
1029295	2-45	1033520	2-134	1038176	2-71, 2-73, 2-97
1029580	2-7	1033575	2-45	1038209	2-35, 2-37
1029674	2-89, 2-91	1033578	2-5	1038329	2-87
1029682	2-89, 2-93, 3-7	1033630	2-45	1038360	2-63, 3-41
1029704	2-89	1033746	2-45	1038372	2-87
1029709	2-89	1033760	2-21, 2-23	1038806	2-11
1029801	2-9	1033771	2-21, 2-23	1038896	2-87
1029951	2-21, 2-23	1033883	2-21, 2-23	1038915	2-77
1030218	1-2, 2-71, 2-73	1033884	2-21	1038959	2-11
1030374	2-111	1033897	2-45	1039007	3-9
1030585	2-15	1033995	2-63, 2-65	1039038	3-9
1030588	2-11, 2-15	1034191	3-3, 3-5	1039127	2-83
1030592	3-15	1034244	2-65		
1030593	2-15, 2-17	1034378	2-15		
1030601	3-17	1034455	2-57		
1030782	3-21	1034462	2-57		
1030813	2-21	1034633	2-45		
1030973	3-3, 3-5	1034671	2-115, 4-7		
1030985	2-21, 2-23	1034760	2-87		
1031026	2-49	1034763	2-87		
1031122	2-83, 3-51	1034806	2-53		
1031207	3-15	1034910	2-63		
1031211	2-21	1034978	2-79		
1031503	2-5, 2-79	1035153	2-21, 2-23		
1031566	2-49	1035400	2-97		
1031576	2-81, 3-49	1035507	2-21, 2-23		
1031616	3-13	1035619	2-65		
1031623	2-15, 2-49	1035620	2-63		
1031625	2-13	1035660	2-67, 2-69, 3-9		
1031664	2-21, 2-23	1035684	1-2, 2-67, 2-69		
1031665	2-87, 3-15	1035813	2-45, 2-47		
1031683	2-21	1035826	2-63		
1031699	3-31	1036027	2-59		
1031916	3-7	1036173	3-3, 3-5		
1031921	2-65	1036183	3-5		
1031939	2-65	1036230	3-19		

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1039228	2-87	1044352	2-85	1054428	2-49
1039309	2-111	1044419	1-2, 2-71, 2-73	1054901	2-53, 4-11
1039320	2-7, 2-9	1044764	2-67, 2-69	1054905	2-111, 4-13
1039501	2-99	1044768	2-67, 2-69	1055002	2-49
1039517	2-59	1044950	1-2, 2-71, 2-73	1055029	2-51
1039520	2-59	1044992	2-45, 2-47	1055552	2-31
1039523	2-59	1045009	3-21	1055564	2-49
1039553	2-87	1045033	3-21	1056769	2-21, 2-23
1039628	2-93	1045063	3-19	1056815	2-75
1039649	3-7	1045125	2-107	1057337	2-99
1039735	3-3, 3-5	1045156	3-21	1057338	2-89, 2-91, 3-7
1039846	2-83	1045203	3-21	1057643	2-99
1039971	2-75	1045348	1-1, 2-5, 3-29	1057707	1-2
1039999	2-75	1045352	2-7, 2-9, 3-29	1057708	1-2
1040019	2-95, 3-5	1045354	1-1	1057710	1-2
1040091	2-113, 4-5	1045366	1-1	1057711	1-2
1040146	2-5	1045487	2-21, 2-23, 2-87, 3-41	1057776	2-15
1040162	2-63			1057778	2-15
1040276	2-69	1045525	3-23	1057786	2-15
1040281	3-23	1045681	3-21	1057875	2-11
1040363	2-13	1045764	2-49	1057880	2-11
1040400	2-69	1045900	1-1, 2-85	1057890	2-35, 2-37
1040408	2-69	1045964	2-95, 2-97	1057934	2-75
1040467	2-25, 2-47, 2-49, 2-67, 2-69, 2-81, 2-95, 2-97, 3-9, 3-13	1046048	2-95	1057961	2-17
		1046052	2-95	1058273	2-11
1040590	2-69	1046426	2-11, 2-83, 3-49	1058404	2-49
1040753	2-95, 2-97	1046428	2-7, 2-9	1058670	2-49
1040759	2-71, 2-73	1046613	2-45	1058784	2-25
1040761	2-63	1046893	2-21	1058785	2-25
1040816	2-15	1046993	3-9	1058807	2-25
1041034	2-93, 3-7	1047225	3-21	1058996	2-25
1041102	2-3	1047543	2-67, 2-69, 3-9	1059052	2-49
1041123	2-95	1047618	2-134	1059211	2-15
1041393	2-53	1047619	2-134	1059221	2-19
1041446	2-97	1047691	2-11	1059252	3-13, 3-15
1041473	3-9	1047717	2-85	1059269	2-17
1041539	2-95	1047741	2-137	1059276	2-17
1041754	3-9	1048261	2-13	1059285	2-17
1041870	3-21	1048335	2-81	1059286	2-17
1041873	2-21, 2-23	1048353	2-81	1059291	2-17
1041882	3-9	1048538	2-77	1059307	2-11
1042021	2-61	1048740	3-13	1059440	2-15
1042024	2-61	1048743	3-13	1059477	2-15
1042073	3-23	1048950	3-23	1059478	2-15
1042097	2-3	1048974	2-47	1059479	2-15
1042718	3-9	1049017	3-13	1059481	2-15
1042785	2-95	1049061	3-13	1059516	2-15
1042791	2-7, 2-9	1049158	2-67, 2-69	1059520	2-15
1042812	2-7	1049259	3-31	1059868	2-19
1042829	2-9	1049860	2-81	1059874	2-15, 2-19
1042831	3-49	1049982	2-81	1059996	2-15
1042855	2-95	1050295	3-13	1060009	2-49
1043176	3-26	1051052	2-13	1060343	2-49
1043652	2-113, 2-115	1051199	2-85	1060413	2-75
1043754	2-111	1051863	2-49	1060449	2-15
1043755	2-111	1053291	2-85	1060546	3-26
1043813	2-47	1053318	2-17	1060586	3-13
1044279	3-19	1053321	2-85	1060639	2-15
1044351	2-85	1054256	2-89, 2-91, 3-7	1060648	3-15
		1054382	2-49	1060745	2-43

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1060763	2-87	1067300	2-103, 2-105	1070324	3-27
1060764	2-93	1067661	2-103, 2-105, 3-7	1070833	2-35, 2-37
1061000	2-15	1067773	2-107	1070920	2-35, 2-37
1061002	2-75	1067869	3-13	1070926	2-37
1061016	3-11	1067870	3-15	1070976	2-51
1061047	2-137	1067872	3-13	1070999	2-27, 2-29
1061048	2-137	1067873	3-15	1071010	2-51
1061140	3-3, 3-5	1067874	3-13	1071014	2-51
1061145	2-15	1067875	3-13	1071053	2-53
1061146	2-15	1067876	3-17	1071132	3-27
1061147	2-15	1067877	3-17	1071136	2-39
1061162	3-26	1067878	3-13	1071138	2-39
1061203	3-3, 3-5	1067879	3-17	1071141	3-21
1061498	2-49	1067880	3-17	1071186	2-39
1061629	3-26	1067881	3-17	1071229	2-43
1061961	1-1, 2-57	1067884	3-17	1071242	2-43
1062944	3-17	1067885	3-17	1071243	2-43
1062952	3-17	1067886	3-15	1071258	2-43
10632	3-15	1067887	3-15	1071376	2-43
10632-14	3-3, 3-5	1067889	3-17	1071397	5-25
10632-8	2-11	1067890	3-17	1071398	5-25
10632-9	3-3, 3-5	1067891	3-13	1071440	2-31, 2-33
1063864	3-51	1067895	3-17	1071502	2-31
1064528	2-11	1067907	3-17	1071599	2-35
1065452	2-103, 2-105	1067910	3-15	1071606	2-27, 2-29
1065453	2-103, 2-105	1067911	3-13	1071653	2-134, 5-25
1065781	2-111	1067912	3-24	1071654	2-134, 5-25
1066063	2-75	1067917	3-15	1071656	2-43
1066933	3-15	1067918	3-13, 4-9	1071680	1-1, 2-39
1066952	3-13	1067919	3-17	1071681	1-1, 3-21
1066957	3-17	1068299	2-109, 2-113, 2-115	1071716	2-111
1066972	3-15	1068687	3-15	1071717	2-111
1066980	3-17	1068688	3-15	1071854	2-41
1067053	2-111	1068689	3-15	1071855	2-41
1067059	2-77	1068690	3-15	1071864	3-21
1067084	2-103, 2-105	1068751	3-15	1071865	3-21
1067086	2-103, 2-105	1069019	1-2	1071883	3-21
1067087	2-103, 2-105	1069020	1-2	1072046	3-15
1067088	2-105, 3-7	1069201	3-15	1072047	3-15
1067089	2-103, 2-105	1069210	3-13	1072054	3-21
1067094	2-103, 2-105	1069211	3-13	1072195	3-7
1067099	2-103, 2-105	1069229	3-15	1072384	2-51
1067101	2-103, 2-105	1069231	3-15	1072386	2-51
1067102	2-103, 2-105	1069232	3-13	1072408	2-31, 2-33
1067105	3-7	1069310	3-15	1072476	2-65
1067106	2-103, 2-105	1069311	3-17	1072531	2-103, 2-105
1067109	2-103, 2-105	1069312	3-17	1072559	2-31, 2-33
1067110	2-103, 2-105	1069313	3-17	1072632	2-109
1067113	2-103, 2-105	1069314	3-15	1072633	2-103, 2-105
1067115	2-103, 2-105	1069315	3-15	1072649	2-103, 2-105
1067177	2-109	1069316	3-13	1073794	2-134
1067180	2-111	1069317	3-15	1073795	2-134
1067181	2-111	1069318	3-15	1073902	2-134
1067182	2-111	1069322	3-17	1074041	2-103, 2-105
1067185	2-109	1069326	3-13, 3-15, 3-17	1074108	3-15
1067186	2-109	1069330	3-15	1074155	2-67, 2-81
1067187	2-109	1069580	3-27	1074156	2-81
1067216	3-17	1069681	3-13	1074668	2-107
1067217	3-15	1069687	3-13	1075003	2-21, 2-23
1067299	2-103, 2-105	1069688	3-13, 3-15	1075296	3-5

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1075297	3-3	1212087	2-77	1232027	3-31
1075327	2-85	1212134	2-7, 2-9, 3-29	1232030	3-31
1075439	2-93, 3-7	1212137	2-5	1232051	3-31
1075444	2-93, 3-7	1212149	2-81	1232065	3-33, 3-35
1076268	3-49	1212373	2-71, 2-73	1232066	3-33, 3-35
1076292	3-45, 3-47	1212389	2-75	1232091	3-37
1076351	2-134	1212400	3-37	1232166	3-51
1076396	3-45, 3-47	1212410	2-77	1232173	3-51
1076398	3-47	1212440	1-2, 2-71, 2-73	1232183	3-39
1076400	3-45, 3-47	1212451	2-7	1232268	3-51
1076402	3-45, 3-47	1212452	2-9	1232297	3-41
1076403	3-45, 3-47	1212460	1-2, 2-67, 2-69	1232342	3-37, 3-54
1076404	3-45	1212509	1-2, 2-67	1232549	3-41
1076406	3-45	1212510	1-2, 2-67	1233504	2-81
1076407	3-45	1212512	2-81	1234043	3-51
1076408	3-45, 3-47	1212516	1-2, 2-67, 2-69	1234409	3-53
1076410	3-47	1212570	1-2, 2-71, 2-73	1234899	3-53
1076411	3-45, 3-47	1212592	2-83	1235597	3-51
1076412	3-45, 3-47	1212709	2-83	1235628	3-53
1076413	3-47	1212756	1-2, 2-71, 2-73	1235630	3-53
1076437	3-31	1212820	2-77	1235750	3-53
10832	2-111	1212838	2-5	1236127	3-49
10959	2-71	1212908	2-5, 3-29	1236153	2-81
11442-23	2-47	1212910	2-9, 3-29	1237915	3-51, 3-54
11531	3-5	1212911	2-7, 3-29	1239318	3-53
11635	1-2, 2-67	1212912	2-5, 3-29	1239358	3-54
1201894	2-13	1212959	2-5, 3-29	1240476	3-49
1207562	3-33, 3-35	1213191	2-81	1240478	3-49
1210746	2-81	1213221	2-81	1241776	3-31
1210785	2-77	1213263	2-67, 2-69	1242544	2-75
1210796	2-81	1213278	2-67, 2-69	1242555	2-75
1210805	2-87	1213336	2-7	1242881	2-75
1210807	2-67, 2-71, 2-83	1213382	2-81	1247568	3-27
1210813	2-77	1213549	2-71, 2-73	1250690	3-13
1210931	2-77	1213565	2-67, 2-69, 3-9	1250704	3-13
1210940	2-77	1213604	2-67, 2-69	13015	2-41
1210948	2-77	1213656	2-89, 2-91, 3-7	13248	2-65, 2-113, 2-115
1210954	2-77	1213673	2-67	13773	2-99
1210993	2-67	1213817	2-81	13904	4-5, 4-7
1210996	2-81	1213825	2-81	13907	4-5, 4-7, 4-13
1211007	2-81	1213971	2-67, 2-69, 3-9	140293	3-31
1211012	2-75	1214034	3-9	140841	3-53
1211024	2-75	1214092	2-67	140916	3-27
1211061	2-71, 2-73	1214146	2-7, 2-9	140962	2-13, 3-23
1211089	2-71	1214152	3-9	14242	2-57, 2-59
1211096	2-71, 2-73	1214153	3-9	14432	2-35, 2-37
1211263	2-81	1214258	3-9	14605	2-63
1211353	2-85	1215033	2-83	150412	3-31
1211378	2-85	1215646	2-75	150417	3-31
1211379	2-85	12267	2-87, 2-95, 2-97	15331	2-63
1211382	2-85	12277	2-99	15675	2-75, 2-81, 2-85,
1211409	2-85	1227836	3-13		2-87
1211554	2-81	1231991	3-31	16213	2-65
1211566	2-81	1231994	3-31	16411	1-2
1211570	2-83	1232000	3-31	16412	1-2
1211585	2-69	1232001	3-31	16735	2-11, 2-15, 2-17,
1211682	2-81	1232002	3-31		2-19, 2-111, 3-13
1211685	2-85	1232003	3-33, 3-35	16930	2-5, 2-79
1211691	2-83	1232004	3-35		
		1232023	3-31		

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
16931	2-39, 2-47, 2-83, 2-99, 3-9, 3-45, 3-47, 3-49	30252	2-99	35710	2-47
17414	2-47	30253	2-99	35886	2-53
19064	2-15	30255	2-99	35973	2-99
19065	2-5, 2-61, 2-75, 3-49	30406	2-85	360369	2-13
19066	2-11, 2-15, 2-21, 2-23, 2-31, 2-33, 2-75, 2-77, 2-85, 2-87, 2-95, 3-3, 3-5, 3-9, 3-21, 3-27	31249	2-61	360370	2-13
19207	2-137	314050	3-53	360460	2-87
19312	2-31, 2-33	31525	3-21	360801	2-87
19324	3-37	315396	3-51	360943	2-67, 2-75, 2-81
19583	2-53	31613	1-1, 2-107	360973	2-15, 3-27
19760	2-47	31922	3-5	361023	2-107
21168	2-11, 2-77	32126	2-53	361075	2-21, 2-23
21194	2-51	32483	2-25, 2-31, 2-33, 2-65, 2-67, 2-75, 3-3, 3-5, 3-45, 3-47	36159	2-31, 2-33
21195	2-67, 2-69, 3-9	32485	2-21, 2-23, 2-27, 2-29, 2-57, 2-87, 2-89, 2-99, 2-111, 3-9, 3-21	363087	2-95, 2-97
21196	2-27, 2-29	32486	2-25, 2-27, 2-29, 2-57, 2-59, 2-63, 2-87, 2-89	36328	2-69, 2-71, 2-99
21198	2-65, 2-111	32490	1-2, 2-45, 2-71, 2-73, 3-9, 3-19, 3-51	363976	2-61
21246	2-5	32491	1-2, 2-5, 2-7, 2-9, 2-11, 2-13, 2-15, 2-17, 2-27, 2-29, 2-35, 2-37, 2-39, 2-43, 2-47, 2-49, 2-53, 2-65, 2-67, 2-69, 2-71, 2-73, 2-75, 2-81, 2-83, 2-93, 2-97, 3-7, 3-9, 3-13, 3-29, 3-31, 3-49	367403	2-87
21933	4-3	32492	2-7, 2-9, 2-27, 2-29, 2-41, 2-43, 2-49, 2-63, 2-67, 2-69, 2-77, 2-85, 2-89, 2-91, 2-93, 2-97, 3-7, 3-11, 3-17, 3-21, 3-31, 3-51	367404	2-77
21934	4-3	32493	2-5, 2-69, 2-71, 2-79	367679	2-67, 2-69
21935	4-3	32522	2-57	367950	3-9
222158	2-77, 2-107	32598	2-57, 2-59, 2-77	367974	3-9
222159	3-19	32716	2-87, 2-95, 2-97	368197	2-97
222196	2-89, 2-93, 3-7	32960	2-49	369704	2-5
222236	2-65	32981	3-53	369746	1-1, 2-35, 2-37
222290	2-21, 2-23, 2-134, 3-37	32982	2-107	369747	2-35, 2-37
222460	2-57, 2-59, 2-87, 2-95, 2-97	32983	2-13	369781	2-57, 2-59, 2-87
222497	2-43	32984	2-41, 3-49	370008	2-3
22290	2-25, 2-93, 3-7	32987	2-53, 2-99	370009	2-3
22297	2-51	32988	3-31	370181	2-7, 2-9, 2-55, 2-59
22308-3	2-47	33580	4-11	371503	5-21
223350	2-11	33807	2-95	371509	5-17
223609	2-87	33928	2-61	371562	5-17
23156	2-47	33932	2-61	371790	3-56
24012	2-43	34178	4-11	372020	5-16
24047	2-47	34816	2-21	372235	2-134
24265	2-69, 2-81, 3-49	35529	2-77	372237	2-134
24339	2-53, 2-59	35707	2-47	372440	1-1, 2-45
24358	3-31			372492	5-25
24899	2-99			372493	5-25
24928-1	2-47			372863	3-56
25014	2-43, 3-17			372891	5-25
25122	1-1, 2-107			373226	4-11
25312	3-55			373236	4-11
25887	2-99			373291	4-11
26395-2	2-5			373297	4-11
26496	2-47			373298	4-11
26663	2-61			373299	4-11
27990	3-21			373317	4-13
28296	2-75			373327	4-13
29558	2-87, 2-93, 3-7			373336	4-13
30013	2-15, 2-67, 2-83, 3-45, 3-47			373337	4-13
30251	2-99			373346	4-13
				373389	4-13
				373391	4-13
				373393	4-13
				373394	4-13
				373395	4-13
				373396	4-13
				373398	4-13
				373402	4-13
				373413	4-13

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
373429	4-13	383981	2-45	41346	2-27, 2-29
373430	4-13	384418	2-81, 3-51	41359	2-63, 2-65
373431	4-13	384419	2-81	41361	2-41
373434	4-13	384979	5-22, 5-29	41430	2-5, 2-27, 2-29, 2-49, 2-59, 2-65, 2-77, 2-87, 2-97, 3-11, 3-21, 3-51
373435	4-11	384999	2-134	41619	2-7, 2-9
373436	4-11	385001	5-15	42120-1	2-77
373437	4-11	385011	5-22	43290	2-93, 2-97, 3-7
373438	4-11	385015	5-15, 5-19, 5-21, 5-22	43454	2-75, 3-51, 3-53
373493	4-13	385685	3-31	43555	3-21
373543	4-11	388153	2-25	43611	2-17
373545	4-11	38968	4-11	43844	2-45, 2-49, 3-31, 3-33, 3-35
373637	4-5, 4-7	39005	2-57, 2-93, 3-7	44906	2-75
373639	4-5, 4-7	39239	2-21, 2-23	44961	2-89, 2-91
373640	4-5, 4-7	392645	2-47	45181	2-61
373642	4-5, 4-7	39272	2-41	45261	2-89, 2-93, 3-7
373646	4-5, 4-7	39277	2-17, 2-49, 2-61, 2-83, 3-13, 3-51	45622	4-11
373647	4-5, 4-7	39278	2-43, 2-87	45623	4-11
373656	4-5, 4-7	39279	2-77	45780	2-5
373657	4-5, 4-7	39283	3-11, 3-21, 3-31	45786	2-55, 2-59
373658	4-5, 4-7	39284	2-43, 2-65, 2-77, 3-21	46236	2-81, 3-31, 3-37
373663	4-5, 4-7	39285	2-77, 2-113, 2-115	46482	2-107, 2-113, 2-115
373665	4-5, 4-7	39311	2-87	46559	2-89, 2-91, 3-7
373684	4-5, 4-7	39312	2-97	46563	2-61
373685	4-5, 4-7	39322	2-85	47501	2-89, 2-91, 3-7
373690	4-5, 4-7	39349	2-41, 2-43, 2-49, 2-53, 2-65, 2-87, 3-13	47585	2-25
373691	4-5, 4-7	39350	2-53, 2-113, 2-115	47720	2-47
373692	4-5, 4-7	39394	2-89, 2-91, 3-7	47801	2-53
373693	4-7	39395	2-99	48419	3-53
373694	4-5, 4-7	393982	1-1, 2-27, 2-29, 5-21	48985	2-57
373698	2-53	394916	2-134	49034	3-11, 3-13
373699	4-13	394922	2-21, 2-23	49177	2-13
373700	4-13	39562	2-57	49266	2-49, 3-3, 3-5, 3-37
373701	4-13	395973	2-113, 2-115	49697	2-75, 3-51
373702	2-77	397826	2-87	49800	2-13, 2-15, 2-75
373707	2-111	397889	2-21, 3-9	49883	2-39
373708	2-111	398279	1-1, 2-35, 2-37	49891	3-49
374000	2-137	398481	2-137	50850	2-85
374224	2-137	398501	2-21, 2-23, 3-54	50902	2-47, 3-21
374560	2-53	398508	2-21	51109	2-61
374563	2-53	398528	2-21, 3-37	51225	2-89, 2-93, 3-7
374710	2-57	398806	2-17, 2-19	51338	2-53, 2-57, 2-59
377084	2-21, 2-23	39923	3-51	51339	2-53, 2-57, 2-59
377165	2-5	40352	2-57	51534	2-93, 3-7
377249	2-99	40607	2-81	51538	2-63, 2-89, 2-93, 3-7
377537	1-2	40625	2-109	51560-5	2-35, 2-37
377538	1-2	41016	3-33, 3-35	51564	2-99
377540	1-2	41139	2-75	51715	2-99
379684	2-95	41140	2-67, 2-81, 2-85, 3-21	51813	2-87
379686	2-95	41141	3-21	52405	4-11
381391	2-35, 2-37	41142	2-5, 2-27, 2-29, 2-41	53400-1	2-47
382320	3-27	41178	1-2, 2-67	53400-4	2-47
383000	3-9	41186	2-65, 2-99	53468	2-89, 2-91, 3-7
383139	2-99	41187	2-7, 2-9, 3-21	53816	2-55
383142	2-99	41342	2-5, 2-87, 3-29, 3-49	53817	1-1, 2-55
383143	2-99			53818	2-55
383161	2-5			53819	2-55
383194	2-97				
383202	2-137				
383203	2-99, 2-137				
383205	2-95, 2-97				

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
53819-2	2-55	64887	2-53	74249	4-11
54051	2-53	65145-1	2-111	74259	4-13
54052	2-53	65215	2-107	74455	2-85
54087	2-53	66018	2-3	75934	2-65
54182	2-5	66019	2-3	75968	2-25
54190	1-1	66185	2-41	762156	2-107
54204	2-99	66188	2-137	762179	2-89, 2-91
54274	2-49, 2-113, 2-115	66211	2-57	762425	2-77, 2-83, 2-107
54390	2-57, 2-59	66213	2-57	762426	2-53, 2-113, 2-115
54400	2-57, 2-87	67366	2-77	762427	2-71, 2-73, 2-93,
54577	2-57	67665	2-59		2-97, 3-7
54878	2-99	67767	2-71, 2-81	762428	2-49, 2-97
54911-32	2-51	68872	2-41	762432	2-53
54922	2-3	68873	2-41	762433	2-25, 2-113, 2-115
54923	2-3	69461	2-13	762439	2-89, 2-91, 2-111,
54925	2-3	69904	2-5		3-7
54927	2-3	69915	2-5	762445	2-83, 2-99, 2-113,
54995	2-87, 2-95	69972	2-69, 2-71		2-115
55248	3-37	70096	4-13	762456	2-49, 2-111
55779	2-99	70100	4-13	762463	2-107
55845	3-21	70157	2-53, 2-71, 2-73,		
55926	4-13		2-89, 2-91	762466	2-111
56185	2-25	70158	2-57	762468	2-53
56186	2-21, 2-23, 3-37	70161	2-57	762469	2-107, 2-111
56228	2-99	70280	2-55	762481	2-107
56976A	2-47	70622	2-25	762484	2-107
57248	3-33, 3-35	70623	2-25	762492	2-107, 2-109
57315	2-53	70709	2-25	763042	2-87
57773	2-27, 2-29	70717	2-25	763045	3-9
57804	2-134	71373	2-57	763114	3-33, 3-35
57824	2-99	71539	2-31, 2-33	764183	3-31
58078	2-57	71579	2-5	76426	3-13
58228	2-27, 2-29	72381	2-137	76570	2-7, 2-9, 2-63, 2-65,
58589	2-47	72926	2-53		2-87, 2-93, 3-7, 3-29
58592	2-107	72968	2-5, 2-69	767315	2-103, 2-105
58842	2-53	72970	2-25, 2-49	767422	3-7
59009	2-61	72977	2-41	767430	2-113, 2-115
59192	2-7, 2-9	73281	2-53	767441	2-103, 2-105
59194	2-9	73411	2-65	769077	2-113, 2-115
59195	2-7	74027	3-17	769778	3-33, 3-35
59440	2-3	74098	4-5, 4-7	77003	4-5, 4-7
59542	2-77	74122	4-11	77005	4-5, 4-7
59634	2-93, 3-7	74123	4-11	77006	4-5, 4-7
59649	2-65	74165	4-11	771090	2-25
59658	2-87	74166	4-11	77345	2-53
59767	2-137	74167	4-11	78122	2-47
59899	2-87	74168	4-11	79380	3-9
60751	3-5	74180	4-13	79381	2-51
610943	3-9	74183	4-3	79828	4-11
611140	3-15	74185	4-3	80061	2-21, 2-23, 3-13
61456	3-31	74193	4-3	80395	2-89, 2-93, 3-7
630448	2-71, 2-73	74196	4-3	82733	2-67, 2-69
63296	2-77	74222	4-3	82829	2-75, 3-33, 3-35
63378	2-13	74225	4-13	82839	2-63
63511	2-107	74226	4-13	84170	2-65
63810	3-19	74232	4-3	84581	2-89, 2-91, 3-7
64173	2-87	74237	4-13	86240	2-57, 2-95, 2-97
64425	2-87	74243	4-3	86328	2-51
64489	2-65	74244	4-3	86618	2-85
64886	2-53	74245	4-3	86636	3-31
				86799	2-11

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
86866	2-63	9004642	3-56	9010234	5-18
86953	2-87	9004643	3-56	9010235	5-18
87172	3-26	9004669	3-56	9010236	5-18
87308	3-21	9004729	3-56	9010237	5-18
87316	2-13, 3-23	9004730	3-56	9010238	5-18
87738	2-49	9004865	2-59	9010239	5-18
87816	2-61	9004867	2-59	9010240	5-18, 5-19
9000355	2-45	9004868	2-59	9010241	5-18
9003933	3-55	9004869	2-59	9010242	5-18
9004080	3-56	9004870	2-59	9010243	5-19
9004081	3-56	9004871	2-59	9010244	5-19
9004082	3-56	9004873	2-59	9010245	5-20
9004083	3-56	9006618	5-30	9010246	5-20
9004086	3-56	9006619	5-28	9010247	5-25
9004325	2-23	9006620	5-29	9010248	5-25
9004513	2-23	9007131	3-3, 3-5	9010249	5-25
9004518	2-107	9007380	1-1, 5-29	9010250	5-9
9004524	3-23	9007385	1-1	9010251	5-9
9004527	2-77	9007423	5-30	9010252	5-9
9004528	2-21, 2-23	9007424	5-30	9010253	5-9, 5-21
9004529	2-21	9007973	2-19	9010254	5-9
9004543	1-1	9007974	2-15	9010255	5-25
9004545	1-1, 2-21, 2-23	9007975	2-15	9010256	5-25
9004574	2-63	9007976	2-17	9010257	5-25
9004575	2-63	9007977	2-11	9010258	5-25
9004590	4-9	9007978	2-11	9010259	5-12
9004591	4-9	9007979	2-11	9010260	5-25
9004592	4-9	9008193	5-29	9010261	5-25
9004593	4-9	9008195	3-26	9010262	5-16, 5-25, 5-29
9004594	4-9	9008198	3-5	9010263	5-25
9004595	4-9	9008199	3-3	9010264	5-25, 5-29
9004596	4-9	9008200	3-11	9010266	5-27, 5-28
9004597	4-9	9008804	5-29	9010267	5-28
9004598	4-9	9008805	5-25, 5-29	9010268	5-27, 5-28
9004599	4-9	9008806	5-30	9010269	5-28
9004600	4-9	9008807	5-30	9010270	5-28
9004601	4-9	9008808	5-30	9010271	5-28
9004602	4-9	9009218	3-13	9010272	5-29
9004603	4-9	9009219	3-13	9010273	5-29
9004621	3-56	9009220	3-17	9010274	5-29
9004622	3-56	9009247	2-81	9010275	5-29
9004623	3-56	9010085	3-27	9010276	5-29
9004624	3-56	9010086	3-27	9010277	5-29
9004625	3-56	9010202	2-39	9010278	5-29
9004626	3-56	9010203	2-39	9010279	5-29
9004627	3-56	9010215	5-22	9010280	5-29
9004628	3-56	9010217	5-20	9010281	5-15
9004629	3-56	9010219	5-20	9010282	5-15
9004630	3-56	9010222	5-17	9010283	5-15
9004631	3-56	9010223	5-17	9010284	5-15
9004632	3-56	9010224	5-17	9010285	5-15
9004633	3-56	9010225	5-17	9010286	5-15
9004634	3-56	9010226	5-17	9010287	5-15
9004635	3-56	9010227	5-17	9010288	5-15
9004636	3-56	9010228	5-17	9010289	5-22, 5-23
9004637	3-56	9010229	5-17, 5-21	9010290	5-22
9004638	3-56	9010230	5-17	9010291	5-22
9004639	3-56	9010231	5-17	9010294	5-22
9004640	3-56	9010232	5-18	9010295	5-22
9004641	3-56	9010233	5-18	9010296	5-16

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
9010297	5-16	9010448	5-3	9010521	5-10
9010298	5-16	9010449	5-3	9010522	5-10
9010302	5-16	9010450	5-3	9010523	5-10
9010303	5-16	9010451	5-3	9010524	5-10
9010305	5-23	9010452	5-3	9010525	5-10
9010306	5-23	9010453	5-3	9010526	5-10
9010307	5-23	9010454	5-3	9010527	5-10
9010308	5-23	9010455	5-3	9010528	5-10
9010309	5-23	9010456	5-3	9010529	5-10
9010310	5-23	9010457	5-3	9010530	5-9
9010311	5-7	9010458	5-3	9010531	5-9
9010312	5-7	9010459	5-3	9010532	5-9
9010313	5-7	9010460	5-4	9010533	5-9
9010314	5-30	9010461	5-4	9010534	5-9
9010317	5-29	9010462	5-4	9010535	5-9
9010327	5-26	9010464	5-4	9010536	5-9
9010330	5-27	9010465	5-4, 5-5	9010537	5-9
9010331	5-27	9010466	5-4	9010538	5-9
9010359	5-18	9010467	5-5	9010539	5-9
9010360	5-18	9010468	5-5	9010540	5-9
9010366	5-25	9010469	5-5	9010541	5-9
9010367	5-25	9010470	5-5	9010542	5-9
9010371	5-21	9010471	5-5	9010543	5-9
9010372	5-21	9010473	5-5	9010544	5-9
9010373	5-21	9010479	5-19	9010545	5-9
9010374	5-21	9010480	5-5	9010546	5-9
9010376	5-21	9010481	5-5	9010547	5-9
9010377	5-21	9010482	5-5	9010548	5-9
9010380	5-21	9010483	5-5	9010549	5-9
9010382	5-15	9010484	5-5	9010550	5-9
9010383	5-15	9010485	5-5	9010551	5-9
9010384	5-15	9010487	5-7	9010552	5-9
9010419	5-3	9010488	5-7	9010554	5-9
9010420	5-3	9010489	5-7	9010555	5-9
9010421	5-3	9010490	5-7	9010556	5-9
9010422	5-3	9010491	5-7, 5-9	9010557	5-9
9010423	5-3	9010492	5-7	9010559	5-9
9010424	5-3	9010493	5-7	9010560	5-9
9010425	5-3	9010494	5-7	9010561	5-9
9010426	5-3, 5-12	9010495	5-7	9010562	5-9
9010427	5-3	9010496	5-7	9010563	5-9
9010428	5-3	9010497	5-7	9010564	5-9
9010429	5-3	9010498	5-7	9010565	5-9
9010430	5-3	9010502	5-7	9010567	5-9
9010431	5-3, 5-5	9010503	5-7, 5-13	9010568	5-9
9010432	5-3	9010504	5-7	9010569	5-9
9010433	5-3	9010505	5-7	9010570	5-11
9010434	5-3	9010506	5-7	9010571	5-11
9010435	5-3	9010507	5-7	9010572	5-11
9010436	5-3	9010508	5-7	9010574	5-11
9010438	5-3	9010511	5-7	9010575	5-11
9010439	5-3	9010512	5-7	9010576	5-11
9010440	5-3	9010513	5-10	9010577	5-11
9010441	5-3, 5-5	9010514	5-10	9010578	5-11
9010442	5-3	9010515	5-10	9010579	5-11
9010443	5-3	9010516	5-10	9010580	5-11
9010444	5-3	9010517	5-10	9010582	5-12
9010445	5-3	9010518	5-10	9010583	5-12
9010446	5-3	9010519	5-10	9010585	5-12
9010447	5-3	9010520	5-10	9010586	5-12

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number
9010587	5-12	9013446	3-9
9010589	5-12	9013447	3-9
9010590	5-12	9013448	3-9
9010591	5-12	9013530	5-22
9010592	5-12	9013873	3-9
9010593	5-12	9014160	1-1, 5-5, 5-19
9010594	5-12	9014162	5-5
9010595	5-12	9014202	2-27, 2-29
9010596	5-12	9014656	3-17
9010597	5-12	9015652	2-93, 3-7
9010598	5-12	9015866	5-3
9010599	5-12	9015878	5-26
9010600	5-11, 5-12	9015915	5-16
9010601	5-12	9015916	5-16
9010602	5-13	9016474	3-31
9010603	5-13	9017882	3-45
9010604	5-13	9017883	3-47
9010606	5-13, 5-15	9018569	2-75
9010607	5-13	9018734	4-15
9010609	5-13	9018735	2-13, 4-15
9010610	5-13	9019145	2-45
9010612	5-13	99321	1-2
9010613	5-15	99997	2-55
9010615	5-15		
9010617	5-15		
9010618	5-15		
9010619	5-16		
9010622	1-1, 5-19		
9010623	5-17		
9010624	5-17		
9010625	5-17		
9010626	5-29		
9010628	5-21		
9010629	5-21		
9010630	5-21		
9010631	5-21		
9010632	5-22		
9010633	5-22		
9010634	5-30		
9010635	3-56		
9010910	5-22		
9011154	2-113, 2-115		
9011419	2-77		
9011490	3-56		
9012585	4-15		
9012587	4-15		
9012589	4-15		
9012591	4-15		
9012592	4-15		
9012593	4-15		
9012594	4-15		
9012595	4-15		
9013113	3-7		
9013115	1-2, 2-67		
9013116	1-2, 2-71, 2-73		
9013137	3-29		
9013316	3-56		
9013317	3-56		
9013364	2-81		
9013366	2-67, 2-69		

PART DESCRIPTION TO PAGE NUMBER CROSS REFERENCE LIST

A

Actuator, Valve, Bypass, 4-13
 Adapter, 5-28
 Adapter, Filter, Oil, Remote [Mit], 5-21
 Adaptor Assy, Pump, Hyd, 4-13
 Adjuster Assy, Lash, 5-9
 Adjuster Kit, Manual, W/ Pivot, 2-59
 Alarm Assy, Backup, 12-24vdc
 82-107dba, 3-3, 3-5
 Alternator, 7si [Mit Df Sur- Belt], 5-20
 Angle, 2-93, 3-7
 Angle Wldt, Bmpr, Tower, Lh, 3-26
 Angle Wldt, Bmpr, Tower, Rh, 3-26
 Angle Wldt, Mtg, Shagr, 2-85
 Angle, Keeper, Cable, 2-95
 Angle, Mtg, Cover, Hppr, 2-75
 Angle, Mtg, Ground, 3-21
 Antenna, Telem, [4G, 108"], 3-27
 Antenna, Telem, 110 In [Gprs], 3-27
 Arm Assy, Rocker [A], 5-9
 Arm Assy, Rocker [B], 5-9
 Arm Assy, Rocker [C], 5-9
 Arm Wldt, Brush, Main, Drive, Lh, 2-99
 Arm Wldt, Brush, Side, 2-89, 2-93, 3-7
 Arm Wldt, Hppr, Rear Dump, 2-77
 Arm Wldt, Lever, 2-87
 Arm Wldt, Neutral, 2-65
 Arm, Alternator, Adj [Mit 2013], 2-39
 Arm, Brush, Main, W/ Label, 2-99
 Arm, Brush, Side, 2-89
 Arm, Linkage, Side Brush, 2-93, 3-7
 Arm, Safety, Hppr, W/ Label, Replmt, 2-77
 Arm, Wiper, Windshield [280-380mm
 ADJ], 3-13
 Armrest, 4-15

B

Bar, Flat, Ss 0.12 1.5 X 18.5l, 4/0.5h, 2-67
 Bar, Flat, Stl 0.19, 01.50 X 04.1l, 2-53
 Bar, Tensioner, Mtg [Mit 2.0/2.4], 5-17
 Battery, Wet, 12vdc 0475cca, 2-41
 Bearing Kit [CI], 4-3
 Bearing, Ball, 8mmb X 22mmd X 7mmw,
 2-65
 Bearing, Ball, 1.38b 2.83d 0.67w, 2-99
 Bearing, Cone, 1.38b 0.71w, 2-53, 2-57,
 2-59
 Bearing, Cone, Pump, Hyd, 4-13
 Bearing, Cshft [Black Std 3], 5-3
 Bearing, Cshft [Green Std 3], 5-3
 Bearing, Cshft [Lan Std 1,2,4,5], 5-3
 Bearing, Cshft [Lan Std 3], 5-3
 Bearing, Cshft [No Color Std 3], 5-3
 Bearing, Cshft [Red Std 1,2,4,5], 5-3
 Bearing, Cshft [Yellow Std 3], 5-3
 Bearing, Cshft [Green Std 1,2,4,5], 5-3
 Bearing, Cshft [Yellow Std 1,2,4,5], 5-3
 Bearing, Cshft [No Color Std 1,2,4,5], 5-3
 Bearing, Cup, 4-13

Bearing, Cup, 2.56d 0.55w, 2-53, 2-57,
 2-59
 Bearing, Flng, 0.75b 1.00d 0.75l, Bnz,
 2-65
 Bearing, Flng, 2hole, 0.50b, 2-25
 Bearing, Flng, 2hole, 0.50b [Nyl], 2-25
 Bearing, Flng, 2hole, 0.75b, 2-61
 Bearing, Journal- 1.25 I.D. X .75 Lg, 2-71,
 2-73
 Bearing, Oversize [1.0], 5-3
 Bearing, Rod, Connect [Lan Std], 5-10
 Bearing, Rod, Connect [No Color Std],
 5-10
 Bearing, Rod, Connect [Yellow Std], 5-10
 Bearing, Self Align, 1.25b 2.00d, 2-77
 Bearing, Shaft, Balancer [Ovrsz], 5-3
 Bearing, Shaft, Std, Balancer, 5-3
 Bearing, Std, Balancer, 5-3
 Bearing, Thrust, 0.66b 1.25d 0.06w, 2-95
 Bearing, Thrust, Cshft, 5-3
 Bearing, Thrust, Pump, Hyd, 4-13
 Bearing, W/ Collar, 0.75b 1.85d 1.06w,
 2-99
 Bellows, Seat, 4-15
 Belt, Ribbed, Alternator, 40.25l, 1-1, 2-39
 Belt, Ribbed, Alternator, A/C, 51.125l, 1-1,
 3-21
 Belt, Timing, 5-9, 5-11
 Bezel, Switch [3 Gang], 2-21, 2-23
 Blade, Wiper, Windshield, 20.0", 3-13
 Block Assy, Cylinder, 5-3
 Block, Nylon, 2-67, 2-69, 3-9
 Block, Spacer, Hinge, 3-9
 Blown, Fan, Motor, 4-9
 Bolt, 5-7, 5-21
 Bolt, 3/8-16 X 1 1/4 Hxhd [Mit], 5-17
 Bolt, 3/8-16 X 4.5 [Mit], 5-17
 Bolt, Belt, Balancer, Train, 5-11
 Bolt, Cap, Bearing, 5-3
 Bolt, Carriage, M8 X 1.25 X 30, 1-2, 2-67,
 2-69
 Bolt, Carriage, M8 X 1.25 X 40, 2-5
 Bolt, Connecting, 5-10
 Bolt, Eye, M10 X 1.50 X 117mm, 08.00
 Eye, 2-97
 Bolt, Flange, 5-3, 5-5, 5-7, 5-9, 5-11,
 5-12, 5-13, 5-15
 Bolt, Flywheel [Mit 20/24m], 5-18
 Bolt, Hold-Down, Battery 08.5l, 2-41
 Bolt, M10-1.25 X 20 Hxhd [Mit], 5-25
 Bolt, M10-1.25 X 30 Soc Hd [Mit], 5-18
 Bolt, M10-1.25 X 45 Soc Hd [Mit], 5-18
 Bolt, M10-1.50 X 30 [Mit], 5-20
 Bolt, M12-1.75 X 25, Hex Hd [Mit], 5-18
 Bolt, M6-1.0 X 10 Fl Hd [Mit], 5-16, 5-25,
 5-29
 Bolt, M6-1.0 X 12 Fl Hd Pl [Mit], 5-25
 Bolt, M6-1.0 X 16 Fl Hd [Mit], 5-25
 Bolt, M6-1.0 X 20 Fl Hd [Mit], 5-18, 5-19
 Bolt, M6-1.0 X 25 Soc Hd [Mit], 5-28
 Bolt, M6-1.0 X 30 Fl Hd [Mit], 5-25

Bolt, M6-1.0 X 45, Skt Hd [Mit], 5-27
 Bolt, M6-1.0 X 85 Soc Hd [Mit], 5-28
 Bolt, M8-1.25 X 12 [Mit], 5-23
 Bolt, M8-1.25 X 15, Hx Hd [Mit], 5-18
 Bolt, M8-1.25 X 16 Fl Hd [Mit], 5-29
 Bolt, M8-1.25 X 16, Soc Hd [Mit], 5-26
 Bolt, M8-1.25 X 20 Fl Hd [Mit], 5-17
 Bolt, M8-1.25 X 25 [Mit], 5-17, 5-21
 Bolt, M8-1.25 X 25 Flg Hd [Mit], 5-23
 Bolt, M8-1.25 X 25 Soc Hd [Mit], 5-17
 Bolt, M8-1.25 X 55 Fl Hd [Mit], 5-9
 Bolt, M8-1.25 X 65 Hxhd [Mit], 5-9
 Bolt, M8-1.25 X 70 Hxhd [Mit], 5-9, 5-21
 Bolt, Manifold, Inlet, 5-15
 Bolt, Motor, Hyd, 4-11
 Bolt, Rocker, Cover, 5-4
 Bolt, Seal, 5-9
 Bolt, Shld, .25d X 1.25, #10-24, 2-61
 Bolt, Shld, .31d X 1.00, .25-20, 2-65
 Bolt, Shld, 1.37d X 5.13l, 1.1-18 Drilled,
 2-53
 Bolt, Sprocket, Cshft, 5-10
 Bolt, Washer, 5-9, 5-10, 5-12, 5-17
 Boot, 90deg .50id 1.00id 2.50l, Red, 2-41,
 3-19
 Boot, Bellows, 3.1l 4.4w 2.8h 1hole, Neo,
 2-25
 Boot, Terminal, Battery, 02-01ga, Blk,
 2-41
 Boot, Terminal, Battery, 02-01ga, Red,
 2-41
 Box, Instrument, li, Trimmed, 2-21, 2-23
 Box, Lower, Cyclone, Trimmed, 2-81
 Box, Pre-Filter, Upper, 2-81
 Brace Wldt, Sppt, 2-15
 Brace Wldt, Sppt, Water Tank, 3-31
 Bracket Assy, Coil, Ignition, 5-7
 Bracket Wldt, 2-81, 2-87
 Bracket Wldt, Alternator [S30 Mit2013],
 2-39
 Bracket Wldt, Arm, 2-87
 Bracket Wldt, Brush, Side, 2-87
 Bracket Wldt, Door, 2-71, 2-73
 Bracket Wldt, Door, Front, 2-67, 2-69, 3-9
 Bracket Wldt, Exhaust, Hepa [Gen li S30],
 3-53
 Bracket Wldt, Fan Mtg, Press Sw Mtg,
 3-49
 Bracket Wldt, Fltr, 2-85
 Bracket Wldt, Fltr Tray, Hepa [Gen II],
 3-51
 Bracket Wldt, Linkage, Propel [Mits], 2-65
 Bracket Wldt, Mtg, Bmpr, 3-26
 Bracket Wldt, Mtg, Bumper, 2-77
 Bracket Wldt, Mtg, Compressor, 3-21
 Bracket Wldt, Mtg, Cyl, 2-97
 Bracket Wldt, Mtg, Door, Hppr, 2-71
 Bracket Wldt, Mtg, Eng, Front, 2-27, 2-29
 Bracket Wldt, Mtg, Eng, Rear [Mit 2013],
 2-27, 2-29
 Bracket Wldt, Mtg, Fan, 2-83

CROSS REFERENCE

Bracket Wldt, Mtg, Hpr, Lh, 2-77
 Bracket Wldt, Mtg, Hpr, Rh, 2-77
 Bracket Wldt, Mtg, Motor, 2-49
 Bracket Wldt, Mtg, Muffler [Mit 2013], 2-43
 Bracket Wldt, Mtg, Radiator, 2-49
 Bracket Wldt, Radiator, 2-49
 Bracket Wldt, Reservoir, Hyd, 2-107
 Bracket Wldt, Shkr, Filter, 2-85
 Bracket Wldt, Sppt, Cover, Rear, Rh, 2-15
 Bracket Wldt, Sppt, Pump Mtg, 3-31
 Bracket Wldt, Sppt, Radiator, Rh, 2-49
 Bracket Wldt, Sppt, Top, Tank, 3-31
 Bracket Wldt, Steering, Tilt, 2-25
 Bracket Wldt, Tank, Lpg, 2-47
 Bracket Wldt, Tube Outlet [Gen li S30], 3-53
 Bracket, Mtg, Cover, 3-13
 Bracket, Alarm, Backup, 3-3, 3-5
 Bracket, Angle, Hold-Down, Battery, 2-41
 Bracket, Angle, Keeper, Cable, 2-57, 2-87
 Bracket, Angle, Lintel, 2-17, 3-53
 Bracket, Angle, Mtg, Relief Valve, 2-47
 Bracket, Angle, Mtg, Seat, 2-13
 Bracket, Angle, Tank Brace, 3-31
 Bracket, Angle, Tank Sppt, Top [S30], 3-31
 Bracket, Brush, Stop Adj, 2-97
 Bracket, Coil [Mit 2.0/2.4], 5-19
 Bracket, Coil, Mtg, 4-9
 Bracket, Filter, Oil, Remote [Mit], 5-21
 Bracket, Flap, Recirculation, 2-5
 Bracket, Grill, 2-15
 Bracket, Handle, Latch, 3-17
 Bracket, Indicator, Timing, 5-9
 Bracket, Latch, Cover, Top, 2-17
 Bracket, Latch, Keeper [Southco], 2-81
 Bracket, Latch, Lh, 2-75
 Bracket, Latch, Rh, 2-75
 Bracket, Latch, Shrd, 2-15
 Bracket, Latch, Shrd, Seat, 2-11
 Bracket, Latch, Side, Door, 2-19
 Bracket, Lift, 2-95
 Bracket, Light, 3-3, 3-5
 Bracket, Mtg, Air-Clnr, 2-35, 2-37
 Bracket, Mtg, Alternator [S30 Mit 2013], 2-39
 Bracket, Mtg, Cab, 3-13
 Bracket, Mtg, Condenser, 2-49
 Bracket, Mtg, Cyclonics, 2-81
 Bracket, Mtg, Dual Nozzle, Lh, 3-35
 Bracket, Mtg, Dual Nozzle, Rh, 3-33, 3-35
 Bracket, Mtg, Fan Shrd, 2-43
 Bracket, Mtg, Lh, 2-99
 Bracket, Mtg, Mirror, 3-11, 3-13
 Bracket, Mtg, Mirror, Lower, 3-13
 Bracket, Mtg, Mirror, Upper, 3-13
 Bracket, Mtg, Motor, Side Brush, 2-89, 2-91, 3-7
 Bracket, Mtg, Rh, 2-99
 Bracket, Mtg, Shield, Outlet, 2-43
 Bracket, Mtg, Switch, 2-77
 Bracket, Mtg, Tube, 3-9
 Bracket, Mtg, Wand, 3-9
 Bracket, Prop, Rod, Cover, 2-17

Bracket, Protector, Float Switch, 3-31
 Bracket, Pulley, Tensioner, 5-9
 Bracket, Pump, Mtg, 5-17
 Bracket, Retainer, Safety, 2-65
 Bracket, Retainer, Seal, 2-7, 2-9
 Bracket, Seal, Flange, Vac, 3-49
 Bracket, Seal, Lh, 2-67, 2-69
 Bracket, Seal, Rh, 2-67, 2-69
 Bracket, Skirt, 2-7, 2-9, 3-29
 Bracket, Sppt, 3-21
 Bracket, Sppt, Cover, Rear, Lh, 2-15
 Bracket, Sppt, Hpr Seal, 1-2, 2-67, 2-69
 Bracket, Sppt, Hyd Tube, 2-111
 Bracket, Sppt, Prop Rod, [Gen II S30], 3-51
 Bracket, Sppt, Prop, Rod, 2-17
 Bracket, Sppt, Radiator, 2-49
 Bracket, Sppt, Rear, Shrd, 2-15
 Bracket, Sppt, Rear, Tank [S30], 3-31
 Bracket, Sppt, Shrd, Rear, Lower, Lh, 2-15
 Bracket, Sppt, Shrd, Rear, Lower, Rh, 2-15
 Bracket, Sppt, Shrd, Rear, Upper, Lh, 2-15
 Bracket, Switch, 2-95, 2-97
 Bracket, Switch, Reverse, 3-3, 3-5
 Bracket, Tensioner, [Mit 2.0/2.4], 5-17
 Bracket, U, .12, 1.2w 2.3 1.0l, 2/0.6h, 2-87
 Bracket, U, .19, 2.8w 0.9 1.0l, 1/0.3h, 2-99
 Bracket, Vaporizer [Mit 20/24m Tilt], 5-29
 Bracket, Wldt, Mtg, Hyd, 3-7
 Bracket, Wldt, Mtg, Hyd, 2-89, 2-91
 Brake Assy, Drum, Mech, 07.9d [6600], 2-57
 Brake Kit, Repair, 2-57
 Brake Wldt, Parking, 2-61
 Brake, Knot, Lh, 7.0d, 2-59
 Brake, Knot, Rh, 7.0d, 2-59
 Brush Kit, Side, Lh, Ci [S30], 3-7
 Brush, Disk, Swp, 25.4 D, Flat Wire, 2-3
 Brush, Disk, Swp, 26.0 D, Nylon, 2-3
 Brush, Disk, Swp, 26.0 D, Polypropylene, 2-3
 Brush, Swp, 45L, 5 Double Row Patrol, Nylon, Spiral, 2-3
 Brush, Swp, 45L, 8 Double Row, Nylon, Spiral, 2-3
 Brush, Swp, 45L, 8 Double Row, Polypropylene & Wire, Spiral, 2-3
 Brush, Swp, 45L, 8 Double Row, Polypropylene, Spiral, 2-3
 Brush, Swp, 45L, 8 Double Row, Wire, Spiral, 2-3
 Brush, Swp, 45L, 24 Single Row, Natural Fiber & Wire, Spiral, 2-3
 Brush, Swp, 45L, 24 Single Row, Nylon, Spiral, 2-3
 Brush, Swp, 45L, Sand Wedge, Polypropylene, Spiral, 2-3
 Brush, Swp, 45L, Window, Polypropylene, Spiral, 2-3
 Bumper Kit, Corner, Ci, [S30], 3-26
 Bumper Wldt, Front, 2-77
 Bushing, 5-3, 5-5

Bushing, Flng, 0.44b 1.25d 0.25l, 2-95, 2-97
 Bushing, Knock, 5-3
 Bushing, Sleeve, 0.31b 0.55d 0.38l, Oib, 2-63
 Bushing, Sleeve, 0.37b 0.50d 0.50l, Oib, 2-61
 Bushing, Sleeve, 0.50b 0.59d 0.38l, Stil, 2-87
 Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl, 2-93, 3-7
 Bushing, Sleeve, 1.00b 1.13d 0.99l, Fgl, 2-77
 Button, Cntrl, Horn, 2-25

C

Cable, 06ga 13.0l Blk, 2-27, 2-29
 Cable, Battery, 2ga, 70l, Black, 2-41
 Cable, Battery, 2ga, 70l, Red, 2-41
 Cable, Brake, 2-57
 Cable, Glv .13d 010.0l .52eye / .52eye, 3-26
 Cable, Glv .13d 063.4l .50eye / M10, 2-87
 Cable, Glv .19 24.5l .3 Eye / M10, 2-95
 Cable, Glv .19d 009.88l .38eye / M10, 2-97
 Cable, Push / Pull, 062.5l M6x1.0/M6x1.0, 2-65
 Cable, Push / Pull, 070.4l M6x1.0/M6x1.0, 2-63
 Cam, 4-13
 Cam, Sensor, Wheel [Mit 2.0/2.4], 5-25
 Camshaft Assy, 5-9
 Cap Assy, Tank, Drain, 3-31
 Cap, Breather, Hyd, 2.4 Dipstick, 2-107
 Cap, Breather, Hyd, 2.4 Ds, 1-1
 Cap, Breather, Hyd, W Chain, 2-107
 Cap, Enclosure, Hose, 3-9
 Cap, End, Valve, Steering, 4-3
 Cap, Fuel, Tank, 2-45
 Cap, Hub, Dust, 2.57d 0.77l, 2-57, 2-59
 Cap, Oil, Filler, 5-4
 Cap, Radiator, 14psi [Stant Ao-2516], 2-49
 Cap, Rubber, 5/8id [Mit 2.0/2.4], 5-22
 Cap, Seal, 5-3
 Cap, Valve, Tire, Tubeless [Schrader], 2-55, 2-59
 Cap, Vinyl, 3.28d 0.45l, 2-99
 Channel, 2-11
 Channel, .12, 1.5w 0.5 44.6l, 3/0.4h, 2-5
 Clamp, 0.75d [Mit], 5-25
 Clamp, 1/4 Hole [Mit #20], 5-25
 Clamp, 3/8id [Mit Olive Green], 5-15
 Clamp, Cable, Nyl, 0.62d, Nat, 3-27
 Clamp, Cable, Ss, 2.50d X 1.00w, 1hole, 2-53, 2-71, 2-73, 2-89, 2-91
 Clamp, Cable, Stil, 0.25d X 0.56w, 1hole, 2-81, 3-31, 3-37
 Clamp, Cable, Stil, 0.38d X 0.38w, 1hole, 2-5

Clamp, Cable, Stl, 0.63d X 0.75w, 1hole,
2-75, 3-33, 3-35
Clamp, Cable, Stl, 0.69d X 0.62w, 1hole,
2-71, 2-81
Clamp, Cable, Stl, 0.75d X 0.75w, 1hole,
2-111
Clamp, Cable, Stl, 1.0x2.0x0.62w, 1hole,
2-77
Clamp, Cable, Stl, 1.50d X 0.75w, 1hole,
2-51
Clamp, Cable, Stl, 1.75d X 1.00w, 1hole,
2-89, 2-91, 3-7
Clamp, Cable, Stl, 2.00d X 0.75w, 1hole,
2-45
Clamp, Cable, Stl, 2.25d X 1.00w, 1hole,
3-33, 3-35
Clamp, Cable, Stl, 3.25d X 1.00w, 1hole,
3-33, 3-35
Clamp, Hose, Spring Stl, 0.58d X 0.31w,
2-31, 2-33
Clamp, Hose, Spring, 0.62d, 5-22, 5-29
Clamp, Hose, Wormdrive, 0.25-0.62d,
.31w, 2-45, 2-49, 3-31, 3-33, 3-35
Clamp, Hose, Wormdrive, 0.56-1.06d,
.56w, 3-19
Clamp, Hose, Wormdrive, 1.06-2.00d,
.56w, 3-5
Clamp, Hose, Wormdrive, 1.25-2.00d,
.50w, 2-51
Clamp, Hose, Wormdrive, 1.56-2.50d,
.50w, 2-51
Clamp, Hose, Wormdrive, 1.81-2.75d,
.50w, 2-35, 2-37
Clamp, Hose, Wormdrive, 2.50-3.50d,
.50w, 3-21
Clamp, Hose, Wormdrive, 3.75-4.62d,
.62w, 3-9
Clamp, Hose, Wormdrive, 5.56-6.50d,
.56w, 3-49
Clamp, Mtg, Fltr, Air, 2-35, 2-37
Clamp, Muffler, 1.62d, 2-43
Clamp, Tension [Mit #29], 5-29
Clamp, Tube, 0.37d 0.50d, 2 Hole, 2-111
Clamp, Tube, 0.50d 0.50d, 2 Hole, 2-111
Clevis Wldt, Adj, .50pin 0.50-20, Pl,
2-57
Clevis, Adj, 0.38pin, 0.50-20thd, 2-57
Clevis, Adj, 0.38pin, M10x1.5, 2-87, 2-95,
2-97
Clevis, Adj, M6 Pin, M6 X 1.0 Rh, Pl, 2-63
Clip, .250h, Plstc [Pine-Tree], 2-11
Clip, Grip, Hose, 0.75-1.12, Stl, Blk Vyl,
2-27, 2-29
Clip, Grip, Rod, 0.49-0.63, Blk Plstc., 2-75
Clip, Keeper, 2-85
Clip, Keeper, Blower Mtg, 4-9
Clip, Rod, Cab, 3-17
Clip, Spring, 2-59
Clip, Spring, Prop Arm, 2-77
Coil, Heater / Evaporator, 4-9
Coil, Ignition [Mit 2.0/2.4], 5-19
Column, Steering, 09.9l 0.86d 36tooth,
2-25

Compressor, A/C, 6v Pulley [134,
Tm-08hd], 3-21
Condenser, Ac, 3-21
Connector, Fuel, E90, Qf, 2-45
Connector, Fuel, Qf, 2-45
Contact Kit, W/ Brush [En], 2-25
Control Box Assy Kit, Replmt, Telem[Intl],
3-27
Control Box Assy Kit, Replmt, Telem[Usa],
3-27
Controls, Ac/Heater [S30], 3-15
Cord, Sponge, 1-2, 2-71, 2-73
Coupling, Flywheel [Mit20/24m], 5-18
Cover, 4-9, 5-5
Cover Assy, Front, Upper [T-Belt], 5-7
Cover Assy, Rocker, 5-4
Cover Wldt, Hepa, [Gen II - S30], 3-51
Cover Wldt, Lh, Sbdc [S30], 3-47
Cover Wldt, Rh, Sbdc [S30], 3-45, 3-47
Cover, Access, 4-9
Cover, Backrest, 4-15
Cover, Cushion, 4-15
Cover, Dust [Mit 2.0], 5-18
Cover, End, 4-13
Cover, Filter, Trimmed, 2-81
Cover, Fuse, 3-15
Cover, Gas, W/ Label, Replmt, 3-23
Cover, Hose, Plstc, Cab, 3-13
Cover, Hppr, Rm-Cptl, Trimmed, 2-75
Cover, Latch, 3-17
Cover, Lntl, Lh, Rotomold, Afmkt [S30],
2-11
Cover, Lntl, Rh, Rotomold, Afmkt [S30],
2-11
Cover, Lower, Front [T-Belt], 5-7
Cover, Lpg, 3-23
Cover, Rear [T-Belt], 5-7
Cover, Rear, Lh, Rotomold, Afmkt [S30],
2-15
Cover, Rear, Rh, Rotomold, Afmkt [S30],
2-15
Cover, Rm-Cptl, Trimmed, Re-Work, 3-53
Cover, Seat, Rotomold, Afmkt [S30], 2-11
Cover, Side, Rotomold, Afmkt [S30], 2-19
Cover, Timing, Gear [Mit 2.0/2.4], 5-9
Cover, Top, Rotomold, Afmkt [S30], 2-17
Crankshaft Assy, 5-10
Cylinder Assy, Head, Bolt, 5-5
Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500,
2-93, 3-7
Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500,
2-71, 2-73, 2-97
Cylinder, Hyd, 2.0b 15.0l 08.00strk 1500,
2-53
Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000,
2-77

D

Diode, Ele, Plug, 2-21, 2-23, 3-37
Diode, Ele, Plug (Europe Only), 2-134
Dipstick Assy, Guage, 5-3
Dipstick, Guage, Guide, 5-3

Dipstick, Oil, 5-3
Disc, 0.06, 04.39d 01.67b, 4/.30h 3.8bc,
2-99
Disc, 0.08, 04.39d 02.56b, 4/.28h 3.8bc,
2-99
Diverter Wldt, Fltr, Hepa [Gen II S30],
3-51
Door, Vacuum, 3-9
Door Assy, Cab [S30], 3-17
Door Wldt, Brush, Lh, 2-9
Door Wldt, Brush, Rh, 2-7
Door Wldt, Cleanout, 2-81
Door Wldt, Cleanout [S30], 2-81
Door Wldt, Hppr, 2-67, 2-69, 2-71, 2-73
Door Wldt, Hppr, Vac-Wand, Replmt, Ce,
3-9
Door Wldt, Hppr, Vac-Wand, Replmt, Jp,
3-9
Door Wldt, Hppr, Vac-Wand, Replmt, Na,
3-9
Door Wldt, Rh, 3-17
Door, Access, 2-13
Drain, Water, Joint, 5-3
Drill Template, S30 Water Tank Sppt, 3-41
Drive, Motor, Hyd, 4-11
Driveshaft, Pump, Hyd, 4-13
Drum Assy, Brake, 2-59
Dryer, A/C, 3-21
Duct, Outlet, Vacuum, 2-83, 3-51
Dust Cntrl, Dry, Dual Sb, Ci [S30], 3-47
Dust Cntrl, Dry, Single Rh Sb, Ci [S30],
3-45

E

Elbow, 5-21
Elbow, 1/8m X 1/8f, 90 [Mit], 5-15
Element, Filter, Hepa, 25.0h 13.5w, 3-51
Element, Fltr, Air [Dn], 1-1, 2-35, 2-37
Element, Fltr, Air, Safety, 1-1, 2-35, 2-37
Element, Fltr, Hepa, 18 X 17 X 5 [S30],
3-51
Element, Fltr, Oil, Spin-On, 1-1, 2-27,
2-29
Element, Fltr, Oil, Spin-On (Mits), 5-21
Engine, Block, Long [Mits 12mm] (See
Engine Breakdown), 2-27, 2-29
Extinguisher Kit, Fire, Ci [S30], 3-55
Extinguisher, Fire, 2.5 Lb Dry, 3-55

F

Fan, Cooling, 14.1d, 6 Blade, 0.5b Taper,
2-49
Fastener, Wire, Tie [Button Head], 2-21,
2-23
Filter, 4-9
Filter Assy, Hyd, 10mic, 1-1, 2-107
Filter Kit, Fuelock, Lpg, 5-29
Filter Kit, Fuelock, Lpg, 1-1
Filter, Air, 2.0 Inlet, Str, 2-35, 2-37

CROSS REFERENCE

Filter, Cyl, 11.09d, 13.31l, 6.724 Id, 1-1, 2-85
 Filter, Fuel, 2-45
 Filter, Fuel [Gm 1.6l/3.0l], 1-1
 Filter, In-Line, Pf06/Pf06 60 Micron, 3-31
 Fitting, 1/2 Mpt X 5/8bh 90deg [Mit], 5-23
 Fitting, 1/2 X 5/8 Hose, Plastic [Mit], 5-29
 Fitting, 1/4mpt X 1/4mpt, 90deg [Mit], 5-29
 Fitting, 1/8 Mpt X 3/8 Hb [Mit], 5-15
 Fitting, 37deg [Mit], 5-7
 Fitting, Adapter, Orifice, Pf06/Pm06, 2-31, 2-33
 Fitting, Barb, 3/4" [Epr], 5-30
 Fitting, Body, Nozzel, Brs, 3-33, 3-35
 Fitting, Brs, 3/8npt, Valve, Breather, 3-31
 Fitting, Brs, Cap [Unijet], 3-33, 3-35
 Fitting, Brs, E90, Bm06/Pm04, 2-33
 Fitting, Brs, E90, Em05/Pm04, 2-45
 Fitting, Brs, Qdc, Pf04, Lpg Fem, 2-47
 Fitting, Brs, Str, Bm03/Bm03, Bh, 3-51
 Fitting, Brs, Str, Bm03/Pm02, 2-81
 Fitting, Brs, Str, Bm06/Pm02, 2-31
 Fitting, Brs, Str, Bm06/Pm06, 2-31, 2-33
 Fitting, Brs, Str, Pf02/Pm02 [Bsp], 2-31
 Fitting, Brs, Str, Pf04/Pf04, Bh, 2-47
 Fitting, Brs, Str, Pf06/Pm04, 2-31, 2-33
 Fitting, Brs, Str, Pm02, Service, 2-35, 2-37
 Fitting, Draincock, .25npt, 2-51
 Fitting, Draincock, E90 Pm06, 3-31
 Fitting, E90, 5-22
 Fitting, E90, Bm10/Pm08, 4-9
 Fitting, Fuel, Str, 0.38-24 [07 Eng], 2-45
 Fitting, Fuel, Str, 0.56-18 [07 Eng], 2-45
 Fitting, Fuel, Str, M10x1.0, 2-45
 Fitting, Grease, Str Pm04 .47l, 2-77
 Fitting, Grease, Str Pm04 .63l, 2-53
 Fitting, Hose, Plastic, 5-29
 Fitting, Hyd, Cap, Jf06, 2-109
 Fitting, Hyd, E45, Ff04/Fm04, 3-7
 Fitting, Hyd, E45, Pf04/Pm04, 2-47
 Fitting, Hyd, E90, Ff06/Fm06, 3-7
 Fitting, Hyd, E90, Fm04/Om04, 2-71, 2-73, 2-93, 2-97, 3-7
 Fitting, Hyd, E90, Fm04/Om06, 2-77, 2-83, 2-107
 Fitting, Hyd, E90, Fm06/Om06, 2-53
 Fitting, Hyd, E90, Fm10/Om08, 2-111
 Fitting, Hyd, E90, Fm10/Om12, 2-107, 2-111
 Fitting, Hyd, E90, Fm12/Om08, 2-111
 Fitting, Hyd, E90, Fm12/Om12, 2-107, 2-109
 Fitting, Hyd, E90, Fm20/Om20, 2-107
 Fitting, Hyd, Plug, Fm10, 2-107
 Fitting, Hyd, Plug, Om04, 4-5, 4-7
 Fitting, Hyd, Plug, Om06, 2-107, 2-113, 2-115
 Fitting, Hyd, Plug, Om08, 4-5, 4-7
 Fitting, Hyd, Plug, Pm02, 2-107
 Fitting, Hyd, Rst, Fm04/Of04, .047, 2-77
 Fitting, Hyd, Str, Ff16/Fm12, 2-109
 Fitting, Hyd, Str, Fm04/Om04, 2-49, 2-97

Fitting, Hyd, Str, Fm04/Om06, 2-53, 2-113, 2-115
 Fitting, Hyd, Str, Fm06/Om06, 2-25, 2-113, 2-115
 Fitting, Hyd, Str, Fm06/Om06, Long, 2-25
 Fitting, Hyd, Str, Fm06/Om10, 2-89, 2-91, 2-111, 3-7
 Fitting, Hyd, Str, Fm08/Om08, 2-83, 2-99, 2-113, 2-115
 Fitting, Hyd, Str, Fm08/Om08, Long, 2-113, 2-115
 Fitting, Hyd, Str, Fm08/Om10, 2-49, 2-111
 Fitting, Hyd, Str, Fm10/Om10, 2-107
 Fitting, Hyd, Str, Fm10/Om12, 2-53
 Fitting, Hyd, Str, Fm16/Om12, 2-109, 2-113, 2-115
 Fitting, Hyd, Str, Fm16/Om16, 2-107
 Fitting, Hyd, Str, Fm20/Om16, 2-111
 Fitting, Hyd, Str, Om04/Qm04, 2-113, 2-115
 Fitting, Hyd, Str, Om06/Qm04, 2-113, 2-115
 Fitting, Hyd, Str, Pf02/Pm04, 2-47
 Fitting, Hyd, Tee, Ff04/Fm04/Fm04, Run, 3-7
 Fitting, Hyd, Tee, Pf04/Pf04/Pm04, Run, 2-47
 Fitting, Nyl, Qdc, E90, Bm06/ Qm10, 3-31
 Fitting, Pipe, E45, Spcl, 2-47
 Fitting, Pipe, Plug, Pm04, Sq Head, 2-45
 Fitting, Pipe, Str, Pm04/Sf04, 2-47
 Fitting, Plstc, E90, Bm04/Pm06, 3-31
 Fitting, Plstc, E90, Bm06/Pm04, Nyl, 3-33, 3-35
 Fitting, Plstc, E90, Bm06/Pm06, 3-31
 Fitting, Plstc, E90, Pf06/Pm06, Nyl, 3-31
 Fitting, Plstc, Str, Pm06/Pm06, 3-31
 Fitting, Plstc, Tee, Bm03/Bm06/Bm06, Br, 3-31
 Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl, 3-33, 3-35
 Fitting, Plug, O-Ring, 4-13
 Fitting, Plug, Org, #6, Valve [Cec], 4-5, 4-7
 Fitting, Str, 10-10 Orb, 37fi [Mit], 5-21
 Flange, Brg, 1.9id 2h, 2-99
 Flange, Brg, Mount, 2-25
 Flange, Sprocket, Cshft, 5-11
 Flap, Outlet, Hepa, [Gen li S30], 3-53
 Flap, Tire/Tube, 570/500-8, 2-55
 Flap, Wand, Vacuum, 3-9
 Flasher, 12-80vdc, 2a, 3-3, 3-5
 Flasher, Hd, 12vdc 25a [10-57300], 3-5
 Flywheel, Flatface [Mit 20/24m], 5-18
 Frame Wldt, Main [S30], 2-5
 Fuelline, .31d Str/Str, Plstc, 2-45
 Fuelline, .31d Str/Str, Plstc [8200], 2-45
 Fuse, 10 Amp, 2-134
 Fuse, 20 Amp, [Min-20], 2-134
 Fuse, 5 Amp, [Min-5], 2-134
 Fuse, 60a, 32vdc [Fem Maxi], 3-19
 Fuse, Blade, 002a, 32vdc, 3-15
 Fuse, Blade, 005a, 32vdc, 3-15

Fuse, Blade, 020a, 32vdc, 3-15
 Fuse, Blade, 060a [Maxi], 2-21, 2-23
 Fuse, Blade, 070a, 32vdc [Maxi], 2-134
 Fuse, Blade, 15a, 32v [Mini], 2-21, 2-23
 Fuseholder, Cab, 3-15

G

Gasket, 5-5
 Gasket, .19, 4.05id 5.29od [Buna], 3-31
 Gasket, Case, Front, 5-12
 Gasket, Cover, 2-81
 Gasket, Cover, Rocker, 5-4, 5-5
 Gasket, Cylinder, Head, 5-5
 Gasket, Exhaust, .07, 1.63id, 2/3.4bc, 2-43
 Gasket, Foam Seal, Hepa Exhaust [S30], 3-53
 Gasket, Manifold, Exh [Mit], 5-16
 Gasket, Manifold, Exhaust, 5-16
 Gasket, Manifold, Intake, 5-15
 Gasket, Oil, Adapter [Mit 2.0/2.4], 5-21
 Gasket, Outlet, 5-22
 Gasket, Panel, Instmt, 2-21
 Gasket, Panel, Switch, 2-21, 2-23
 Gasket, Plug, Drain, Oil, 5-7
 Gasket, Pump, Water, 5-13
 Gasket, Rbr, .13, 07.87w 09.84l, Adh, 2-13
 Gasket, Rbr, Pedal, Propel, 2-63, 3-41
 Gasket, Screen, 5-7
 Gasket, Sender, Fuel, 2-45
 Gasket, Sensor, Thermal, 2-67, 2-69
 Gasket, Throttle [Mit 40mm], 5-27, 5-28
 Gasket, Tray, Cyclonic, 2-81
 Gasket, Ure, .50, 07.47w, 15.47l, Adh, 2-67, 2-69, 3-9
 Gasket, Vacuum, 2-83
 Gasket, Water Supply [Mit 2.0/2.4], 5-23
 Gasket, Harness, 2-21, 2-23
 Gauge, Sensing, Level, 2-107
 Geroler, Motor, Hyd, 4-11
 Gerotor, Pump, Hyd, 4-13
 Glovenet-525 Document Rack/Net 60200104-, 2-17
 Grill, 2-15
 Grill Wldt, Rear, Rh, 2-15
 Grill Wldt, Screen, Rear, Rh, 2-15
 Grommet, Rbr, .25ld .375Od, 4-9
 Grommet, Rbr, .50ld 1.0Od, 4-9
 Grommet, Rbr, 0.63id, F/0.8h, .12 Matl, 3-3, 3-5
 Grommet, Rbr, 0.75id, F/1.3h, .12 Matl (S30XP Only) (Europe Only), 2-11
 Grommet, Rbr, 0.89id, F/1.2h, .14 Matl, 3-15
 Grommet, Rbr, 1.00id, F/1.4h, .12 Matl, 3-3, 3-5
 Guard Wldt, Ohg, Top, 3-11
 Guard, Belt, Lh, G/Lpg, W/ Label, Replmt, 2-39
 Guard, Belt, Rh, G/Lpg, W/ Label, Replmt, 2-39

Guard, Brush, 2-89, 2-91, 3-7
 Guard, Fan, 2-49
 Guard, Hose, Rbr, 5.0l, 2-89, 2-91
 Guard, Hose, Wrap, Plstc, 37.0, 2-53

H

Handle, Door, Cab, 3-17
 Handle, Locking, Cab, 3-17
 Hanger, Engine, 5-15
 Harness, Backup, Rev [S30], 3-3, 3-5
 Harness, Cntrl, Wet Dust [S30], 3-39
 Harness, Cover, Hppr [S30], 2-134
 Harness, Ele [Extn, Telemetry], 3-27
 Harness, Ele, Hppr [S30/S30xp Phoenix], 2-134
 Harness, Light, Ind, Hepa Filter [S30], 3-54
 Harness, Main [S30, Phoenix] (S30 Only), 2-134
 Harness, Main, [S30 Xp] (S30 XP Only), 2-134
 Harness, Ohg [S30], 3-3, 3-5
 Harness, Pump, Fuel [Coyote], 2-45
 Harness, Shagr, Motor [S20], 2-85
 Harness, Switch, Seat, Ce [S30 Xp] (Europe Only) (S30XP Only), 2-134
 Harness, Switch, Seat, Ce [S30] (Europe Only), 2-134
 Harness, Wire, Cab, 3-24
 Harness, Wire, Eng, Gas [Mit, 2.0l], 2-134, 5-25
 Harness, Wire, Eng, Lpg [Mit, 2.0l], 2-134, 5-25
 Head Assy, Cylinder, 5-5
 Head Kit, Cyl [Mitsubishi 2015 12mm], 5-5
 Headlight Kit, Led, Replmt [S30], 2-75
 Headlight, Led, Rnd [S20/S30 lc], 2-75
 Heater & A/C Assy, W/Fan, 4-9
 Heater Unit, W/ A/C & Fan (See Breakdowns), 3-13
 Hinge, 3-23
 Hinge Wldt, Mtg, Cover, Hppr [S30], 2-75
 Hinge Wldt, Shrd, Lh, 2-15, 2-19
 Hinge Wldt, Shrd, Rh, 2-11, 2-15
 Hinge Wldt, Shrd, Side, Lh, 2-19
 Hinge, .25pin .12, Cover, Top, 2-17
 Hinge, .40pin 2.2w 02.0l, 4/0.21h, 3-9
 Hinge, Bracket, Door, Cab, 3-17
 Hopper Wldt, Stil [S30], 2-69
 Hopper, Plstc, Trimmed [S30], 2-67
 Horn, 12vdc, Dbal [Wolo], 2-5
 Hose Assy, Upper, Tap [Mit], 5-29
 Hose Assy, W/2cuff, 4.0d 156l 4.0/4.0, 3-9
 Hose Kit, Hyd, Replmt [S30], 2-113, 2-115
 Hose, 90xstr, Filter, Oil, Remote[Mit], 5-21
 Hose, A/C, 06, E90/E90, 043.0l [R134], 3-21
 Hose, A/C, 06, Str/E90, 052.0l [R134], 3-21
 Hose, A/C, 08, E90/E90, 052.0l [R134], 3-21

Hose, A/C, 10, E90/E90, 060.0l [R134], 3-21
 Hose, Afmkt, Coolant Recvy, 05ft, 2-49
 Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr, 3-31, 3-33, 3-35
 Hose, Afmkt, Pvc, Clr, 0.25id, 08ft, 3-31
 Hose, Afmkt, Rbr, Heater, 0.38id, 03ft, 2-31, 2-33
 Hose, Afmkt, Rbr, Heater, 0.62id, 20ft, 3-19
 Hose, Afmkt, Vacuum, 0.16id, 08ft, 2-81, 3-49
 Hose, Coolant, Molded [Mit 20/24m], 5-29
 Hose, Coolant, Upper, Mold [Mit 2013], 2-51
 Hose, Drain, Oil [Mit 20/24m], 5-7
 Hose, Drain, Overflow, Radiator[1pick=1ft], 2-35, 2-37
 Hose, Exhaust, Vacuum, 5.0id, 40.0l, 3-49
 Hose, Fuel, 0.31id [Evap Emission 07], 2-45
 Hose, Fuel, .38d, Rbr[16"L], 5-15
 Hose, Fuel, 0.18id, 29.0l, 2-49
 Hose, Fuel, Molded [Mit 20/24m], 5-29
 Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0, 2-103, 2-105
 Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0, 2-103, 2-105
 Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0, 2-103, 2-105
 Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5, 2-103, 2-105
 Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0, 2-103, 2-105
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0, 2-103, 2-105
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0, 2-103, 2-105
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0, 2-105, 3-7
 Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0, 2-103, 2-105
 Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0, 2-103, 2-105, 3-7
 Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0, 2-103, 2-105
 Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0, 2-103, 2-105
 Hose, Hyd, Tc08, Ff06e90/Ff06str, 134.0, 3-7
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0, 2-103, 2-105

Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0, 2-103, 2-105
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0, 2-103, 2-105
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0, 2-103, 2-105
 Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0, 2-103, 2-105
 Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0, 2-103, 2-105
 Hose, Hyd, Tc10, Ff10e90/Ff10str, 42.0, 2-107
 Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0, 2-103, 2-105
 Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0, 2-103, 2-105
 Hose, Intake, Mold [Epdm Mit2013], 2-37
 Hose, Intake, Mold, Gas [Epdm Mit2013], 2-35
 Hose, Lpg, Med05, Pm04str/Sm04str, 035.0, 2-47
 Hose, Lpg, Med05, Pm04str/Sm04str, 055.0, 2-47
 Hose, Nozzle, Floor, 3-9
 Hose, Rbr, 3-9
 Hose, Rbr, 1.125id X1.25id, 03.00l, 2-51
 Hose, Rbr, 1.125id, 02.25l, 2-51
 Hose, Rbr, 1.25id 1.25id, 2-51
 Hose, Rbr, 2.00id 2.50od 02.5l, 2-35, 2-37
 Hose, Rbr, E90, 2.00id [Epdm Mit 2013], 2-35, 2-37
 Housing, 4-13
 Housing, Brg, Motor, Hyd, 4-11
 Housing, Fan, Rm-Cphg, 2-83
 Housing, Flywheel [Mit 2.0l], 5-18
 Housing, Sppt, Drive, 2-53
 Housing, T-Stat, 2 Holes [Mit], 5-22
 Housing, Thermostat, 5-22
 Housing, Valve, 4-11
 Hub Assy, Wheel, 5 Bolt 4.50bc Taper B, 2-53
 Hub Wldt, 2-65
 Hub, Adapter, Brush, 1.00b, 2-89, 2-91, 3-7

I

Impeller Assy, Vacfan [Coyote], 2-83
 Indicator, Ele, [Multi-Display], 2-21
 Indicator, Press, 60psi (S30 Only), 2-107
 Indicator, Service, Fltr, Air [20h20 Dn], 2-35, 2-37
 Innertube, 6.00 X 9.00 [Js-2], 2-59
 Innertube, Valve [5.00r-8, Js2, 500-8], 2-55
 Insert, Plate, Cam, Pump, Hyd, 4-13
 Instr, Repair, Motor, Hyd, Gear, 4-11
 Instr, Repair, Pump, 4-13
 Instr, Use & Care, WallChart [S30] (ONLINE ONLY), 3-56
 Instr, Valve, Steering, Repair, 4-3
 Insulation, Acstc, 0.5, 03.0 X 23.0 Adh, 2-15

CROSS REFERENCE

Insulation, Acstc, 0.5, 05.5 X 23.0 Adh, 2-15
 Insulation, Acstc, 0.5, 11.5 X 14.5 Adh, 2-15
 Insulation, Acstc, 1.0, 2.0 X 03.8 Adh, 2-67, 2-69
 Insulation, Acstc, 2.0, 02.0 X 12.0, 2-7, 2-9
 Insulation, Acstc, Rnd, 0.8, 02.5d 0.5h, 2-25
 Insulation, Flame-Retardant, 0.5, 2-45, 2-47
 Insulation, Flame-Retardant, 0.75-0.88, 2-11
 Insulation, Flame-Retardant, 1.00, 2-13
 Insulation, Heat, Liner, Lh, 3-15
 Insulation, Heat, Liner, Rh, 3-15
 Insulation, Sound, Liner, 3-15
 Insulation, Sound, Liner, Lh, 3-15
 Insulation, Sound, Liner, Rh, 3-15
 Insulation, Sound, Liner, Side, Lh, 3-15
 Insulation, Sound, Liner, Side, Rh, 3-15
 Insulation, Sound, Liner, Top, 3-15
 Isolator, 5-25, 5-29
 Isolator, Box, Relay, 2-31, 2-33
 Isolator, Rbr, 2-43
 Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h, 2-49, 2-65, 2-113, 2-115
 Isolator, Vib, Flng, 1.3h .4b 2/.34h, 2-27, 2-29

K

Key, 5-10
 Key, Ignition [Replmt W/O Dust Boot], 1-1, 2-21, 2-23
 Key, Latch, Door Assy, 3-17
 Key, Motor, Hyd, 4-11
 Key, Shaft, Pump, Hyd, 4-13
 Key, Sq, 0.12 X 0.12, 0.50l, 2-83
 Keychain, Rectangle, Parts & Service (No. Amer. Only), 2-21, 2-23
 Kit, Rotating, Pump, Hyd, 4-13
 Kit, Seal, Hyd, Pump, 4-13
 Kit, Shim, 4-13
 Knob, 4-9
 Knob Assy, Star, 1.97d 4ear M10x1.5 10.75l, 2-87
 Knob Kit, Repair Side Brush, 2-93, 3-7
 Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr], 2-87, 2-95
 Knob, Assy, Sb Xp, 2-93, 3-7
 Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc, 2-67, 2-69, 3-9
 Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl, 2-95, 2-97
 Knob, Star, 2.75d 4ear 1.1l M8x1.25, 2-81
 Knob, Tee, 0.38-16, 2.5 X 1.0 1.1l, Plstc, 2-25, 2-67, 2-69, 3-9
 Knobs, Adjmt, Weight, 4-15

L

Label [Fuse Block], 3-15
 Label Set, Fltr, Hepa [S20&S30], 3-51, 3-54
 Label Set, Hi Temp, 2-137
 Label Set, Info/Hzrd [Multi-Mach], 2-137
 Label Set, Info/Hzrd, Misc, Ce (Europe Only), 2-137
 Label Set, Info/Hzrd, Misc, Tj (Japan Only), 2-137
 Label, Caution [Apply Parking Brake], 2-137
 Label, Caution [Apply Parking Brake] (CE and Japan Only), 2-137
 Label, Caution, Battery, Tj (Japan Only), 2-137
 Label, Circuitbreaker [Fuse Box], 3-15
 Label, Cyclone [S30], 2-137
 Label, Handle, Lift, 2-137
 Label, Info [Exit], 3-13
 Label, info, Arm Brush, 2-137
 Label, Info, Brush Arm, 2-99
 Label, Info, Hyd Fluid, Na / Ce (Japan Only), 2-137
 Label, Info, Water Only, 3-31
 Label, Level, Sound [100 Db] (Europe Only), 2-137
 Label, Logo, 10.4l, White [Tennant], 2-137
 Label, Opertnl, Telem [Fcc/Ic], 3-27
 Label, Overlay Panel, Replmt [S30], 2-23
 Label, Panl, Instmt, Basic, 2-21
 Label, Panl, Instmt, Rh, 2-21, 2-23
 Label, Wet Dust Cntrl [S30], 3-37
 Label, White [S30], 2-137
 Lamp, 12vdc, 0.5a, 04cp [#1157], 2-5
 Lamp, 12vdc, 37.5watt, Halogen, 2-75
 Lamp, Clr, 12vdc [#3157 Series], 3-5
 Latch, 2-13, 2-15, 2-17, 2-19, 2-75
 Latch Assy, Mtg, Tank, Lpg, W/Nut, 2-47
 Latch Kit, Door, Access, Ci [S30], 2-67, 2-69
 Latch, Bolt, 2-7, 2-9
 Latch, Cab, 3-17
 Latch, Cmpr, M5 X 0.8 Blk, 2-99
 Latch, Cmpr, Spring, Knurled Knob, Pl, 2-13, 3-23
 Latch, Door, 2-67, 2-69
 Latch, Door [Southco 91-562-07], 2-81, 3-51
 Latch, Hook, 2-7, 2-9
 Leg Wldt, Guard, Lh, 3-11
 Leg Wldt, Guard, Rh, 3-11
 Lens Assy, W/ Reflector, 2-75
 Lever Assy, 177.8 X 45, 2-59
 Lever Wldt, Brush, Side, 2-87
 Lever Wldt, Lift, Brush, Main, 2-95
 Lever, Lift, Brush, 2-93, 3-7
 Lever, Pump, 2-65
 Light Kit, Inside, Ci [S30], 3-3
 Light Kit, outdoor, Ci [S30], 3-5
 Light, Dome, Cab, 3-15
 Light, Flsh, 12vdc, Amb, Rwk, 3-3, 3-5

Light, Led, .312d, 12 Vdc [Tri-Color], 3-37, 3-54
 Light, Led, White, 12-24vdc, 3-3, 3-5
 Light, Panl, 14vdc, 1.1 X 1.0, 2-21, 2-23
 Light, Panl, 14vdc, 1.1 X 1.0 (Europe Only), 2-21, 2-23
 Link, Crank, Limiter, 2-63
 Lip Wldt, Oprtr Station / Cab, 3-13
 Lip Wldt, Station, Oprtr, 2-11
 Lock-Off, 12v, Lpg [Mit], 5-29
 Loom, Convoluted, Split 5/8 [Mit], 5-15
 Louver, Nozzle, Spindle, Blk, 3-15

M

Magnet, Drive Brush, 2-13
 Maint Kit, 800hr [S30 Lpg 2010], 1-1
 Maint Kit, 800hr, Gas [S30], 1-1
 Manifold, Exhaust [Mit 2.0/2.4l], 5-16
 Manifold, Fuel [2.4L Mit], 5-26
 Manifold, Gas, Relief, Valve, 2-45
 Manifold, Intake [Mit 20/24m Tilt], 5-15
 Manual, Cd-Rom, Engine [Mit 2.0l], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Bg, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Cn], 3-56
 Manual, Oprtr [S30 Gas/Lpg, De, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Dk, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Ee, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, En, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Es, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Fi, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Fr, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Gr, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Hr, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Hu, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, It, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Lt, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Lv, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Ni, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, No, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Pl, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Pt, Br], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Pt, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Ro, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Ru, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Se, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Sk, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Sl, Ce], 3-56
 Manual, Oprtr [S30 Gas/Lpg, Tr, Ce], 3-56
 Manual, Oprtr [S30, Gas/Lpg EN Na], 3-56
 Manual, Oprtr [S30, Gas/Lpg ES Na], 3-56

Manual, Oprtr [S30, Gas/Lpg FR Na], 3-56
 Manual, Oprtr [S30, Gas/Lpg JP], 3-56
 Manual, Parts [S30, Gas/Lpg En], 3-56
 Manual, Service [S30 EN], 3-56
 Manual, Service, Eng [Gm1.6l], 3-56
 Manual, Service, Eng[Gm1.6l Em Cert], 3-56
 Manual. Oprtr [S30 Gas/Lpg, Cz, Ce], 3-56
 Mirror, Convex, 0.50d, 3-13
 Mirror, Convex, 06.7 X 06.2, 3-11, 3-13
 Mixer, 5-30
 Module, Ecu, Gas [Mit 2.0l 2013], 5-25
 Module, Ecu, Lpg [Mit 2.0l 2013], 5-25
 Molding, Afmkt, Trim, Wndw, Glass, 12ft, 3-13
 Molding, Trim, Pvc, .08-.11 03.2l, 2-85
 Motor, Ele, 12vdc 2108rpm 0.09hp 07.0a, 2-85
 Motor, Hyd, Gear, Ext 0.28 Rh 3000, 2-83
 Motor, Hyd, Gear, Ext 0.67 Rh 2500, 2-49
 Motor, Hyd, Gear, Int 02.8 Bi-Dir 2500, 2-99
 Motor, Hyd, Gear, Int 17.1 Bi-dir 3000, 4-11
 Motor, Hyd, Gear, Int 17.1 Bi-Dir 3000 (See Breakdowns), 2-53
 Motor, Hyd, Gear, Int 17.9 Bi-Dir 2500, 2-89, 2-91, 3-7
 Motor, Wiper, Cab, 3-13
 Mount, Cable Tie, 3-37
 Mount, Fltr, Remote, 5-21
 Muffler, Catalytic [Mit 2.0l 2013], 2-43

N

Nozzel, Spray, 110 Deg, 0.05 Gpm, 3-33, 3-35
 Nut, 5-9, 5-10
 Nut [2.4l Mit], 5-16
 Nut, Adj, Mtg, Tank, Lpg, 2-47
 Nut, Coil, Nyl Patch, 4-5, 4-7
 Nut, Flange, 5-13
 Nut, Flng, M05-0.8, 5-30
 Nut, Flng, M8, 5-15, 5-19, 5-21, 5-22
 Nut, Hex, Flng, M10 X 1.50, 2-11
 Nut, Hex, Flng, M5 X 0.80, 2-13, 2-77, 3-9
 Nut, Hex, Flng, M6 X 1.00, 2-11, 2-15, 2-17, 2-19, 2-49, 2-67, 3-3, 3-5, 3-21
 Nut, Hex, Flng, M8 X 1.25, 2-5, 2-15, 2-17, 2-27, 2-29, 2-43, 2-45, 2-47, 2-53, 2-63, 2-89, 2-91, 2-107, 2-111, 3-15, 3-31
 Nut, Hex, Jam, .38-16, 2-57
 Nut, Hex, Jam, .38-16, Lh, 2-57
 Nut, Hex, Jam, .50-20, 2-57
 Nut, Hex, Jam, .75-16, 2-53
 Nut, Hex, Jam, M10 X 1.5, Ss, 2-87, 2-95, 2-97
 Nut, Hex, Jam, M20 X 1.5, 2-25
 Nut, Hex, Lock, .25-20, NI, 2-65, 3-53

Nut, Hex, Lock, .31-18, NI, 2-13
 Nut, Hex, Lock, .31-18, NI (S30XP Only), 2-13
 Nut, Hex, Lock, .31-24, NI, 2-49
 Nut, Hex, Lock, .38-16, NI, 2-47, 3-21
 Nut, Hex, Lock, .75-10, NI, 2-99
 Nut, Hex, Lock, #10-24, NI, 2-61
 Nut, Hex, Lock, #10-32, NI, 2-85
 Nut, Hex, Lock, M10 X 1.5, NI, 2-5, 2-27, 2-29, 2-49, 2-59, 2-65, 2-77, 2-87, 2-97, 3-11, 3-21, 3-51
 Nut, Hex, Lock, M10 X 1.5, NI, Ss, 2-79
 Nut, Hex, Lock, M12 X 1.75, NI, 2-57, 2-59, 2-69, 2-71, 2-99
 Nut, Hex, Lock, M4 X 0.70, NI, 2-5, 2-13, 2-15, 2-75, 2-81, 3-13, 3-49, 3-51
 Nut, Hex, Lock, M4 X 0.70, NI, Ss, 2-61
 Nut, Hex, Lock, M5 X 0.80, NI, 2-77, 2-87, 3-3, 3-5, 3-9, 3-37, 3-55
 Nut, Hex, Lock, M6 X 1.00, NI, 2-21, 2-23, 2-25, 2-65, 2-67, 2-69, 2-77, 2-111, 3-9, 3-19, 3-21, 3-23, 3-45, 3-47
 Nut, Hex, Lock, M6 X 1.00, NI, Ss, 1-2, 2-63, 2-71, 2-73
 Nut, Hex, Lock, M8 X 1.25, NI, 2-5, 2-17, 2-27, 2-29, 2-35, 2-37, 2-39, 2-43, 2-47, 2-49, 2-61, 2-65, 2-77, 2-83, 2-87, 2-89, 2-93, 2-95, 2-97, 2-99, 2-107, 3-7, 3-29, 3-31, 3-37, 3-45, 3-47, 3-51
 Nut, Hex, Lock, M8 X 1.25, NI, Ss, 1-2, 2-67, 2-69, 2-71, 2-73, 2-87, 3-13
 Nut, Hex, Sltd, 1.00-20, 2-57, 2-59
 Nut, Hex, Sltd, 1.12-18, 2-53
 Nut, Hex, Std, .25-20, 2-31, 2-33
 Nut, Hex, Std, .38-16, 2-43, 3-17
 Nut, Hex, Std, .75-10, 2-53
 Nut, Hex, Std, M10 X 1.25, 2-41
 Nut, Hex, Std, M10 X 1.50, 2-97
 Nut, Hex, Std, M12 X 1.75, Ss, 2-7, 2-9
 Nut, Hex, Std, M3 X 0, 3-15
 Nut, Hex, Std, M6 X 1.00, 8, 2-63, 2-65
 Nut, Hex, Std, M6 X 1.00, Ss, 3-3, 3-5
 Nut, Hex, Std, M8 X 1.25, 2-87
 Nut, Hex, Std, M8 X 1.25, Brs, 2-41
 Nut, Hex, Stover, M8, 2-43
 Nut, Isolator, 10-32, .015-.192, 3-53
 Nut, M10-1.25 Flg [Mit], 5-18
 Nut, M10-1.25, Hx Flg [Mit], 5-25
 Nut, M6-1.0 Flange [Mit], 5-25, 5-29
 Nut, M8-1.25 [Mit], 5-15
 Nut, Motor, Hyd, 4-11
 Nut, Strainer, 5-7
 Nut, Wheel, .50-20 X 60 Angle, 2-53, 2-59
 Nut, Wing, .31-18, 2-41

O

O-Ring, 5-3, 5-5, 5-12
 O-Ring [Mit 208 Buna-N], 5-22, 5-23
 Ohg Kit, Ci [S30], 3-11
 Oil, Hyd [El, Iso 100, 01gal], 1-2

Oil, Hyd [El, Iso 100, 05gal], 1-2
 Oil, Hyd [El, Iso 32, 01gal], 1-2
 Oil, Hyd [El, Iso 32, 05gal], 1-2
 Oil, Hyd [El, Iso 68, 01gal], 1-2
 Oil, Hyd [El, Iso 68, 05gal], 1-2
 Oil, Hydraulic 68 [20l] (CE ONLY), 1-2
 Outlet, Water, W/Plug [Mit 2.0/2.4l], 5-22

P

Pad, Armrest, 4-15
 Pad, Pedal, Brake, 3.96l 2.36w 0.75, 2-61
 Paint, Airdry, Blk, 12oz (NOT EUROPE), 1-2
 Paint, Airdry, Gray, 12oz (NOT EUROPE), 1-2
 Paint, Airdry, Iron Gray, 12oz (NOT EUROPE), 1-2
 Paint, Airdry, Off-White, 12oz (NOT EUROPE), 1-2
 Paint, Airdry, Teal, 12oz, Solid (NOT EUROPE), 1-2
 Pan, Oil, 5-7
 Pane, Glass, Wndw, Front, 3-13
 Pane, Glass, Wndw, Lh Side, Cab, 3-13
 Pane, Glass, Wndw, Rear, 3-13
 Pane, Wndw, Lower, Cab, 3-17
 Pane, Wndw, Slide, Rh, Cab, 3-17
 Panel Assy, Instmt, Basic, Replmt, 2-21
 Panel Assy, Switch, Replmt, 2-21, 2-23
 Panel Kit, Replmt [S30] (Includes Control Board and Label Overlay Panel), 2-23
 Panel Wldt, Access, 2-63, 3-41
 Panel Wldt, Deflector, Heat, 2-45, 2-47
 Panel Wldt, Handle, Lift, 2-95
 Panel Wldt, Heat, Shield, Lh, 2-15
 Panel Wldt, Lift, 2-97
 Panel Wldt, Perma Filter, 2-81
 Panel Wldt, Side, 3-23
 Panel Wldt, Top, Cab, 3-15
 Panel, Heat, Shield, Rear, Lh, 2-15
 Panel, Instrument, Basic, 2-21
 Panel, Light, 2-21, 2-23
 Panel, Roof, Plstc, Cab, 3-15
 Panel, Seat, 2-13
 Panel, Shrd, Eng, 2-15
 Panel, Shrd, Seat, 2-11
 Panel, Side, Access, 2-11
 Panel, Side, Access, Ce (Europe Only), 2-11
 Panel, Switch li, 2-21, 2-23
 Pedal Wldt, Brake, 2-61
 Pedal, Propel, Lower, W/Tread, 2-63
 Pedal, Propel, Upper, W/Tread, 2-63
 Pin Assy, Side Brush W/ Clip, 2-89, 2-91, 3-7
 Pin, Clevis (Shoulder), 2-71, 2-73
 Pin, Clevis, 0.25d X 0.50l, 2-75
 Pin, Clevis, 0.25d X 0.75l, 2-63
 Pin, Clevis, 0.25d X 5.25l, 3-23
 Pin, Clevis, 0.37d X 1.00l, 2-57
 Pin, Clevis, 0.37d X 1.50l, 2-87, 2-93, 3-7
 Pin, Clevis, 0.37d X 2.12l, 2-87

CROSS REFERENCE

Pin, Clevis, 0.37d X 4.33l, 2-63
 Pin, Clevis, 0.38d X 1.13l, 2-57, 2-95, 2-97
 Pin, Clevis, 0.50d X 1.25l, 2-57
 Pin, Clevis, 0.50d X 1.75l, 2-93, 2-97, 3-7
 Pin, Clevis, 0.50d X 2.00l, 2-93, 3-7
 Pin, Clevis, 0.50d X 2.25l, 2-71, 2-73
 Pin, Clevis, 0.50d X 4.25l, 2-89, 2-93, 3-7
 Pin, Clevis, 0.50d X 5.00l, 2-63, 2-89, 2-93, 3-7
 Pin, Clevis, 0.50d X 5.50l, 2-89, 2-93, 3-7
 Pin, Cotter, .062 X 0.75, 2-63
 Pin, Cotter, .094 X 0.75, 2-57, 2-93, 3-7
 Pin, Cotter, .094 X 1.00, 2-87, 2-95
 Pin, Cotter, .125 X 1.00, 2-57, 2-63, 2-87, 2-89, 2-93, 2-97, 3-7
 Pin, Cotter, .125 X 1.25, 2-89, 2-99
 Pin, Cotter, .125 X 1.75, 2-57, 2-59
 Pin, Cotter, .125 X 2.50, 2-53
 Pin, Cotter, .156 X 1.25, 2-71, 2-73
 Pin, Cotter, Hair, 0.31d .058 Wir, 3-23
 Pin, Cotter, Hair, 0.38d .072 Wir, 2-63
 Pin, Cotter, Hair, 0.38d .093 Wir, 2-75
 Pin, Dowel, 5-3, 5-9, 5-10, 5-12
 Pin, Dowel, Pump, Hyd, 4-13
 Pin, Flywheel [Mit 20/20m], 5-18
 Pin, Hitch, .500d X 6.00l, Pl, 3-26
 Pin, Lift, Hppr, 2-77
 Pin, Lock, Cab, 3-17
 Pin, Locking, Steering, Tilt [S30], 2-25
 Pin, Pivot, 0.75d 02.1l, Int 0.33b, 2-65
 Pin, Spring, 5-9
 Pin, Valve, Steering, 4-3
 Pipe, Exhaust, Flex [S30 Mit 2013], 2-43
 Pipe, Exhaust, G/Lpg [Mit 2013], 2-43
 Piston Set, Ring, 5-10
 Piston, Pin [Std A], 5-10
 Piston, Pin [Std B], 5-10
 Piston, Pin [Std C], 5-10
 Piston, Pump, Hyd, Gear, 4-11
 Pivot Wldt, Brush, Side, 2-89, 2-93, 3-7
 Pivot, Adj, Brush, 2-87
 Plate Wldt, Brush, Adj, 2-95, 2-97
 Plate Wldt, Mtg, Bumper, 2-77
 Plate Wldt, Sppt, Hppr Bottom, 2-67
 Plate Wldt, Stop [S30], 2-95
 Plate, Grounding, Cyclone, 2-81
 Plate, Adj, Brush, 2-87
 Plate, Brake, Pedal, 2-77
 Plate, Brush, Adj, 2-97
 Plate, Cover, 4-13
 Plate, Fan, [Phoenix], 2-83
 Plate, Lift, Brush, 2-87
 Plate, Lock Plate, 2-55
 Plate, Motor, Wiper, Cab, 3-13
 Plate, Mtg, 2-99
 Plate, Mtg [Epr], 5-29
 Plate, Mtg, Ecu [Mit 2.0/2.4l], 5-25
 Plate, Prop, Rod, 2-17
 Plate, Retainer, Door, Dump, 1-2, 2-71, 2-73
 Plate, Ring, Headlight, Lh, 2-75
 Plate, Ring, Headlight, Rh, 2-75

Plate, Ring, Light, 2-75
 Plate, Sensor, Pressure, 2-81
 Plate, Stop, Parking, 2-61
 Plate, Support, Skirt Sbd, 3-45, 3-47
 Plate, Tensioner, Adj [Mit 2.0/2.4l], 5-17
 Plate, Valve, Motor, Hyd, 4-11
 Plate, Valve, Pump, Hyd, 4-13
 Plate, Vent, 3-15
 Plate, Water, Outlet [Mit Bypass], 5-23
 Plate, Wear, Steering Valve, 4-3
 Plate, Wheel, Ce, 2-59
 Plate, Lift, Premium, 2-93
 Plug, 4-11, 5-3
 Plug Assy [Cl], 4-3
 Plug Wldt, Drive, Brush, 2-99
 Plug Wldt, Idler, Brush, 2-99
 Plug, 1/8 Npt, Brs, Skt Hd [Mit], 5-15
 Plug, 1/8npt, Brs [Mit], 5-30
 Plug, 3/8npt X 5/16, Brs [Mit], 5-21
 Plug, Cap, 5-12
 Plug, Cap, Nat, 3-31
 Plug, Flare, 37deg [Mit], 5-7
 Plug, Hole, Rnd, 0.25h 0.43l, Brb, Nyl, 2-75
 Plug, Hole, Rnd, 0.25h 0.8l, Brb, Nyl, 2-77
 Plug, Hole, Rnd, 0.30h 0.3l, 2-21, 2-23, 3-13
 Plug, Hole, Rnd, 0.38h .03-.12, Blk Nyl, 2-97
 Plug, Hole, Rnd, 0.44h .03-.12, Blk Nyl, 2-95
 Plug, Hole, Rt, Rocker Switch, .87 X 1.7, 2-21, 2-23, 3-54
 Plug, Injector [Mit], 5-15
 Plug, Oil, Drain, 5-7
 Plug, Orifice, Valve, Hyd, .035, 4-7
 Plug, Orifice, Valve, Hyd, .040, 4-5, 4-7
 Plug, Orifice, Valve, Hyd, .046, 4-5, 4-7
 Plug, Pump, Hyd, Gear, 4-11
 Plug, Rubber, 5-7
 Plug, Spark [Mitsubishi 2015 12mm], 1-1, 5-5, 5-19
 Plug, Spark [Torch K6rf-11 14mm], 1-1, 5-19
 Plug, Taper, 5-3
 Plug, Tapper, 5-12
 Poppet, Pump, Hyd, Gear, 4-11
 Pulley Assy, Cable, 2.8d 0.50b, 2-95
 Pulley Assy, Damper, Torsional, 5-10
 Pulley, Cable, 1.5d Nyl, 2-57, 2-59, 2-87
 Pulley, Cable, 3.1d 2.30b, .19d Cable, 2-87
 Pulley, Idler, 5-9
 Pulley, Idler, Tens, Belt, 3-21
 Pulley, Pump, Water, 5-13
 Pulley, Tensioner, 5-9
 Pulley, Tensioner, Assy[Mit2.0/2.4l], 5-17
 Pump Assy, Water, 12vdc, 3-19
 Pump, Fuel, Hi Press, 2-45
 Pump, Gear, Drive, Oil, 5-12
 Pump, Gear, Oil, 5-12
 Pump, Hyd, Gear, Ext, 3, 00.70 2500, Cw, 2-111

Pump, Hyd, Piston, Var, 1.24 4500, Cw, 4-13
 Pump, Hyd, Piston, Var, 1.24 4500, Cw (See Breakdowns), 2-111
 Pump, Info, Repair, 2-111
 Pump, Oil, 5-12
 Pump, Soltn, 13.7vdc, 65psi [Fast li+], 3-31
 Pump, Water, 5-13

R

Race, Bearing, Pump, Hyd, 4-13
 Radiator, W/ Hyd Cooler [Side X Side], 2-49
 Regulator, 5-29
 Regulator, Press, Electronic [Epr], 5-30
 Relay Assy, 12vdc [2f/1r], 3-19
 Relay, 12vdc, 20a, Spdt, 2-134
 Relay, 12vdc, 40a, Spdt, 2-134
 Relay, 12vdc, 040a, Spdt No, 3-37
 Relay, 12vdc, 040a, Spdt No (Europe Only), 2-21, 2-23
 Relay, 12vdc, 35a, Spdt [Micro 280], 2-21, 2-23
 Repair Kit, Mixer, 5-30
 Repair Kit, Vaporizer, 5-29
 Reservoir, Hyd, W/ Label, Replmt, 2-107
 Resistor, 022.00ohm, 0040watt, 2-31, 2-33
 Retainer, Blade, Deflector, 2-5, 3-29
 Retainer, Boot, Steering Column, 2-25
 Retainer, Motor, Hyd, 4-11
 Retainer, Pulley, 2-87
 Retainer, Seal, 1-2, 2-71, 2-73
 Retainer, Seal, Door, 2-81, 2-85
 Retainer, Shaft, 0.12id .38od X .052, 3-17
 Retainer, Skirt, .12, 1.0w X 09.8l, Gray, 2-69
 Retainer, Skirt, .12, 1.0w X 18.0l, Gray, 2-69
 Retainer, Skirt, .12, 1.5w X 14.4l, Blk, 2-7, 2-9
 Retainer, Stop, 2-97
 Retainer, Tank, Lpg, 2-47
 Rim Assy, 08.0 X 3.8, 4.5bc /5bolt, 2-55
 Rim Assy, 09.0 X 4.0, 4.5bc /5bolt, 2-59
 Ring, Motor, Hyd, 4-11
 Ring, Retainer, Steering Valve, 4-3
 Ring, Retaining, 4-13, 5-17
 Ring, Retaining, Ext, 0.50d, Hd, 2-25
 Ring, Retaining, Ext, 0.50d, Ss, 2-87
 Ring, Retaining, Int, 2.00d, 2-77
 Ring, Retaining, Pump, Hyd, 4-13
 Rivet, Blind, .125d X 0.32 X .25d, Alm, 2-13, 3-23
 Rivet, Plstc, .250d X 0.90, 2-5, 2-15, 2-25, 2-49, 2-69
 Rivet, Plstc, .325d X 0.79, 2-5
 Rod Assy, Connecting, 5-10
 Rod Wldt, Brake, 2-61
 Rod Wldt, Prop, Cover, Hppr, 2-75

Rod-End, M6 X 1.0rh Fem 6mmb [Nylon],
2-63, 2-65
Rod-End, 0.75-16rh Fem 0.75b, 2-53
Rod-End, 0.75-16rh Mal 0.75b [Teflon],
2-53
Rod, Handle, Cab, 3-17
Rod, Hanger, Isolator, 2-43
Rod, Latch, Cab, 3-17

S

Screen, Fltr, 60 Micron, Caged Ss, 3-31
Screen, Oil, 5-7
Screw, 5-5, 5-12
Screw, Btn, M8 X 1.25 X 40, Ss, 2-87
Screw, Cap, 4-13
Screw, Cap, Motor, Hyd, 4-11
Screw, Cap, Pump, Hyd, 4-13
Screw, Flt, Soc, .75-10 X 2.50, Al, 2-99
Screw, Flt, Soc, M5 X 0.80 X 16, 10.9,
2-99
Screw, Flt, Soc, M6 X 1.00 X 16, 10.9,
2-67, 2-69, 2-71, 2-73, 3-9
Screw, Flt, Soc, M8 X 1.25 X 25, 10.9,
2-97
Screw, Hex, .25-20 X 3.50, G5, 3-53
Screw, Hex, .31-09 X 1.25, Wood, 2-89,
2-91, 3-7
Screw, Hex, .38-16 X 0.62, G5, 2-51
Screw, Hex, .38-16 X 0.75, G5, 2-67,
2-69, 3-9
Screw, Hex, .38-16 X 0.75, NI, 2-99
Screw, Hex, .38-16 X 0.88, G5, 2-27,
2-29
Screw, Hex, .38-16 X 1.25, G5, 2-65,
2-111
Screw, Hex, .38-16 X 1.25, NI, 2-89,
2-91, 3-7
Screw, Hex, .38-16 X 2.00, G5, 3-21
Screw, Hex, .38-16 X 3.00, G5, 2-47
Screw, Hex, .38-16 X 3.75, G5, 2-47
Screw, Hex, .75-10 X 2.50, Fl, 2-99
Screw, Hex, .75-10 X 3.25, G5, 2-53
Screw, Hex, 12-16 X 0.75, 3-9
Screw, Hex, M10 X 1.25 X 25, 8.8, 2-27,
2-29
Screw, Hex, M10 X 1.25 X 35, 8.8, 3-21
Screw, Hex, M10 X 1.5, 2-85
Screw, Hex, M10 X 1.5 X 25, 8.8, 3-11
Screw, Hex, M10 X 1.5 X 35, 9.8, Sems,
3-26
Screw, Hex, M10 X 1.5 X 60, 8.8, 2-93
Screw, Hex, M10 X 1.5 X 80, 8.8, 3-7
Screw, Hex, M10 X 1.50 X 20, 8.8, 2-25
Screw, Hex, M10 X 1.50 X 20, NI, Ss,
2-71
Screw, Hex, M10 X 1.50 X 25, 10.9, 2-7,
2-9, 2-55, 2-59
Screw, Hex, M10 X 1.50 X 25, 8.8, 3-21,
3-31
Screw, Hex, M10 X 1.50 X 30, 8.8, 3-51
Screw, Hex, M10 X 1.50 X 35, 8.8, 2-43,
2-65, 2-77

Screw, Hex, M10 X 1.50 X 35, 9.8, Sems,
2-11, 2-87, 2-95, 2-97, 3-11, 3-13
Screw, Hex, M10 X 1.50 X 40, 8.8, 2-77,
2-113, 2-115
Screw, Hex, M10 X 1.50 X 45, 8.8, 2-49,
2-97
Screw, Hex, M10 X 1.50 X 50, 8.8, 2-5,
2-79
Screw, Hex, M10 X 1.50 X 60, 8.8, 2-27,
2-29
Screw, Hex, M10 X 1.50 X 80, 8.8, 2-89
Screw, Hex, M10 X 1.50 X 90, 8.8, 2-79
Screw, Hex, M12 X 1.75 X 30, 8.8, 2-27,
2-29
Screw, Hex, M12 X 1.75 X 40, 10.9, 2-69,
2-71
Screw, Hex, M12 X 1.75 X 40, 8.8, 2-57,
2-59
Screw, Hex, M12 X 1.75 X 90, 8.8, 2-99
Screw, Hex, M16 X 2.00 X 20, 8.8, 2-99
Screw, Hex, M4 X 0.70 X 10, Fmg, Blk,
2-95, 2-97
Screw, Hex, M4 X 0.70 X 20, Ss, 2-61
Screw, Hex, M5 X 0.80 X 16, 8.8, 2-95,
3-5
Screw, Hex, M5 X 0.80 X 16, Fmg, 3-21
Screw, Hex, M5 X 0.80 X 20, 8.8, 2-77
Screw, Hex, M6 X 1.0 X 20, 9.8, Sems,
2-47, 2-95
Screw, Hex, M6 X 1.00 X 10, Fmg, 2-77,
2-107
Screw, Hex, M6 X 1.00 X 12, 8.8, 3-21
Screw, Hex, M6 X 1.00 X 12, Fmg, 2-85
Screw, Hex, M6 X 1.00 X 12, NI, Ss, 1-2,
2-67
Screw, Hex, M6 X 1.00 X 16, 8.8, 2-45
Screw, Hex, M6 X 1.00 X 20, 9.8, Sems,
2-25, 2-49, 2-67, 2-69, 2-81, 2-97,
3-9, 3-13
Screw, Hex, M6 X 1.00 X 20, NI, Ss, 2-99
Screw, Hex, M6 X 1.00 X 20, Ss, 3-3, 3-5
Screw, Hex, M6 X 1.00 X 25, 8.8, 2-77,
2-111
Screw, Hex, M6 X 1.00 X 25, 9.8 Sems,
2-7, 2-9, 2-49
Screw, Hex, M6 X 1.00 X 25, 9.8, Sems,
2-11, 2-15, 2-17, 2-19, 2-39, 3-3,
3-5, 3-31, 3-51, 3-53
Screw, Hex, M6 X 1.00 X 25, Fmg, 3-19
Screw, Hex, M6 X 1.00 X 25, Ss, 2-63
Screw, Hex, M6 X 1.00 X 30, 8.8, 2-65
Screw, Hex, M6 X 1.00 X 30, 9.8, Sems,
1-2, 2-7, 2-9, 2-45, 2-71, 2-73,
2-89, 2-91, 3-7
Screw, Hex, M6 X 1.00 X 35, 8.8, 1-2,
2-71, 2-73
Screw, Hex, M6 X 1.00 X 35, Ss, 2-99
Screw, Hex, M6 X 1.00 X 60, 8.8, 2-45
Screw, Hex, M8 X 1.25 X 120, 8.8, Fl,
2-39
Screw, Hex, M8 X 1.25 X 16, 8.8, 2-11,
2-15, 2-17, 2-19, 2-111, 3-13

Screw, Hex, M8 X 1.25 X 16, Ss, 2-75,
2-81, 2-85, 2-87
Screw, Hex, M8 X 1.25 X 20, 8.8, 2-39,
2-47, 2-83, 2-99, 3-9, 3-45, 3-47,
3-49
Screw, Hex, M8 X 1.25 X 20, 9.8, Sems,
2-67, 2-69
Screw, Hex, M8 X 1.25 X 20, Fmg, 3-9
Screw, Hex, M8 X 1.25 X 20, Ss, 2-47,
2-53, 2-75, 3-13, 3-31
Screw, Hex, M8 X 1.25 X 20, Ss, Sems,
3-9
Screw, Hex, M8 X 1.25 X 25, 8.8, 2-17,
2-49, 2-61, 2-83, 3-13, 3-51
Screw, Hex, M8 X 1.25 X 25, 9.8, Sems,
2-5, 2-11, 2-13, 2-15, 2-17, 2-35,
2-37, 2-39, 2-43, 2-45, 2-47, 2-49,
2-63, 2-75, 2-81, 2-83, 2-85, 2-89,
2-91, 2-95, 2-107, 3-7, 3-13, 3-23,
3-33, 3-35, 3-45, 3-47, 3-49
Screw, Hex, M8 X 1.25 X 25, Ss, 2-63,
2-99
Screw, Hex, M8 X 1.25 X 30, 8.8, 2-7,
2-9, 2-63, 2-65, 2-87, 2-93, 3-7,
3-29
Screw, Hex, M8 X 1.25 X 30, 9.8, Sems,
2-27, 2-29, 2-47, 2-59, 2-71, 2-73,
2-87, 2-93, 2-95, 2-107, 3-31, 3-45,
3-47
Screw, Hex, M8 X 1.25 X 30, Ss, 2-53
Screw, Hex, M8 X 1.25 X 35, 8.8, 2-17,
2-39, 2-61, 2-97
Screw, Hex, M8 X 1.25 X 35, 9.8, Sems,
2-35, 2-37, 2-45, 2-49, 2-57, 2-59,
2-67, 2-71, 2-73, 2-81, 2-89, 2-95,
3-37
Screw, Hex, M8 X 1.25 X 35, NI, Ss, 2-87
Screw, Hex, M8 X 1.25 X 40, 8.8, 2-5,
2-87, 3-29, 3-49
Screw, Hex, M8 X 1.25 X 50, 8.8, 2-43,
2-87
Screw, Hex, M8 X 1.25 X 60, 8.8, Fl, 2-61
Screw, Hex, M8 X 1.25 X 70, 8.8, 2-77
Screw, Pan, 12-16 X 0.50, F/ Plstc, 2-15,
3-27
Screw, Pan, 12-16 X 0.75, F/ Plstc, 2-75
Screw, Pan, M5 X 0.80 X 16, 4.8, 3-55
Screw, Pan, M8 X 1.25 X 25, Blk, 2-87
Screw, Pan, Phl, .31-18 X 1.00, G2, 2-13
Screw, Pan, Phl, 08-16 X 1.00, F/ Plstc,
2-17
Screw, Pan, Phl, 10-14 X 0.75, F/ Plstc,
2-67, 2-81
Screw, Pan, Phl, 10-32 X 0.50, G2, Blk,
2-21, 2-23
Screw, Pan, Phl, 10-32 X 0.62, Ss, 3-53
Screw, Pan, Phl, 12-16 X 0.50, F/ Plstc,
3-27
Screw, Pan, Phl, M3 X 0.50 X 12, Blk,
3-15
Screw, Pan, Phl, M4 X 0.70 X 10, Blk,
3-15

CROSS REFERENCE

Screw, Pan, Phl, M4 X 0.70 X 10, Ss, 2-75, 3-51	Seal Kit, Cyl, Hyd, 2-77	Seal, Tube, Water [Mit 2.0l], 5-22
Screw, Pan, Phl, M4 X 0.70 X 16, 4.8, 2-15, 2-75, 2-81	Seal Kit, Rear [CJ], 4-11	Seal, Upper, Lh, Sbdc [S30], 3-45, 3-47
Screw, Pan, Phl, M4 X 0.70 X 16, Ss, 2-69, 2-81, 3-49	Seal Kit, Shaft [CJ], 4-11	Seal, Upper, Rh, Sbdc [S30], 3-45, 3-47
Screw, Pan, Phl, M4 X 0.70 X 20, 4.8, 2-13	Seal Kit, Steering [CJ], 4-3	Seal, Ure, .25, 06.0w 06.0l, Adh, 3-9
Screw, Pan, Phl, M4 X 0.70 X 20, Blk, 3-13	Seal, Afmkt, Bulb, 90, 0.38, 03ft, 3-51	Seal, Wiper, Door, 1-2, 2-71, 2-73
Screw, Pan, Phl, M4 X 0.70 X 25, Blk, 3-15	Seal, Afmkt, Bulb, 90, 0.50d, 03ft, 3-15	Seat, Deluxe, Replmt (S30XP Only) (See Breakdowns), 2-13
Screw, Pan, Phl, M4 X 0.70 X 6, 4.8, 2-81	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 01ft, 2-15	Seat, Deluxe, Replmt [S30], 4-15
Screw, Pan, Phl, M4 X 0.70 X 60, 4.8, 2-5	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft, 2-11, 2-15	Seat, Std [Milsco] (S30 Only), 2-13
Screw, Pan, Phl, M5 X 0.80 X 10, 4.8, 3-9	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 03ft, 3-15	Seatbelt, Retract, Orange, Replmt, 4-15
Screw, Pan, Phl, M5 X 0.80 X 12, Ss, 2-11, 2-81	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft, 2-15, 2-17	Send-Unit, Fuel, 2-45
Screw, Pan, Phl, M5 X 0.80 X 16, 4.8, 2-13, 2-27, 2-29, 2-31, 2-33, 3-3, 3-5, 3-27, 3-37	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 20ft, 3-17	Send-Unit, Water, Temp, 04npt[113oh/195d], 2-107
Screw, Pan, Phl, M5 X 0.80 X 16, Blk, 2-21, 2-23, 2-87, 3-41	Seal, Afmkt, Bulb, Adh 0.38, 0.75w 02ft, 2-49	Sender, Oil, Press [Mit], 5-12
Screw, Pan, Phl, M5 X 0.80 X 20, 4.8, 3-9	Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft, 2-15, 2-49	Sensor [Tmap], 5-25
Screw, Pan, Phl, M5 X 0.80 X 25, 4.8, 3-3, 3-5, 3-9	Seal, Afmkt, Bulb, Str, .50d F/11ga 03ft, 2-13	Sensor, Camshaft [Mit], 5-25
Screw, Pan, Phl, M5 X 0.80 X 25, Blk, 3-15	Seal, Afmkt, Bulb, Str, .75d F/07ga 03ft, 3-13	Sensor, Exhaust, Tailpipe, 5-25
Screw, Pan, Phl, M5 X 0.80 X 30, Ss, 3-31	Seal, Afmkt, Bulb, Str, 0.76, 0.93w 01ft, 2-15	Sensor, Level, Liq, 14vdc 01a, 62-11, 3-31
Screw, Pan, Phl, M5 X 0.80 X 40, 4.8, 3-3, 3-5	Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft, 2-17, 3-53	Sensor, Oxygen, Tailpipe, 2-43
Screw, Pan, Phl, M5 X 0.80 X 50, 4.8, 3-19	Seal, Afmkt, Foam, 1.18 X 1.18, 01ft, 3-13	Sensor, Spd, Timing Wheel [3.0l], 5-25
Screw, Pan, Phl, M6 X 1.0 X 16, Blk, 3-17	Seal, Afmkt, Foam, 1.18 X 1.18, 03ft, 3-13, 3-15	Sensor, Temp, Coolant, 5-25
Screw, Pan, Phl, M6 X 1.0 X 35, Blk, 3-17	Seal, Afmkt, Rbr, Clsd, Adh, 02ft, 2-7, 2-9	Shaft, 2-57
Screw, Pan, Phl, M6 X 1.00 X 12, Blk, 3-23	Seal, Afmkt, Rbr, Clsd, Adh, 08ft, 2-11, 2-83, 3-49	Shaft, Arm, Rocker, 5-9
Screw, Pan, Phl, M6 X 1.00 X 12, NI, Pl, 3-17	Seal, Afmkt, Rbr, Clsd, Adh, 12ft, 3-51	Shaft, Arm, Rocker, 5-9
Screw, Pan, Phl, M6 X 1.00 X 16, 4.8, 2-67, 3-3, 3-5, 3-9	Seal, Afmkt, Rbr, Wndw, 08ft, 3-17	Shaft, Cap, Rocker, 5-9
Screw, Pan, Phl, M6 X 1.00 X 20, 4.8, 3-45, 3-47	Seal, Afmkt, Rbr, Wndw, 10ft, 3-13	Shaft, Idler, Plug, Brush, 2-99
Screw, Pan, Phl, M8 X 1.25 X 16, Blk, 3-17	Seal, Afmkt, Rbr, Wndw, 10ft [Zipper], 3-13	Shaft, Left, Balancer, 5-11
Screw, Pan, Phl, M8 X 1.25 X 25, Blk, 3-15	Seal, Afmkt, Ure, Adh, 0.38, 0.38w 02ft, 2-49	Shaft, Motor, Hyd, 4-11
Screw, Pan, Phl, M8 X 1.25 X 50, Blk, 3-15	Seal, Cam Shaft, Front, 5-5	Shaft, Right, Balancer, 5-11
Screw, Set, Soc, 10-24 X 0.38, Al, 2-85	Seal, Cap, 5-5	Shaft, Spring, Rocker, 5-9
Screw, Soc, .31-24 X 1.00, Al, 2-65	Seal, Case, Oil, Rear, 5-3	Shield, Heat, G/Lpg [S30 Mit 2013], 2-43
Screw, Soc, .38-16 X 1.50, Al, 2-111	Seal, Cleanout Door, 2-81	Shield, Heat, Lower [Mit 20/24m], 5-16
Screw, Soc, .50-13 X 1.50, Al, 2-53	Seal, Door, Dump, 1-2, 2-71, 2-73	Shield, Heat, Upper [Mit 20/24m], 5-16
Screw, Soc, M10 X 1.50 X 16, 12.9, 2-21, 2-23	Seal, Drive, Rear, Grease Cav, 2-53	Shock Absorber, 2.3 Strk, 2-65
Screw, Soc, M16 X 2.00 X 50, 12.9, 2-53	Seal, Flange, Rbr, Foam, Adh, 1.0th, 3-49	Shoe Assy, Brake, 177.8 X 45, 2-59
Screw, Soc, M4 X 0.70 X 16, 5-30	Seal, Foam, 2-81	Shoe Set, Brake [1 Set=1pkg=2 Shoes], 2-57
Screw, Soc, M6 X 1.00 X 20, 12.9, NI, 2-99	Seal, Foam, .50, 1.00w 72.00l, Adh, 3-13	Shroud Wldt, Station, Oprtr, 2-11
Screw, Valve, Steering, 4-3	Seal, Hopper, Box, Lower, 2-81	Shroud, Fan, 2-49
Seal Assy, Door, Cyclonics, 2-81	Seal, Oil, 5-3, 5-12, 5-19	Skirt Assy, Door, Brush, Lh, 2-9, 3-29
Seal Assy, Door, Shagr, 2-85	Seal, Org, .069 X 03.06id, 2-111	Skirt Assy, Door, Brush, Rh, 2-7, 3-29
Seal Kit, 2-53, 2-77, 2-111	Seal, Org, .072 X 00.35id #04, 4-5, 4-7	Skirt Kit, Door, Hppr, Maint [S30], 1-2, 2-71, 2-73
Seal Kit, Cartridge, 4-5, 4-7	Seal, Org, .078 X 00.47id #06, 4-5, 4-7	Skirt Kit, Hppr, Maint [S30], 1-2, 2-67
	Seal, Org, .087 X 00.64id #08, 4-5, 4-7	Skirt Kit, Side/ Rear [S30], 3-29
	Seal, Org, Lpg, 5-28	Skirt, A/C, 3-21
	Seal, Rbr, Clsd, 1.00, Door, Brush, Lh, 2-9	Skirt, Brush Arm, 2-7
	Seal, Rbr, Clsd, 1.50, Door, Brush, Rh, 2-7	Skirt, Deflector, 2-7, 2-9, 2-69
	Seal, Rbr, Clsd, 2.00w 09.8l Lh, 2-9	Skirt, Deflector Wheel Pocket Skirt, 1-1
	Seal, Rbr, Clsd, 2.00w 09.8l Rh, 2-7	Skirt, Door, Brush, 1-1, 2-7, 2-9, 3-29
	Seal, Tray, Debris, Shaker, 2-85	Skirt, Front, Dual Sbdc [S30], 3-47
	Seal, Trim, Bulb, 90 Degree, 2-11	Skirt, Hppr, 1-2, 2-67
		Skirt, Lh, Single Sbdc [S30], 3-45
		Skirt, Lip, 1-2, 2-67, 2-69
		Skirt, Lip, Hppr, 1-2, 2-67
		Skirt, Lip, Hppr, Stl, 2-69
		Skirt, Neo, .06, 30.00w 41.00l [3 Wheel], 2-49
		Skirt, Neo, .12, 15.9w, 20.8l, 03/Sl, 1-2, 2-67
		Skirt, Neo, .18, 06.74w 50.00l, 04/ Sl, 1-1, 2-5, 3-29

Skirt, Neo, .18, 6.42w X 48.73l, 04/SI, 2-5, 3-29
 Skirt, Neo, .37, 06.00w 44.65l, 04/ SI Recirculation, 1-1
 Skirt, Neo, .37, 06.00w 44.65l, 04/SI, 2-5
 Skirt, Rbr, .12, 10.66w 43.00l, 10/ SI, 2-5
 Skirt, Rubber, 2-5
 Skirt, Side Shroud, SbdC [S30], 3-45, 3-47
 Sleeve, 0.31b 0.50d 0.3l, Ss, 2-87
 Sleeve, Dashpo, Pump, Hyd, Gear, 4-11
 Sleeve, Flange, 2-67, 2-69, 3-9
 Sleeve, Nyl, #27 20.0l, 2-99
 Sleeve, Nyl, 2.38id 05.0l, 2-53
 Sleeve, P/M, 0.22b 0.32d 0.4l, Pl, 3-9
 Sleeve, P/M, 0.31b 0.50d 0.5l [430ss], 2-57, 2-59, 2-87, 2-95, 2-97
 Sleeve, P/M, 0.31b 0.50d 0.7l [430ss], 2-89, 2-93, 3-7
 Sleeve, P/M, 0.32b 0.50d 1.3l [430ss], 2-43
 Sleeve, P/M, 0.33b 0.63d 0.4l, Ss / Oil, 2-87
 Sleeve, P/M, 0.37b 0.75d 0.6l, Stl, 2-45
 Solenoid, #10, 12vdc, 4-5, 4-7
 Solenoid, #8, 12vdc, 4-5, 4-7
 Spacer, 0.32d, 1.00d, 0.38l, Pl (Europe Only), 2-13
 Spacer, 0.33b 0.50d 0.15l, Pl, 2-65
 Spacer, Alternator [Mit 2.0/2.4l], 5-20
 Spacer, Belt, Balancer, Train, 5-11
 Spacer, Coil, #8, 4-5, 4-7
 Spacer, Fltr, 2-85
 Spacer, Plstc, 0.18b 0.27d 0.27l, 3-13
 Spacer, Plstc, 0.62b 0.75d 0.27l, 3-13
 Spacer, Ring, Throttle [Mit 40mm], 5-28
 Spacer, Rnd, .38b .88d .38l, 2-13
 Spacer, Valve, Steering, 4-3
 Spindle Wldt, Wheel, Front, Lh, 2-59
 Spindle Wldt, Wheel, Front, Rh, 2-59
 Spool, Pilot, Hyd, 4-5, 4-7
 Spring, 2-57, 4-11
 Spring Assy Kit, 2-5
 Spring Kit, Scu [Cl], 4-3
 Spring, Cmpr, 0.72od .06wir 02.3l, 2-25, 2-93, 3-7
 Spring, Cmpr, 0.97od .11wir 02.5l, 2-89, 2-93, 3-7
 Spring, Extn, 0.75od 0.09wir 02.5l, 2-61
 Spring, Extn, 1.00od 0.12wir 05.0l, 2-65
 Spring, Extn, 1.39od 0.15wir 09.0l, 2-97
 Spring, Motor, Hyd, 4-11
 Spring, Tens, Brake, 2-59
 Spring, Tors, 0.61id .18wir 02.0coil, 2-59
 Spring, Tors, 0.75id .06wir 02.8coil, 2-61
 Spring, Tors, 1.09id .11wir 03.0coil, 2-87
 Sprocket Assy, Cshft, 5-9
 Sprocket, Camshaft, 5-9
 Sprocket, Cshft, 5-11
 Sprocket, Pump, Oil, 5-9
 Sprocket, Shaft, Balancer, 5-11
 Starter, Motor [Mit 2.0/2.4l], 5-20
 Steer-Control, Hyd05, 06.1 2030, 2-25, 4-3

Stem, Valve, Hyd [4w2p], 4-5, 4-7
 Strainer, Hyd, 010gpm 100mesh, 2-107
 Strainer, Hyd, 025gpm 100mesh 03psi, 1-1, 2-107
 Strainrelief, 2-85
 Strap Kit, Knob, Fltr Box [S30], 2-81
 Strap, Cap, Enclosure, 3-9
 Strap, Door, Cab, 3-17
 Strap, Door, Dump, Side, 1-2, 2-71, 2-73
 Strap, Main, Lip, 1-2, 2-67, 2-69
 Strap, Mtg, Tank, Lpg, 2-47
 Strap, Pyp, 0.07 1.0w 18.5l, W/ Buckle, 3-9
 Strap, Rbr, 2-81
 Strap, Static, W/Grommet, .19 1.1w 25.0l, 2-5
 Strap, Tank, Fuel, 2-45
 Strap, Tank, Hyd, 2-107
 Strip, Backing, Hppr, 2-5
 Strip, Retainer, Front, SbdC, 3-45, 3-47
 Strip, Retainer, Lh, Skirt, SbdC, 3-45
 Strip, Retainer, Wldt, SbdC [S30], 3-45, 3-47
 Strip, Retainer, Wldt, Skirt, Lh, SbdC, 3-45, 3-47
 Strip, Retainer, Wldt, Skirt, Rh, SbdC, 3-45, 3-47
 Stud, 5-5
 Stud, M05-0.8, 5-30
 Stud, M10-1.25 X 50, Full Thrd [Mit], 5-25
 Stud, M8 X 1.25 [55.0], 2-81
 Stud, M8-1.25 X 30 [Mit Double End], 5-15
 Stud, M8-1.25 X 35 [Mit Double End], 5-15
 Stud, M8-1.25 X 40 [Mit], 5-16
 Stud, M8-1.25 X 50 Full Thrd [Mit], 5-15
 Stud, Manifold, Intake, M8 X 28, 5-16
 Stud, Strike, Cab, 3-17
 Stud, Wheel, .50-20 X 1.50l, 0.370th, 2-53
 Stud, Wheel, .50-20 X 1.88l, 0.560th, 2-59
 Switch Assy, Press, No 02400psi, 2-113, 2-115
 Switch Kit, Press, Replmt[S30], 2-81
 Switch, A/C [Binary], 3-21
 Switch, Key, 4 Pos [Honeywell], 2-21, 2-23
 Switch, Limit, 15a, Nc, 2-95, 3-5
 Switch, Press, 0070psi Spst Nc 12vdc 08a, 2-47
 Switch, Press, Adj [.80"-4.0" Water], 3-49
 Switch, Press, Hyd, 18-24psi, Spst, No (S30XP only), 2-107
 Switch, Rocker, Dpdt, Mom / Off / Mom, 2-21
 Switch, Rocker, Dpdt, On / Off / Mom, 2-21, 3-37
 Switch, Rocker, Dpdt, On / None / On, 2-21
 Switch, Rocker, Dpdt, On / None / On (S30 ONLY), 3-9

Switch, Rocker, Prgrsv, 2-21, 2-23
 Switch, Seat, 4-15
 Switch, Snap, 15a Nc, 3-37
 Switch, Snap, 15a Nc, Rlr, 2-87
 Switch, Snap, 15a No, 3-3, 3-5
 Switch, Snap, 15a No, Rlr, 2-77
 Switch, Thermal, 160deg, Spdt, 2-67, 2-69
 Switch, Turn Signal, 3-5

T

Taillight, 12vdc, 6.3 X 2.5, 2-5
 Tank, Coolant, 03.6w 04.1hi 05.5l, 1liter, 2-49
 Tank, Fuel, 2-45
 Tank, Kit, Water, Afrmkt [S30], 3-31
 Tank, Lpg, 33lb, W/ Gauge [Empty, Liq], 2-47
 Tape, Warning, Left Blk/Yel [33 Mtr] (Europe Only), 2-137
 Tape, Warning, Rh, Blk / Yel [33 Mtr] (Europe Only), 2-137
 Template, Drill, Cntrl Console[S30], 3-41
 Tensioner, 5-9
 Tensioner, Timing, Belt, 5-11
 Thermostat, 5-22
 Thermostat, Heater/Air, 4-9
 Throttle Body [Mit, Bosch], 5-27, 5-28
 Thurst, Case, 5-5
 Tie, Cable, 11.3l, 2.75d Max, 3-33, 3-35
 Tie, Cable, Nyl, 07.3l .19w 1.8 Max D, 2-49, 3-3, 3-5, 3-37
 Tie, Cable, Nyl, 14.5l .30w 4.0 Max D, 2-89, 2-91
 Timer, 12vdc, 10a [Ce Seat Switch] (Europe Only), 2-21
 Timer, 12vdc, 30sec On, 2-21
 Timer, 12vdc, 6sec Spcl [Tosr116], 2-21
 Tire Assy, Pneu, 21 X 6.0-12 4.5bc, Ce, 2-59
 Tire Assy, Pneu, 5.00 4.5bc/5blt[R8ic70] Pneumatic Rear, 1-1
 Tire Assy, Pneu, 570/500-08 4.5bc 5bolt (Standard), 2-55
 Tire Assy, Pneu, 600x9 4.5bc/5bolt, Ce Pneumatic Front, 1-1
 Tire Assy, Solid, 18.0 X 4.3 4.5bc 5bolt (Option), 2-55
 Tire Assy, Solid, 18.0x4.3 4.5bc/5bolt Solid Rear Tire, 1-1
 Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front Tire, 1-1, 2-57
 Tire, Pneu, 21 X 6.0 X 9.0 12 Ply [lc40], 2-59
 Tire, Solid, 18.0 X 7.0 X 8.0[4.33 Sc15], 2-55
 Tire, W/ Tube, W/ Flap, 2-55
 Track Assy, Slide, 4-15
 Track, Slide, Seat Adj, 12.5l, 2-13
 Track, Slide, Seat Adj, 12.5l, W/Latch, 2-13
 Tray Wldt, Debris, Filter, 2-85

Tray Wldt, Lpg, 2-47
Tread, Non-Skid, 02.2w 11.5l, 2-63
Tread, Non-Skid, 04.5w 10.0l, 2-11
Tread, Non-Skid, 10.0w 12.0l, 2-11
Tube Assy, Hyd, Cooler [Coyote], 2-109
Tube Assy, Hyd, Fltr, 2-109
Tube Assy, Hyd, Valve Tank [Coyote], 2-109
Tube Wldt, 2-99
Tube Wldt, Tee [Mit 2013], 2-35, 2-37
Tube, 0.59id 1.25od 00.6l, Stl, 2-93, 3-7
Tube, 0.77id 1.75od 00.7l, Stl, Pntd, 2-53
Tube, Coolant, 1.3d, Lower, 2-51
Tube, Coolant, Lower [Mit 2013 S30], 2-51
Tube, Cooling, Line [Mit], 5-23
Tube, Hose, 3-9
Tube, Hyd [Pump Charge], 2-111
Tube, Hyd, Gear Pump Front[S30 Mit2013], 2-111
Tube, Hyd, Gear Pump Middle[S30 Mit2013], 2-111
Tube, Hyd, Gear Pump Rear [Coyote], 2-111
Tube, Hyd, Pump, Drain, 2-111
Tube, Hyd, Pump, Rear Drive, Ff10/Fm10, 2-111
Tube, Hyd, Steering Drain, 2-109
Tube, Plstc, 0.25id 0.31od 00.5l, Blk, 2-99
Tube, Pump, Water, 5-22
Tube, Water, Line [Mit], 5-22
Turnbuckle, Body, .38thread, 03.9l, 2-57

V

Valve Assy, Relief [Cl], 4-3
Valve, Check, 4-5, 4-7
Valve, Check, 0005psi Bm06/Bm06, 3-33, 3-35
Valve, Cntrl, Solenoid, 4-5, 4-7
Valve, Exhaust, 5-9
Valve, Expansion, 4-9
Valve, Gasket, Pcv, 5-4
Valve, Heater, 3-19
Valve, Hyd, Solenoid, 12vdc [06s], 4-5, 4-7
Valve, Hyd, Solenoid, 12vdc [06s] (See Breakdowns), 2-113
Valve, Hyd, Solenoid, 12vdc [08s] (See Breakdowns), 2-115
Valve, Inlet, 5-9
Valve, Lpg, Press Relief [Rego], 2-47
Valve, Motor, Hyd, 4-11
Valve, Pcv, 5-4
Valve, Relief, 4-5, 4-7
Valve, Relief, 3500psi, 4-13
Valve, Relief, Pump, 4-13
Valve, Seal, Stem, 5-9
Valve, Shutoff, Bm04/Bm04, Pvc, 3-31
Valve, Spring, 5-9
Valve, Spring, Lock, 5-9
Valve, Spring, Retainer, 5-9
Valve, Spring, Seat, 5-9
Valve, Stem, No, 4-5, 4-7

W

Wand Kit, Vacuum, Ci [Roto. S30], 3-9
Wand, Vacuum, 3-9
Washer, 4-13, 5-9, 5-21
Washer Flat, 0.50, Sae, 2-25, 2-27, 2-29
Washer, 1/4 Flat [Mit], 5-27
Washer, Belt, Balancer, Train, 5-11
Washer, Bolt, 5-7
Washer, Cab, Shld, Glass, 3-15
Washer, Flat 3/8, Sae, 5-17
Washer, Flat, 0.16b 0.38d .05, Pl, 06, 2-15
Washer, Flat, 0.19b 0.44d .03, Nyl, Blk, 2-21, 2-23
Washer, Flat, 0.19b 0.44d .05, Pl, 08, 3-49
Washer, Flat, 0.19b 0.50d .03, Stl, Blk, 3-13, 3-15
Washer, Flat, 0.25, Fendr, 1-2, 2-67
Washer, Flat, 0.25, Sae, 2-25, 2-31, 2-33, 2-65, 2-67, 2-75, 3-3, 3-5, 3-45, 3-47
Washer, Flat, 0.25, Sae, Blk, 3-17
Washer, Flat, 0.25, Std, 1-2, 2-45, 2-71, 2-73, 3-9, 3-19, 3-51
Washer, Flat, 0.25b 0.56d .05, Pl, 10, 2-31, 2-33, 2-77, 2-85, 3-9, 3-27
Washer, Flat, 0.27b 0.69d .05, Ss, 2-63, 2-67, 2-69, 2-99, 3-9, 3-53
Washer, Flat, 0.31, Fendr, 2-15, 2-67, 2-83, 3-45, 3-47
Washer, Flat, 0.31, Sae, 2-41, 2-43, 2-49, 2-53, 2-65, 2-87, 3-13
Washer, Flat, 0.31, Sae, Blk, 3-13, 3-15, 3-17
Washer, Flat, 0.31, Std, 1-2, 2-5, 2-7, 2-9, 2-11, 2-15, 2-17, 2-27, 2-29, 2-35, 2-37, 2-39, 2-43, 2-47, 2-49, 2-53, 2-65, 2-67, 2-69, 2-71, 2-73, 2-75, 2-81, 2-83, 2-93, 2-97, 3-7, 3-9, 3-13, 3-29, 3-31, 3-49
Washer, Flat, 0.31, Std (S30XP Only), 2-13
Washer, Flat, 0.31b 0.67d .07, Stl, Blk, 3-15
Washer, Flat, 0.32b 1.00d .12, Ss, 2-19, 2-67, 2-83, 3-31, 3-49
Washer, Flat, 0.34b 0.69d .06, Nyl, 2-75, 3-51, 3-53
Washer, Flat, 0.38, Sae, 2-21, 2-23, 2-27, 2-29, 2-57, 2-87, 2-89, 2-99, 2-111, 3-9, 3-21
Washer, Flat, 0.38, Std, 2-7, 2-9, 2-27, 2-29, 2-41, 2-43, 2-49, 2-63, 2-67, 2-69, 2-77, 2-85, 2-89, 2-91, 2-93, 2-97, 3-7, 3-11, 3-17, 3-21, 3-31, 3-51
Washer, Flat, 0.38b 0.88d .08, Ss, 2-41, 2-75, 2-81, 2-85, 2-87
Washer, Flat, 0.38b 0.88d .12, Stl, Pl, 2-13
Washer, Flat, 0.39b 0.75d .06, Nyl, 2-17
Washer, Flat, 0.40b 1.12d .12, Ss, 2-49
Washer, Flat, 0.40b 1.12d .12, Stl, Pl, 2-65, 2-113, 2-115

Washer, Flat, 0.44b 1.00d .08, Ss, 2-71, 2-77
Washer, Flat, 0.44b 2.00d .12, Stl, Pl, 2-27, 2-29
Washer, Flat, 0.50, Sae, 2-57, 2-59, 2-63, 2-87, 2-89
Washer, Flat, 0.50, Std, 2-5, 2-69, 2-71, 2-79
Washer, Flat, 0.53b 1.75d .12, Stl, Pl, 2-99
Washer, Flat, 0.56b 1.38d .11, Ss, 2-7, 2-9
Washer, Flat, 0.62, Sae, 2-63
Washer, Flat, 0.75, Sae, 2-53, 2-113, 2-115
Washer, Flat, 0.81b 1.24d .03, Stl, Pl, 2-65
Washer, Flat, 08, 2-5, 2-61, 2-75
Washer, Flat, 1.02b 1.75d .12, Stl, 2-57, 2-59, 2-77
Washer, Flat, 1.39b 2.12d .13, Stl, 2-53
Washer, Flat, 10, 2-11, 2-15, 2-21, 2-23, 2-75, 2-87, 2-95, 3-3, 3-5, 3-21
Washer, Flat, 10, Sae, 3-37
Washer, Flat, 10, Ss, 2-81, 3-9, 3-31
Washer, Flat, 2.16b 3.50d .16, Felt, 2-53
Washer, Flat, Belleville, .31, 2-65, 2-99
Washer, Flat, Belleville, .38, 2-7, 2-9, 3-21
Washer, Flat, Belleville, .50, 2-69, 2-71, 2-99
Washer, Flat, Belleville, M10, 2-87
Washer, Flt, Pump, Hyd, 4-13
Washer, Lock, 0.38, 5-17
Washer, Lock, Int-ext, 0.25, 2-67, 2-81, 2-85, 3-21
Washer, Lock, Int-Ext, 0.31, 3-21
Washer, Lock, Int-ext, 0.38, 2-5, 2-27, 2-29, 2-41
Washer, Lock, Int-ext, 10, 2-75
Washer, Lock, Int, 0.25, 2-107
Washer, Lock, Int, 0.31, 2-41, 3-49
Washer, Lock, Int, 0.38, 3-31
Washer, Lock, Int, 10, Ss, 3-31
Washer, Lock, M12 [Mit], 5-18
Washer, Lock, M6 [Mit], 5-28
Washer, Lock, M8 [Mit], 5-9, 5-21
Washer, Pump, Hyd, 4-13
Washer, Retainer, Door, Dump, 2-71, 2-73
Washer, Sealing, 0.28b 0.75d Ss, Neo, 3-13
Washer, Special, 5-10
Washer, Spring, 5-13
Washer, Star, M10 [Mit], 5-25
Washer, Strainer, 5-7
Washer, Thrust, 0.61b 1.25d .06, Fgl, 2-87
Weight, Counter, Casting, 52.8lb, 2-79
Weight, Counter, Casting, 72.8lb, 2-79
Weight, Counter, Casting, 72.8lb (S30 and S30XP Only), 2-5
Weight, Counter, Casting, 79.9 Lb, 2-5
Weight, Eccentric, Pntd, 2-85

Wheel, Steering, 14.0d 0.81b 36tooth,
2-25
Wire, 10ga 16.0l Blk .25ring /.38ring, 3-21
Wire, 10ga, 15.0l, Grn, M8 Ring/M8 Ring,
2-81
Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring,
2-67, 2-81
Wire, Tie [W/.25" Fir Tree Clip], 2-67,
2-71, 2-83

